


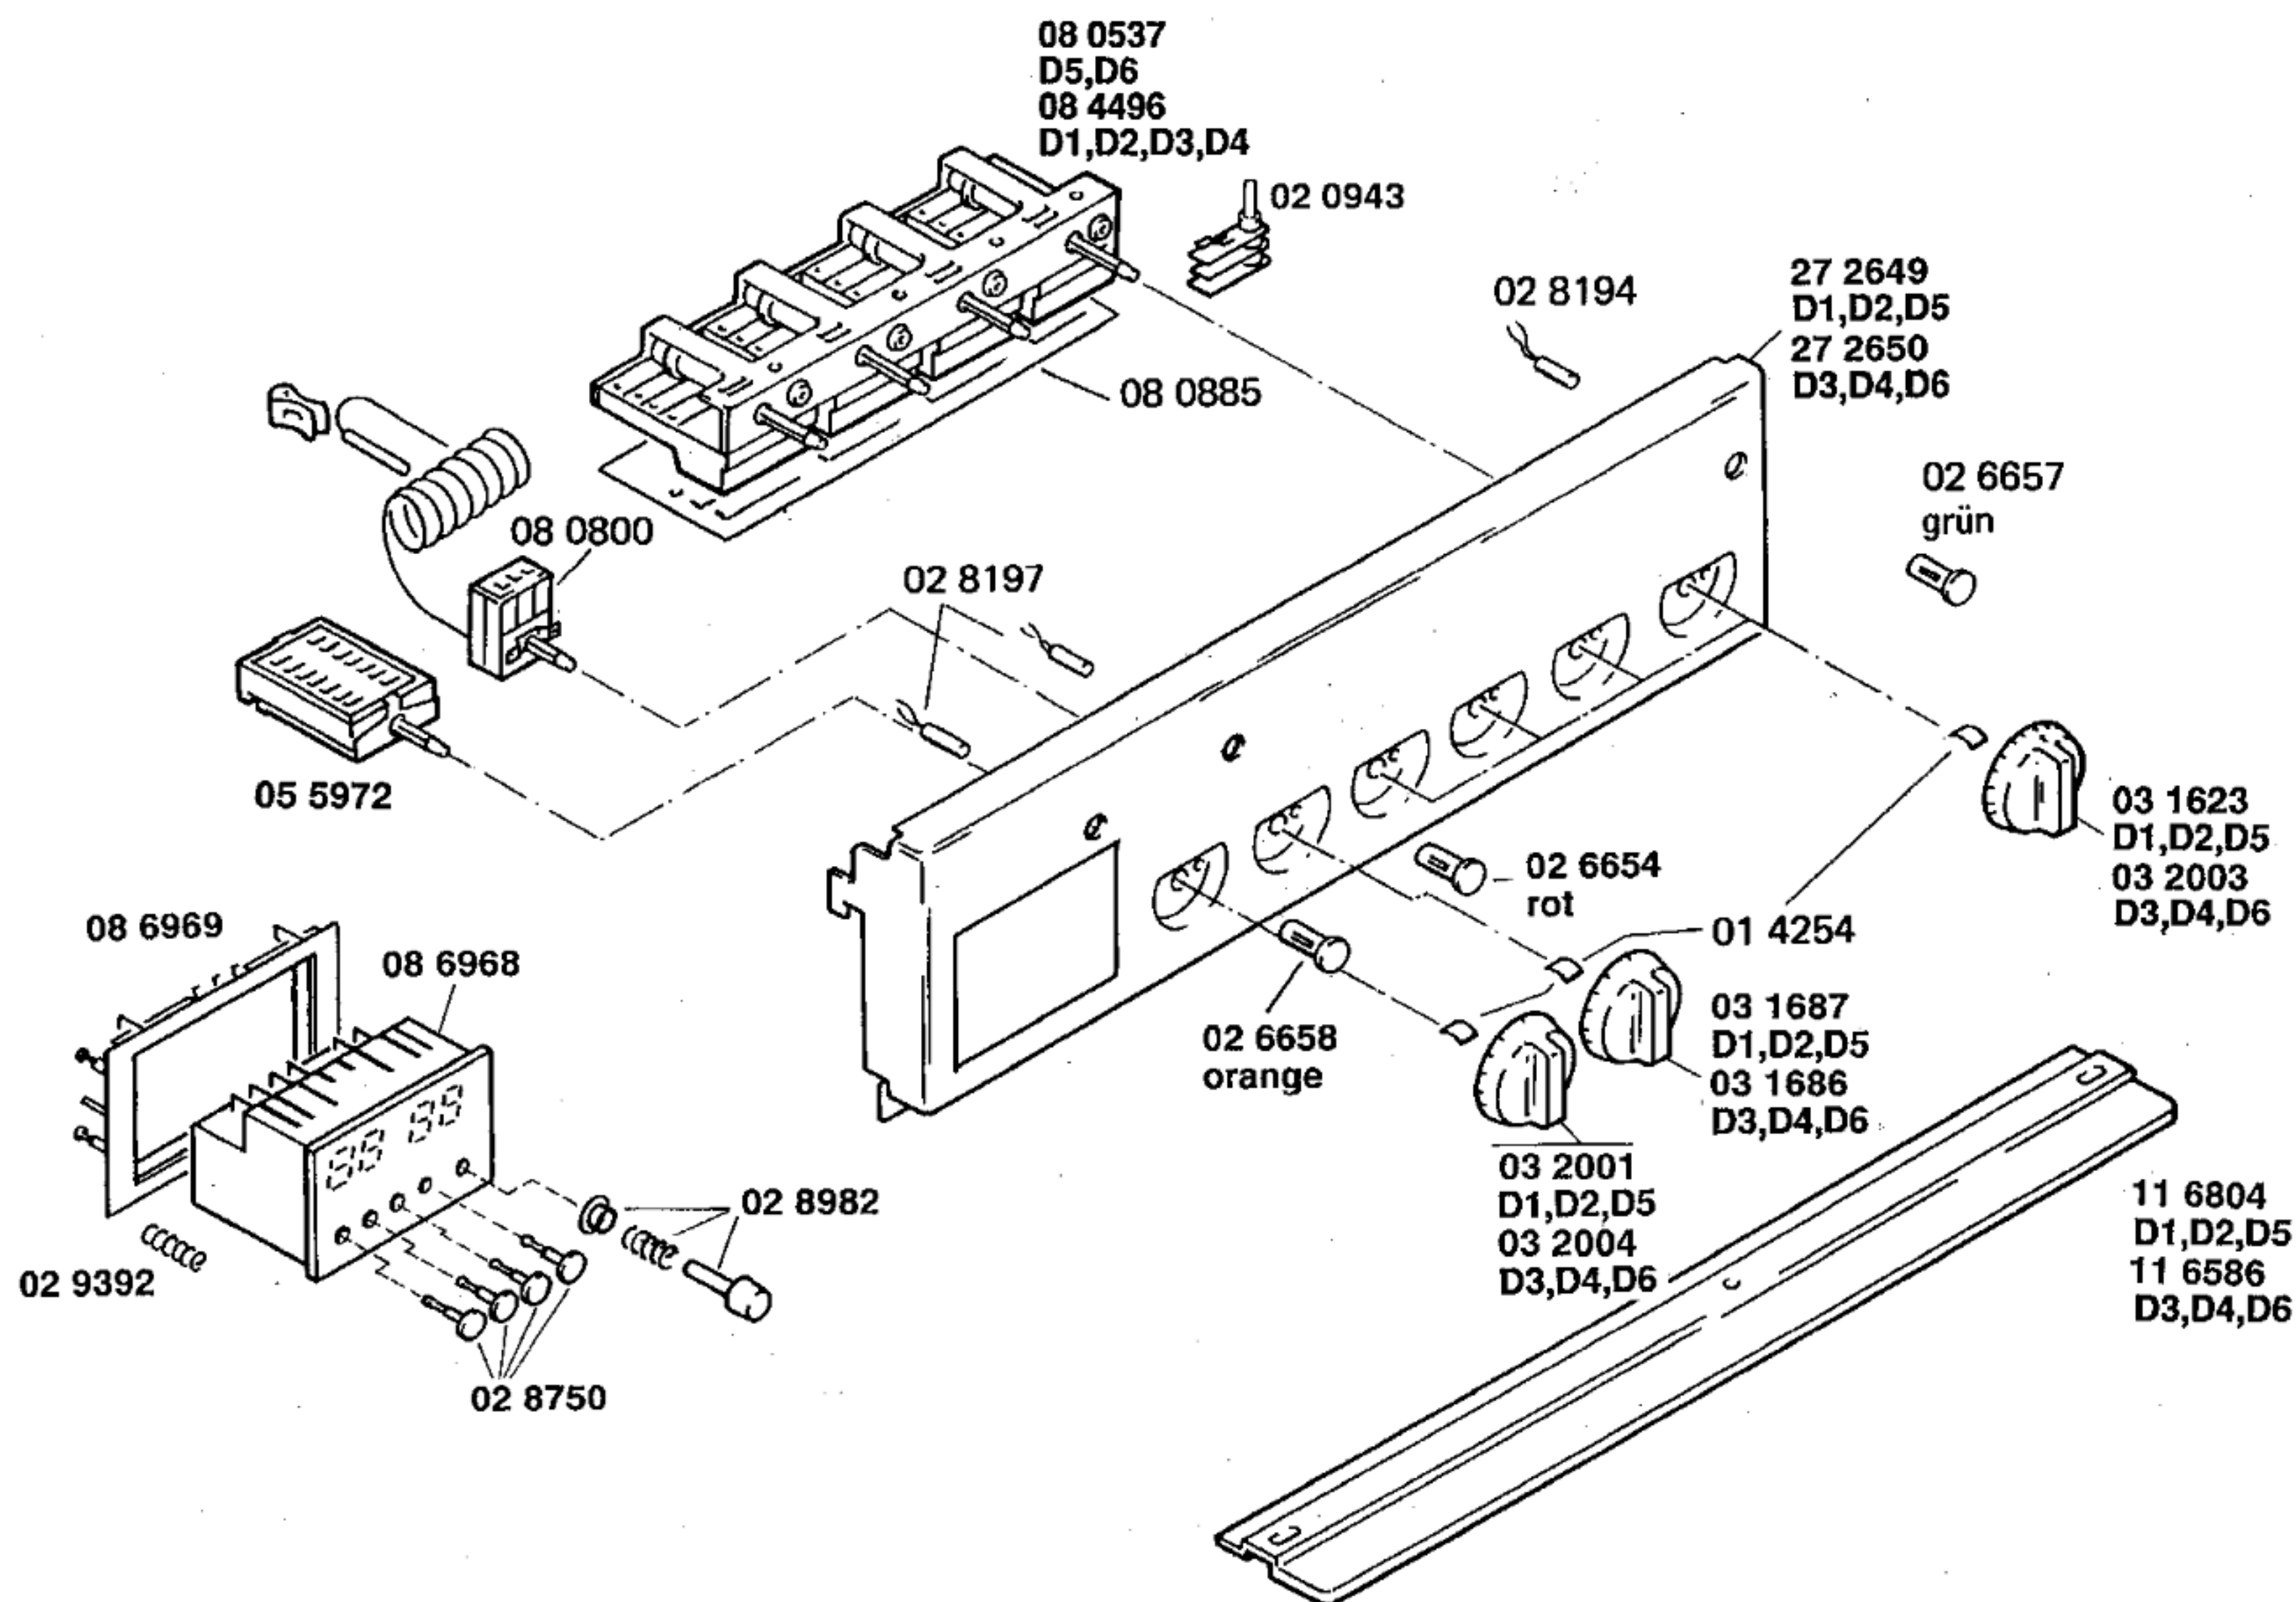

Gebrauchsanweisung
51 4625
D1,D2,D3,D4
(D,F,GB,I,NL)
51 5091
D5,D6
(D,F,GB I,NL)

**Bratzeitautomatik-
Wählscheibe**
51 3359
D1,D2,D3,D4,D5,D6
(D,F,GB,I,NL)

Zubehör:
Blatt 30

Bratpfanne
HZ8049

Backblech Alu
HZ8062

Spritzschutz
HZ8044

Glasbräter
HZ9150

Kombirost
11 6502

