

Gebrauchsanweisung

51 4885
 D1, D2
 (D)
 51 4988
 NL1, F1, F2, NL2
 (F, GB, NL)
 51 5382
 CH1, CH2
 (D, F, I)

Kochbuch:

51 4886
 D1, D1
 (D)
 51 4989
 NL1, NL2
 (NL)
 51 5383
 CH1, CH2
 (D)
 51 6001
 F1, F2
 (F)


Zubehör:


HZ64100
 Rost hoch

HZ64200
 Rost niedrig

HZ64300
 Universalpfanne

  HZ64040
 Einbaurahmen,
 umbrabraun

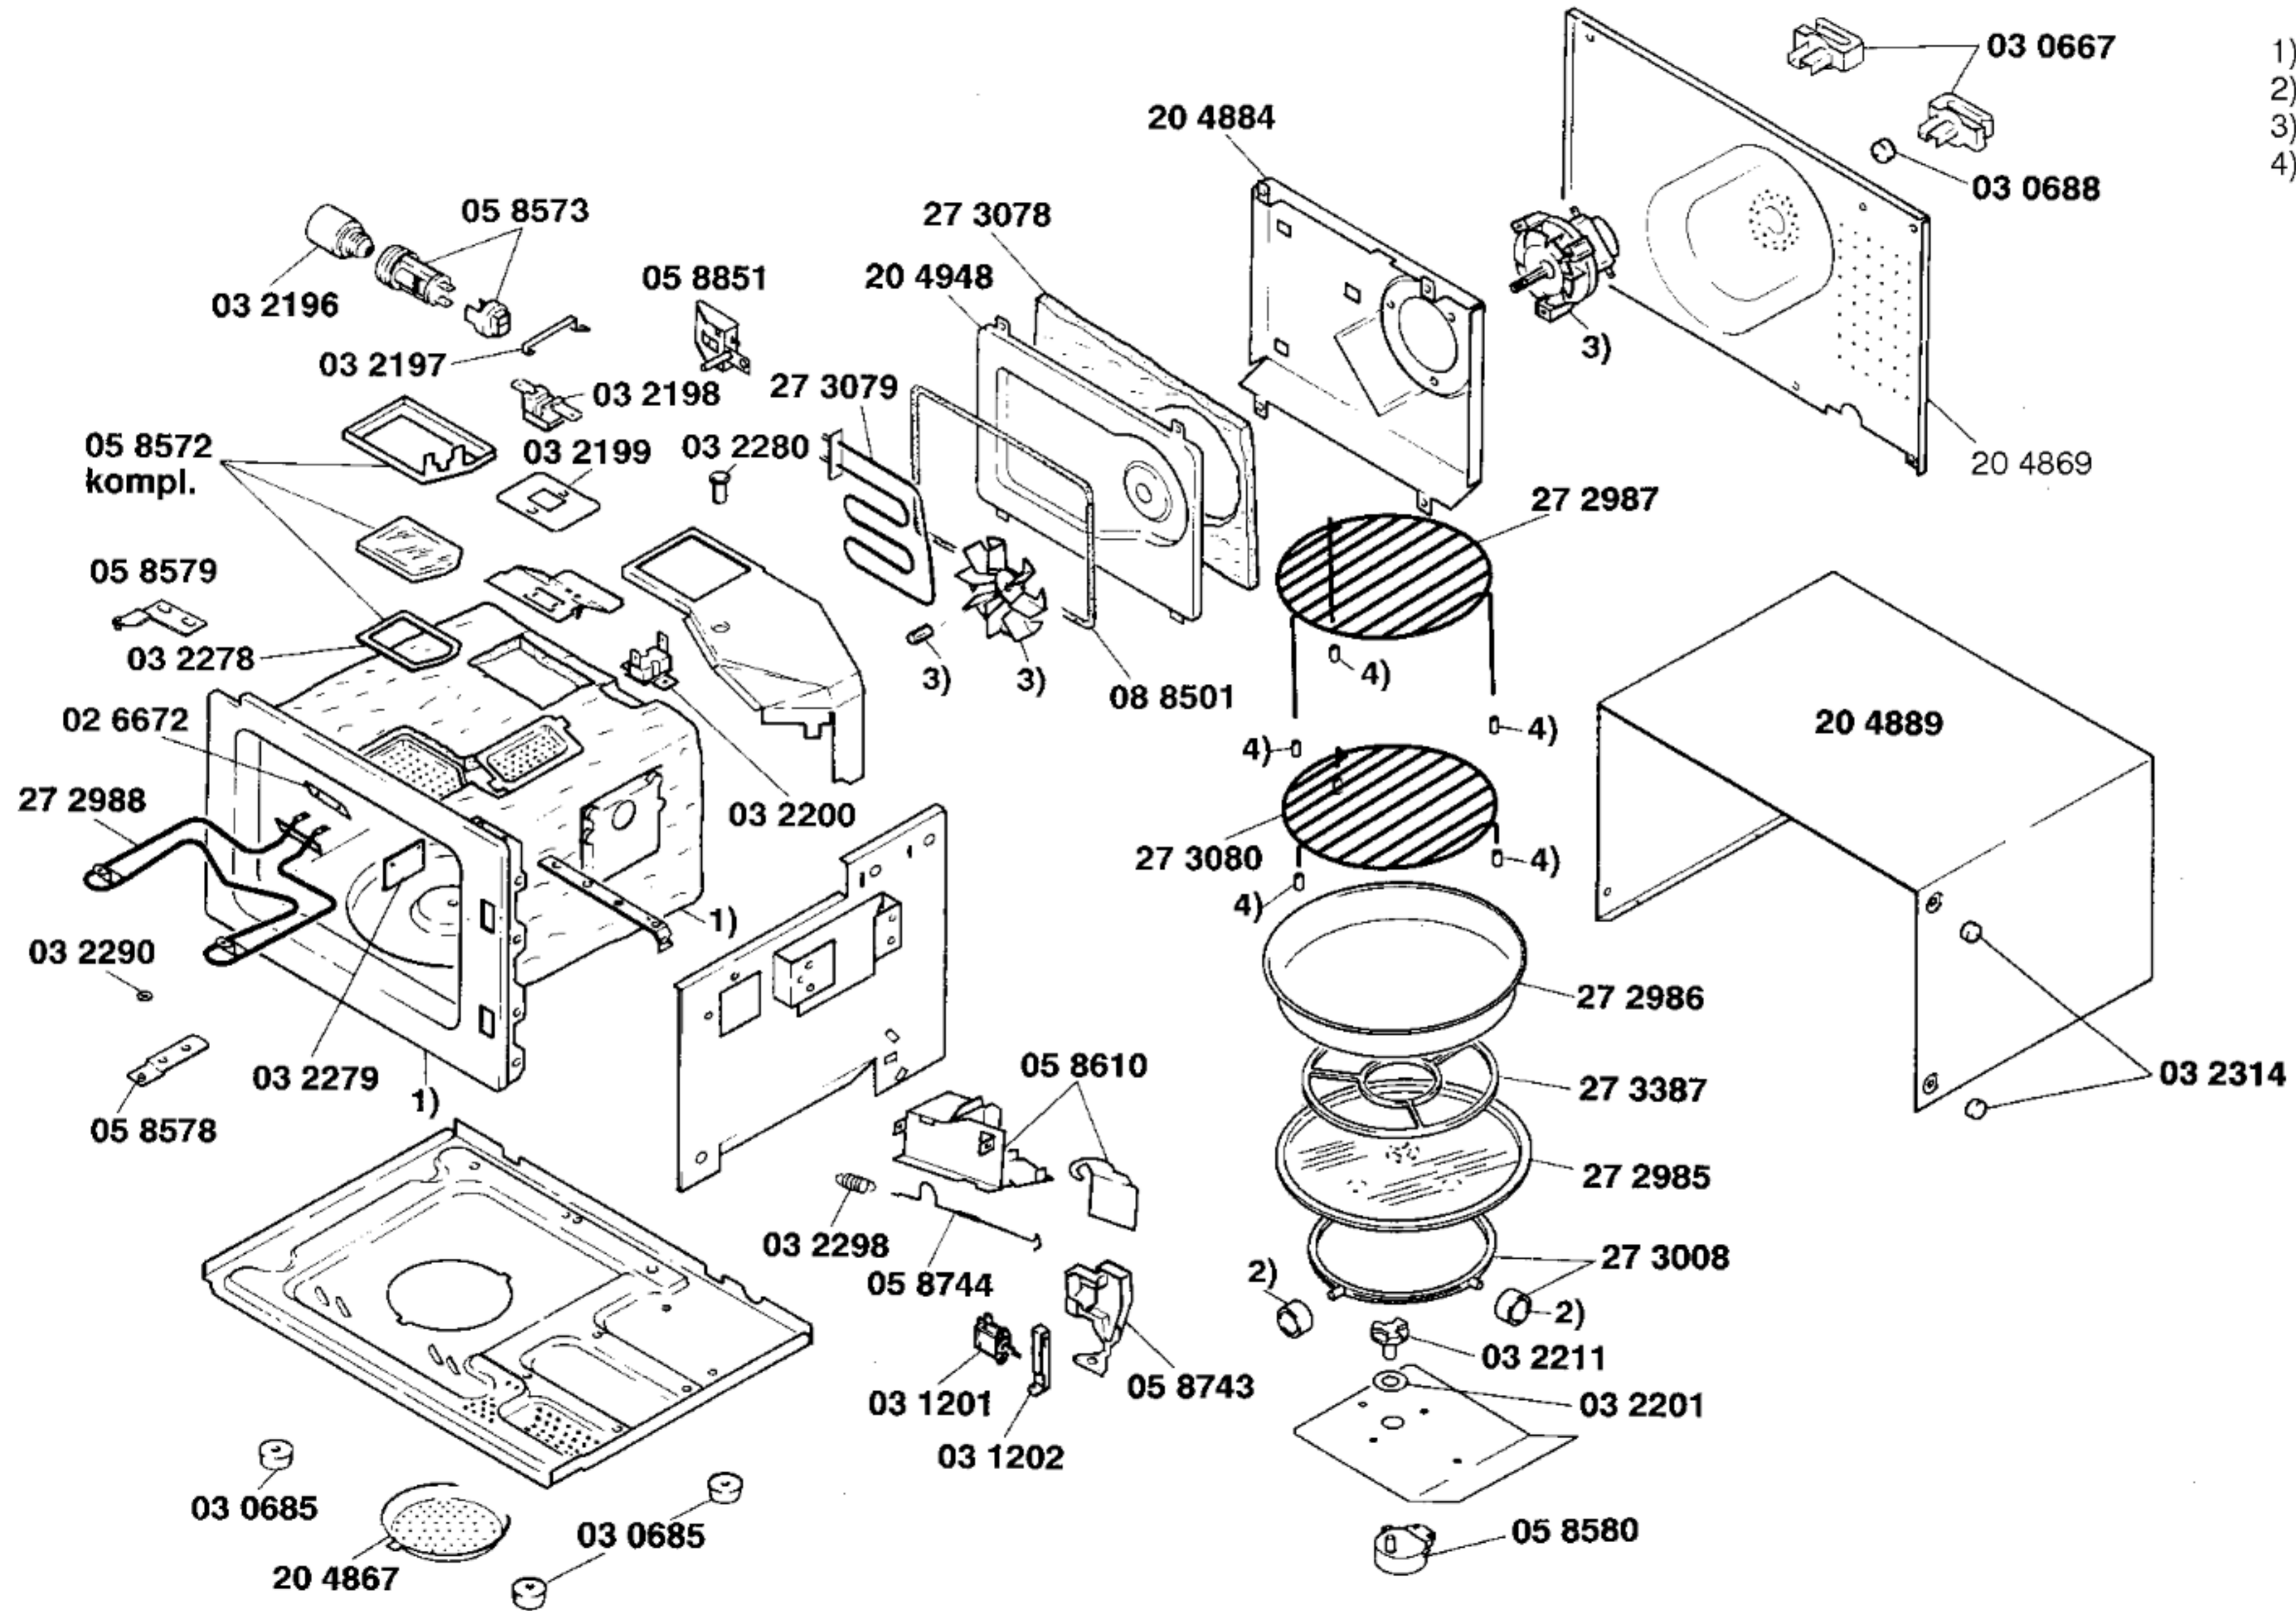

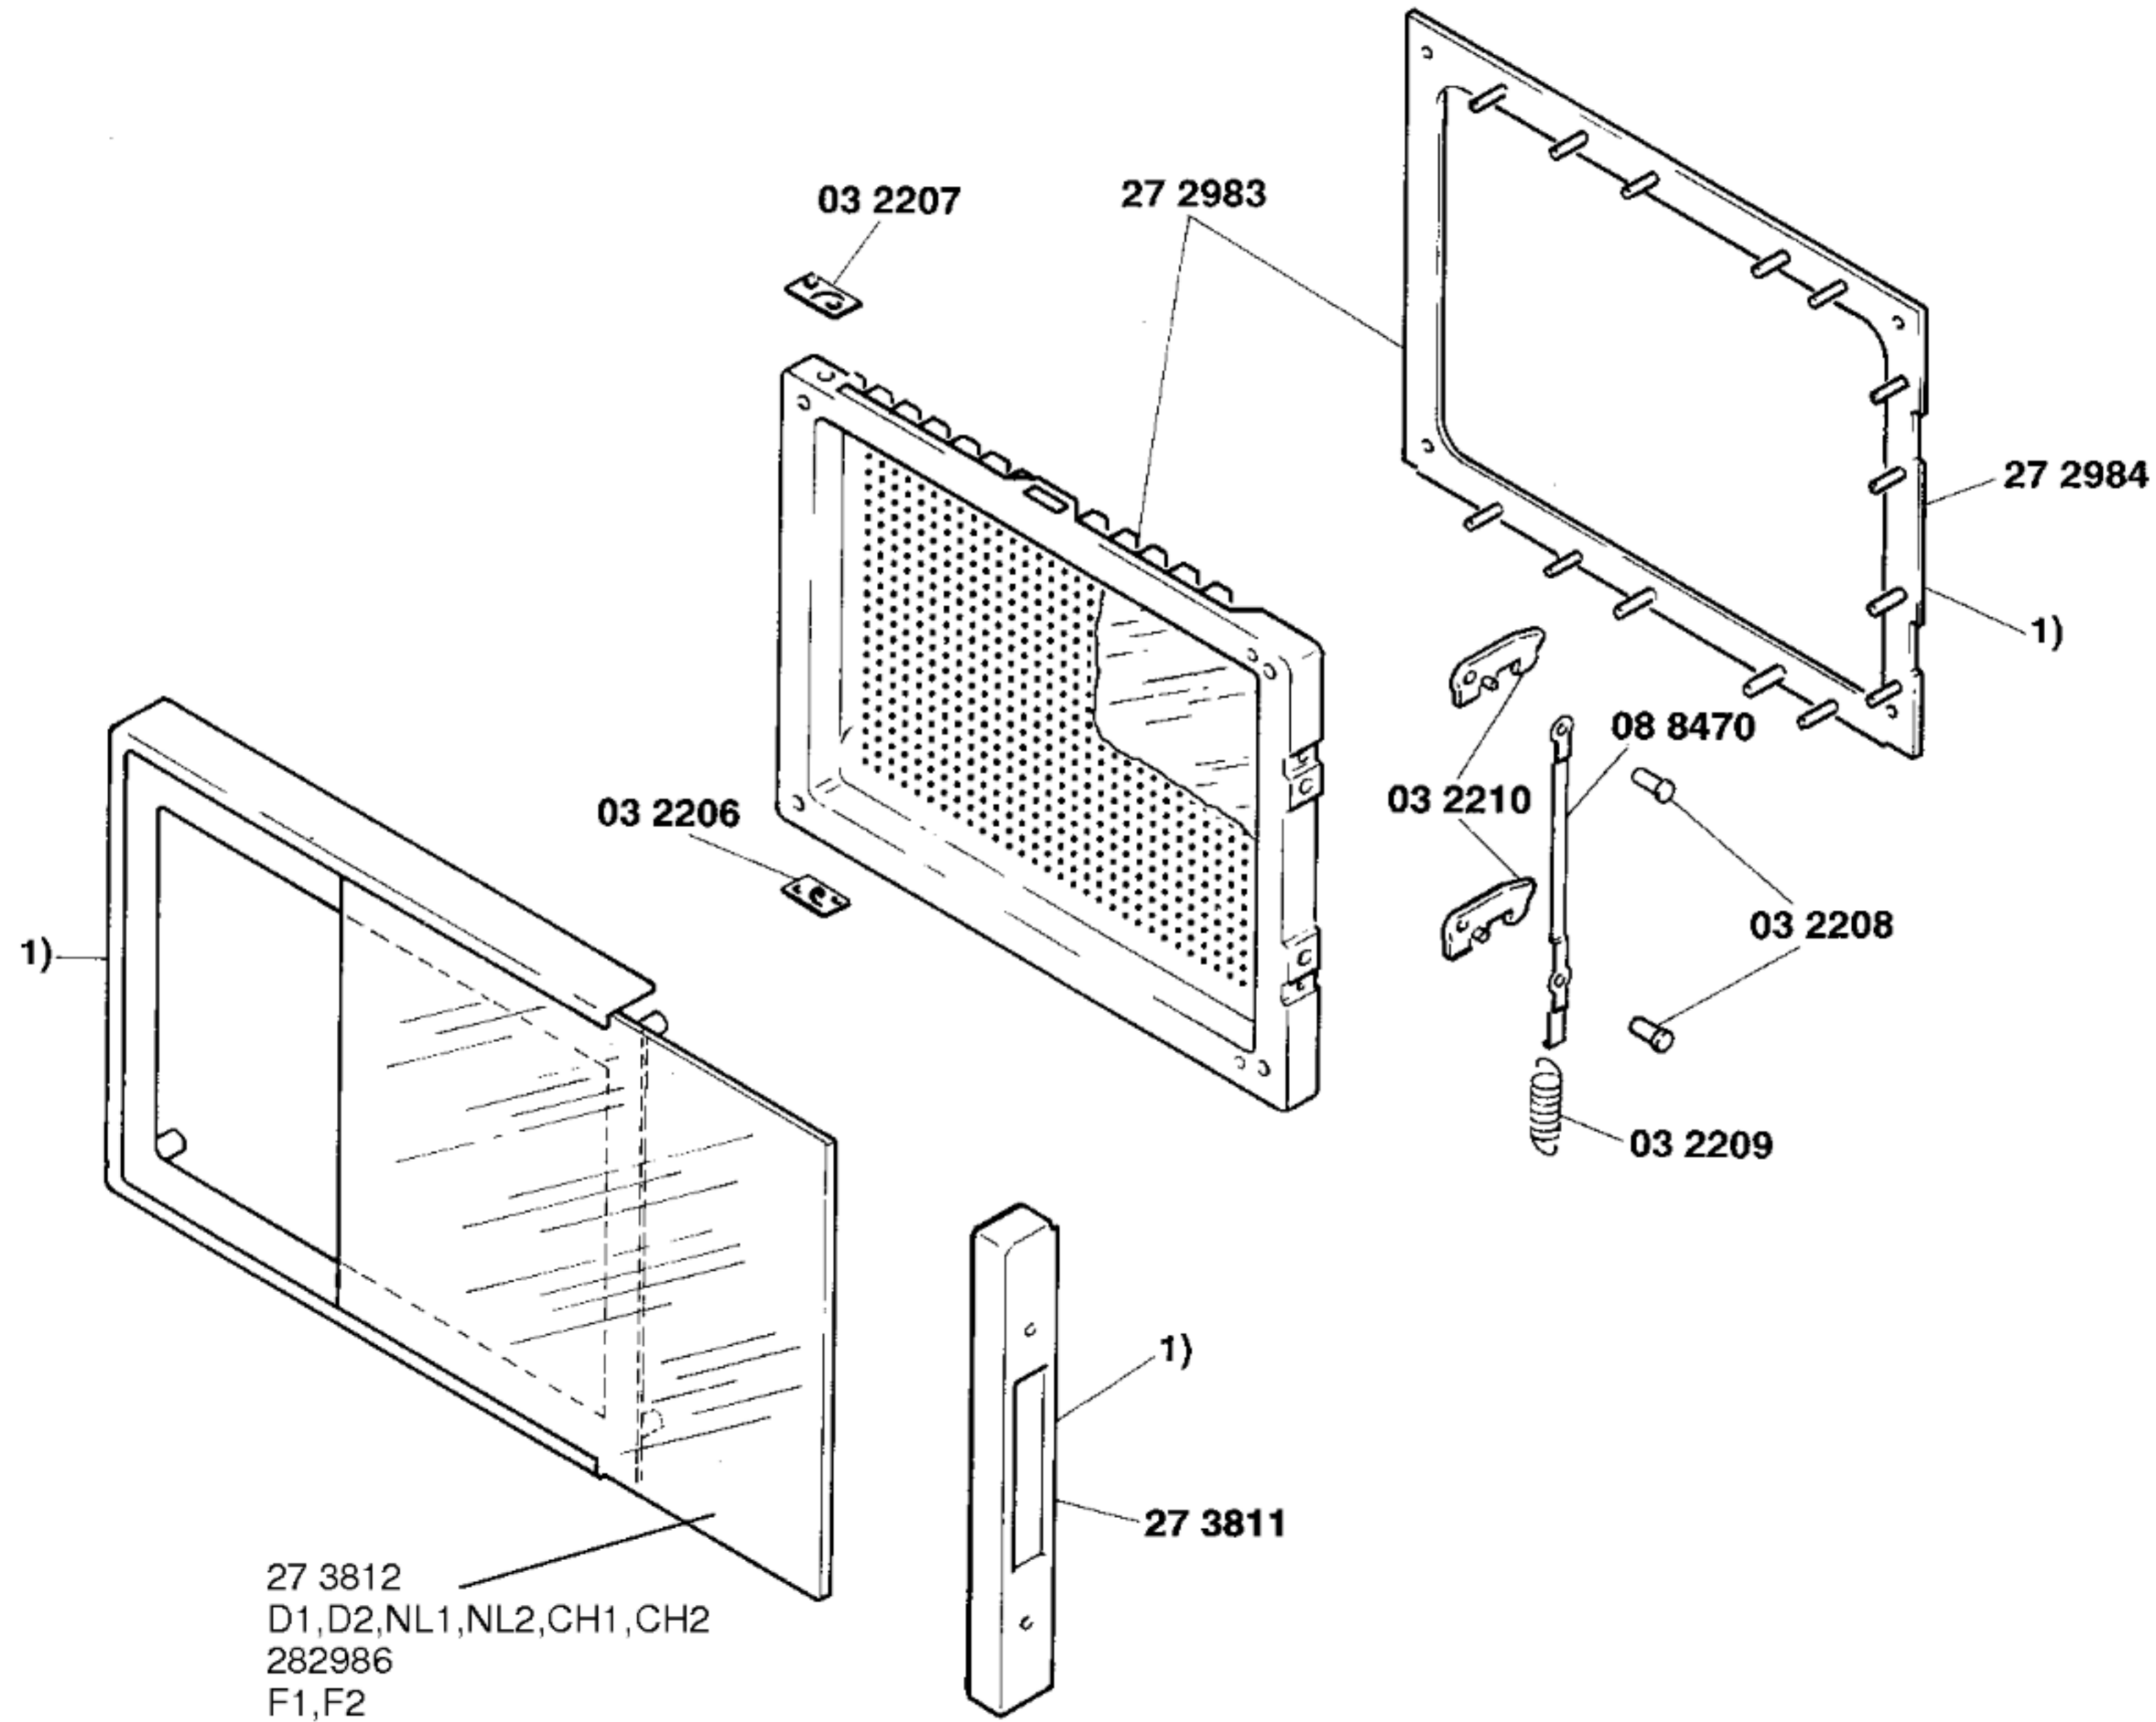

1) 27 3810
 kompl.

