


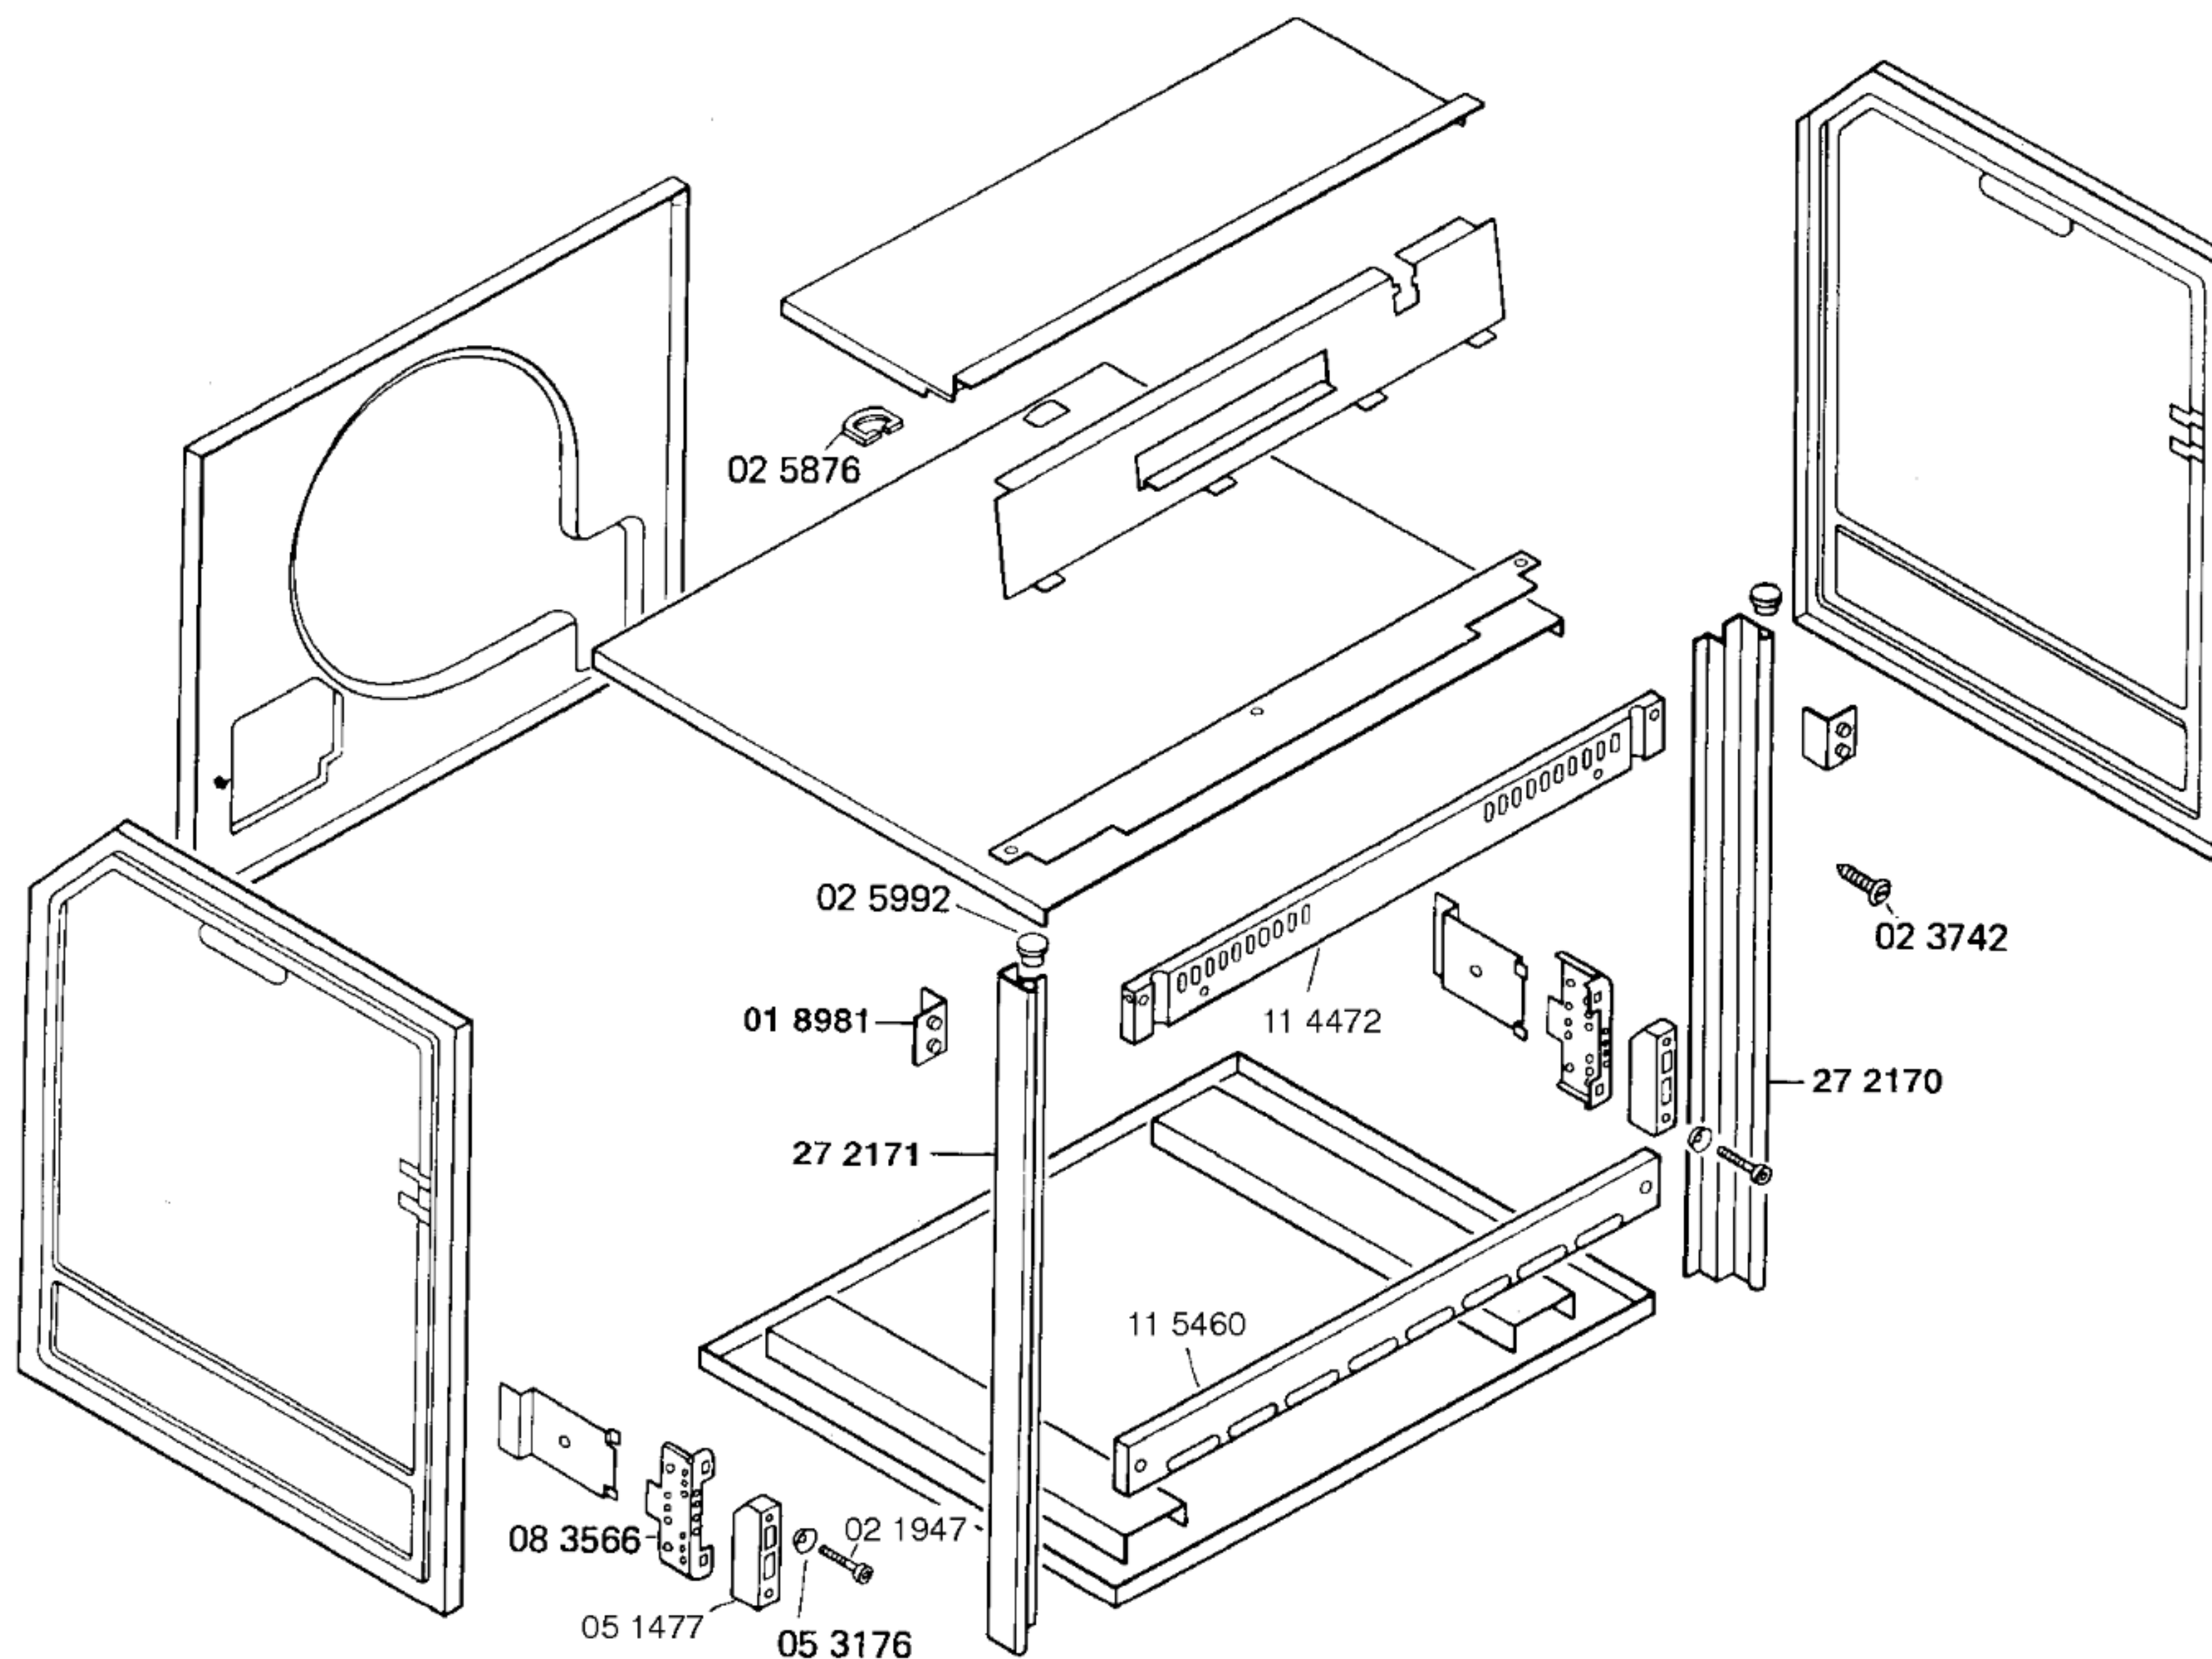

51 2726
Gebrauchsanweisung

03 1612
Befestigungssatz

Zubehör:

Grillpfanne
Z1220X0

Alu-Backblech
Z1320X0


Back- und
Bratrost
Z1420X0

Teleskopschiene
Z1721X0


Bratenblech
Z1510X0

Drehspieß-Set
Z1162X0

Brotbackstein
Z1910X0

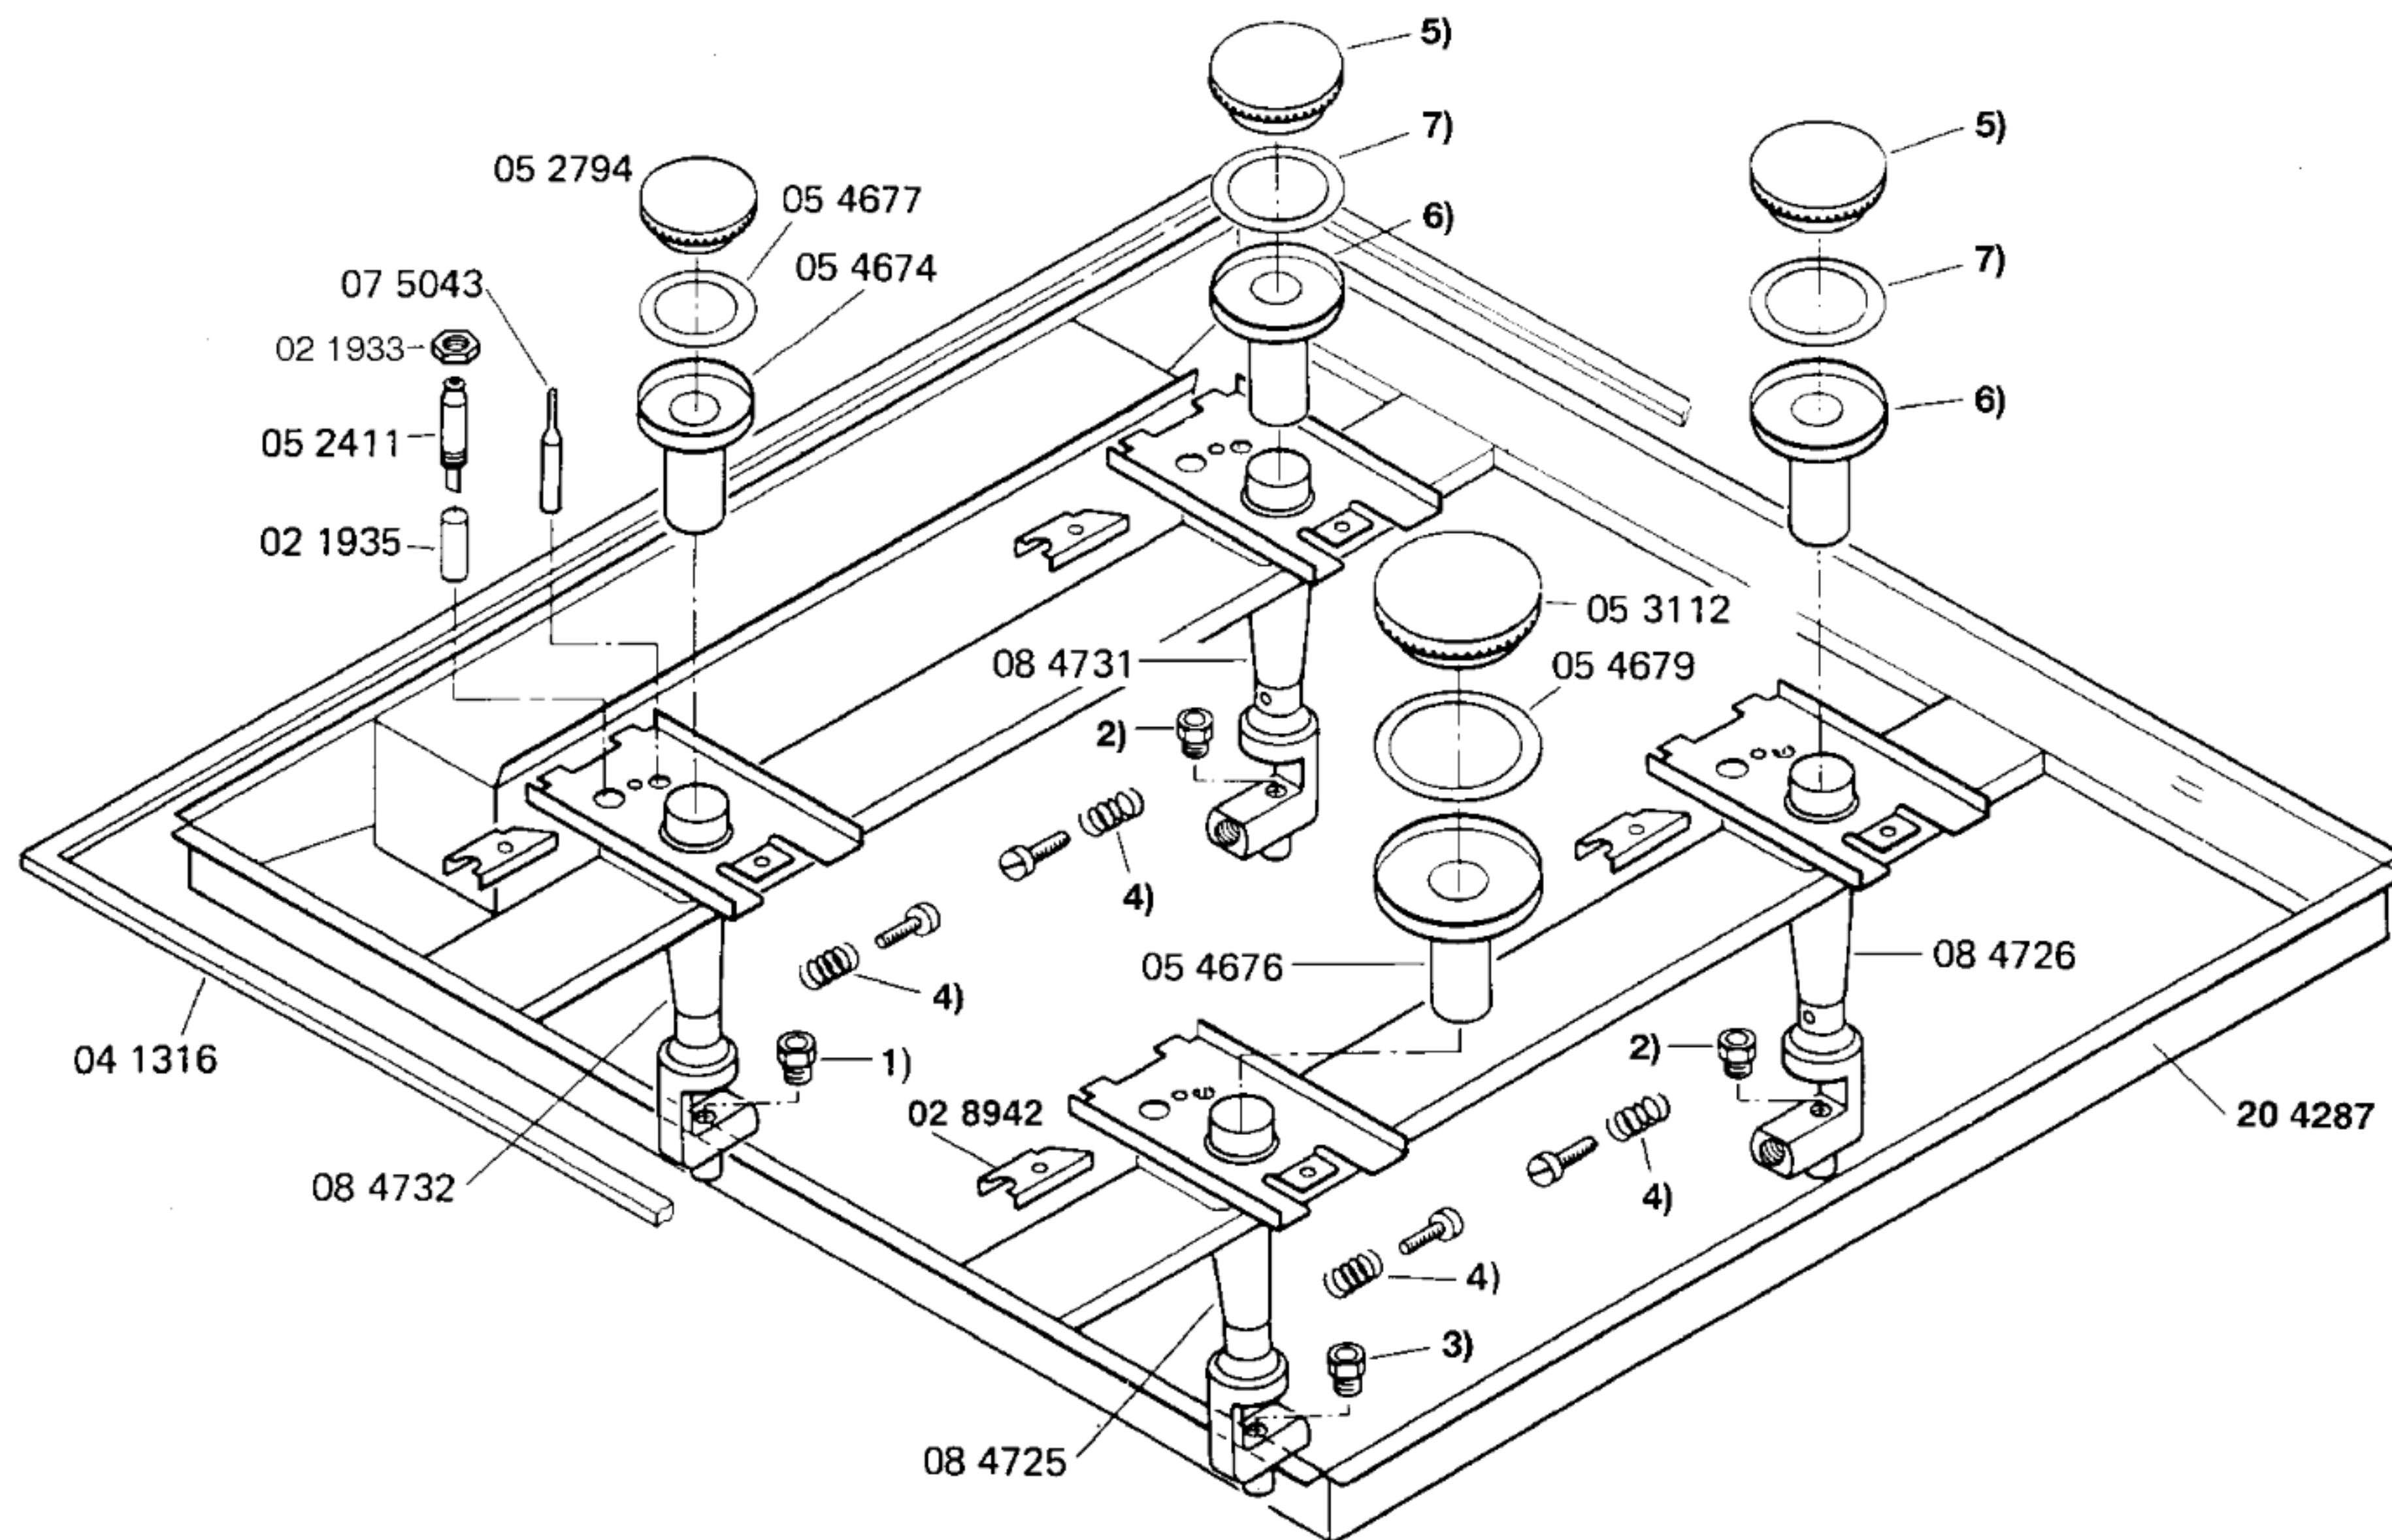

- 1) 03 1803
- 2) 03 1804
- 3) 03 1805
- 4) 02 6579
- 5) 05 2783
- 6) 05 4675
- 7) 05 4678

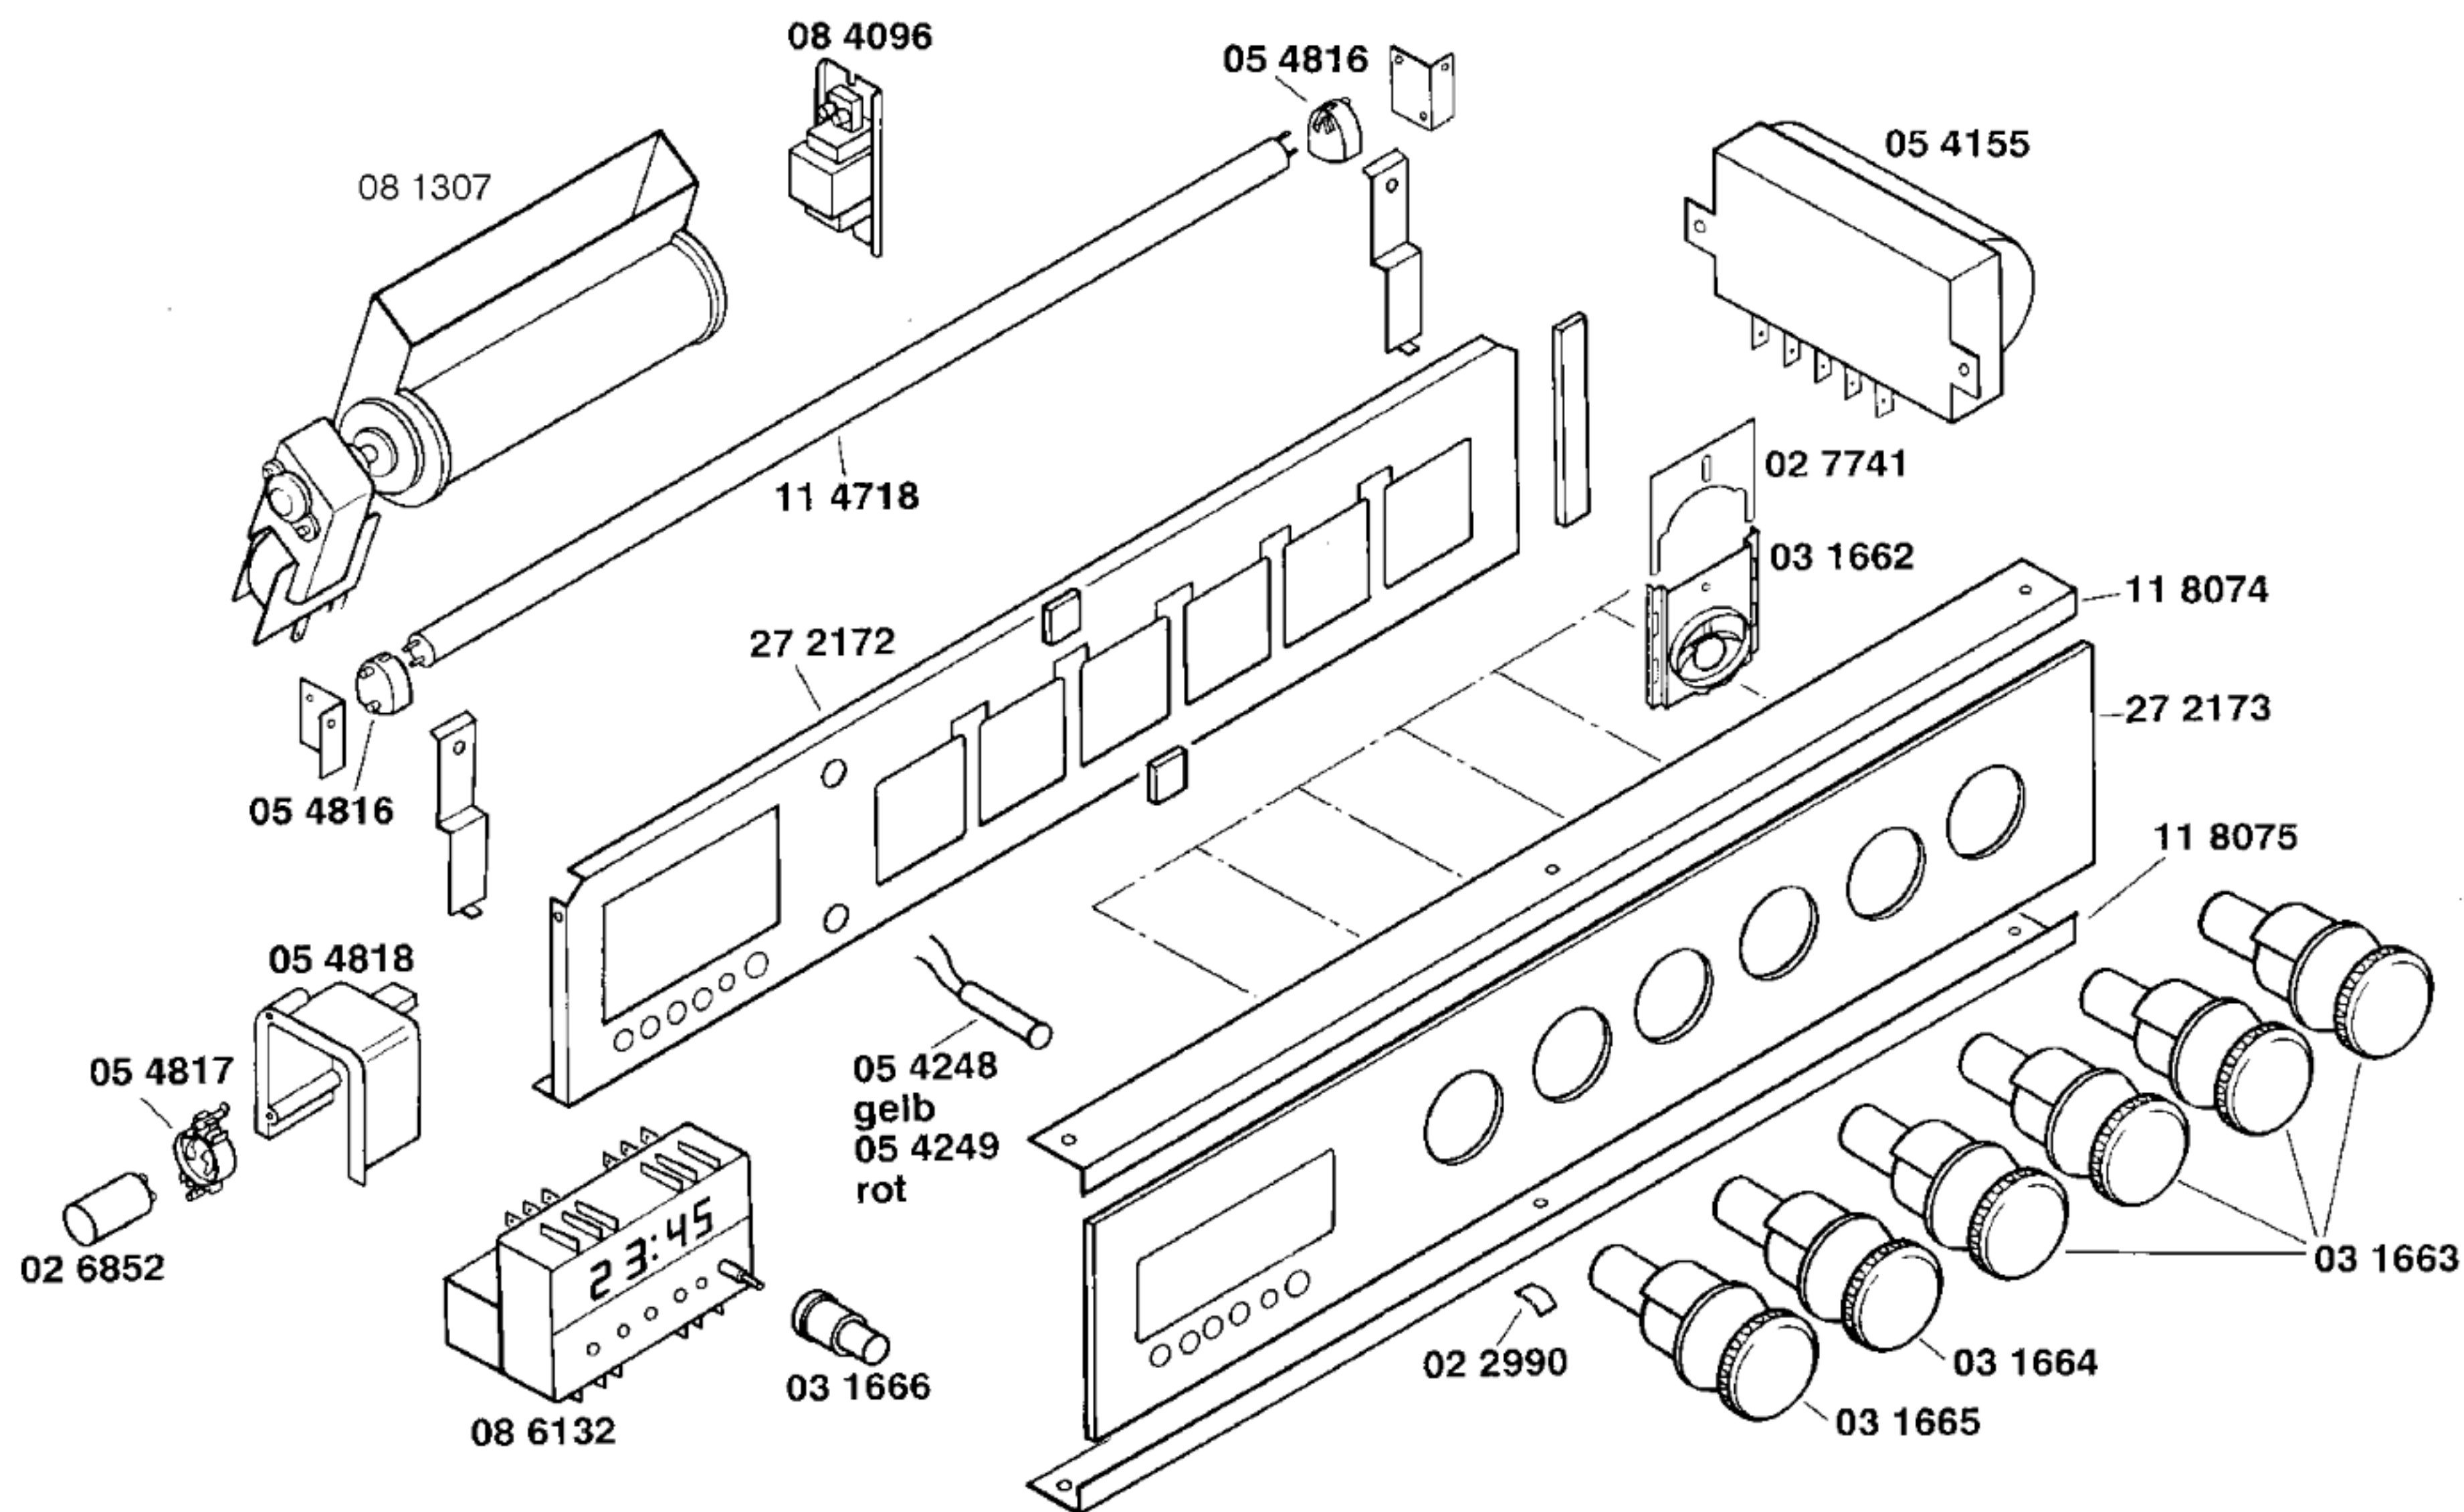


1) 02 7736


2) 02 7715

3) 02 7737

4) 02 5054

5) 02 7846

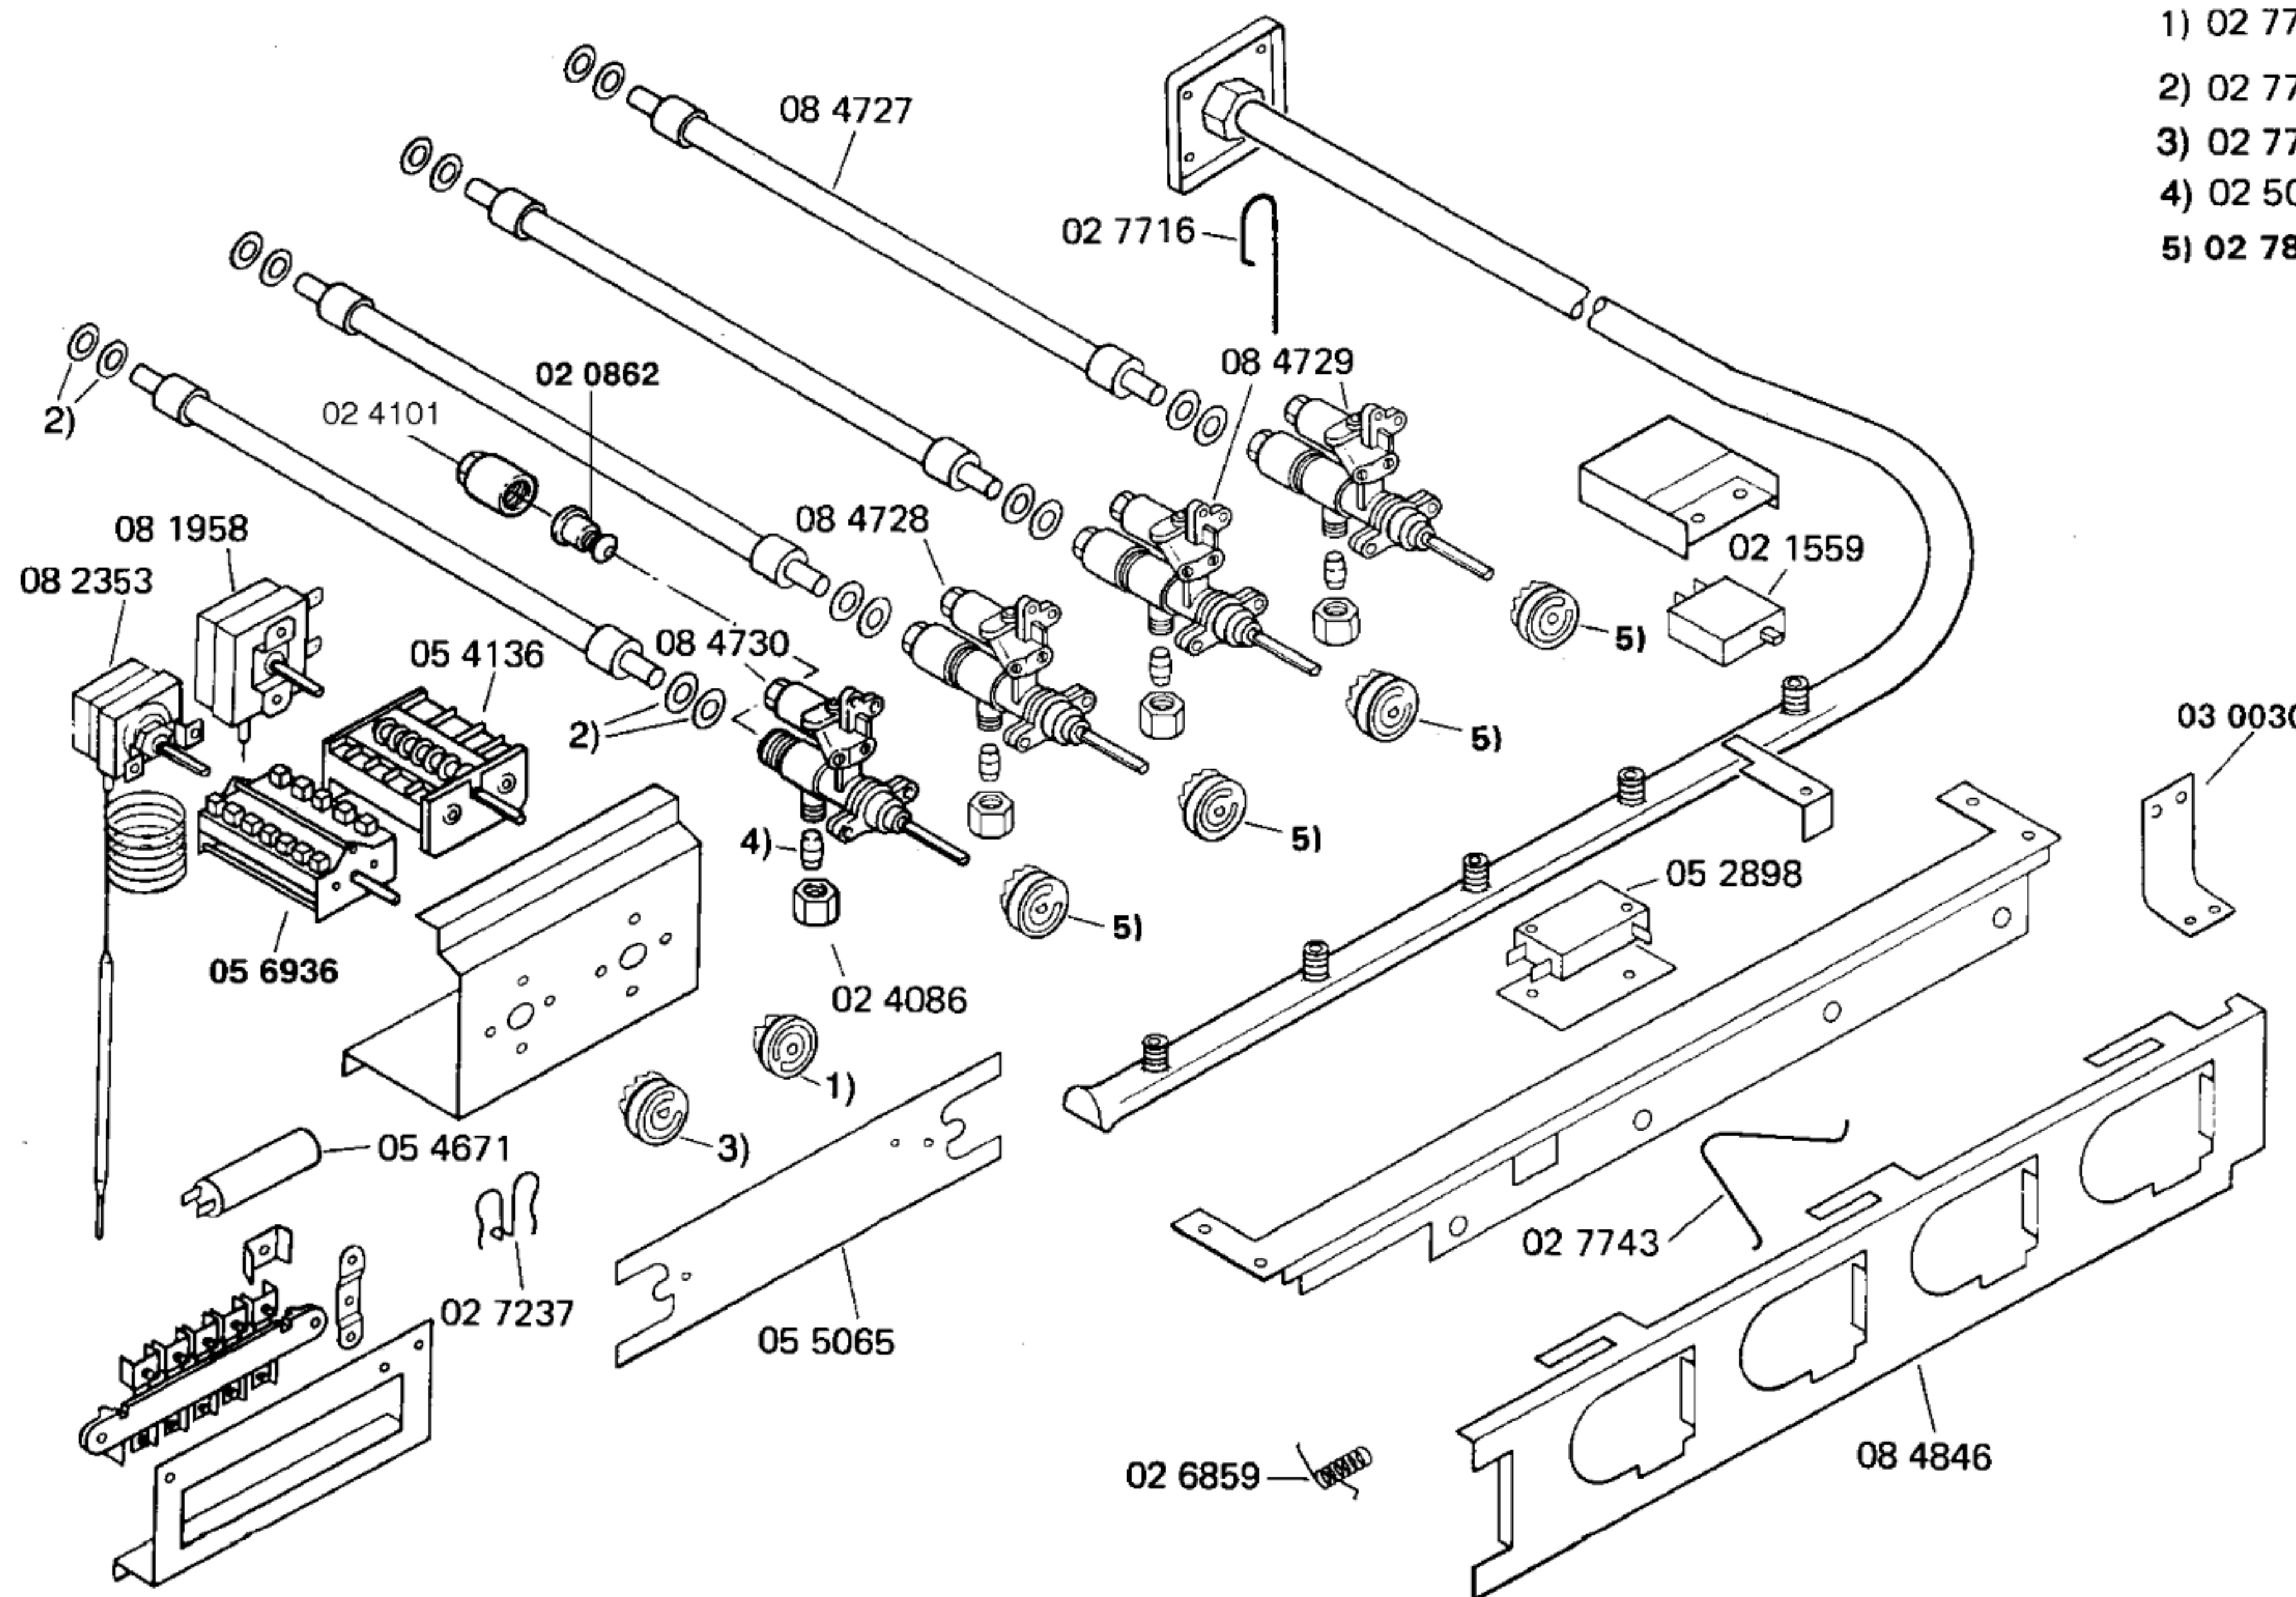

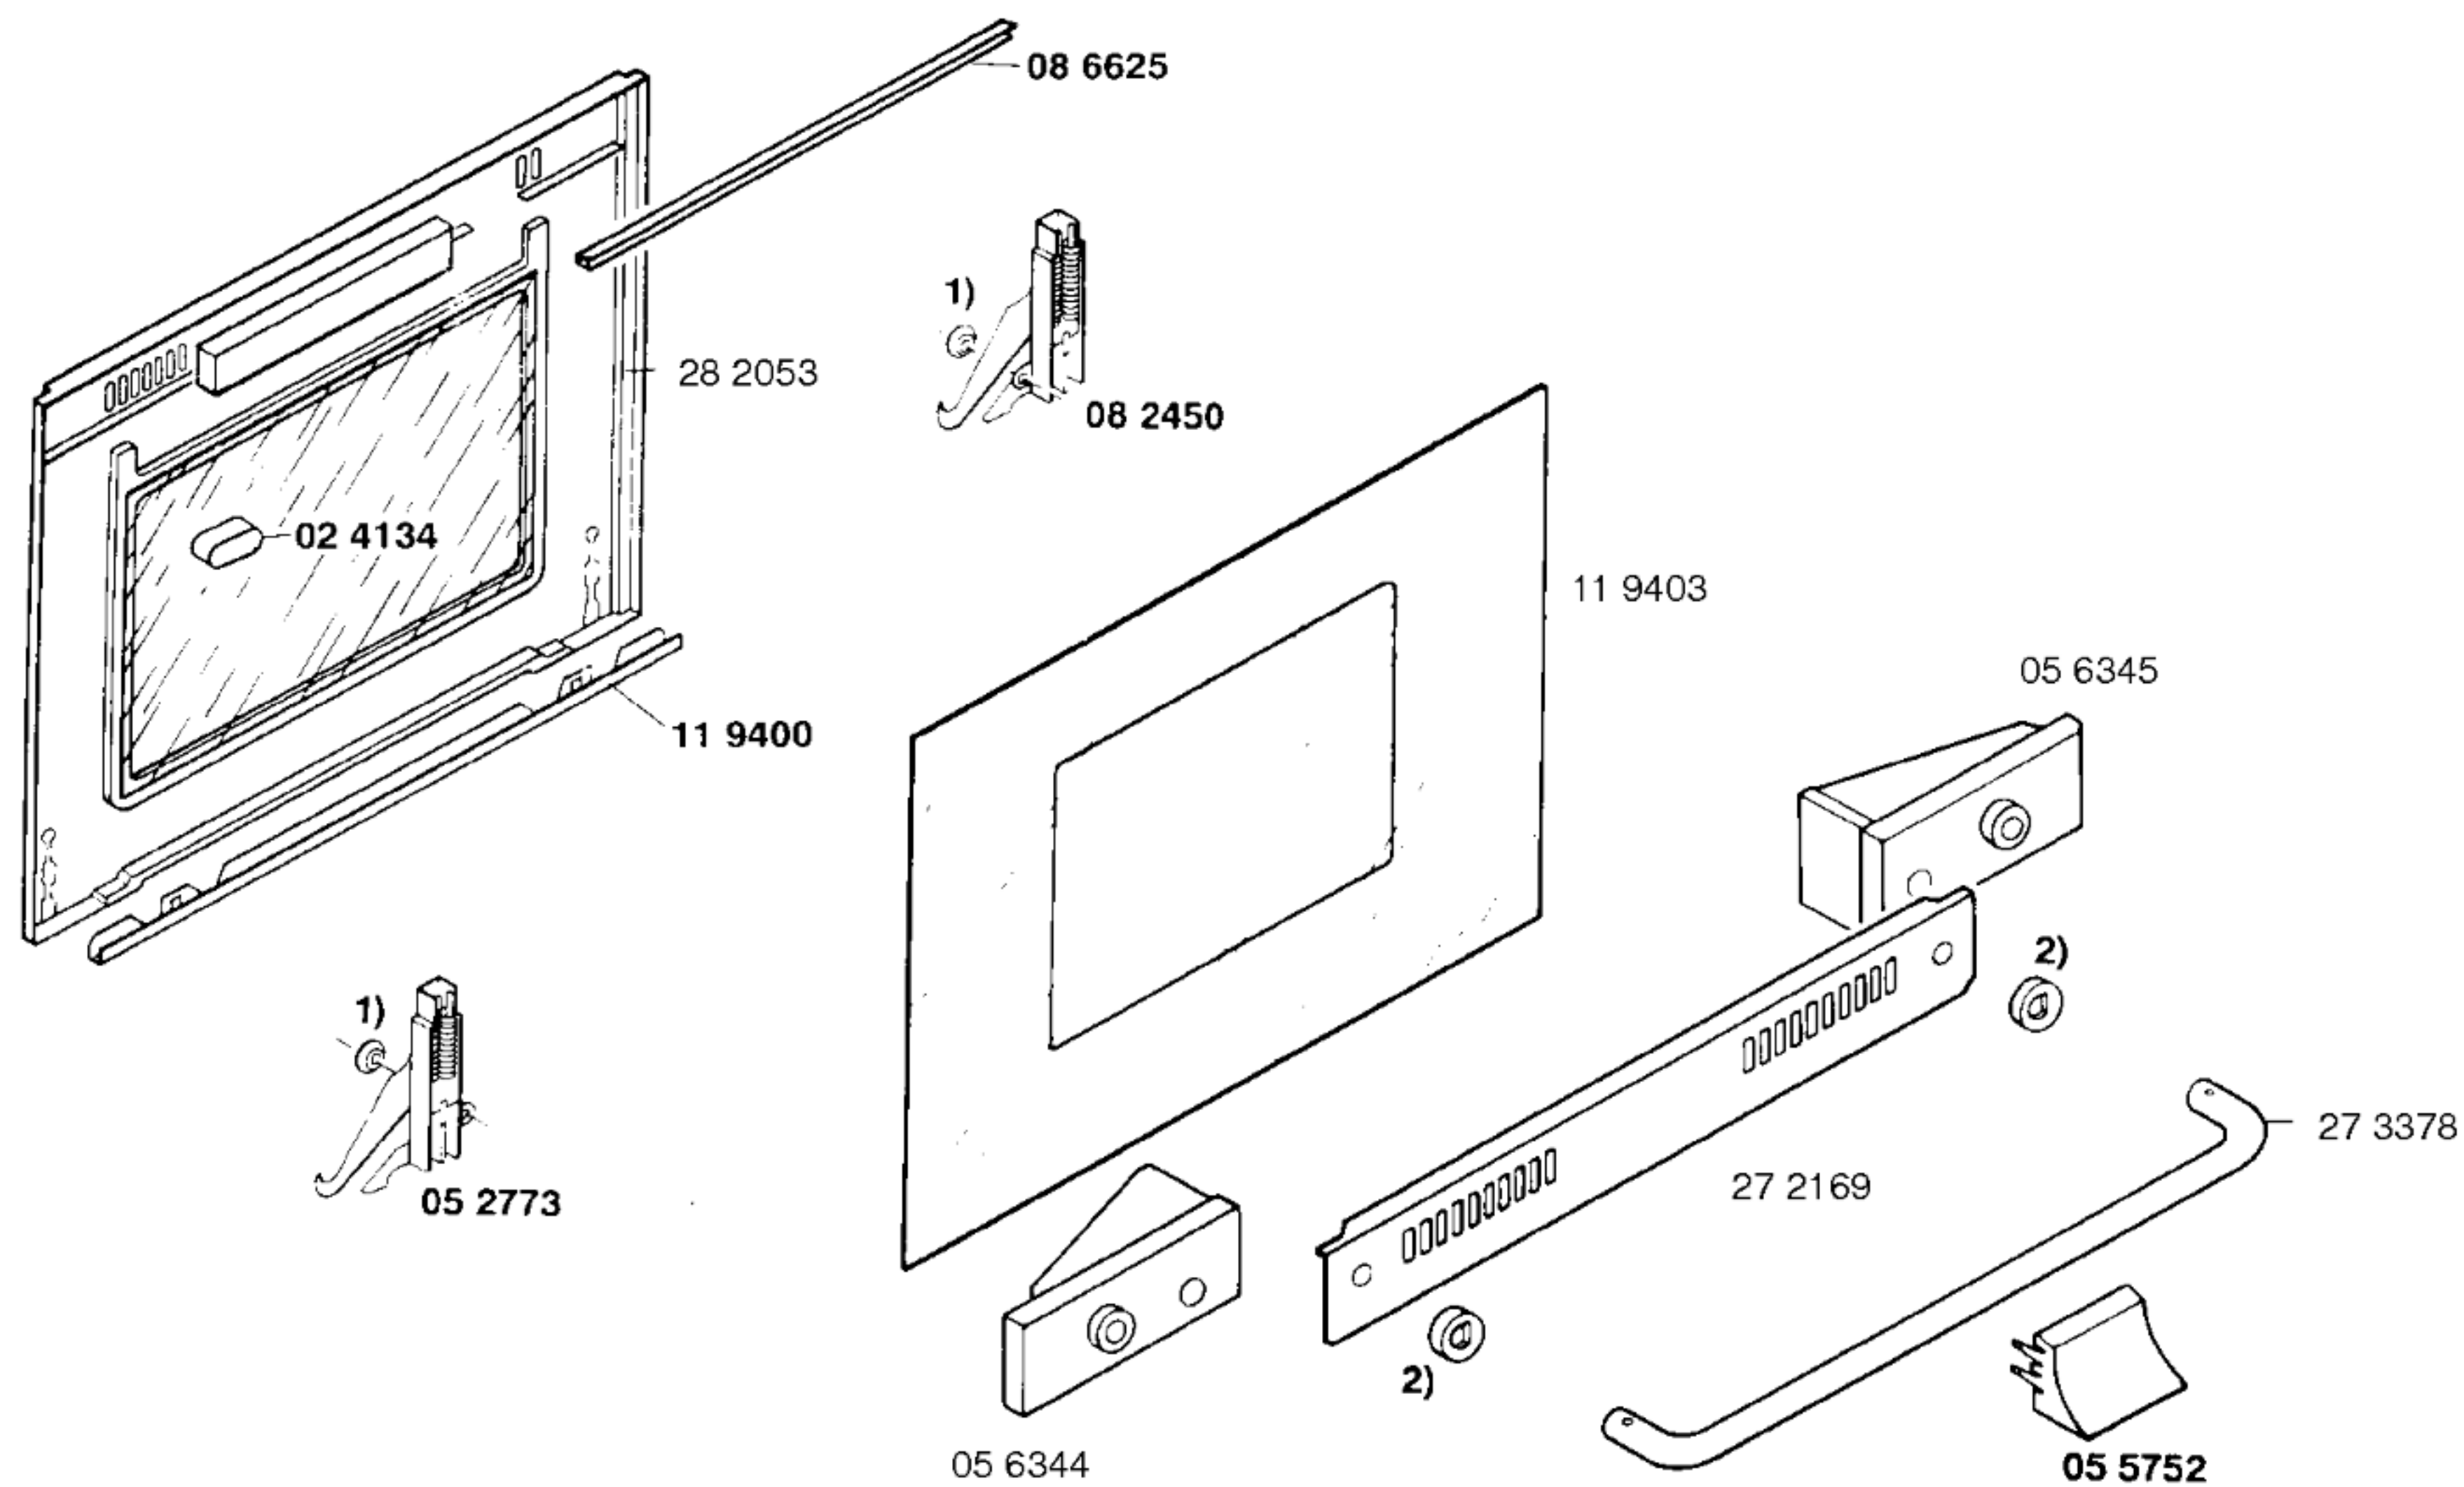

- 1) 02 2695
2) 02 9198

