 


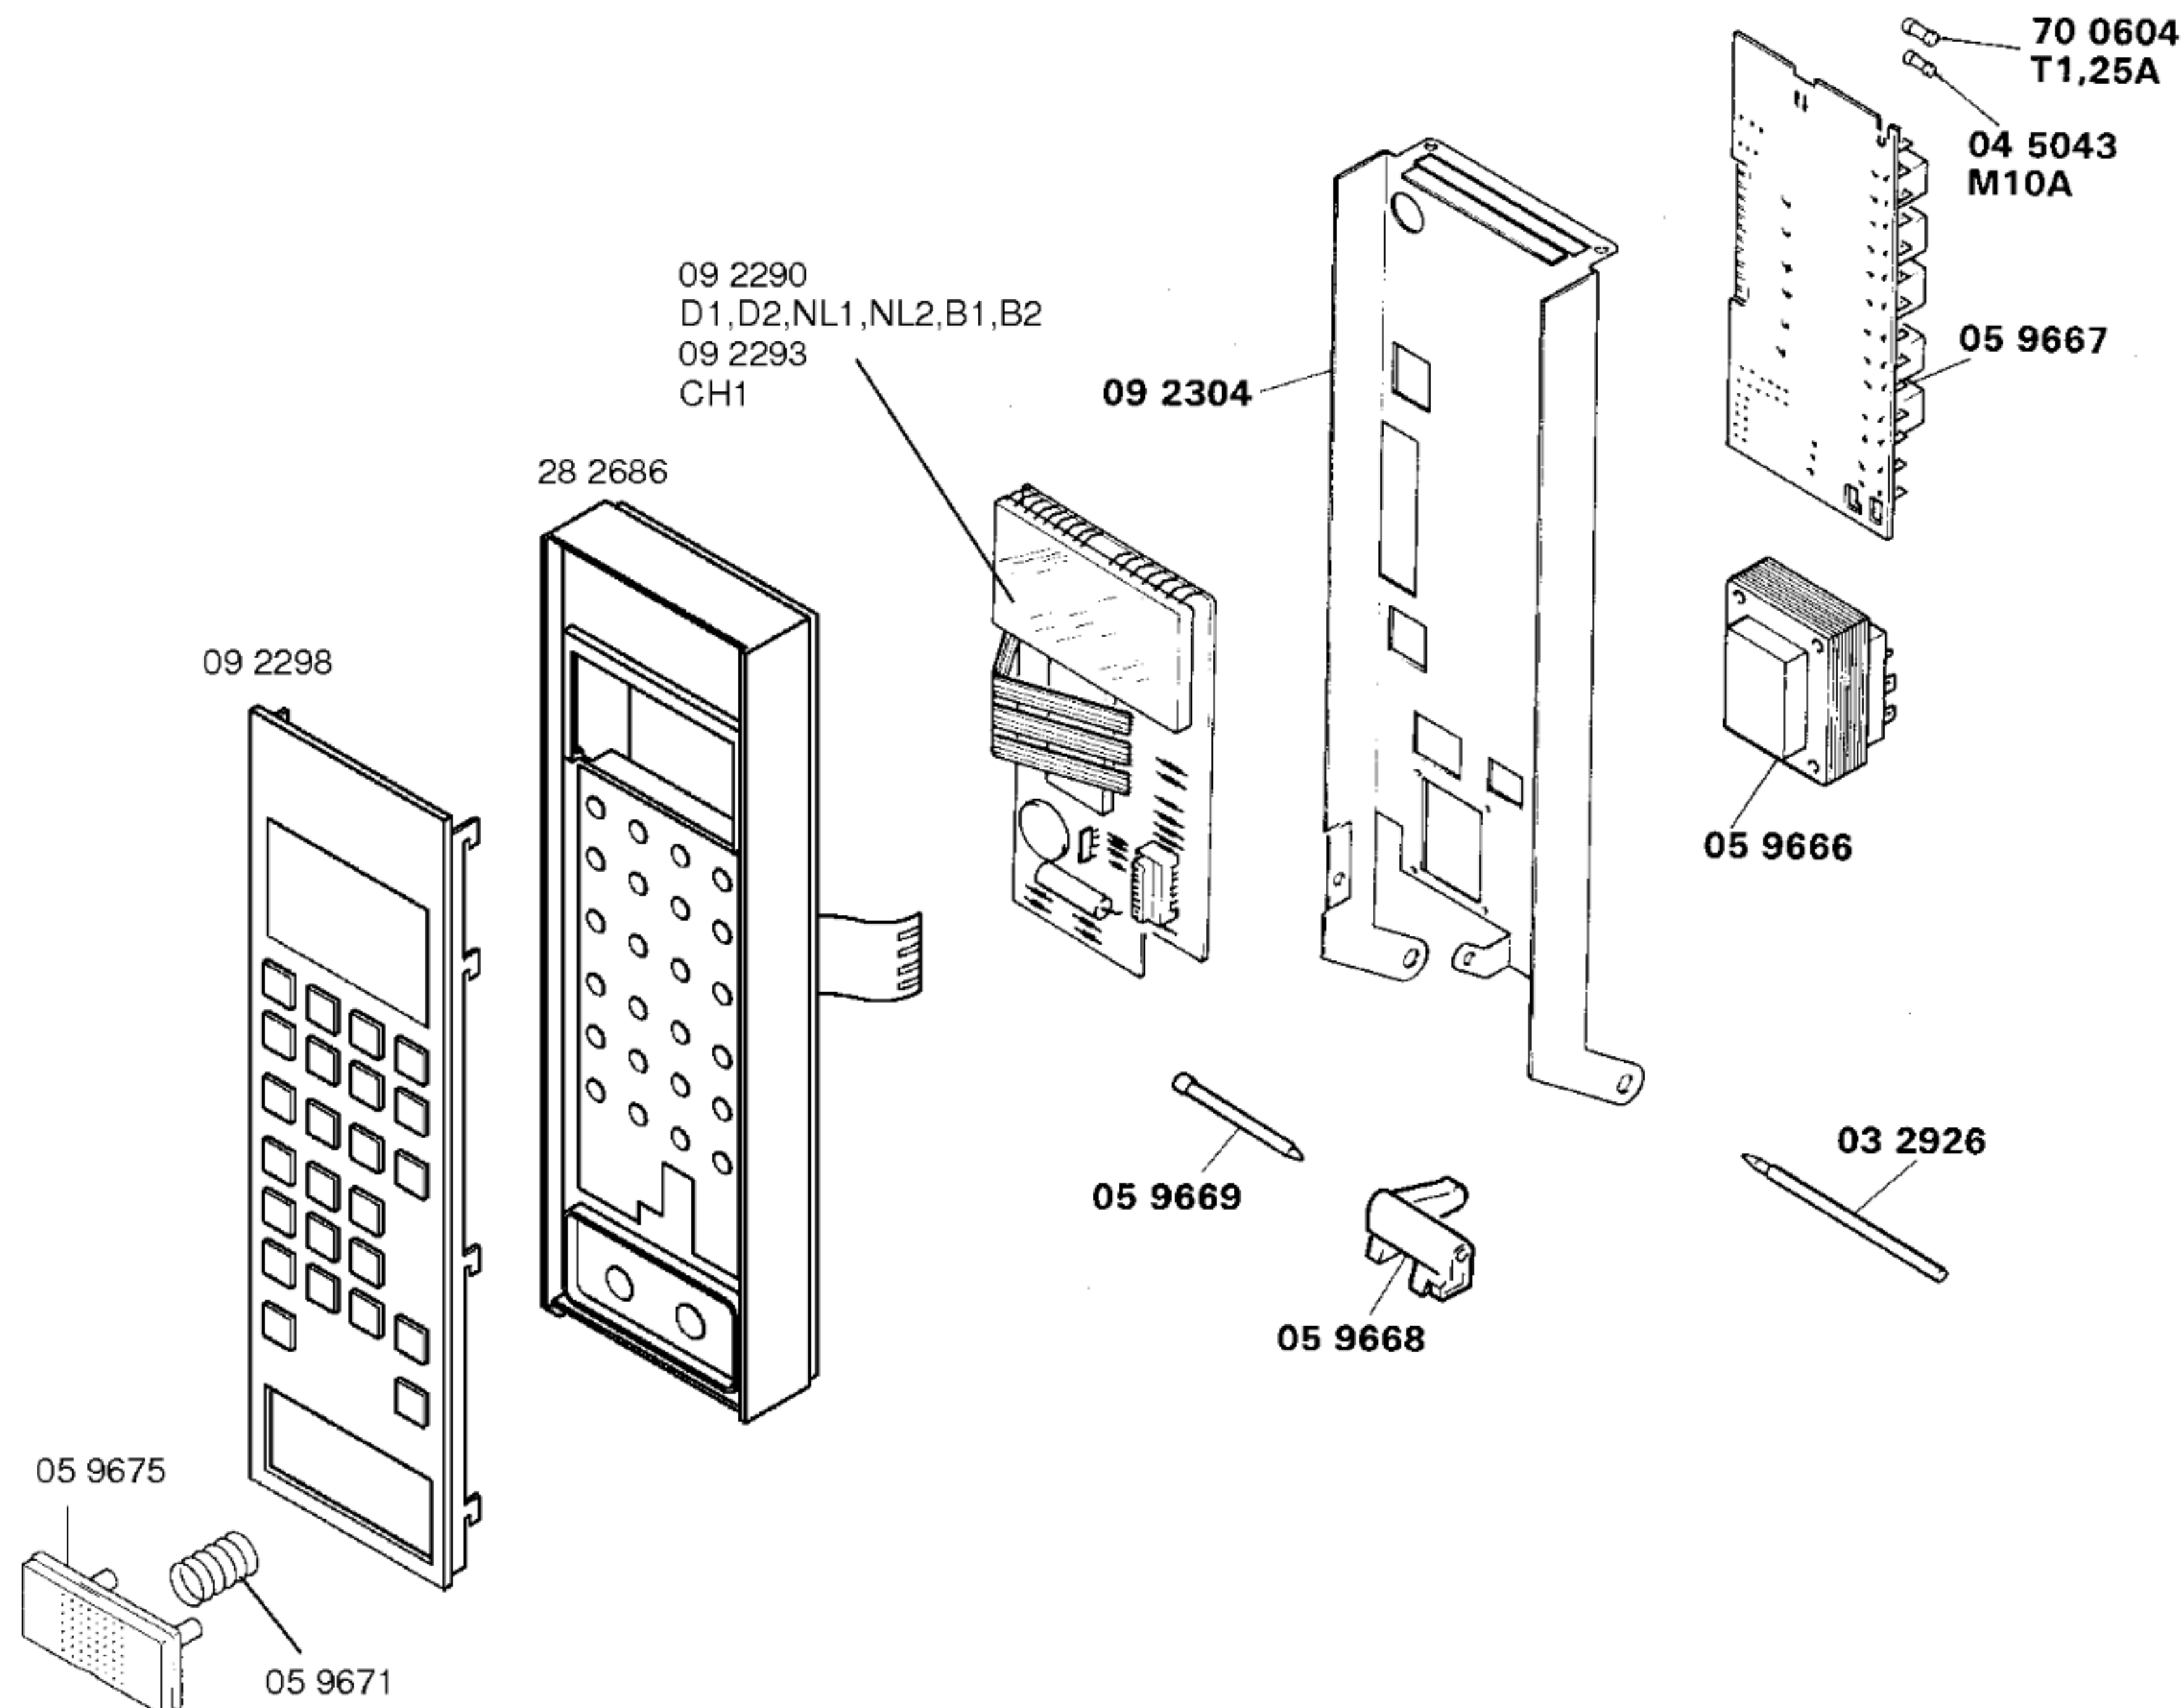

| Gebrauchsanweisung

51 4885
D1,D2
(D)
51 4988
NL1,NL2,B1,B2
(F,GB,NL)
51 5382
CH1,CH2
(D,F,I)

Kochbuch:

51 4886
D1,D2
(D)
51 4989
NL1,NL2,B1,B2
(NL)
51 5383
CH1,CH2
(D)
51 6001
B1,B2
(F)


Zubehör:

HZ64100	Rost hoch
---------	-----------


HZ64200	Rost niedrig
---------	--------------

HZ64300
Universalpfanne

 HZ64020
Einbaurahmen, weiß

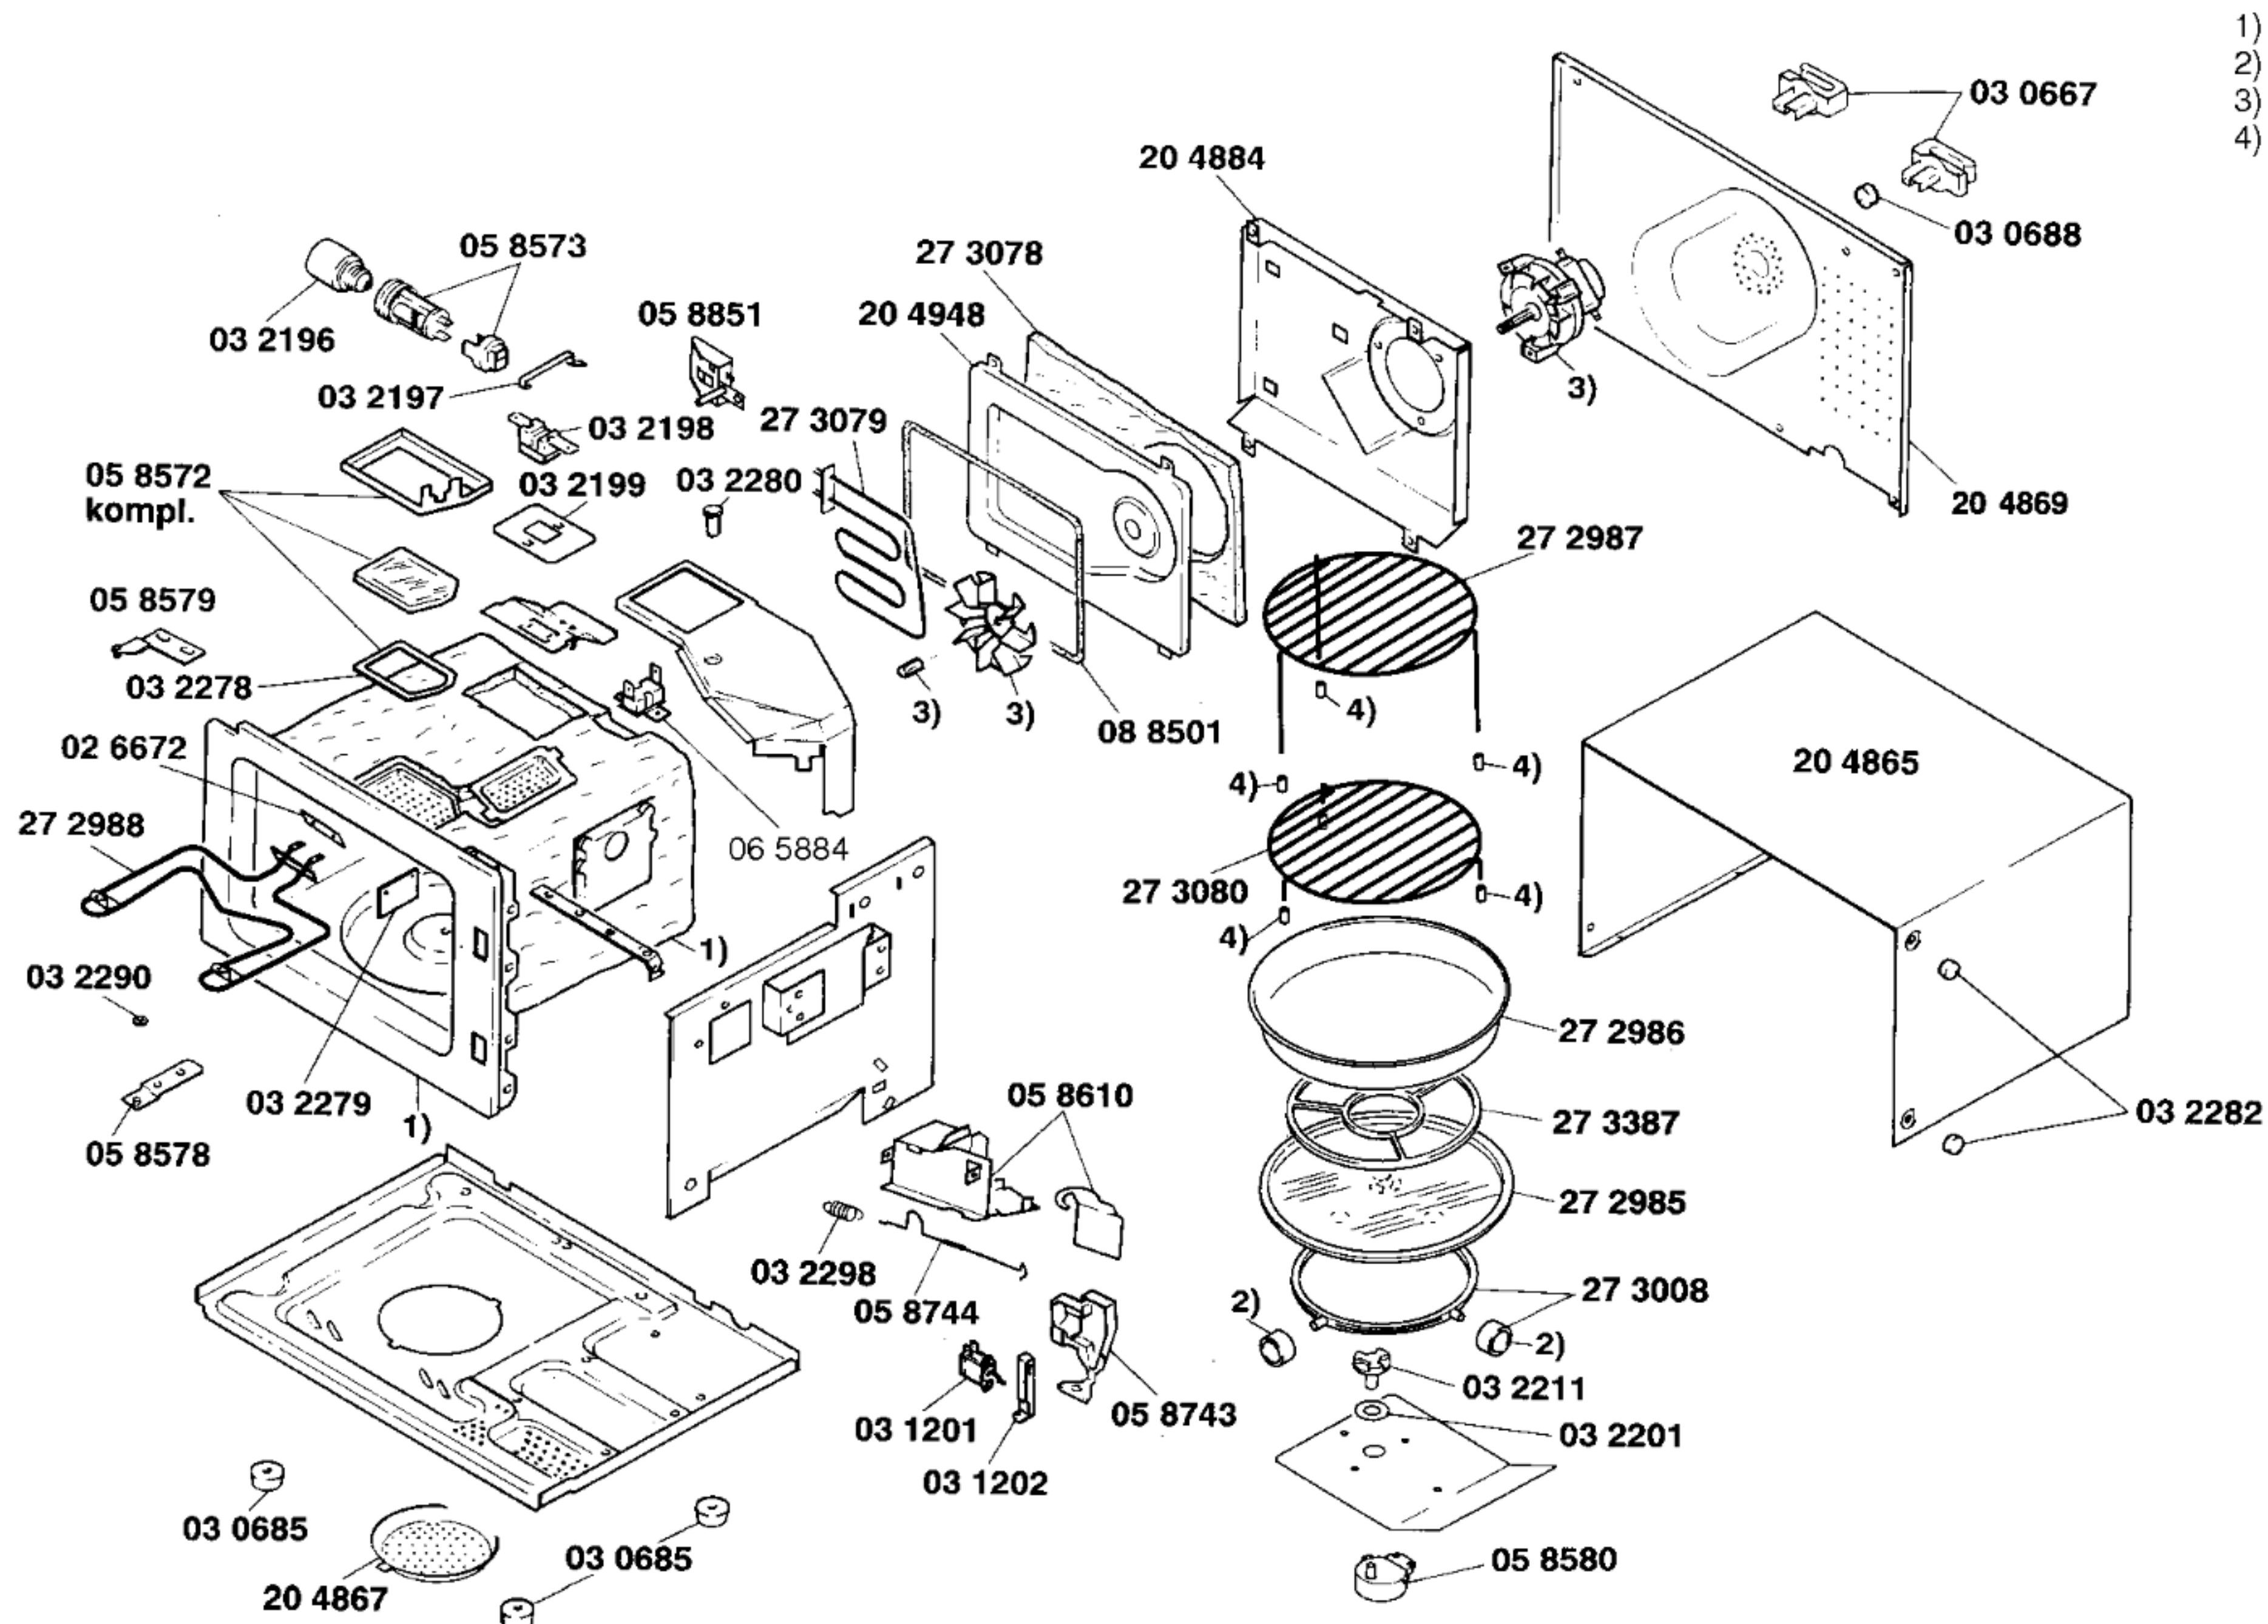

 - 1) 20 4949
- 2) 03 2212
- 3) 08 8500
- 4) 03 2620

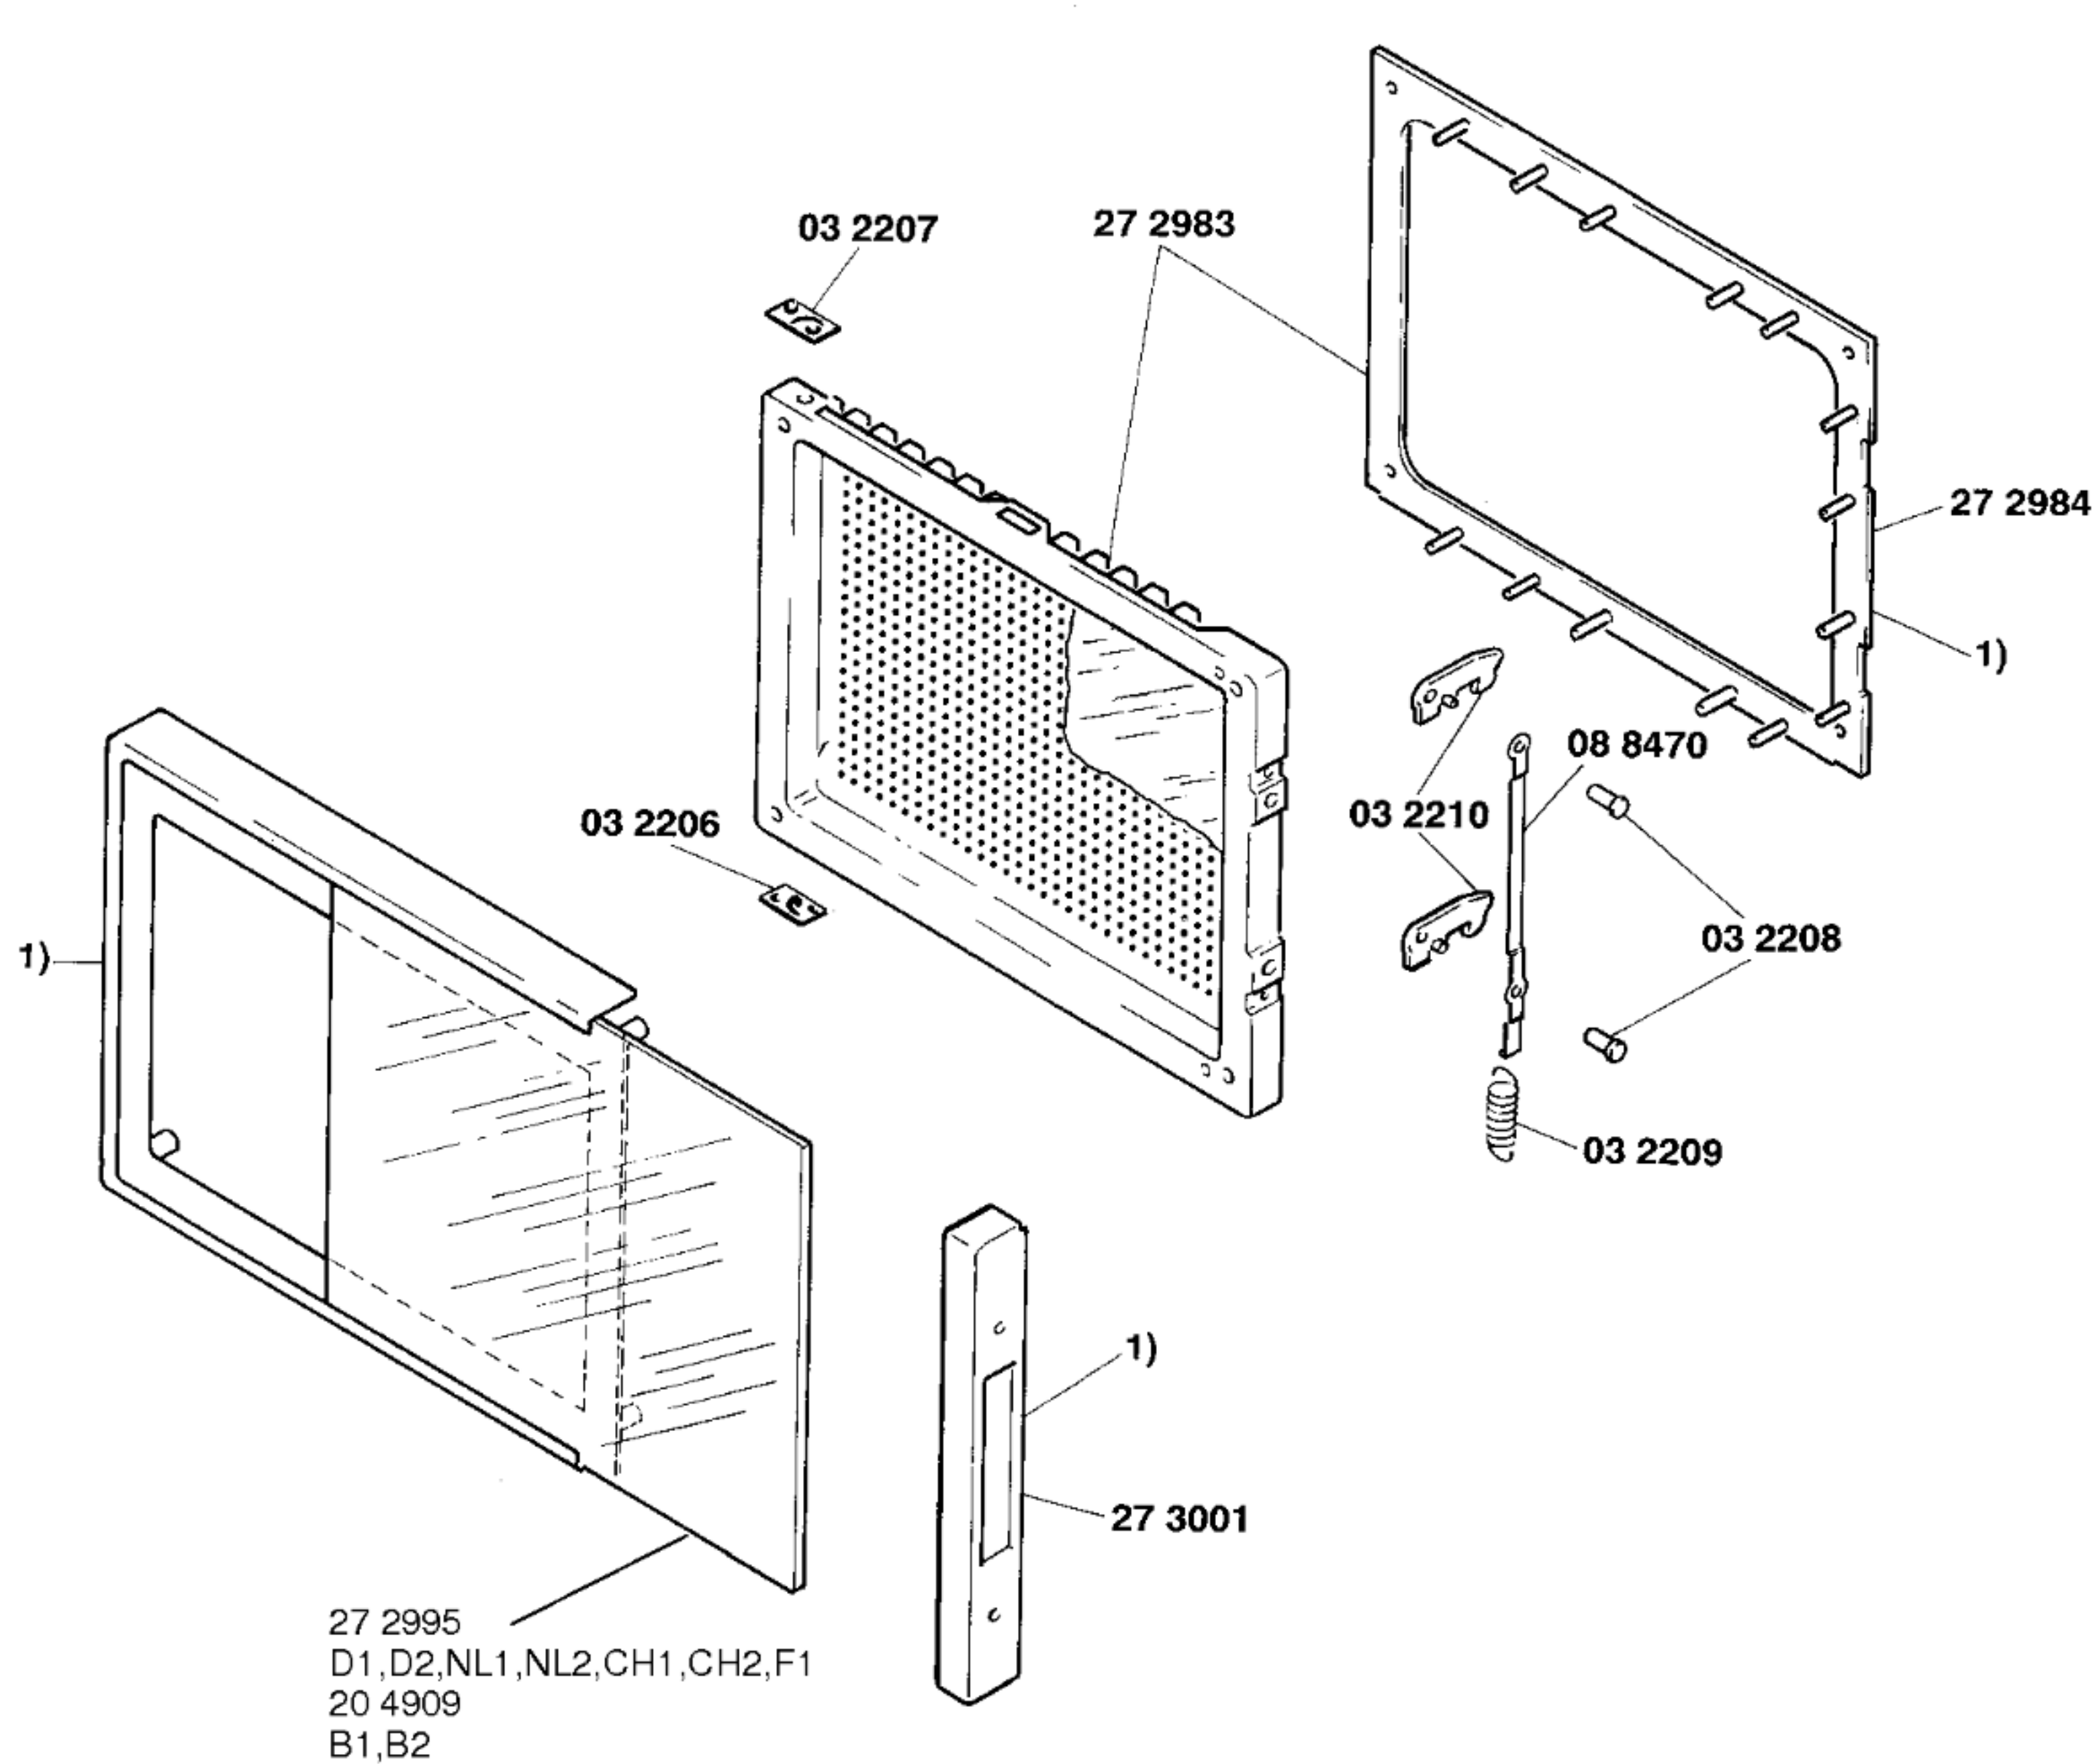

1) 27 2982
kompl.

