



Gebrauchsanweisung
51 3747
(D,GB,F,I,NL,N)
Montageanweisung
51 2737
(D,GB,F,I,NL,DK,N,S,SF,E)
Schraubensatz
08 4136
Befestigungssatz
08 6512

1) 02 9480

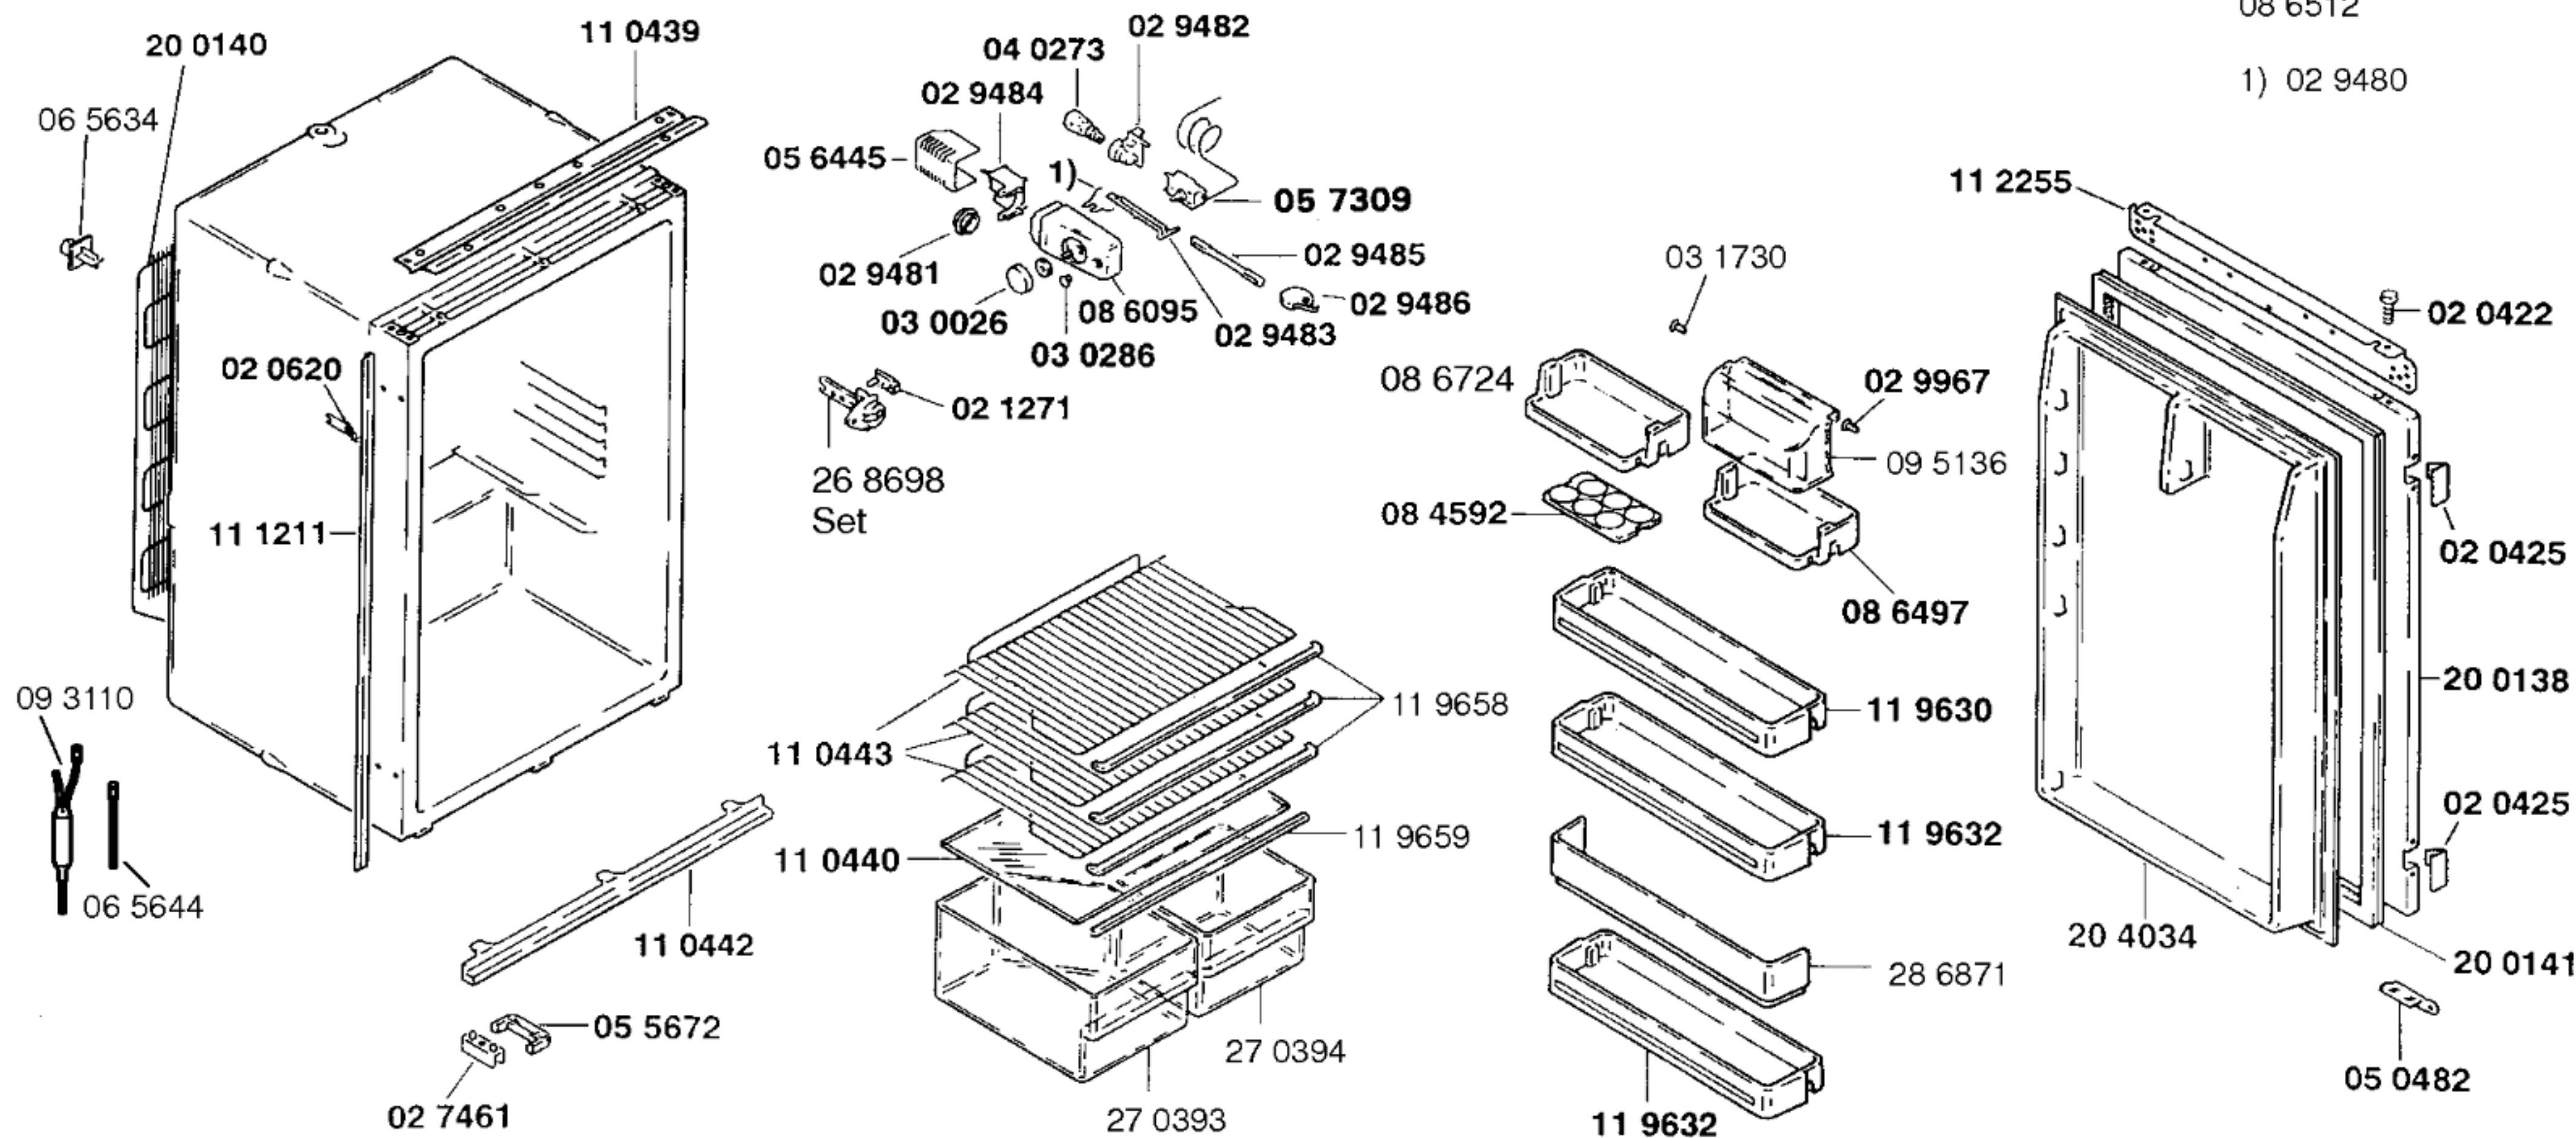

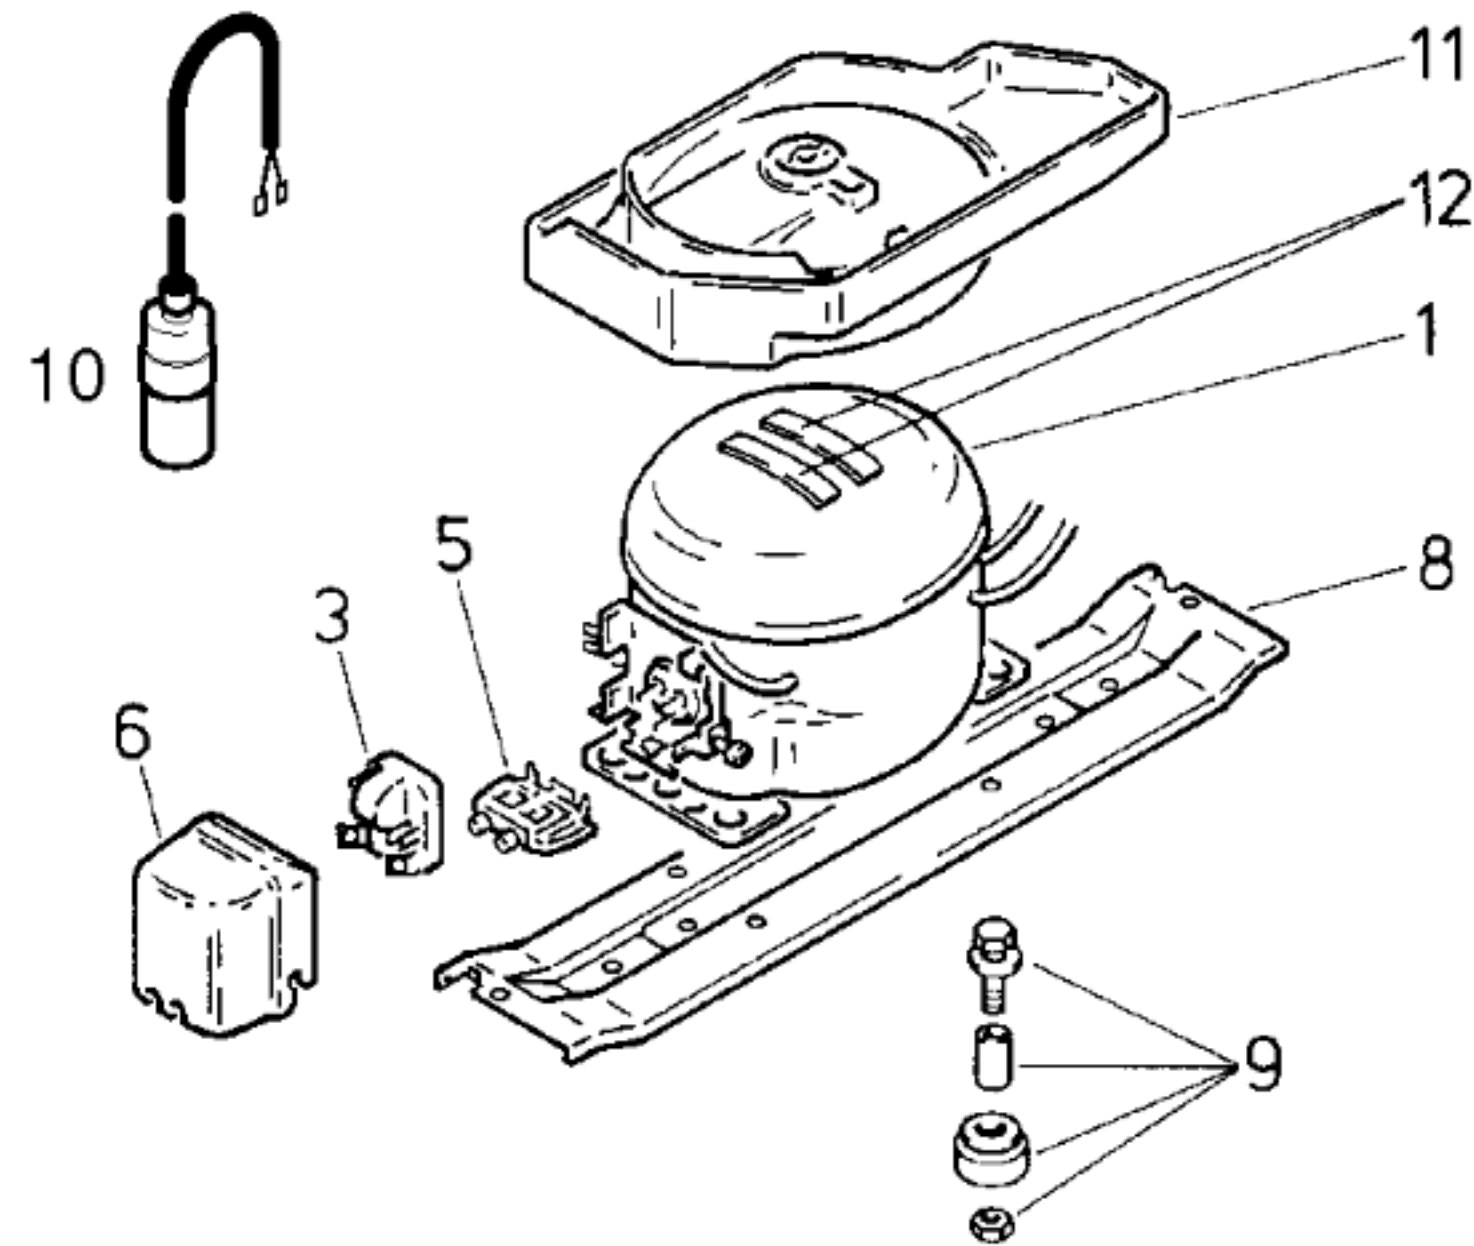

Pos.			
	Danfoss		
	TLES 4 F		
1	14 1244		
2			
3	15 1055		
4			
5	15 1053		
6	15 1072		
7			
8	27 8207		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLES 4 F	
Förderleistung/Delivery/Débit	l/h	615	
Anlaufstrom/Starting current/Cour de démarrage	A	2,9	
Widerstand/Resistance/Résistance	Ha/main/prin.	25,7	
	Hi/aux	18,9	
Temp. Regler/Thermostat		WHF	
Typ/Type		TF 57 F1	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/ Valeurs de commutation	„ein“	+5	+5
	„aus“ („abtauen“ od.)	–27	–12
Füllmenge/Fill.quantity/Charge	R134a	g	50
Anschlußwert/Conn.load/Puiss. connectée		W	120
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance		Ω	
Leistung/Power/Puissance		W	
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance		Ω	
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance		Ω	
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance		Ω	
Spannung/Voltage/Tension		V	