


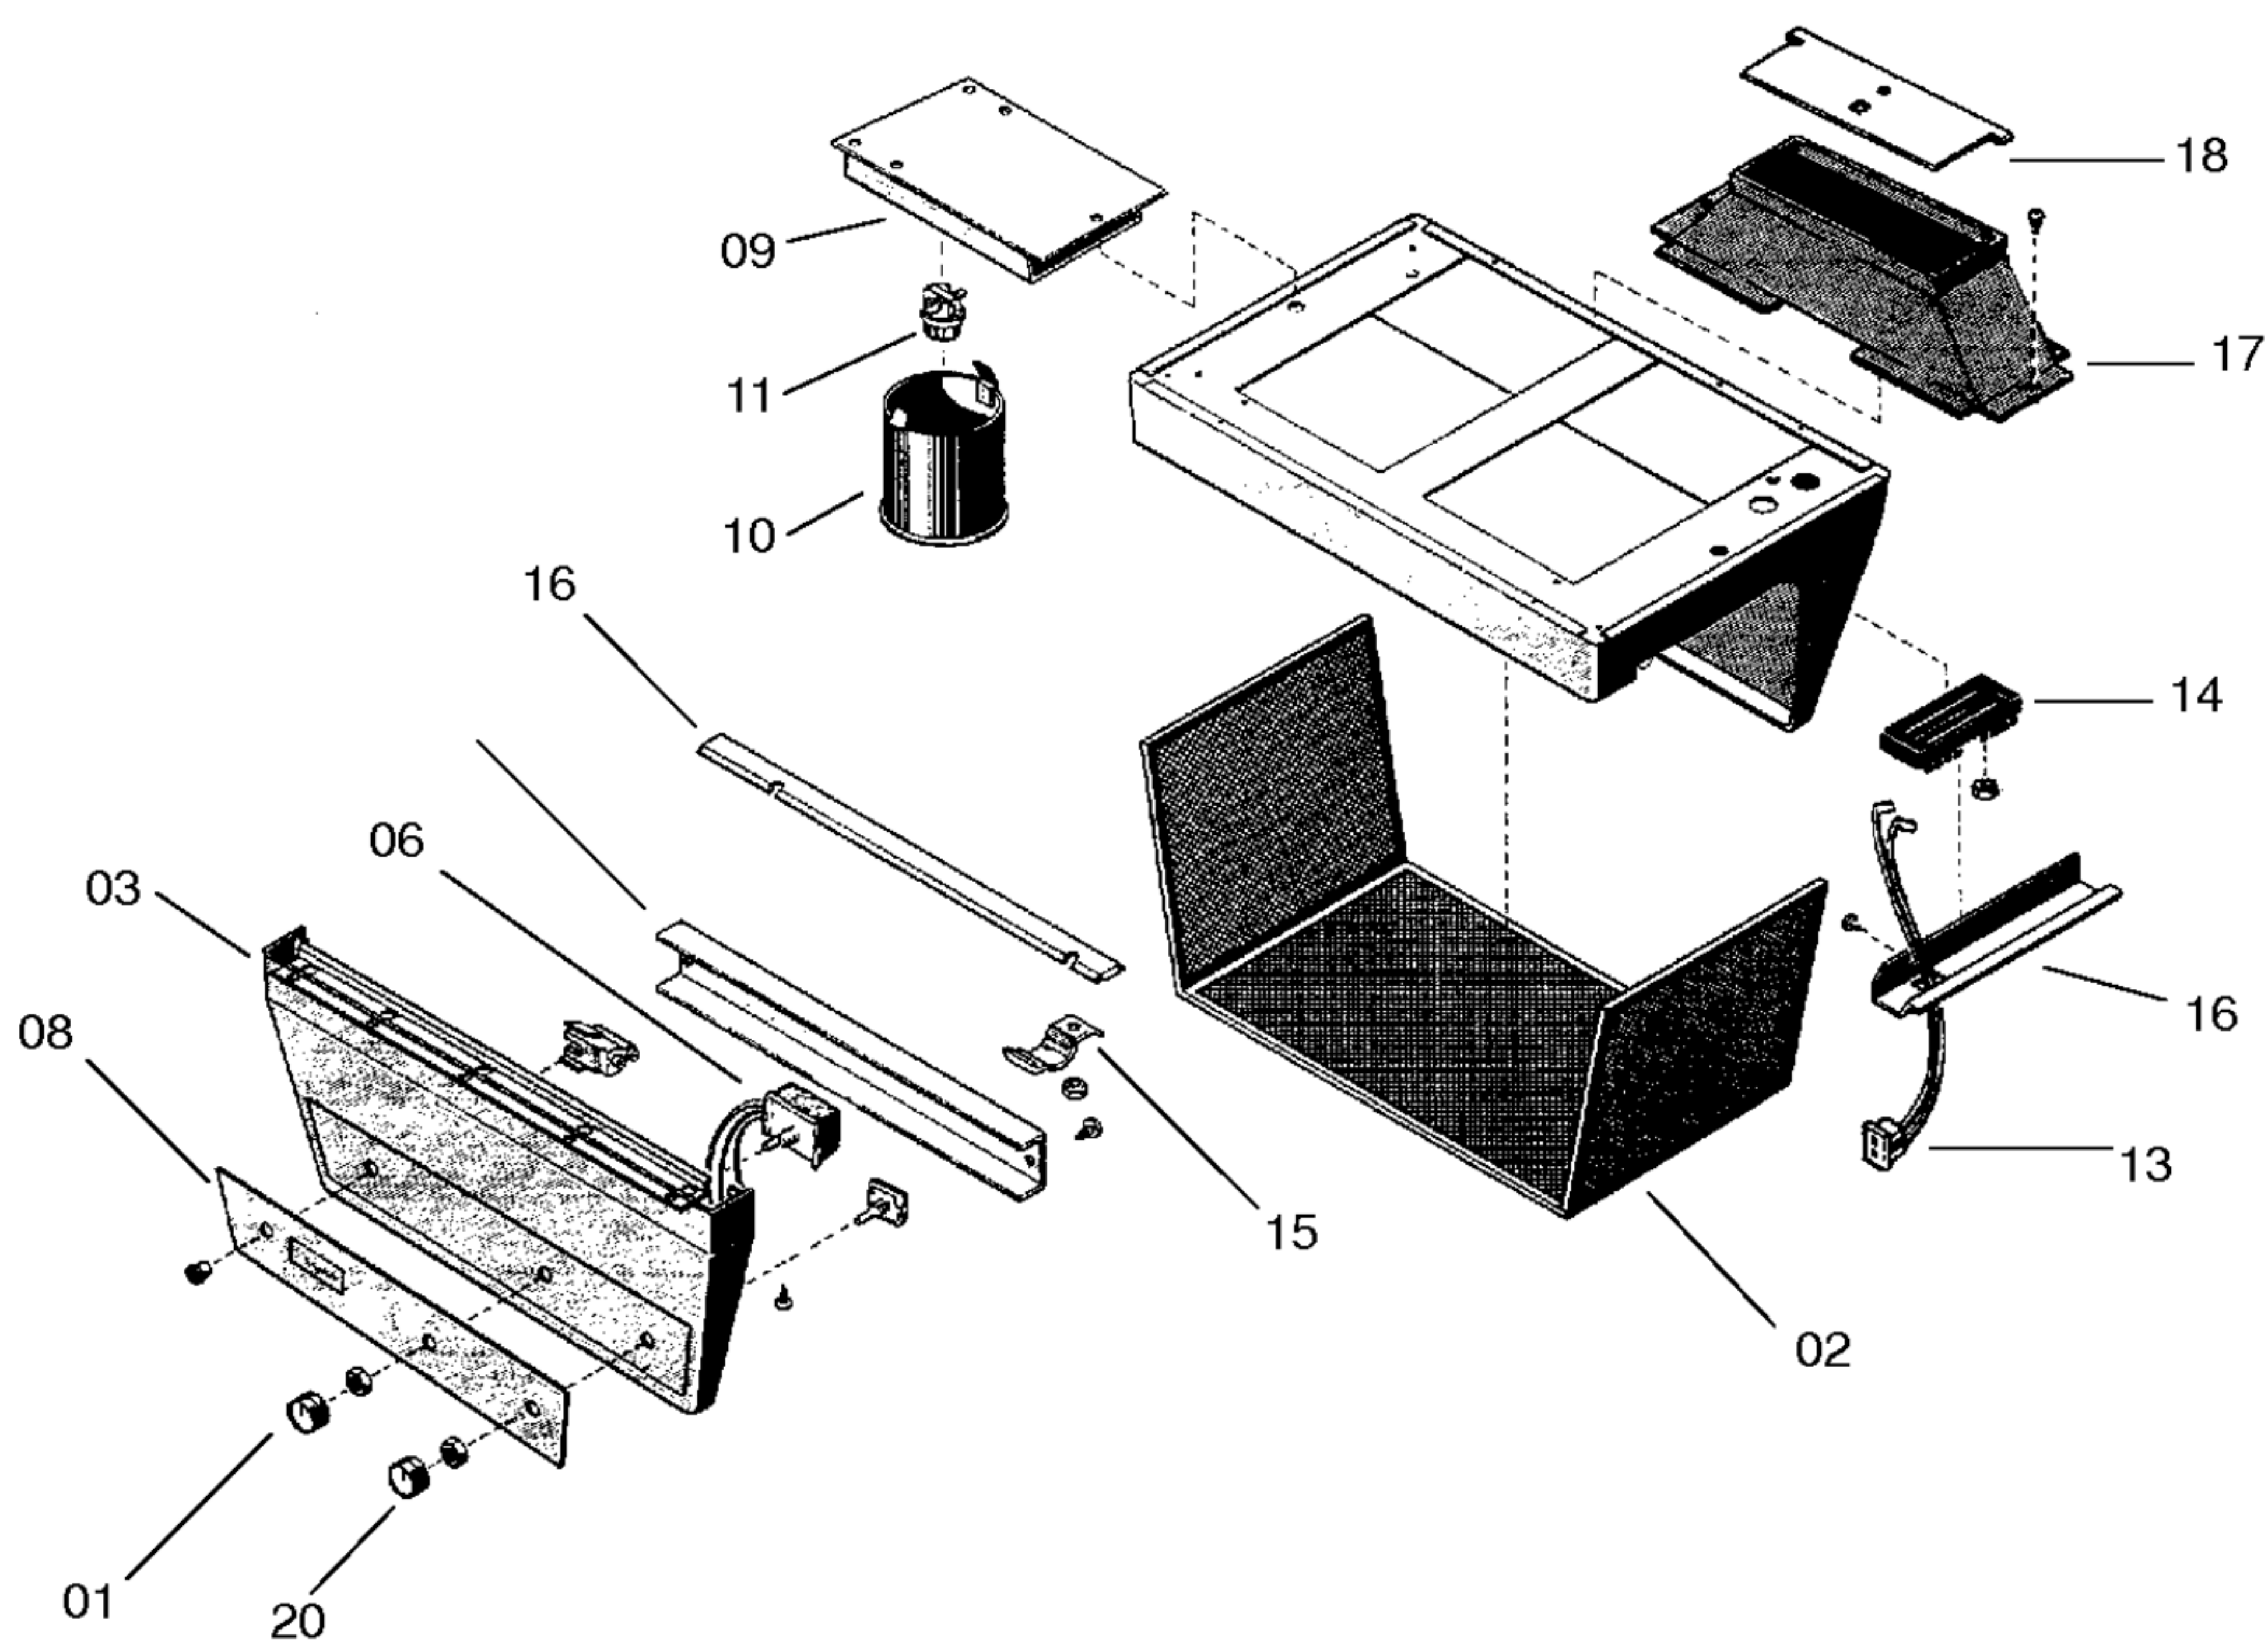

Page/Item	Part No.	Image	Part Discription
01 01	41 2378	KNOP	USE 19–19–269
01 02	36 8815	FILTER–PAPER	FILTER
01 03	36 8544	HOUSING	HOUSING, DOOR WHT
01 06	41 4750	SWITCH	SWITCH, SPEED CONTROL
01 07	41 3707	LINSE	PILOT LIGHT
01 08	41 4720	PLATE	NAMEPLATE
01 09	48 6427	LAMP	LAMPBOX ASSY
01 10	48 6366	LAMP	LAMPSHADE ASSY
01 11	18 9251	LAMP HOUSING	HOLDER, LAMP (MP–VCH)
01 13	41 3701	CONTAINER	RECEPTACLE
01 14	41 3708	TERMINAL	TERMINAL BOARD
01 15	41 4721	SPRING	SPRING, HOUSING DOOR
01 17	48 7045	FRAME	FRAME, DAMPER VCK300
01 18	23 8502	FRAME	FRAME FRONT WD30
01 19	21 9119	HOUSING	HOUSING

* Not illustrated