


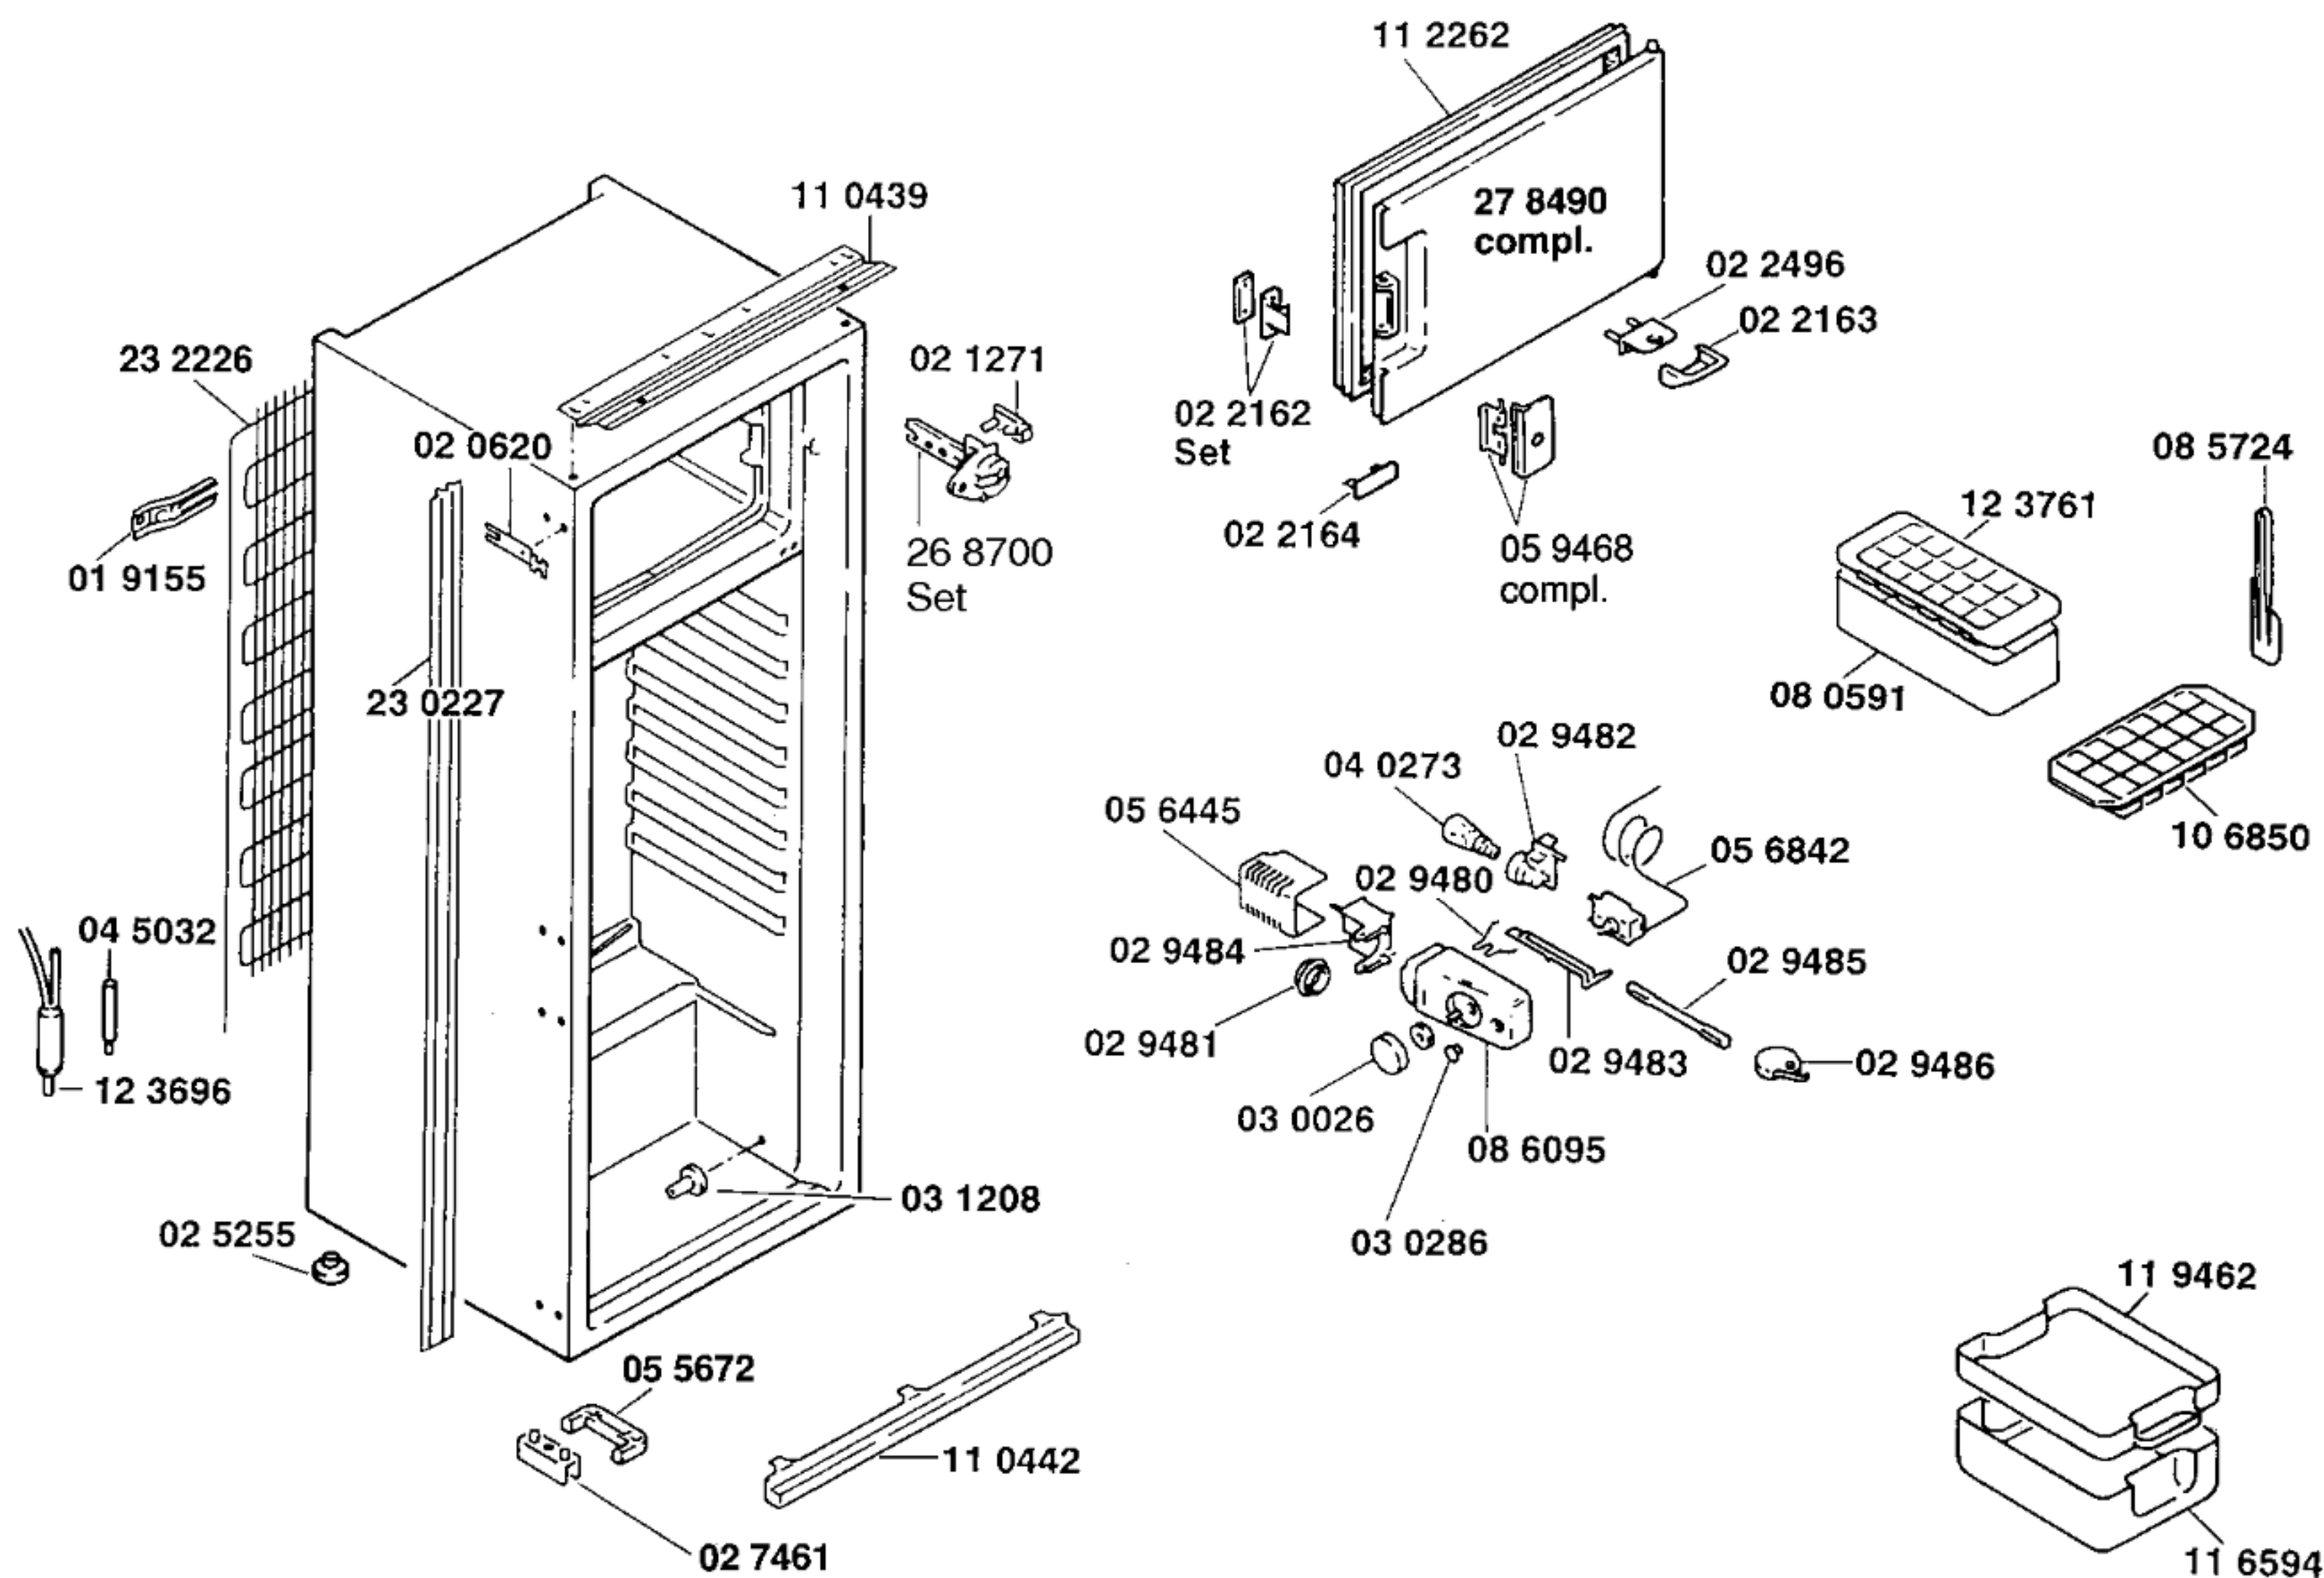


51 4430
Gebrauchsanweisung
(D,GB,F,I,NL,E)


51 5436
Montageanleitung
(D,GB,F,I,NL,N,S,E)

08 4136
Schraubensatz

08 8957
Befestigungssatz

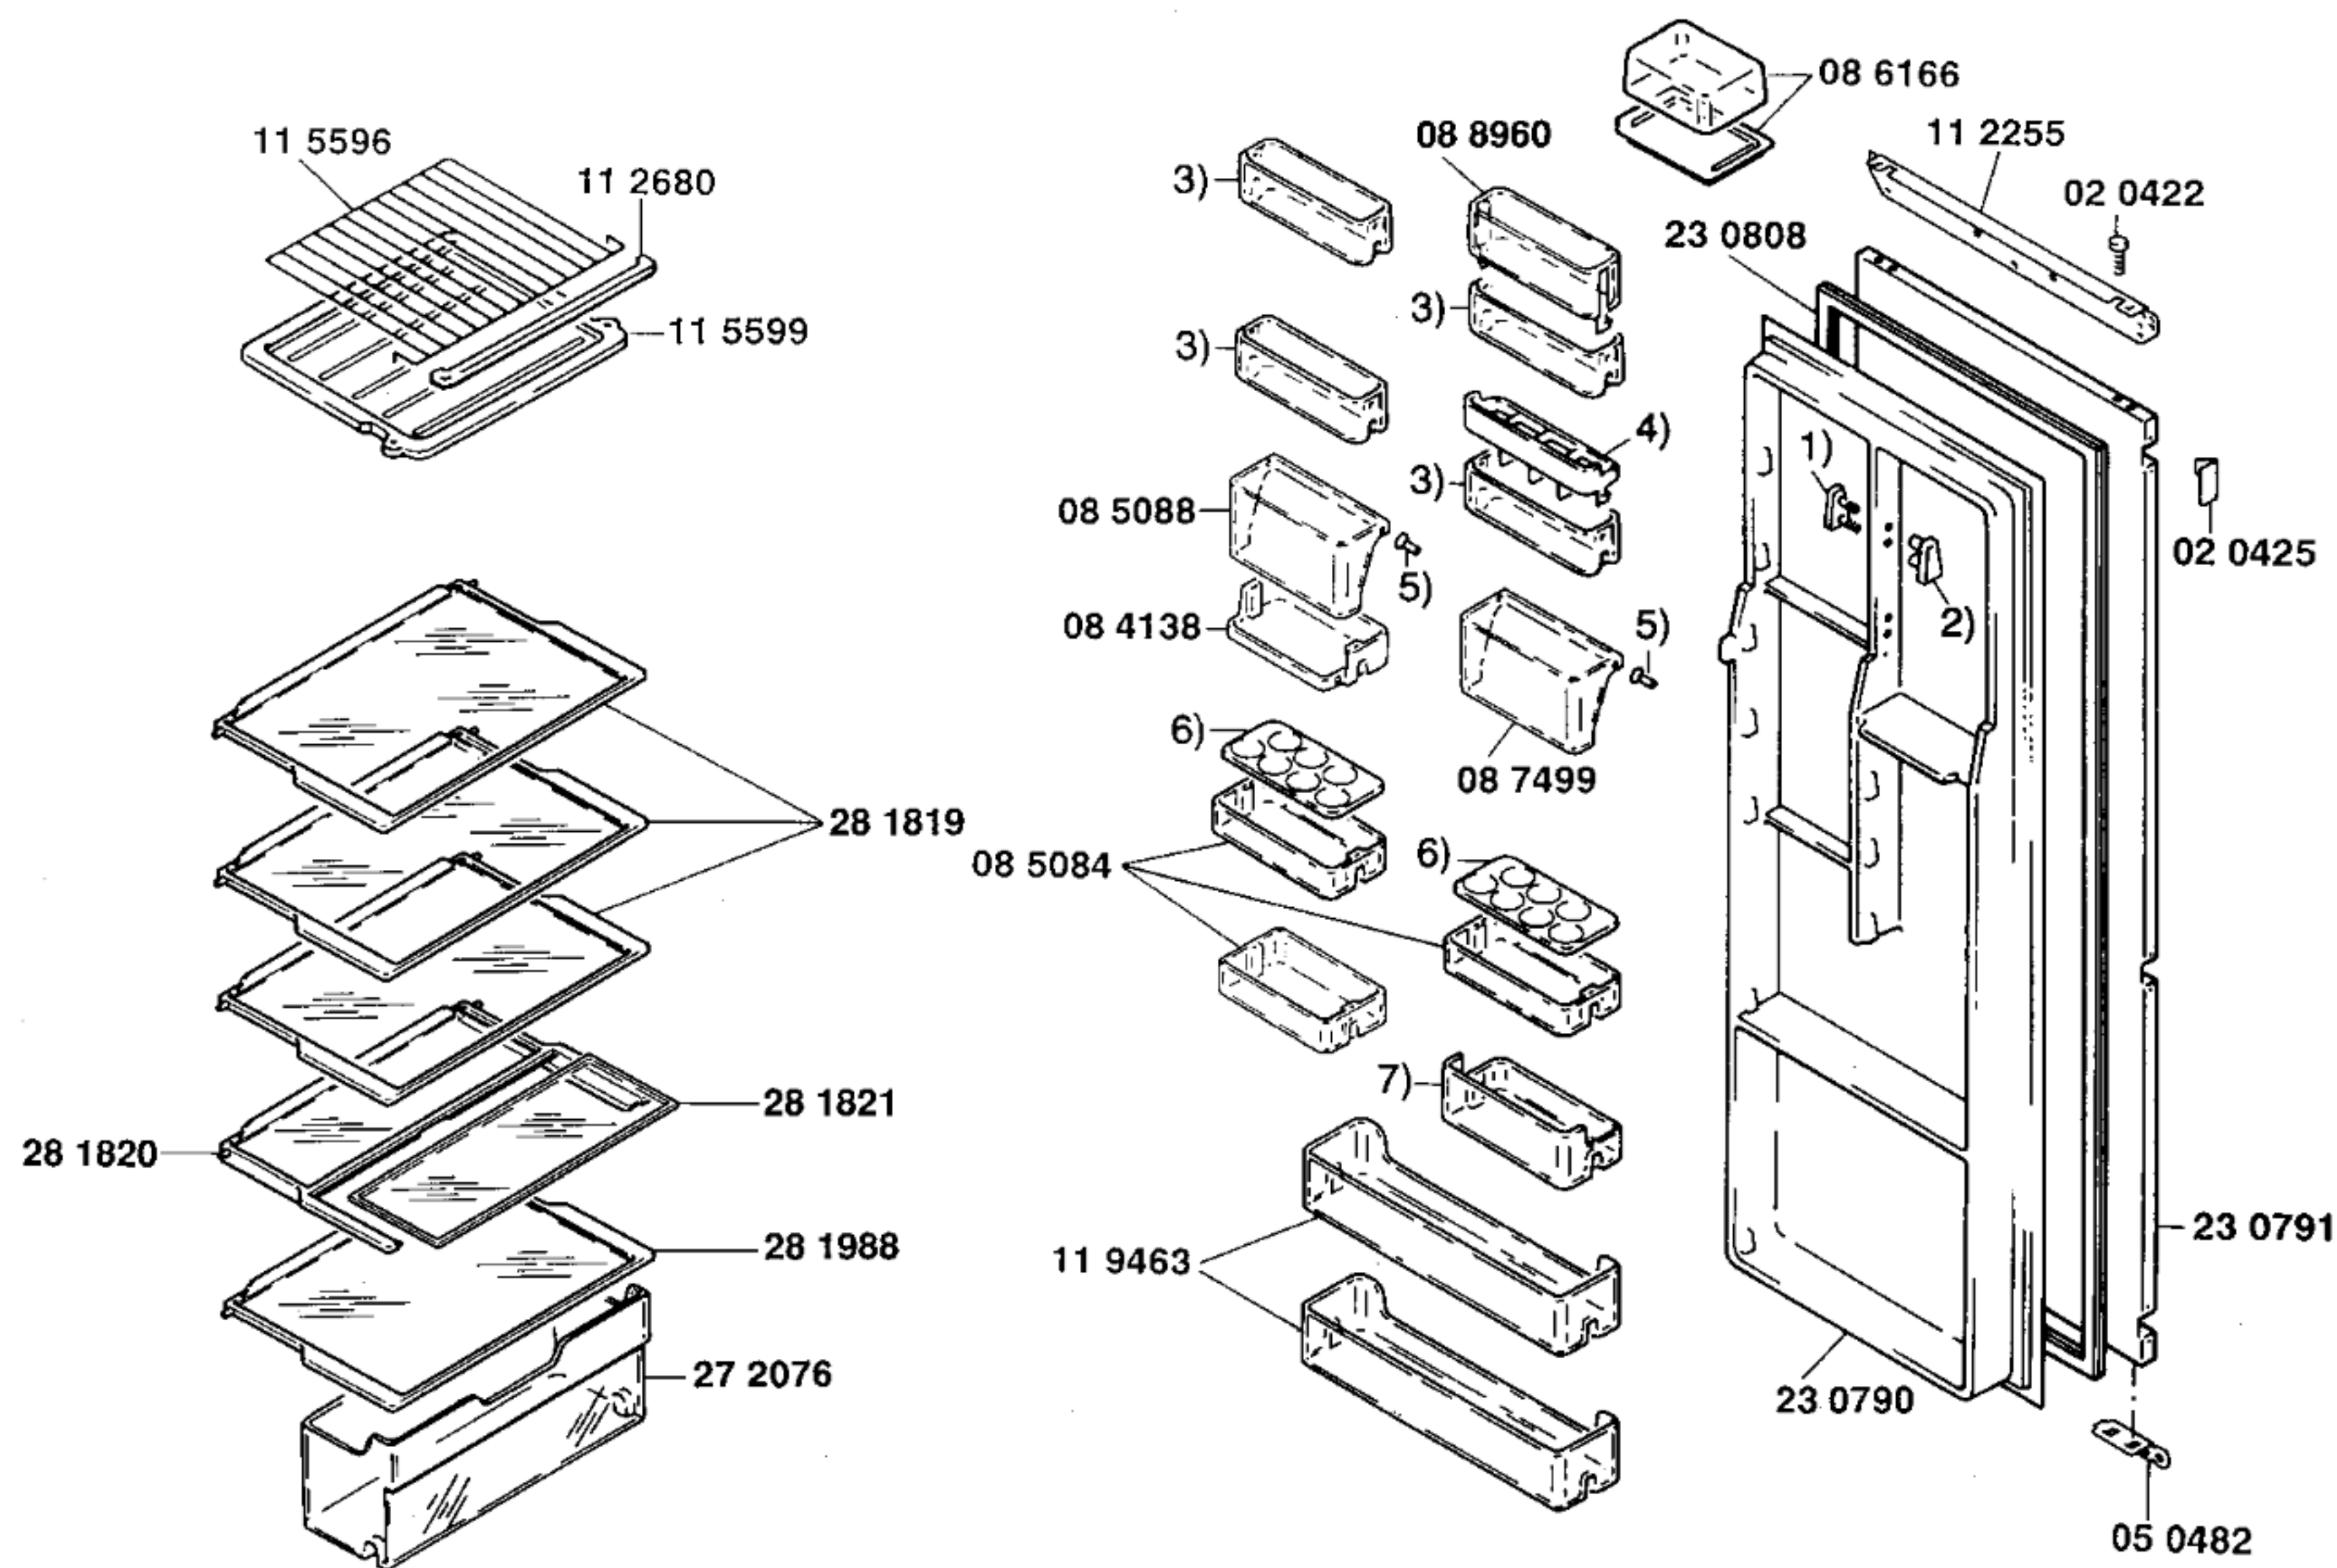

- 1) 02 2437
- 2) 02 6566
- 3) 08 8959
- 4) 08 6169
- 5) 02 9967
- 6) 08 4592
- 7) 08 5085

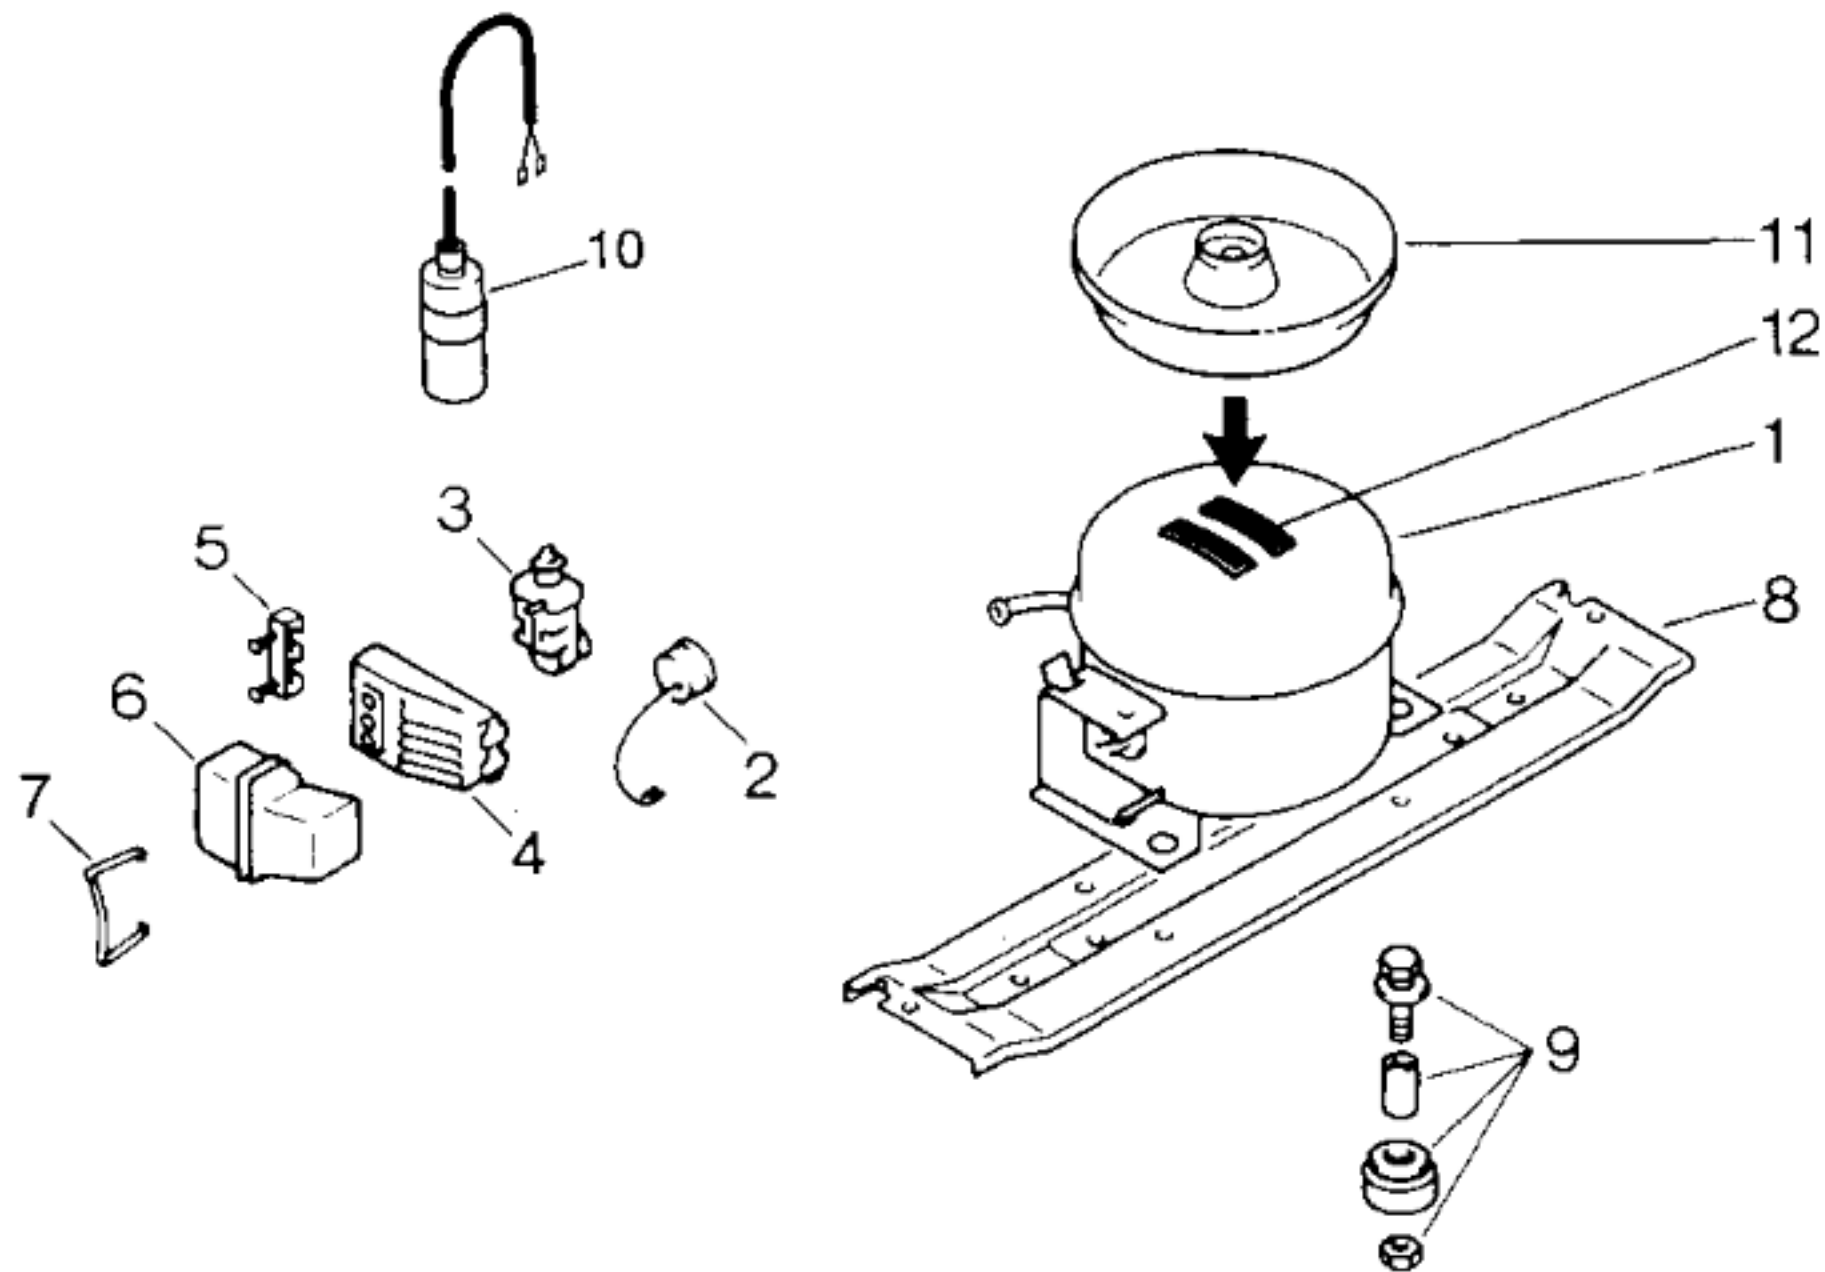

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Matsushita	
Typ/Type		D116LRAA	
Förderleistung/Delivery/Débit		l/h	1184
Anlaufstrom/Starting current/Cour. de démarrage		A	8,75
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	12,0
		Hi/aux Ω	28,7
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K 59	
Reglerstellung/Position		kalt warm	
Schaltwerte/Switching values/		+4,5 +4,5	
Valeurs de commutation		-31,0 -13,5	
		(„abtauen“ od.) „alarm“	
Füllmenge/Fill.quantity/Charge		R12 g	180
Anschlußwert/Conn.load/Puiss. connectée		W	150
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance		Ω	
Leistung/Power/Puissance		W	
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance		Ω	
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance		Ω	
Spannung/Voltage/Tension		V	

Pos.	Matsushita		
	D116LRAA		
1	14 0563		
2	05 8506		
3			
4			
5			
6	05 8458		
7	02 6731		
8	28 1825		
9	05 0166		
10	05 9467		
11	08 5182		
12	05 6008		