



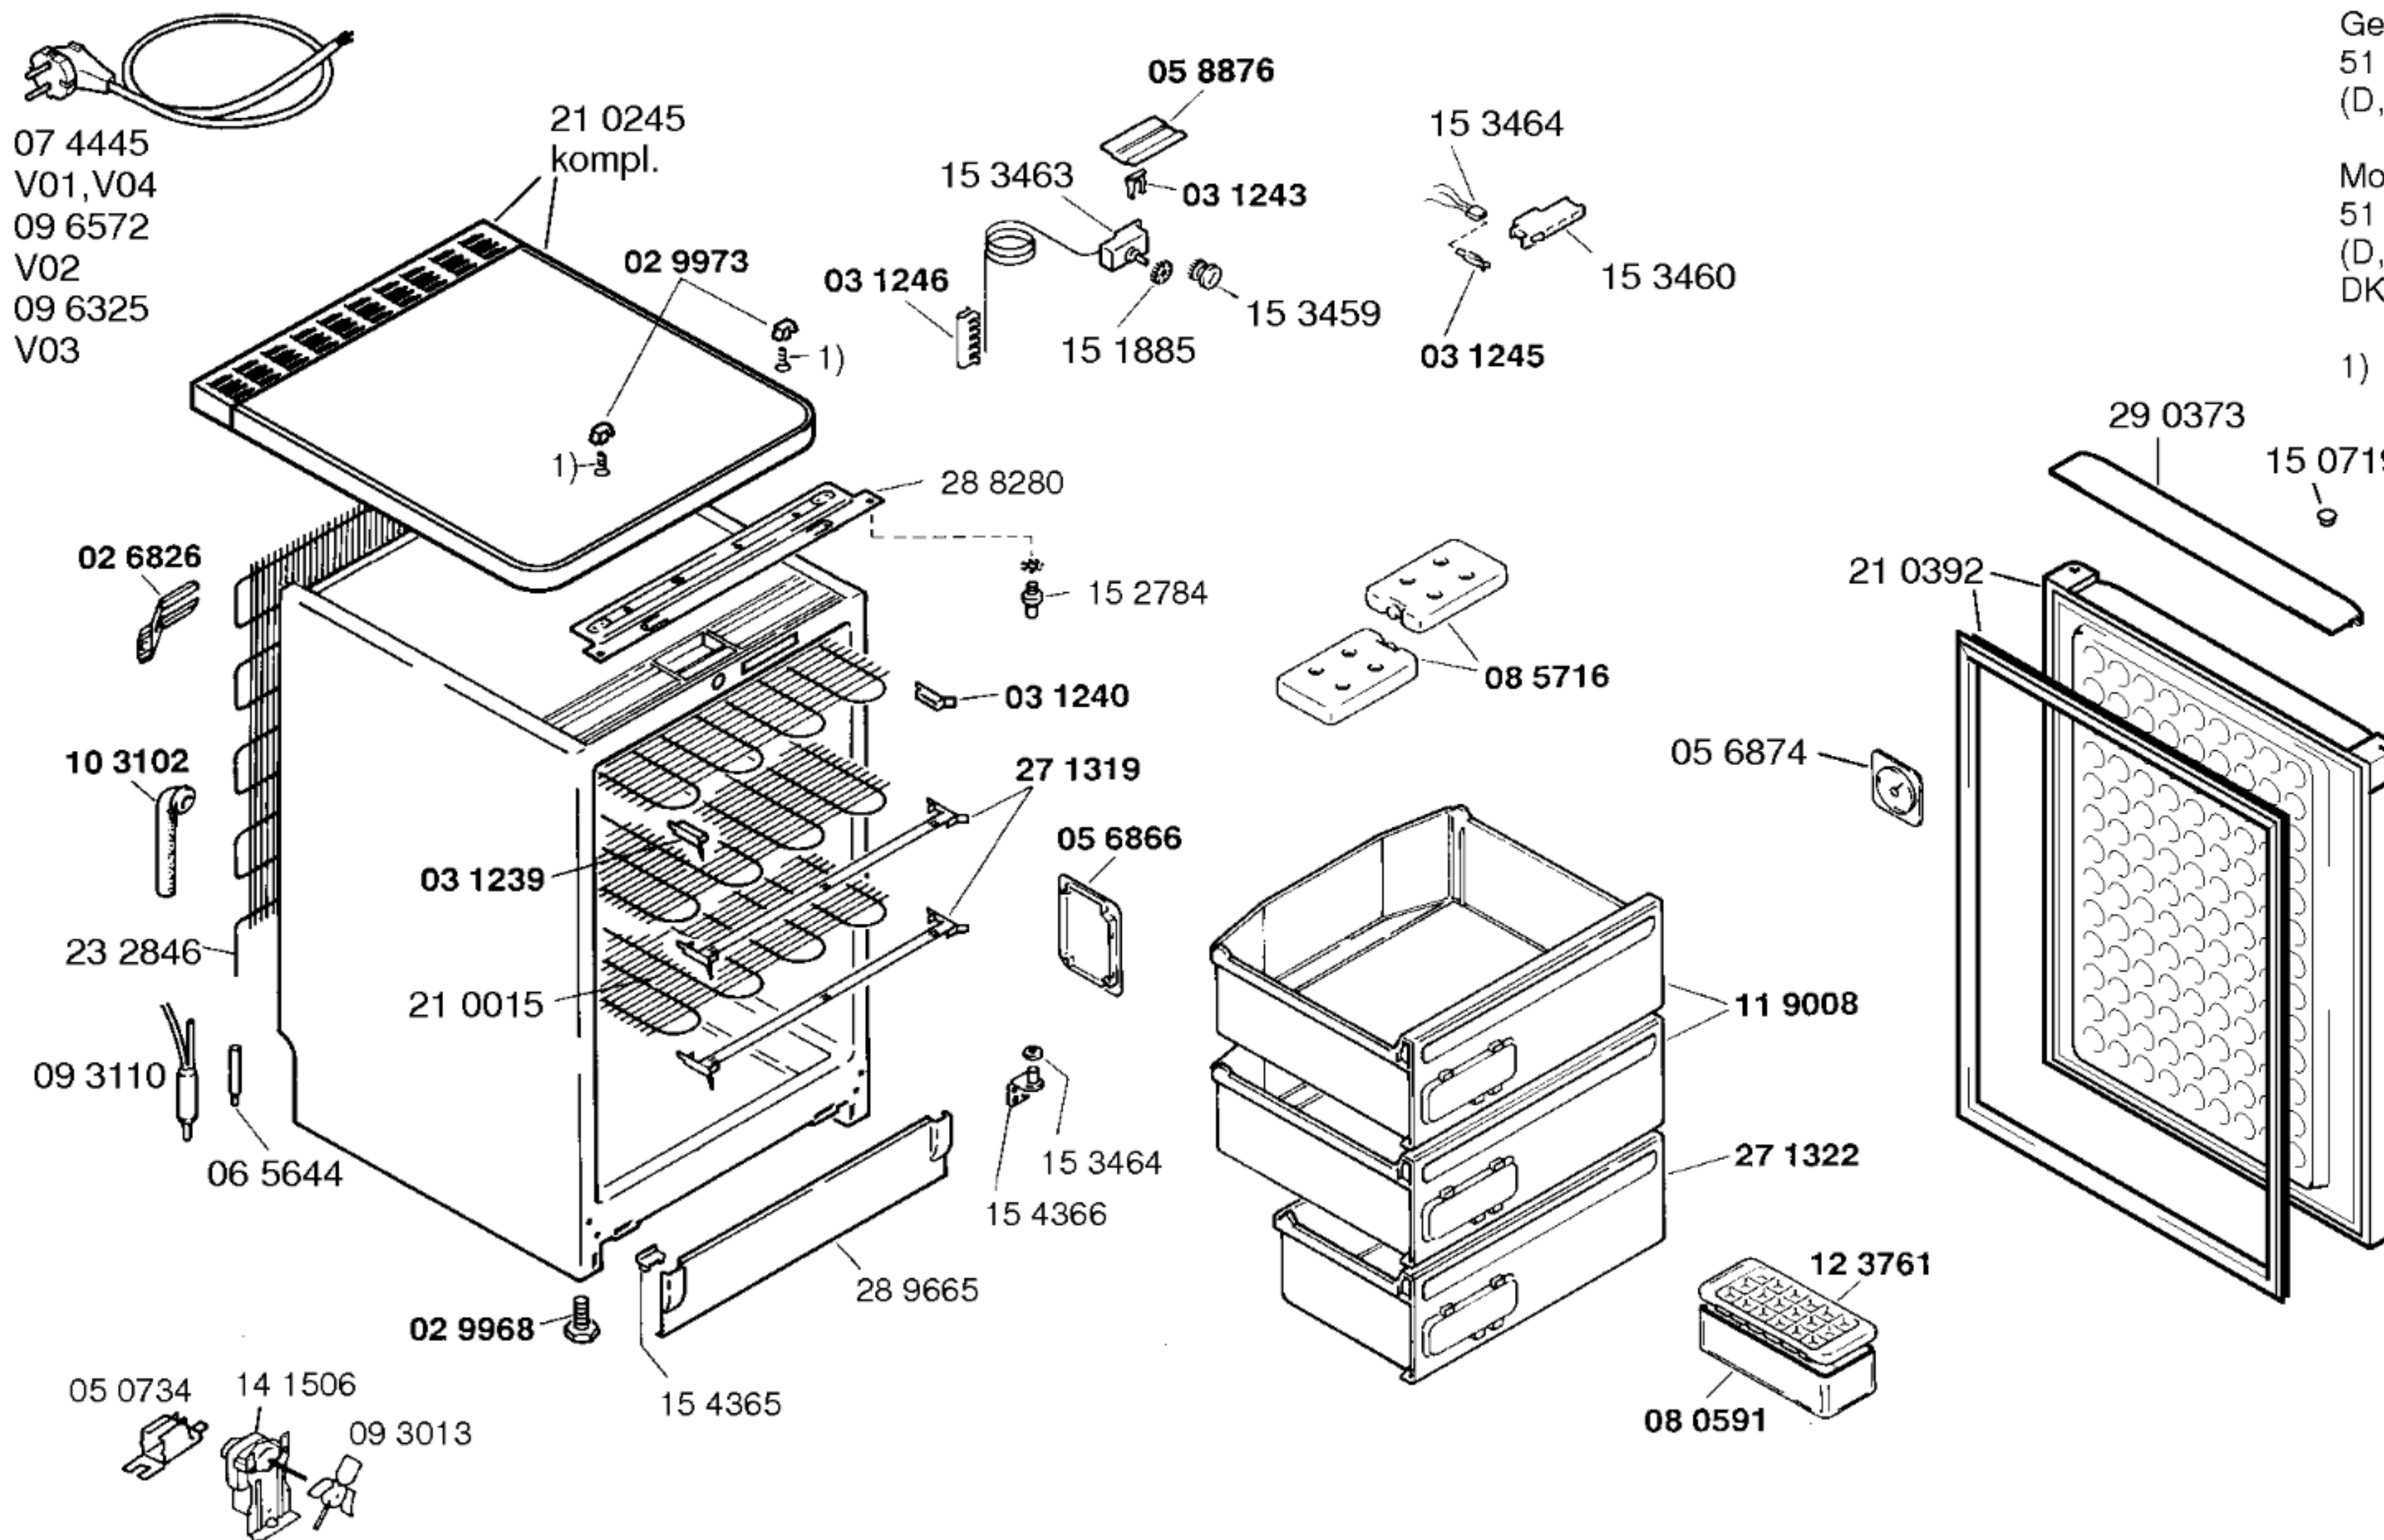

Gebrauchsanweisung
51 7998
(D,GB,F,I,NL,SF)

Montageanweisung
51 3592
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

1) 01 9829

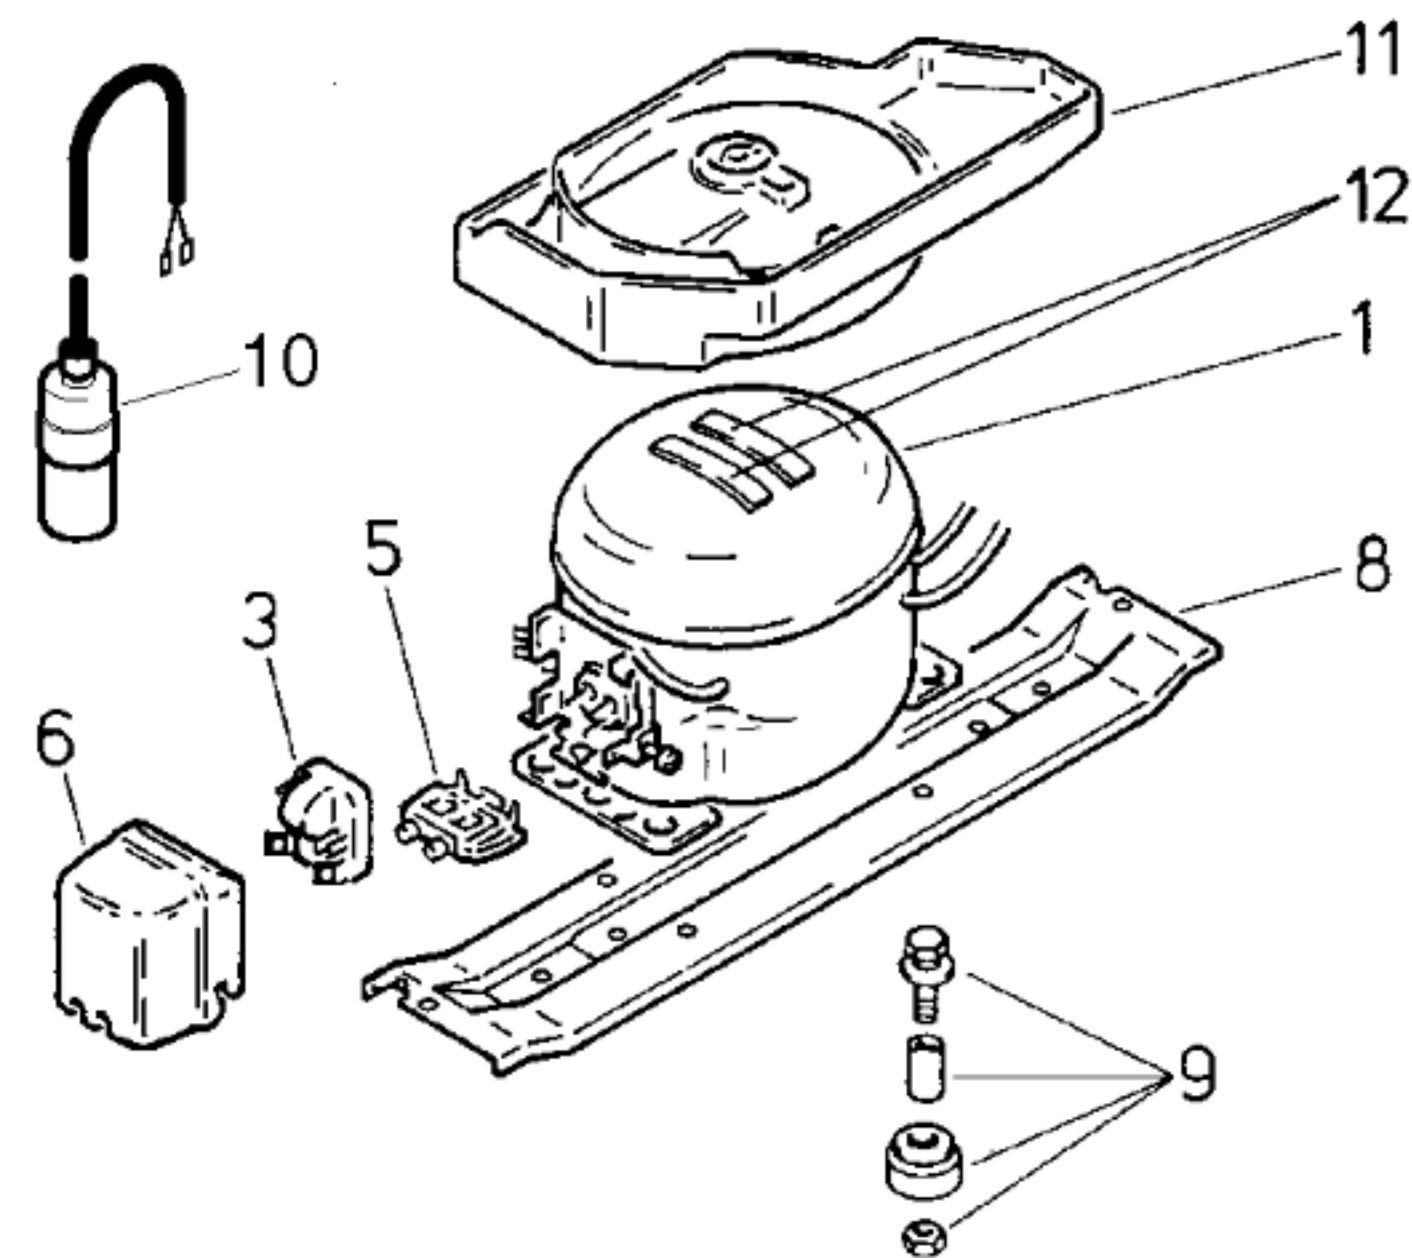

Pos.			
	Danfoss		
	TLES 9 K		
1	14 1308		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	27 0291		
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Danfoss		
Typ/Type	TLES 9 K		
Förderleistung/Delivery/Débit	l/h	1589	
Anlaufstrom/Starting current/Cour de démarrage	A	4,5	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	16,5
	Hi/aux	Ω	16,9
Temp.-Regler/Thermostat	Danfoss		
Typ/Type	BE 002		
Reglerstellung/Position	kalt	warm	
Schaltwerte/Switching values/	„ein“	°C	-25 -17
Valeurs de commutation	„aus“		-33 -23
(„abtauen“ od.)	„alarm“		-19,5 -13
Füllmenge/Fill.quantity/Charge	R600a	g	45
Anschlußwert/Conn.load/Puiss. connectée	W		
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		