


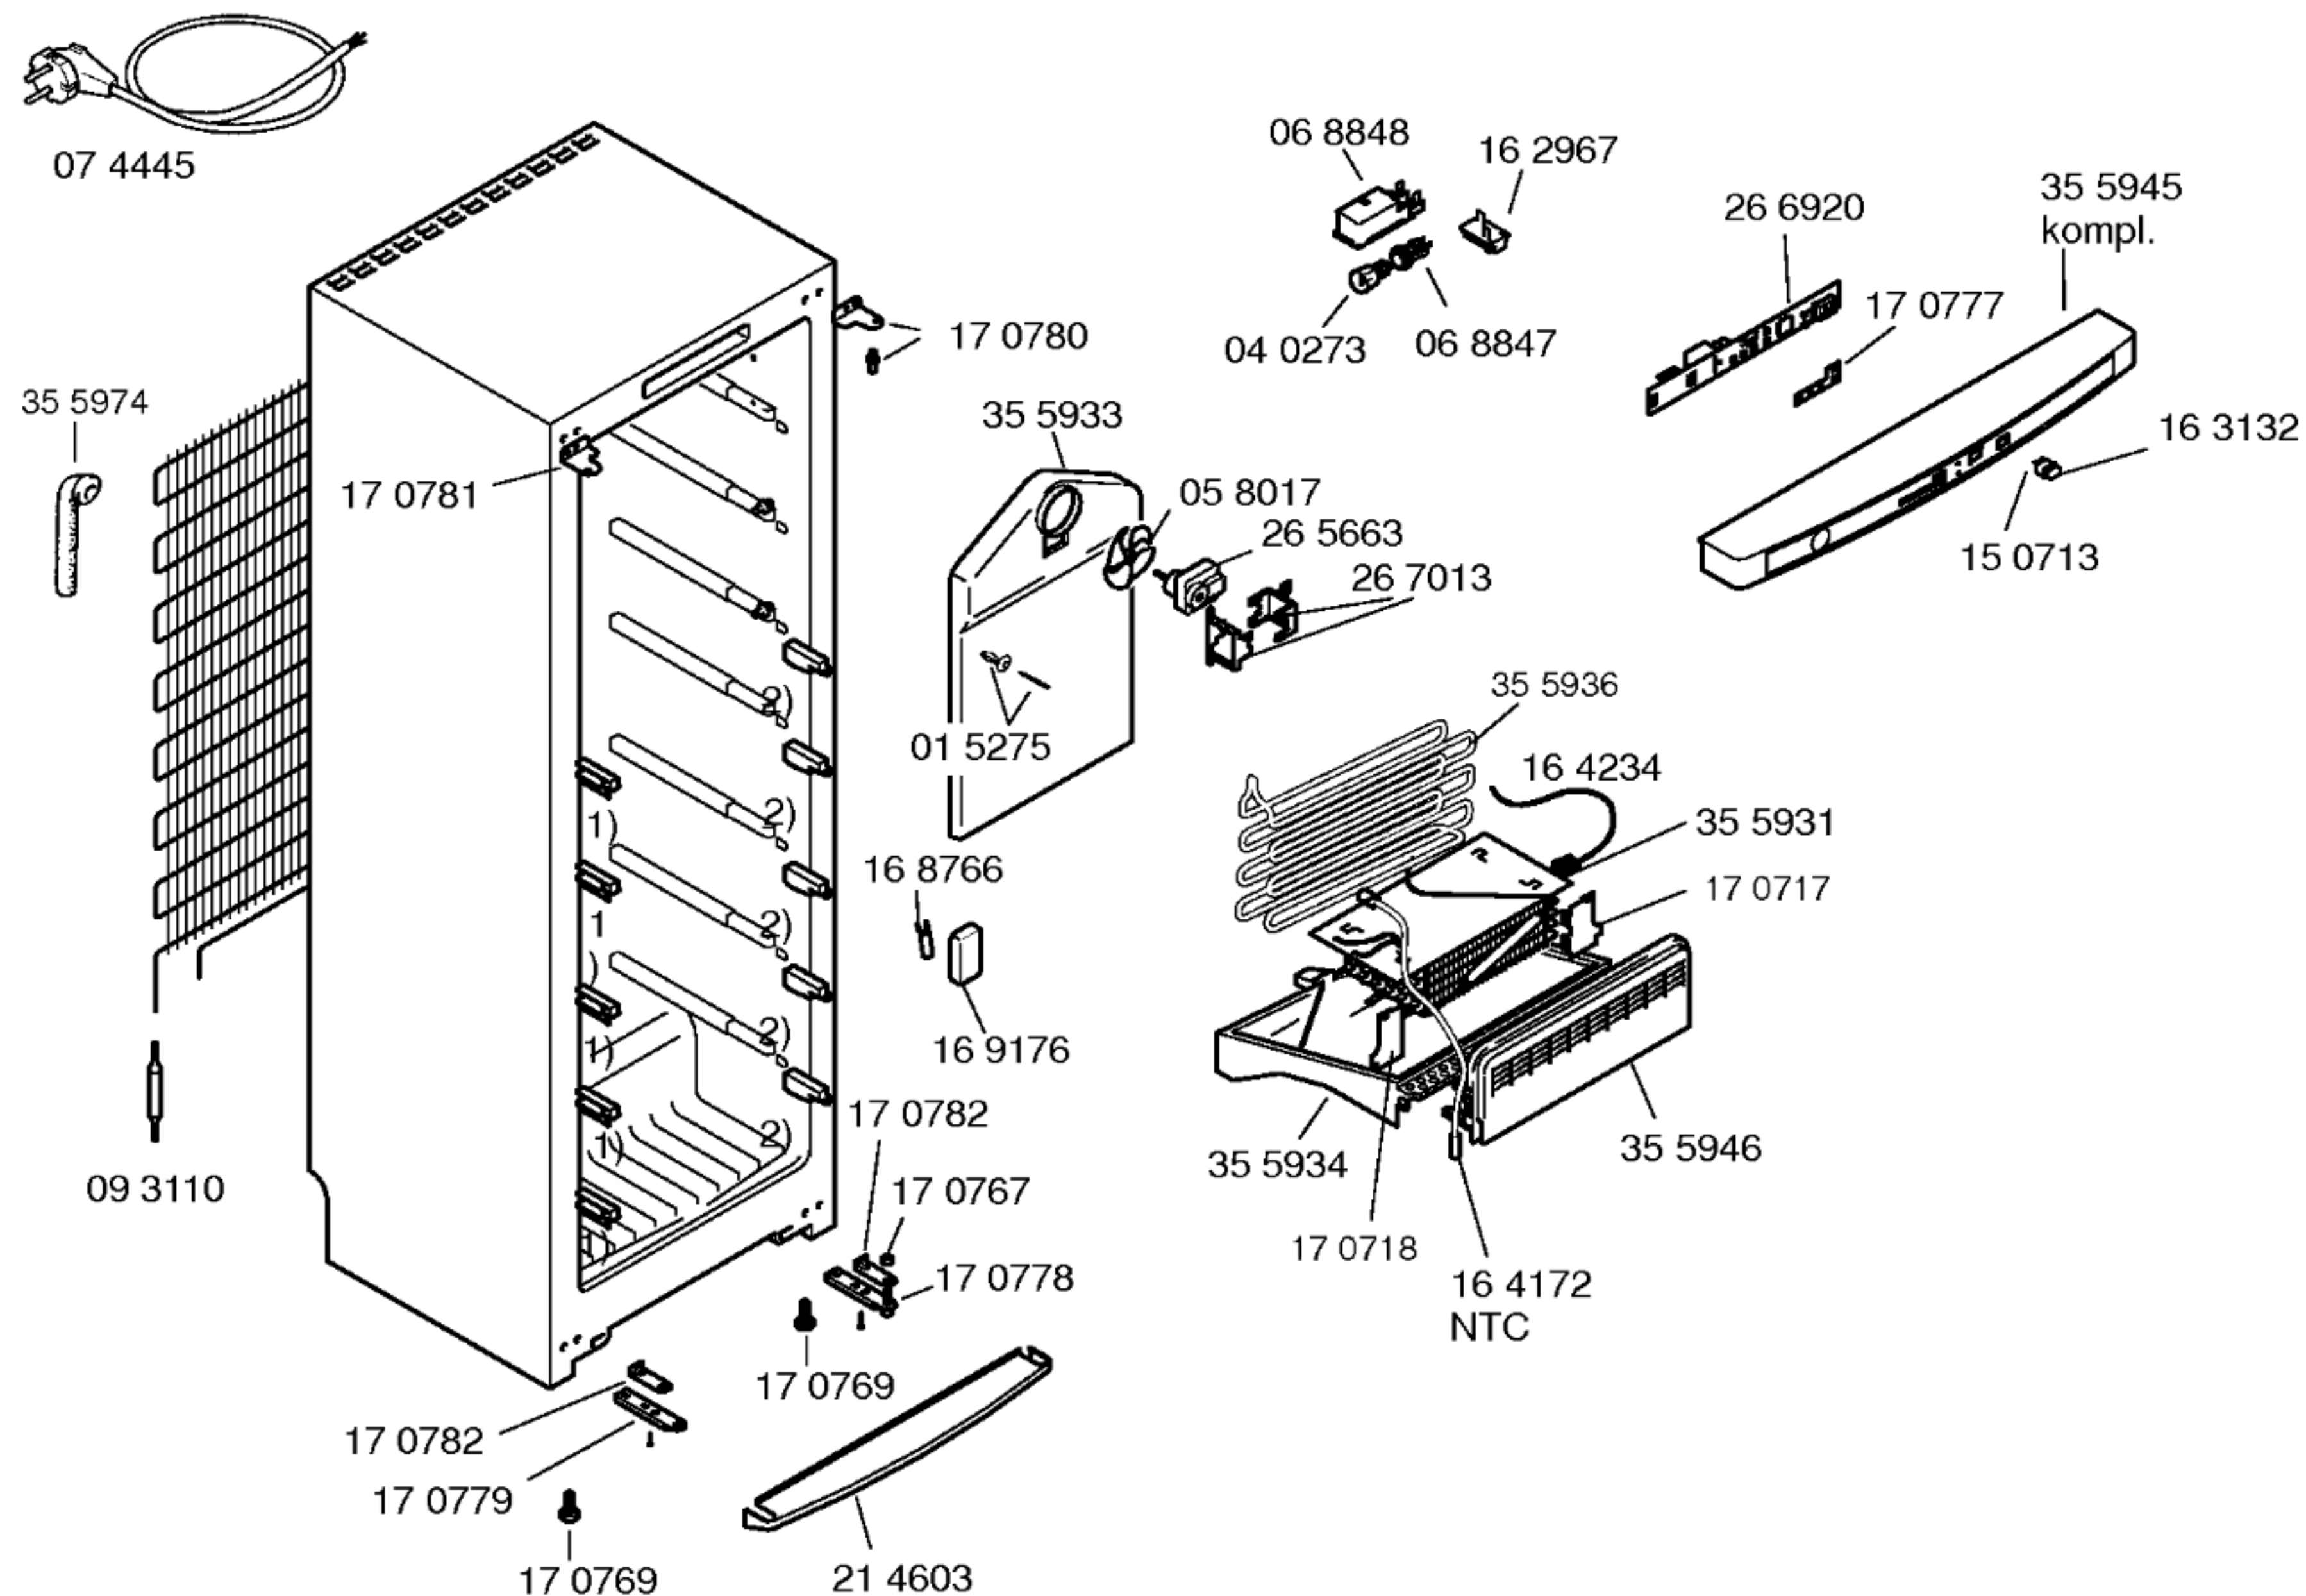

Gebrauchsanweisung
52 3813

(D,GB,F,I,NL,E,P)
Montageanleitung




52 2772
(D,GB,F,I,NL,DK,N
SF,S,E,P,TR,GR)


Beistellsatz
26 5629

Side by Side
Beistellsatz zu KSR/KSK
48 1044

Gefrierraumteiler
35 3678

1) 17 1455
2) 17 1454

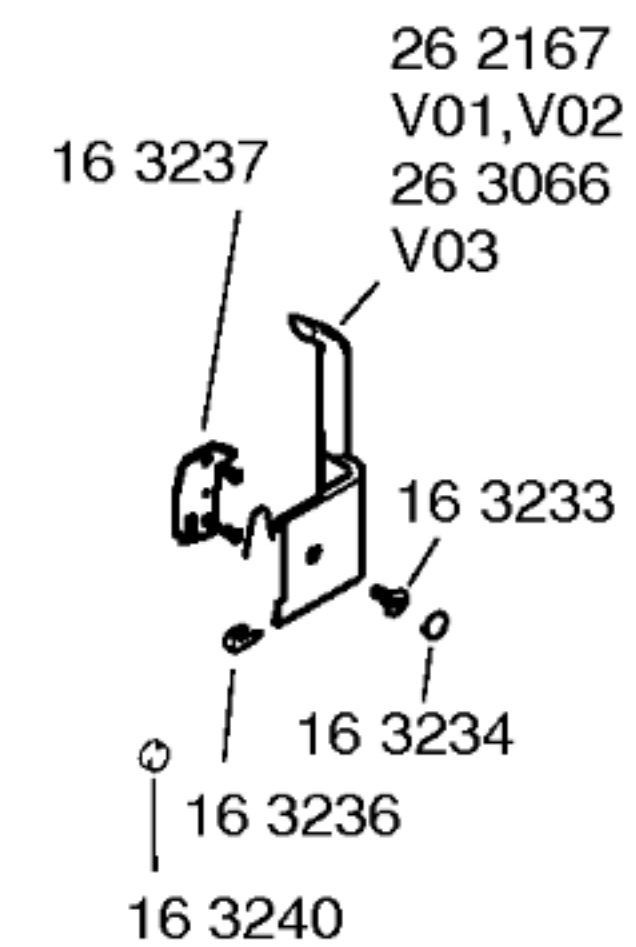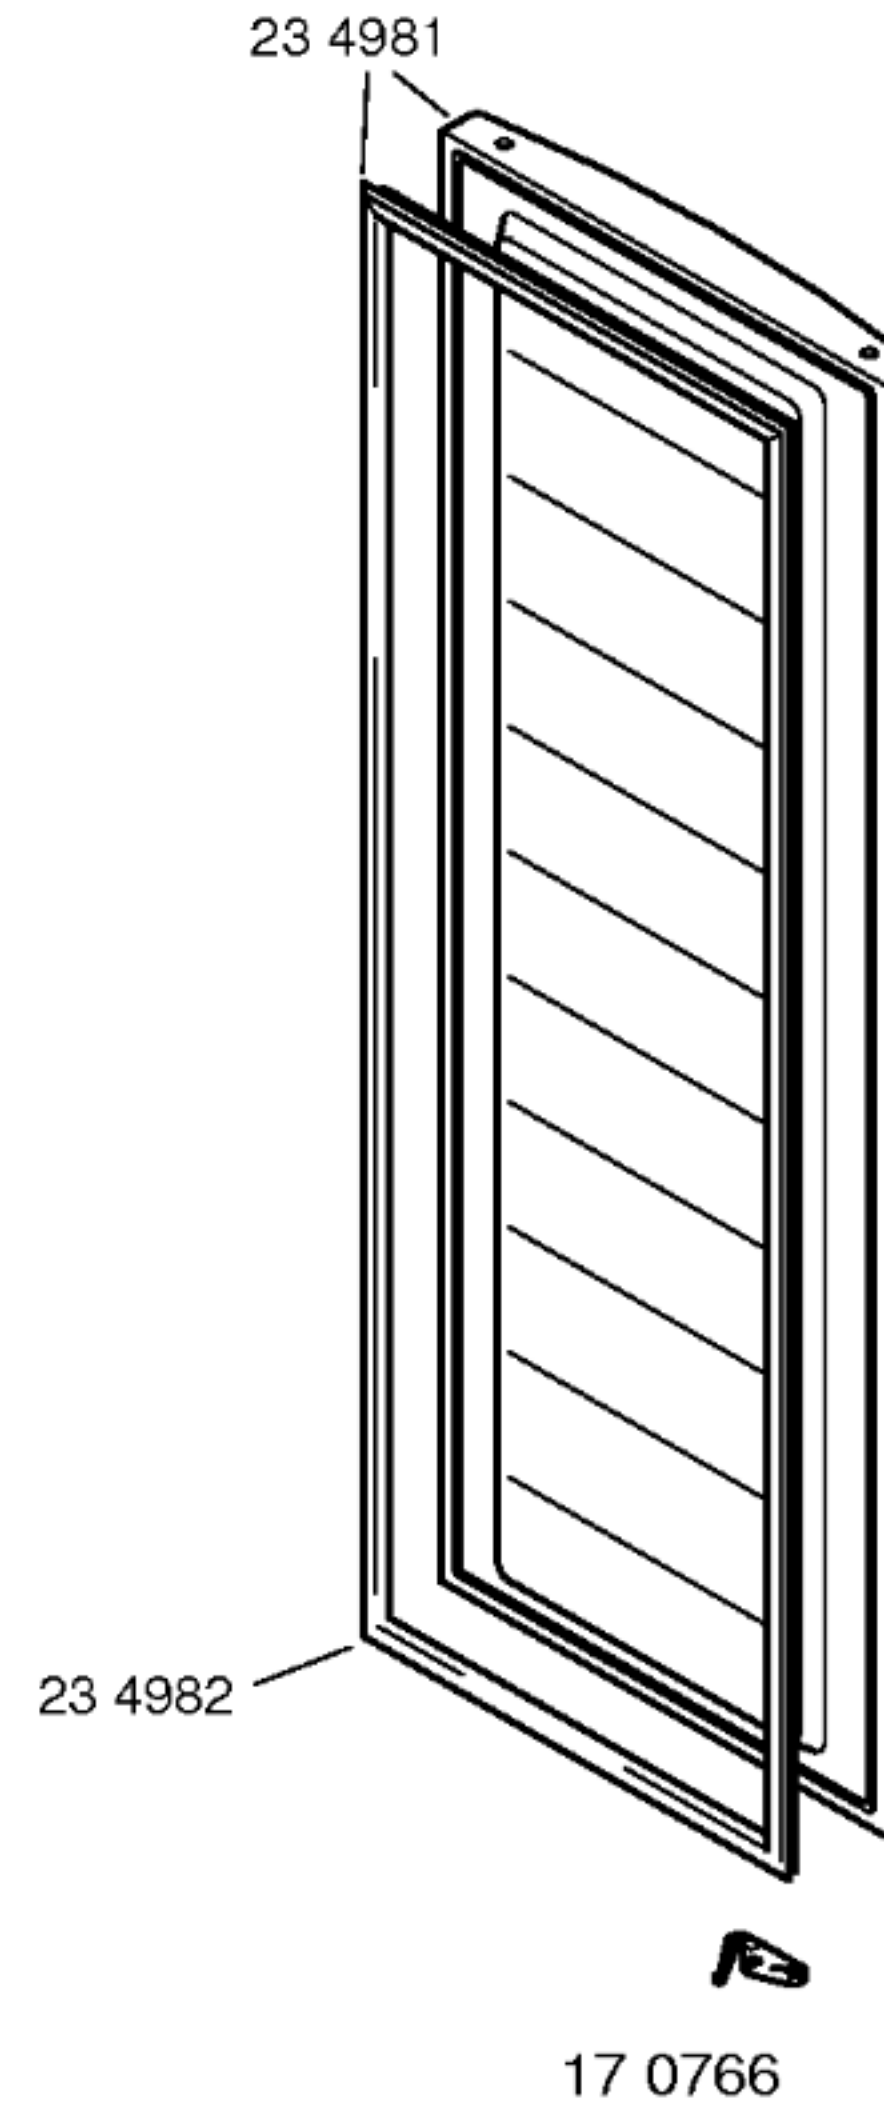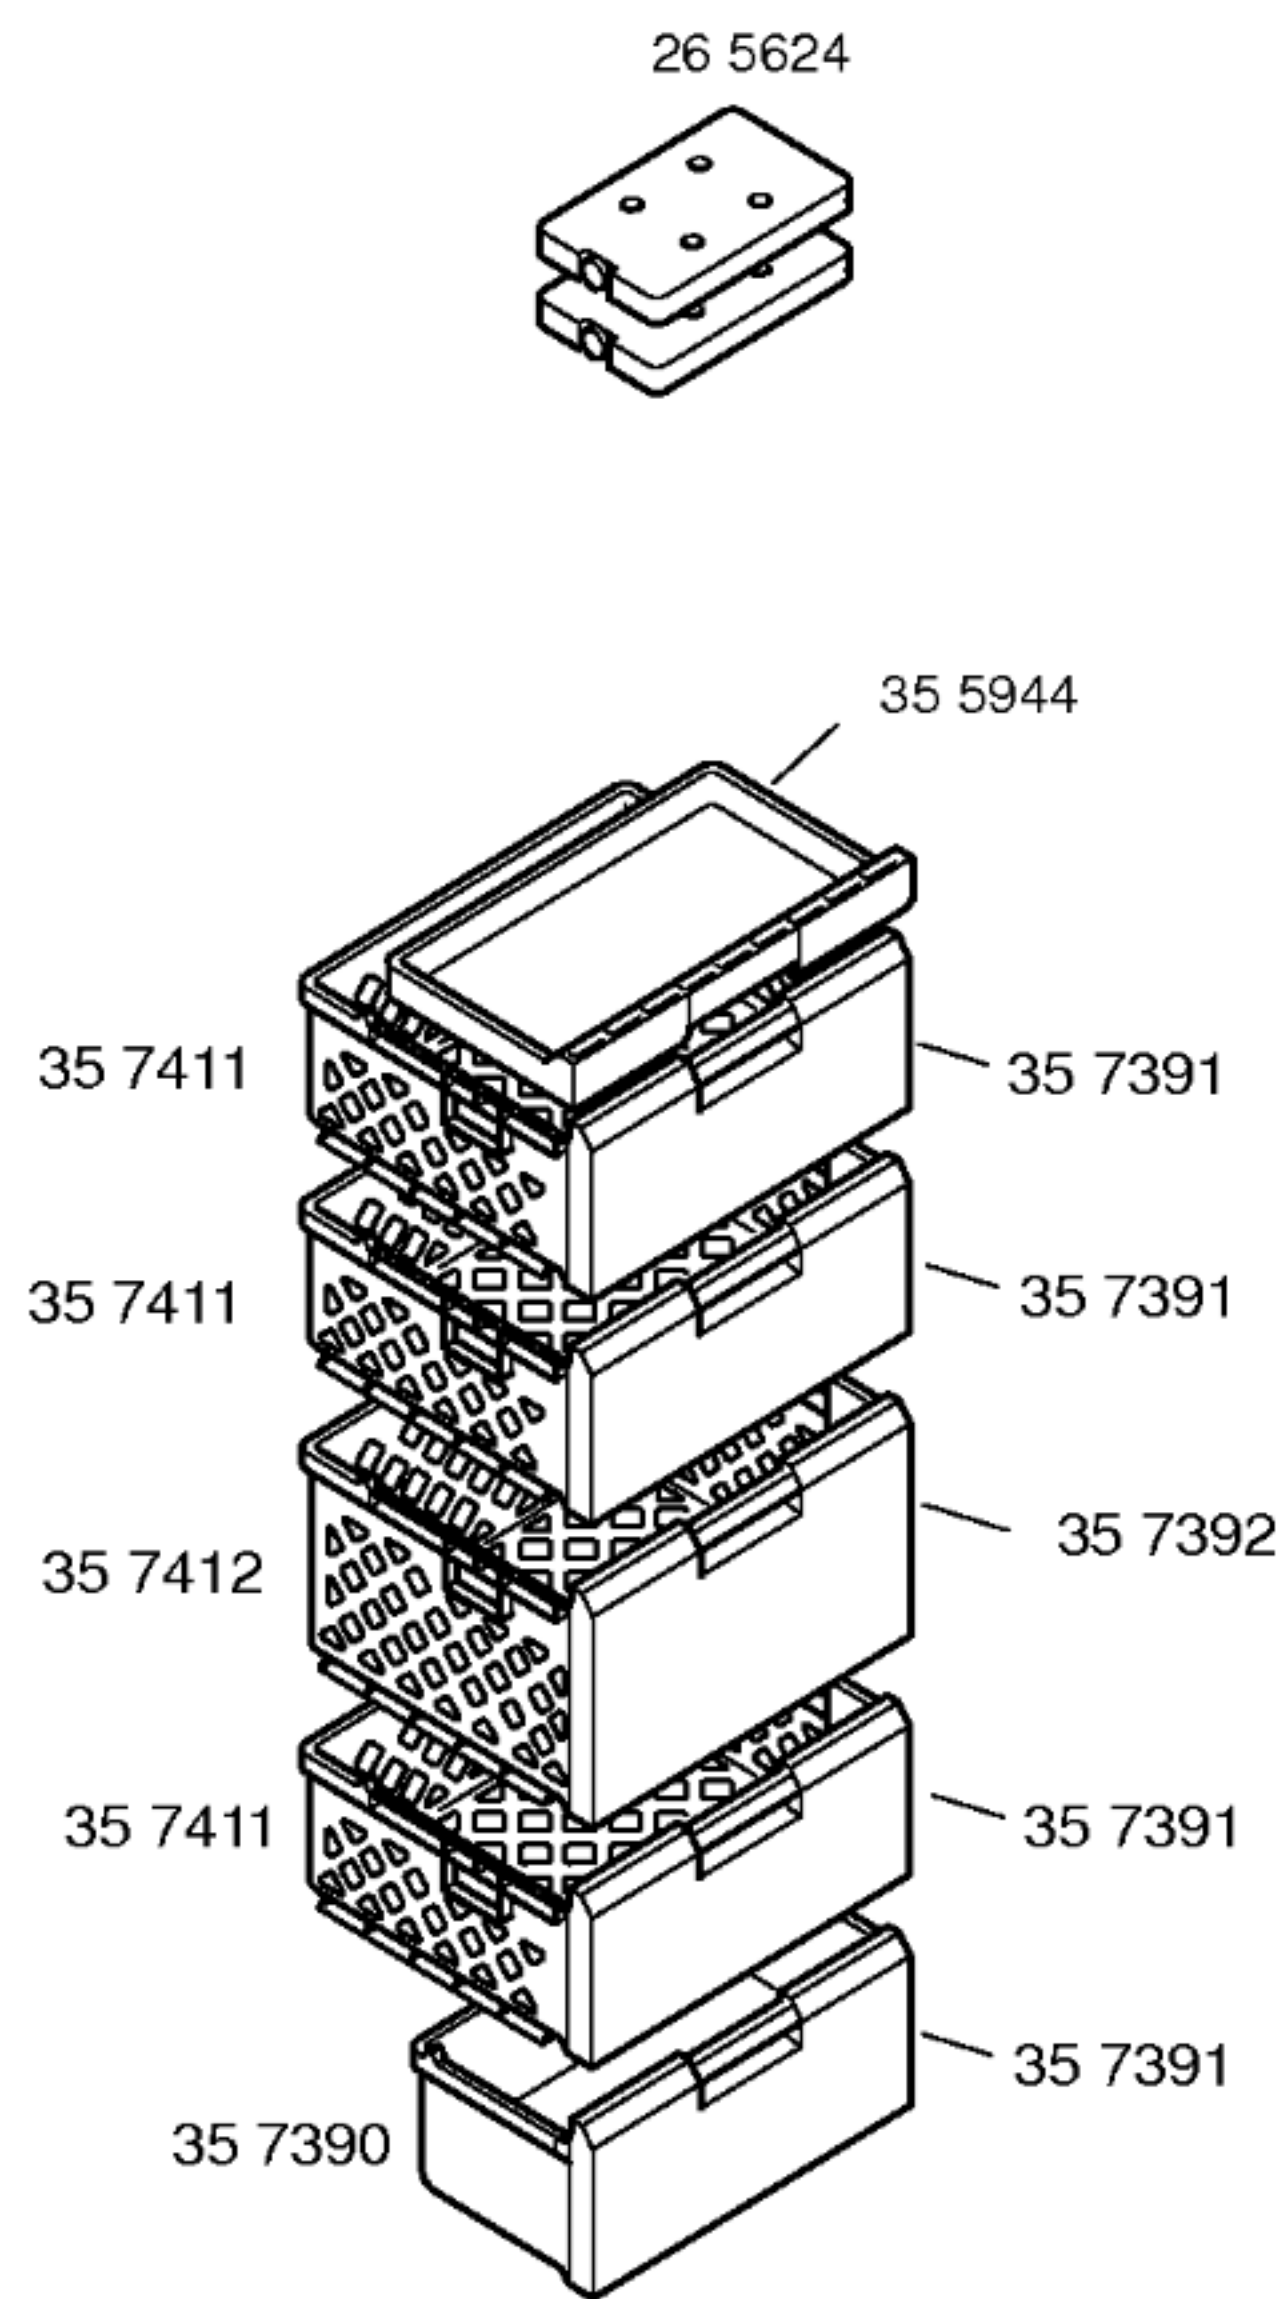

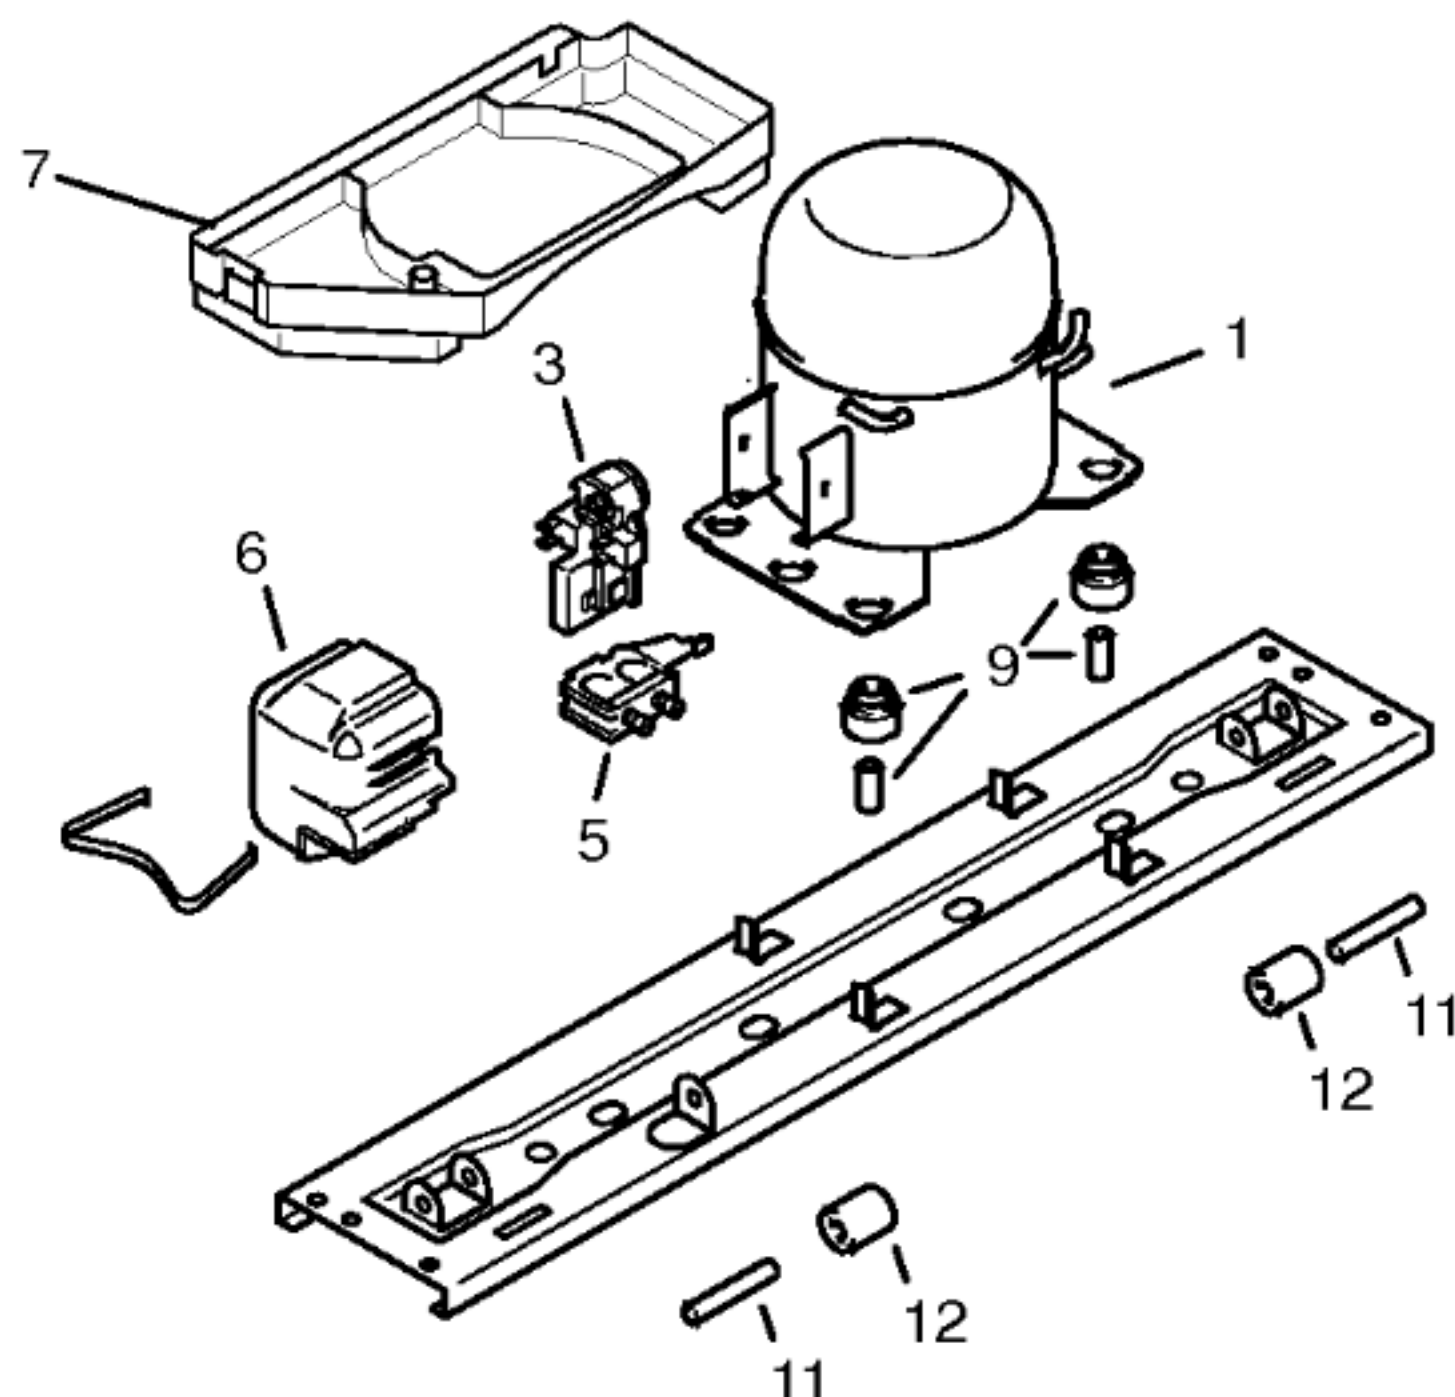

	V01	V02	V03
Pos.	Aspera NBT1116Y	Matsushita DC125E	Danfoss NLY 13K
1	14 1847	14 1965	14 1747
2			
3	17 0623	17 2967	15 1055
4			
5	16 8903	16 2549	15 0760
6	16 8902	16 6782	15 1072
7	26 5483	08 8535	09 6212
8			
9	05 0166	05 0166	05 0166
10			
11	01 9017	01 9017	01 9017
12	01 9016	01 9016	01 1916

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Aspera NBT1116Y	Matsushita DC125E	Danfoss NLY 13 K	
Typ/Type		2214	2246	2394	
Förderleistung/Delivery/Débit	l/h			11,3	
Anlaufstrom/Starting current/Cour de démarrage	A			10,5	
Widerstand/Resistance/Résistance	Ω	13,2	12,1	11,0	
Hi/main/prin					
Hi/aux	Ω	17,6	13,8		
Temp.-Regler/Thermostat		Elektronisch			
Typ/Type		EIN AUS			
Regelstellung/Position		-15 -16			
Schaltwerte/Switching values	"warm"	-19 -20			
Valeurs de commutation	"kalt"	-23 -24			
	"alarm"	-9 -14			
Füllmenge/Fill.quantity/Charge		R600a	*	*	
Anschlußwert/Conn.load/Puiss. connectée		W	124	120	133
Heizung/Heater/Chauffage		Abtauheizung		Rinnenheizung	
Widerstand/Resistance/Résistance	Ω	288		240	
Leistung/Power/Puissance	W	200		24	
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance	Ω	560			
Raumtemperaturfühler		C	K	C	k
		+10	9,9	-18	43,3
		+5	12,7	-22	54,6
		+0	16,3	-26	69,4
Widerstand NTC-Fühler		°C	kΩ	°C	kΩ
		-1	17,3	-15	36,5
		-9	26,2	-16	38,8
		-14	34,5	-19	45,9
		-20	48,6	-23	58,1
		-24	61,6	-24	61,6
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance	Ω				
Spannung/Voltage/Tension	V				

* siehe Typenschild