


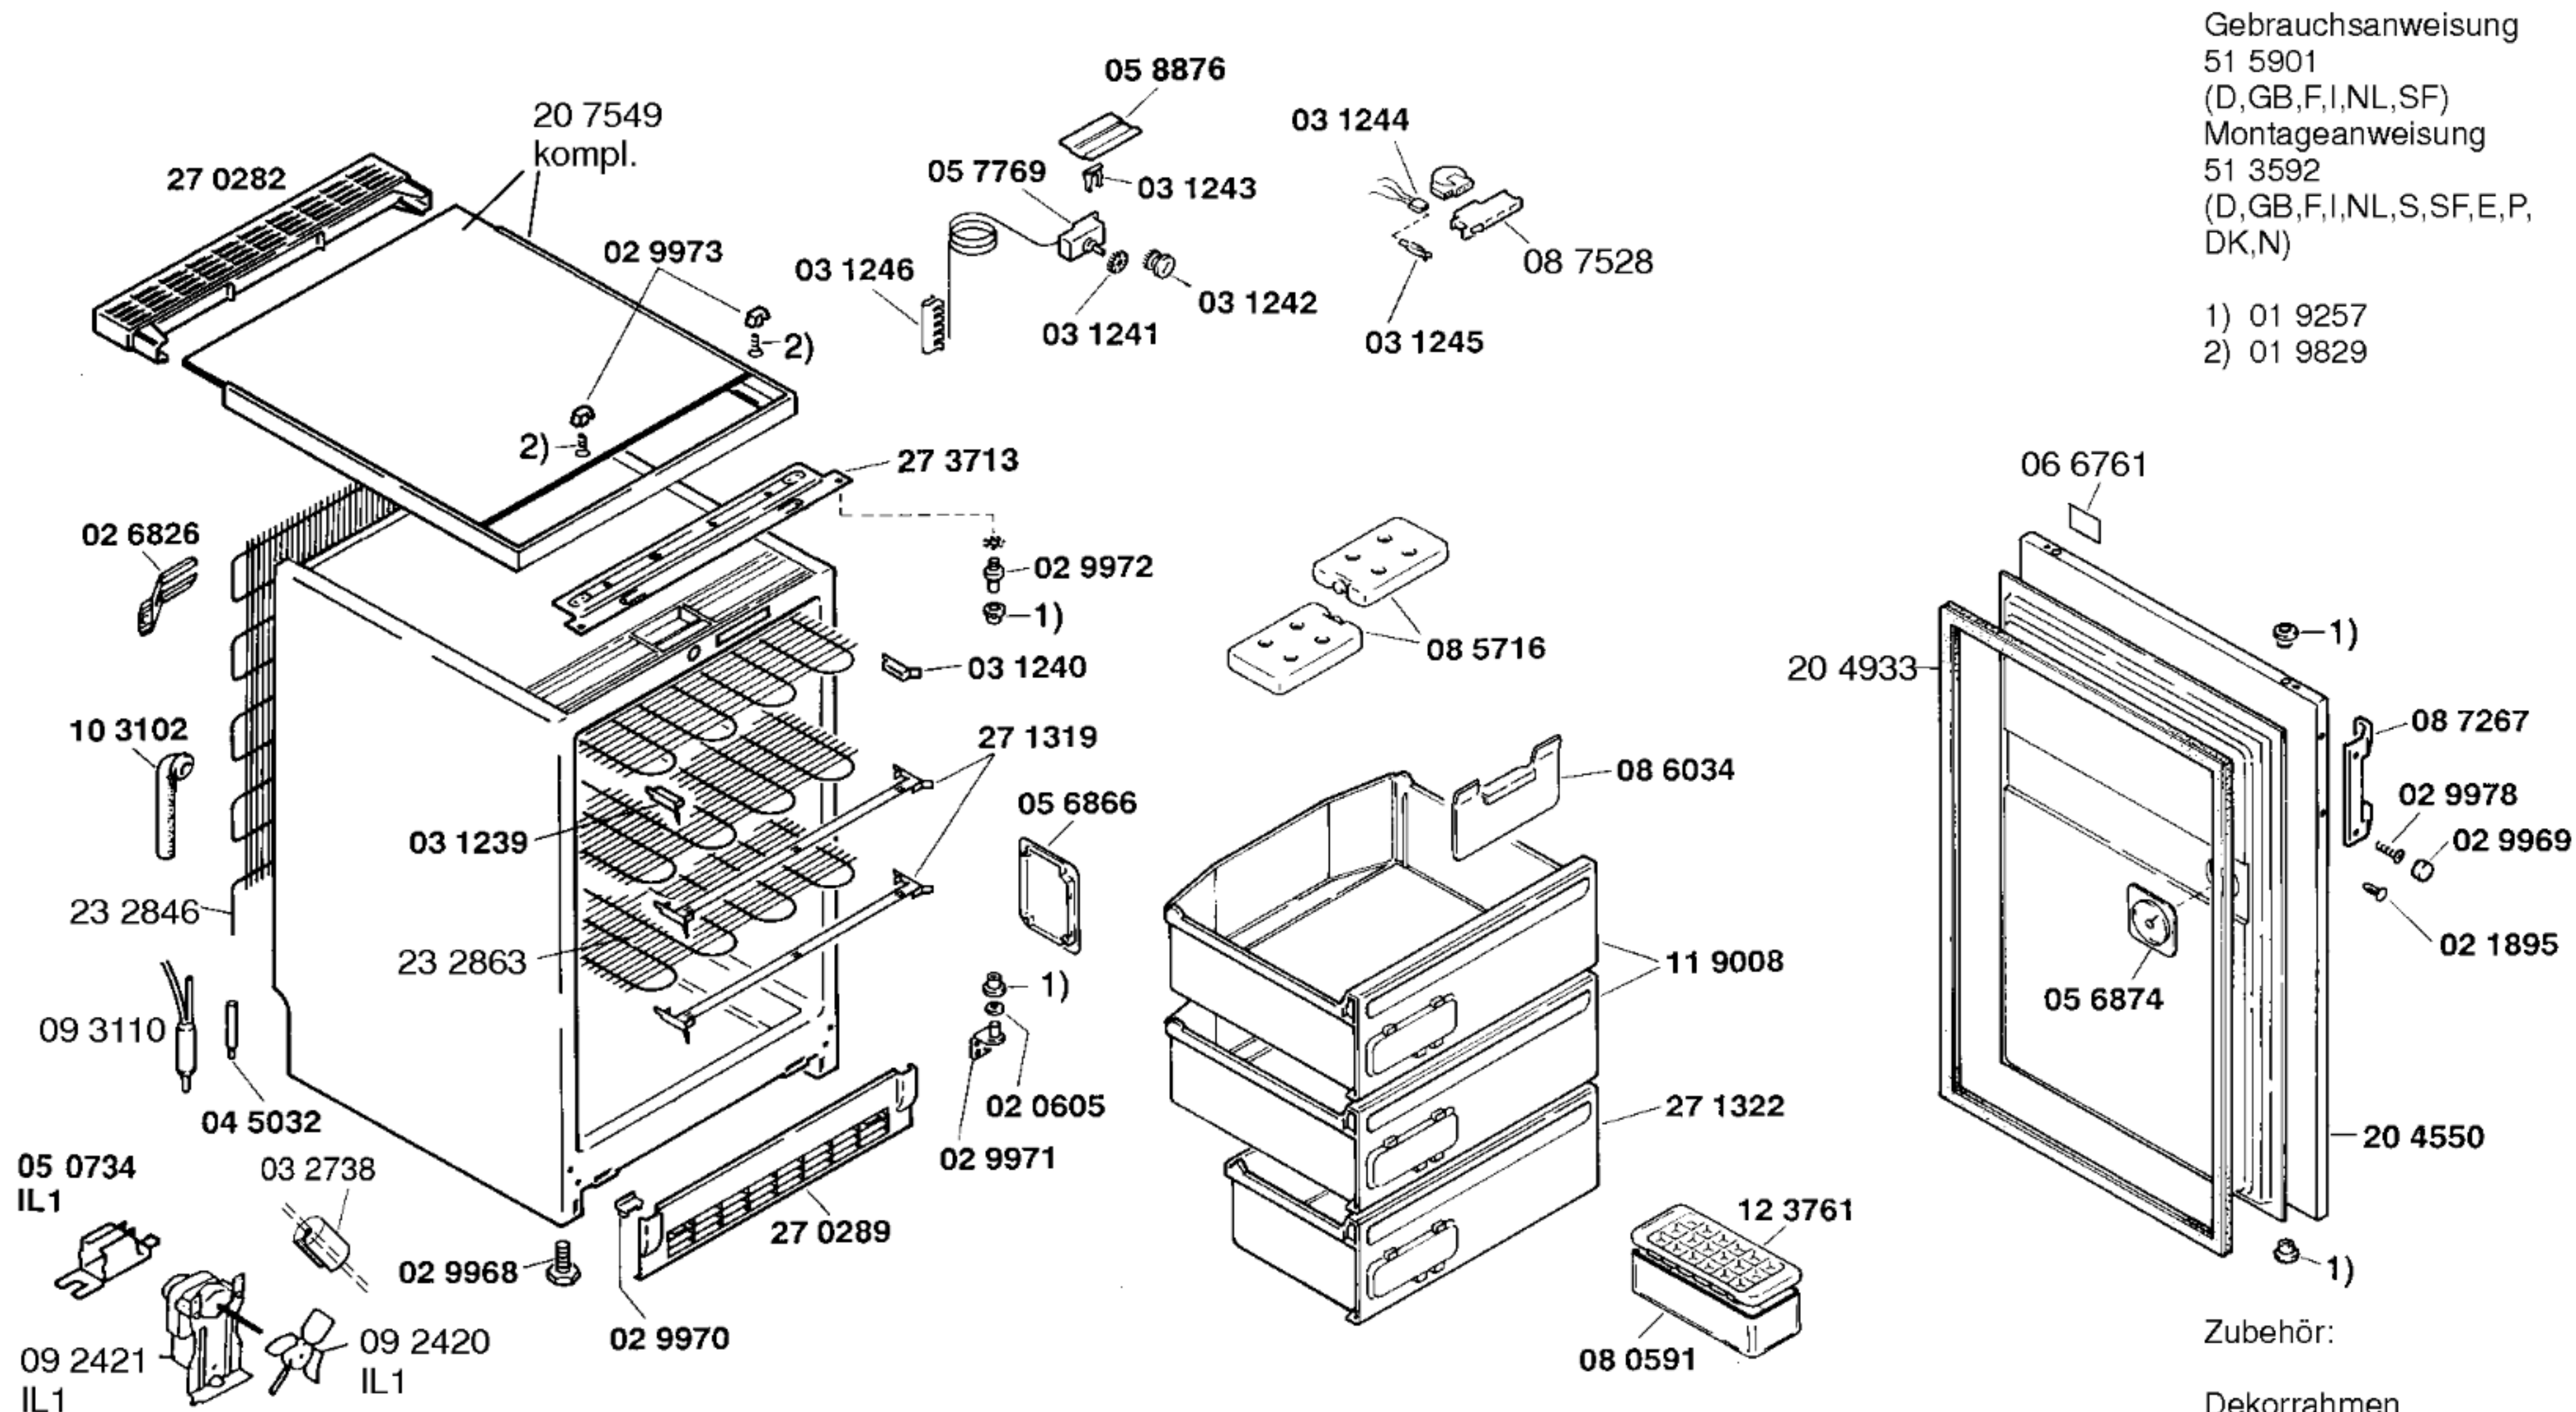


Gebrauchsanweisung
51 5901
(D,GB,F,I,NL,SF)
Montageanweisung
51 3592
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

1) 01 9257
2) 01 9829

Zubehör:

Dekorrahmen
KZ10180, weiss
KZ10160, braun
KZ10170, Alu
Sockel
KZ11120

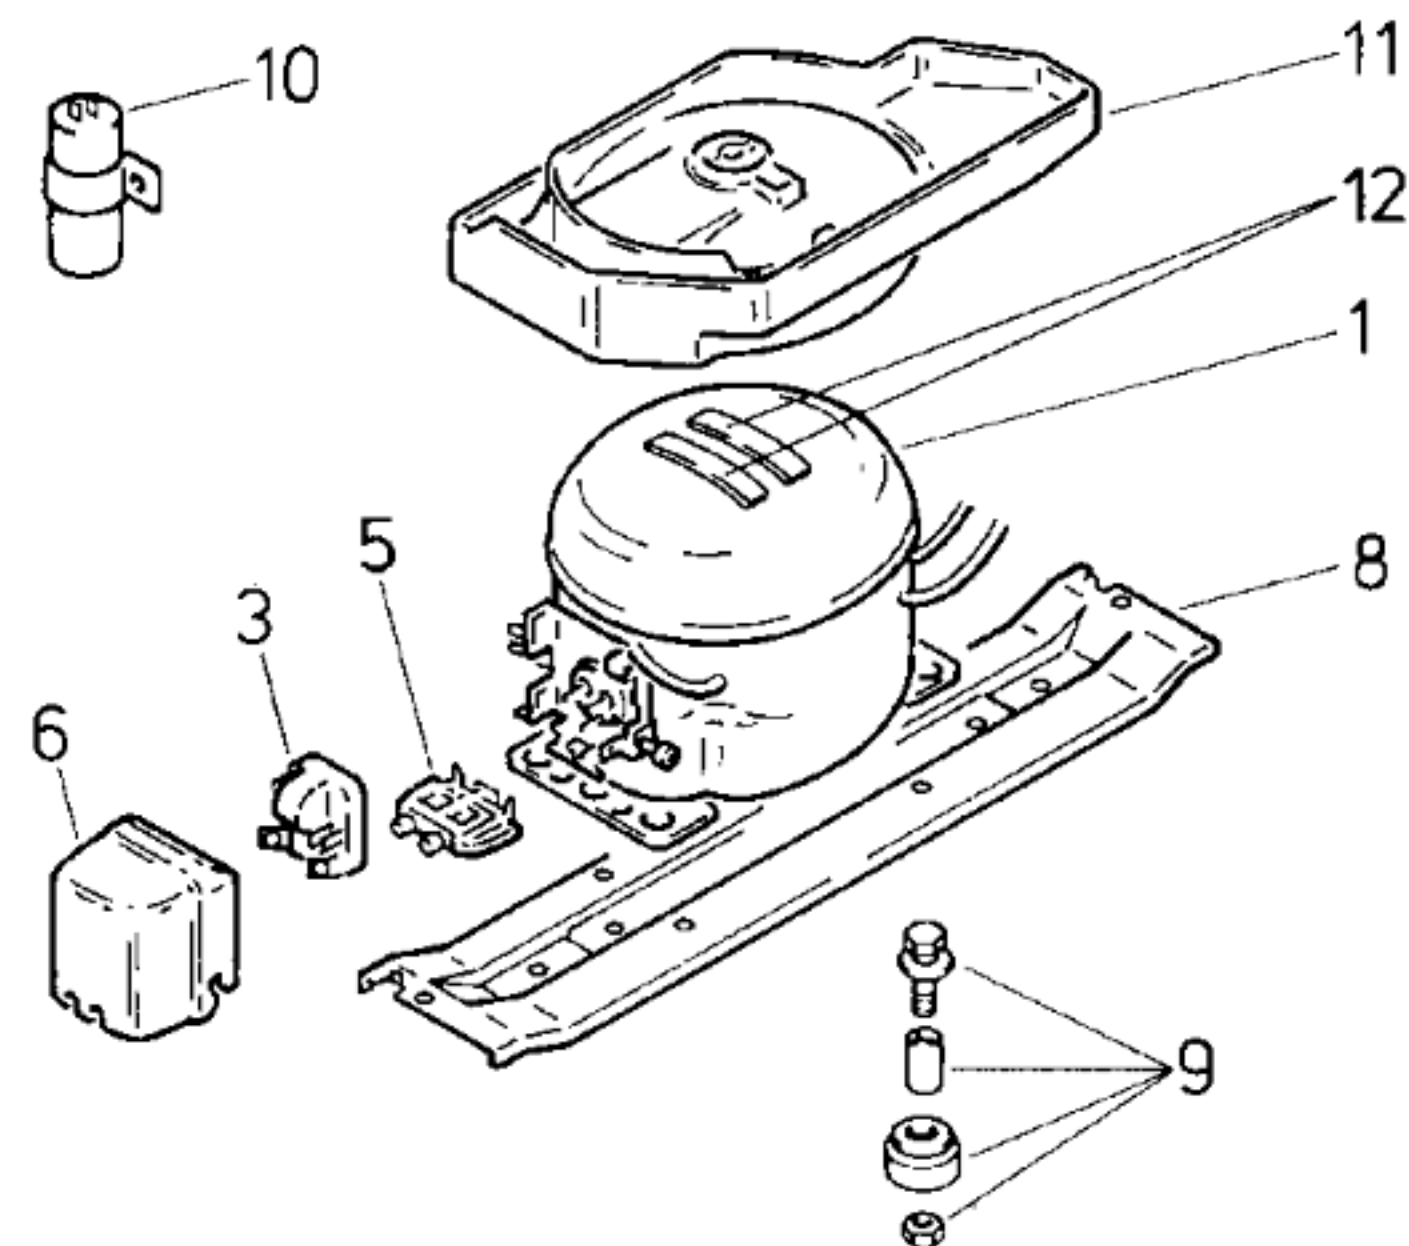

Pos.	IL1	EU1,CH1	
	Danfoss	Danfoss	
	TLES 5 F	TLS 5 F	
1	14 1242	14 1250	
2			
3	05 9191	05 9191	
4			
5	15 0760	15 0760	
6	15 1072	15 1072	
7			
8	27 0291	27 0291	
9	05 0166	05 0166	
10			
11	08 4744	08 4744	
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 5 F		
Förderleistung/Delivery/Débit		l/h	914	
Anlaufstrom/Starting current/Cour de démarrage		A	4,0	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	18,9	
	Hi/aux	Ω	15,3	
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57 SF2		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/		„ein“	°C	
Valeurs de commutation		„aus“		
		(„abtauen“ od.)	„alarm“	
Füllmenge/Fill.quantity/Charge		R134a	g	110
Anschlußwert/Conn.load/Puiss. connectée		W	120	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		