

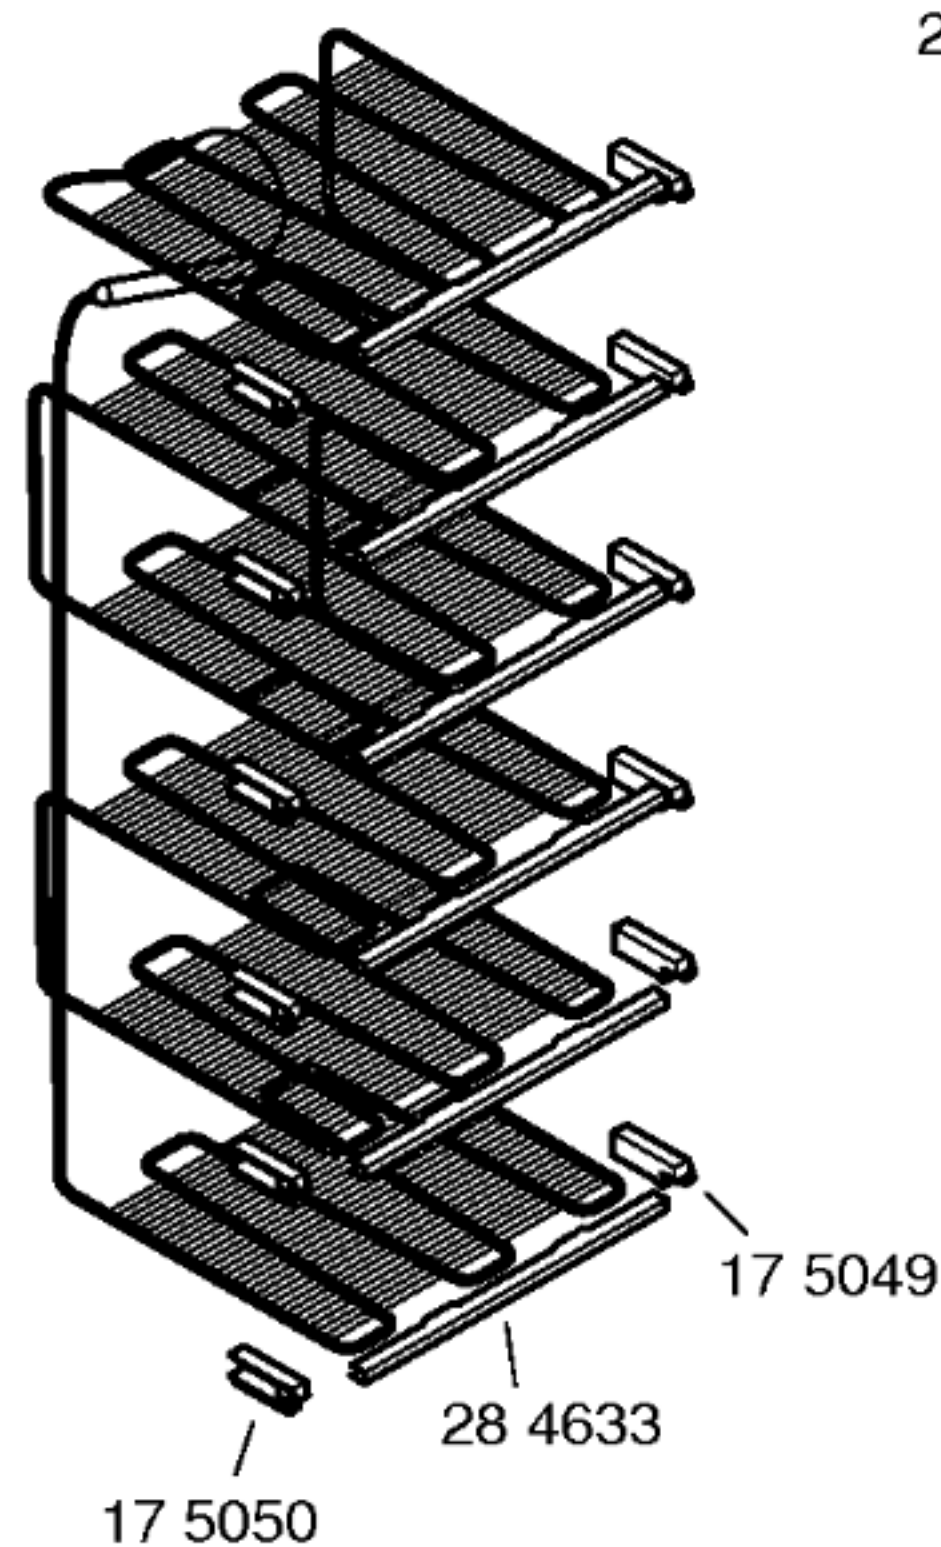
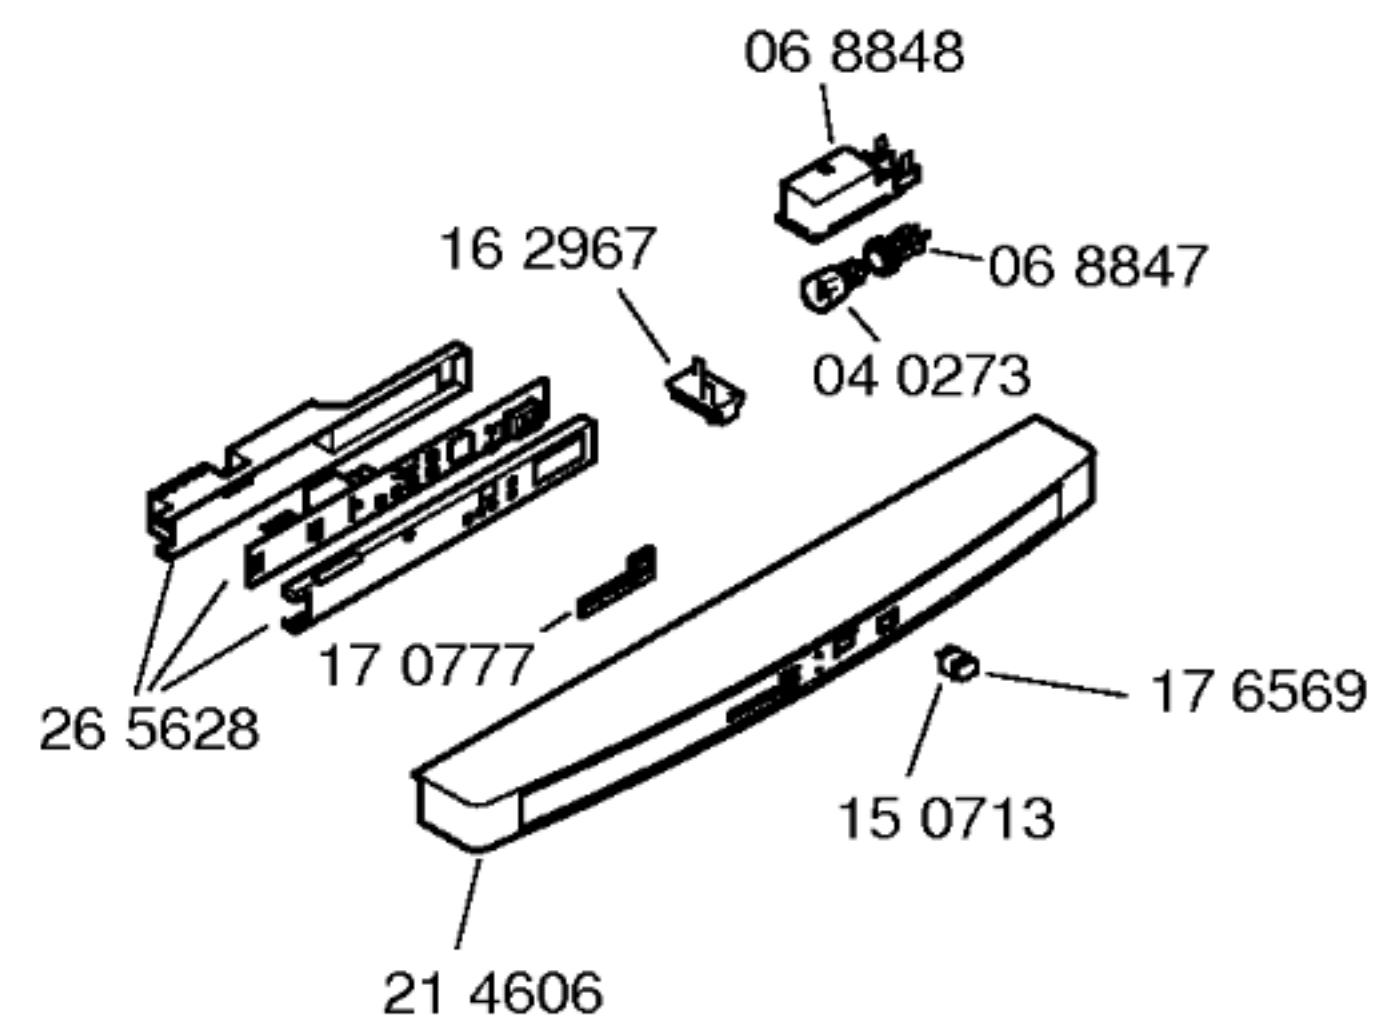


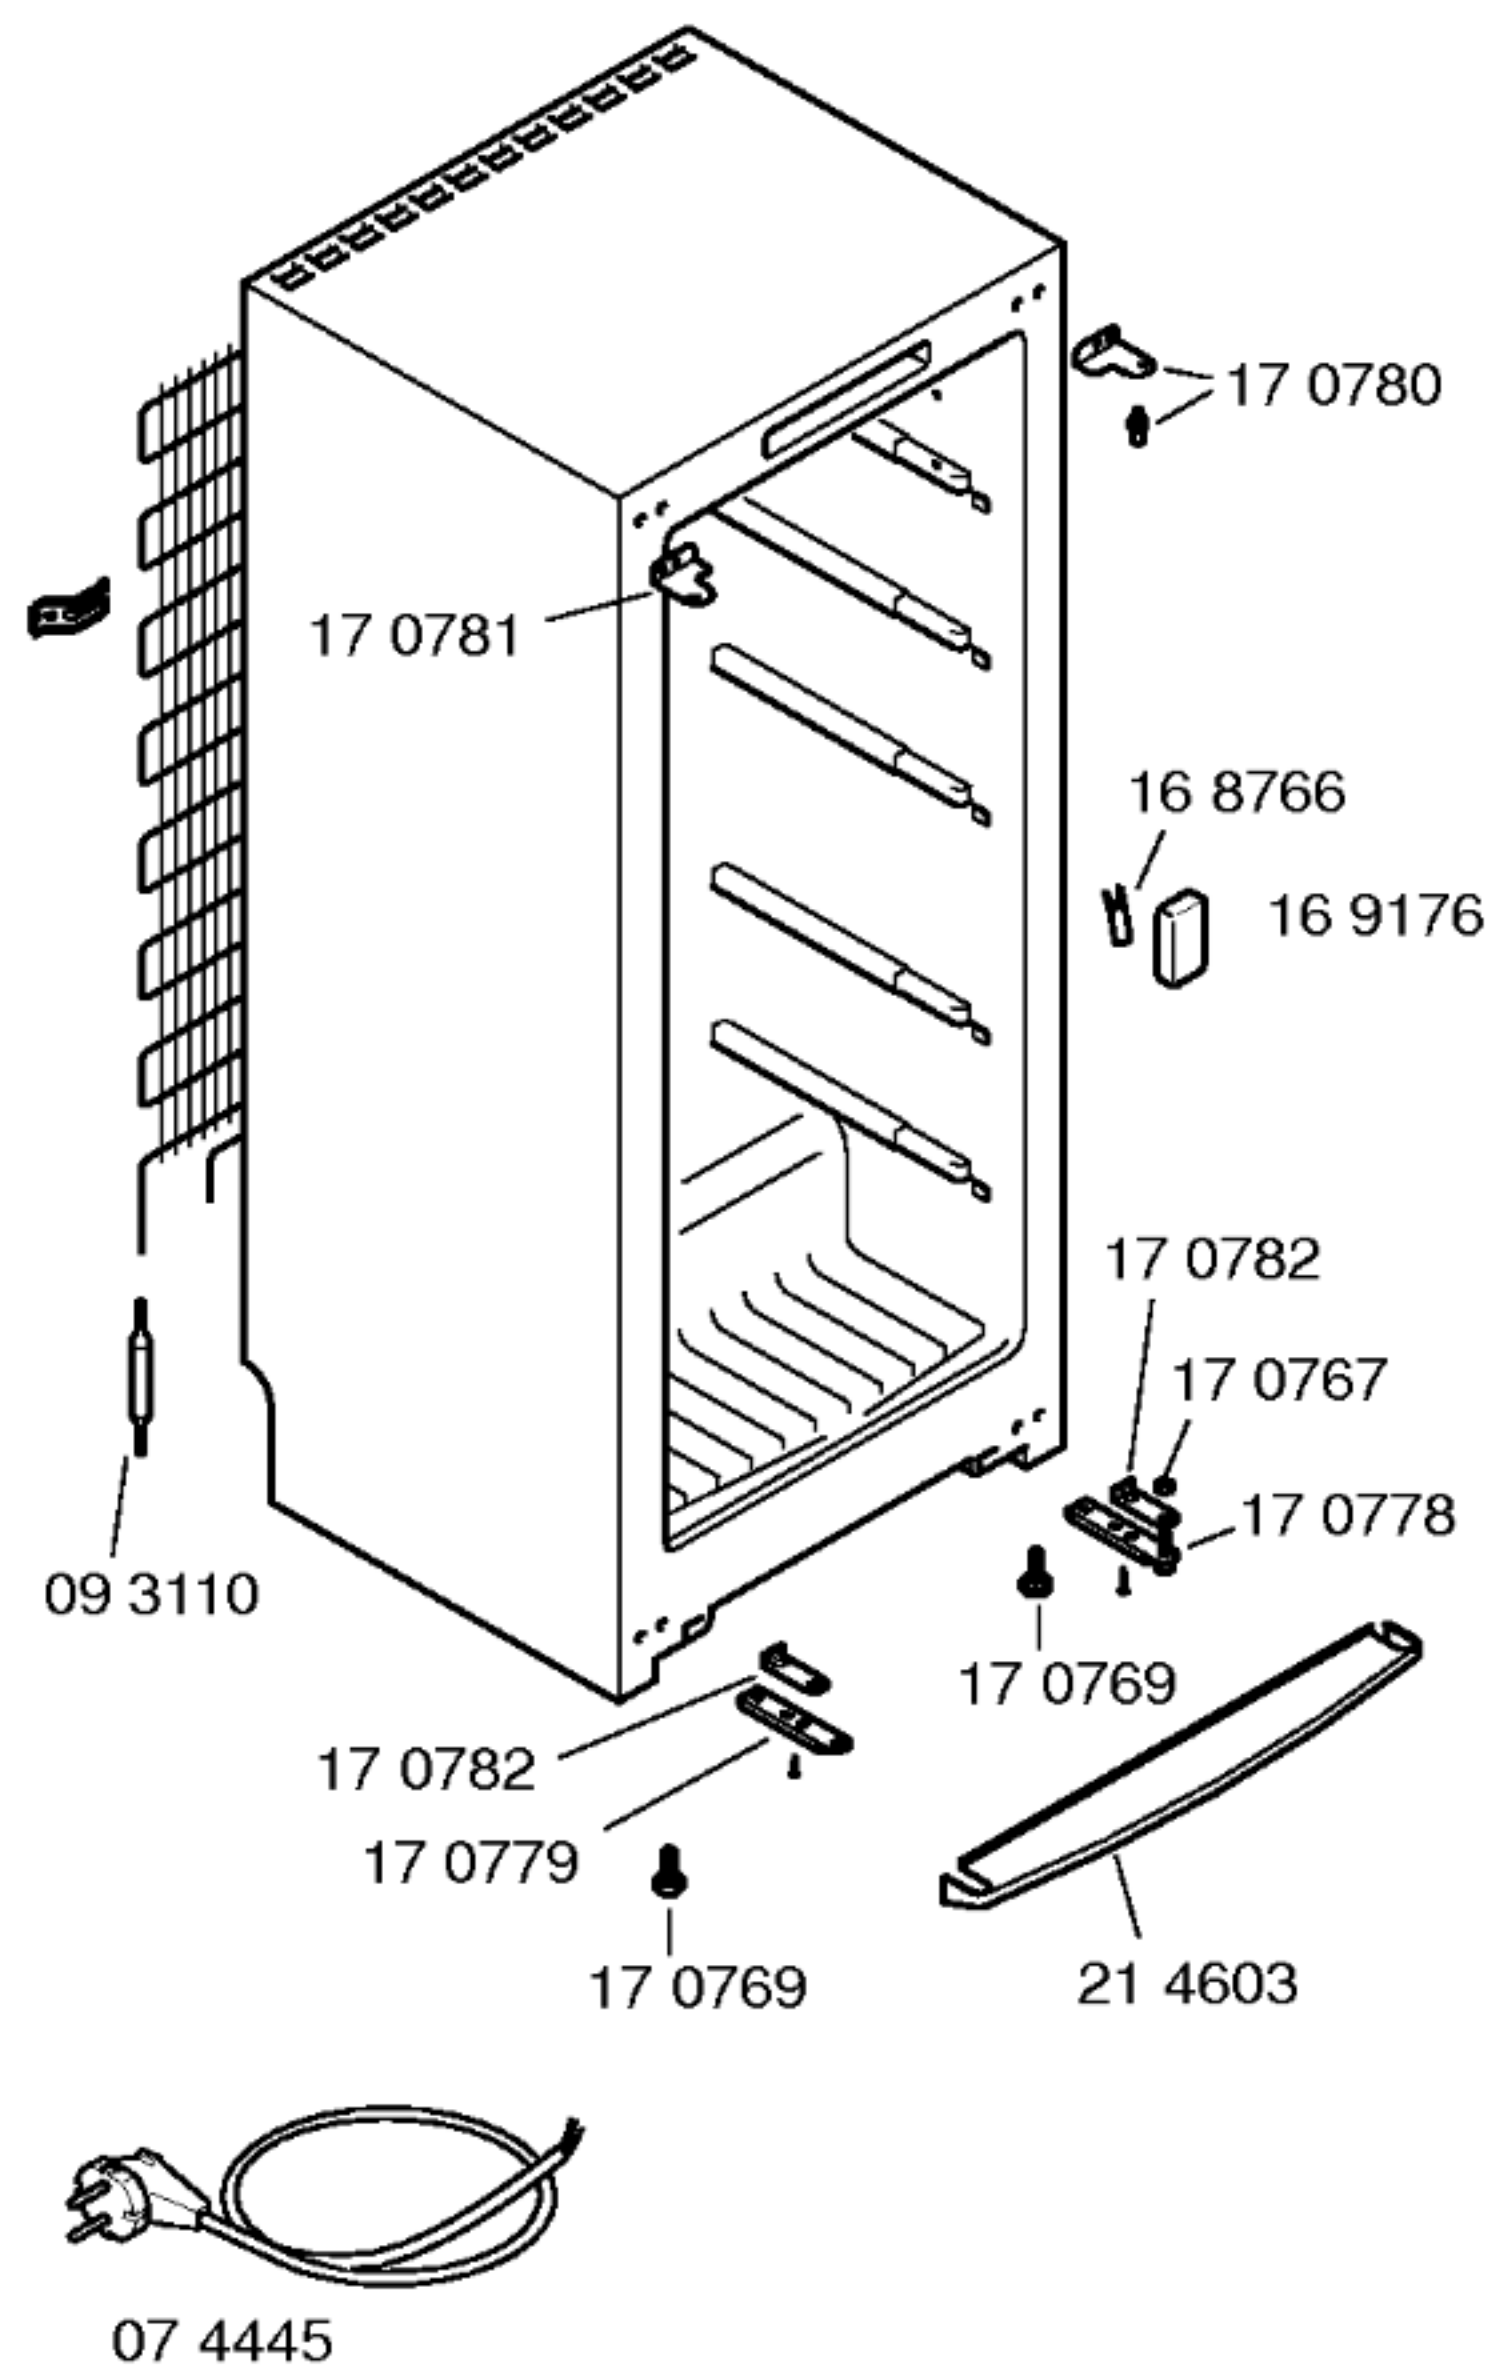


Gebrauchsanweisung
52 2791
(D,GB,F,I,NL)

Montageanleitung
52 2772
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 9607

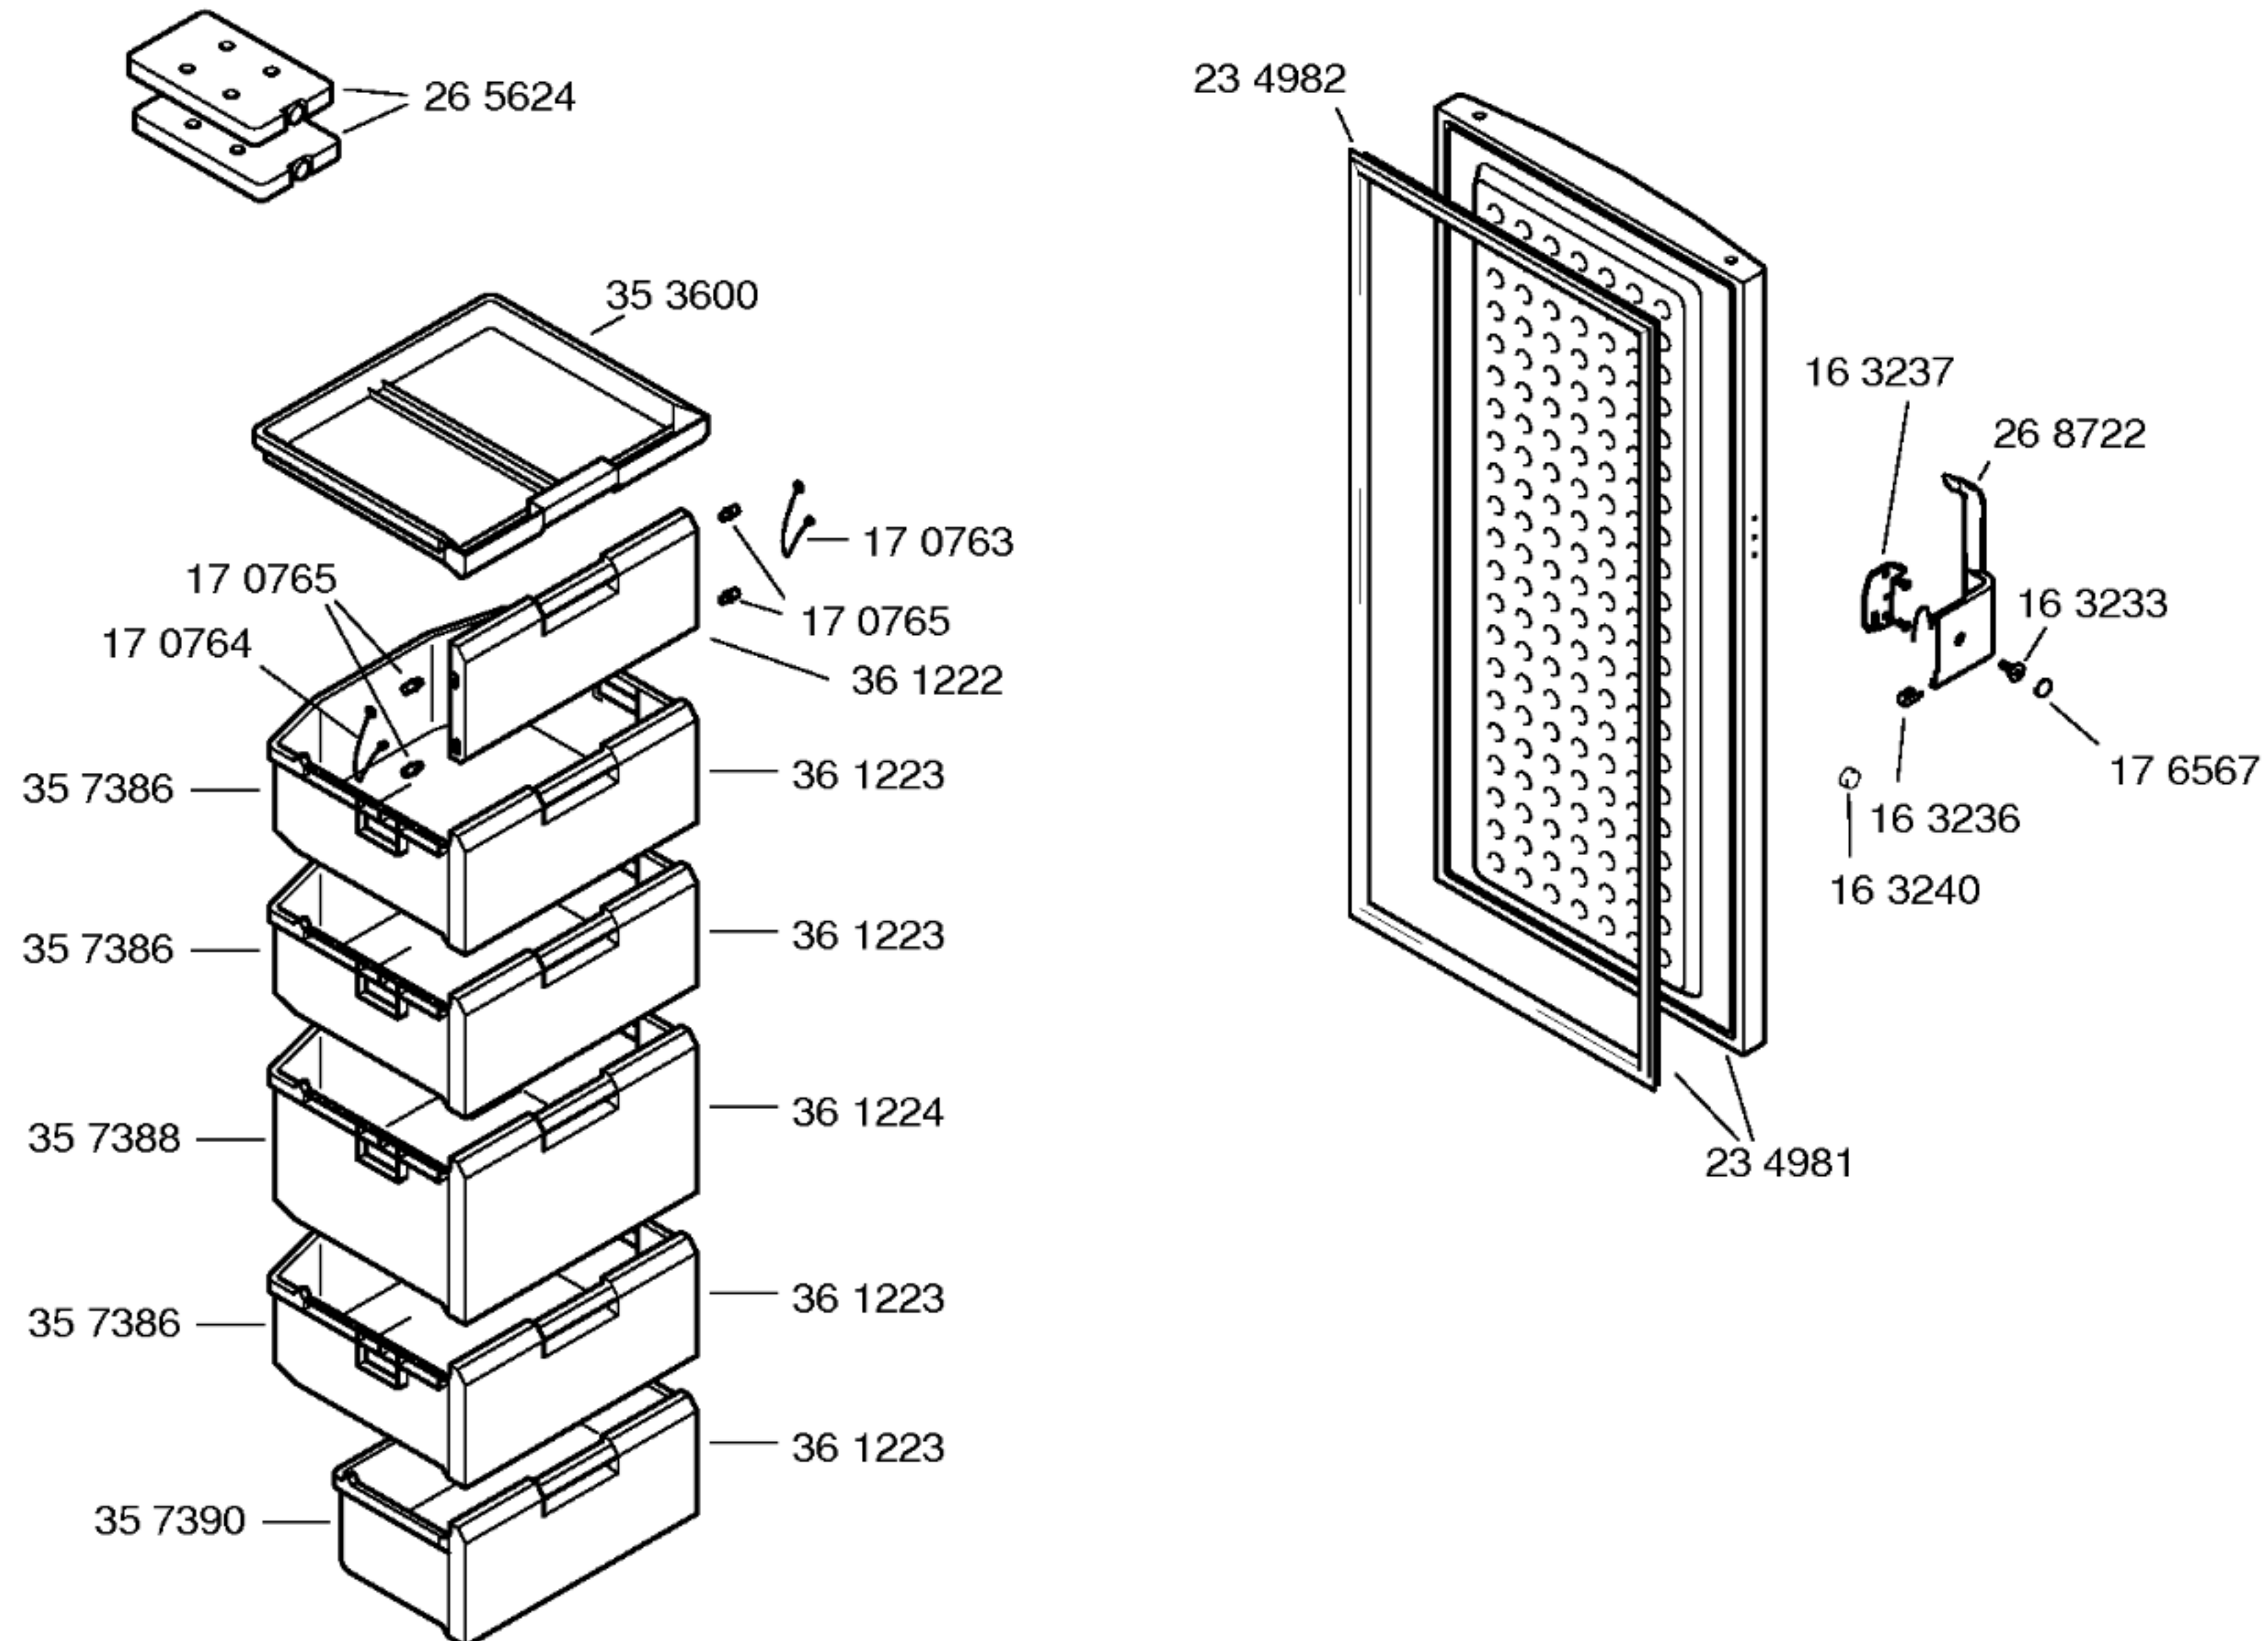

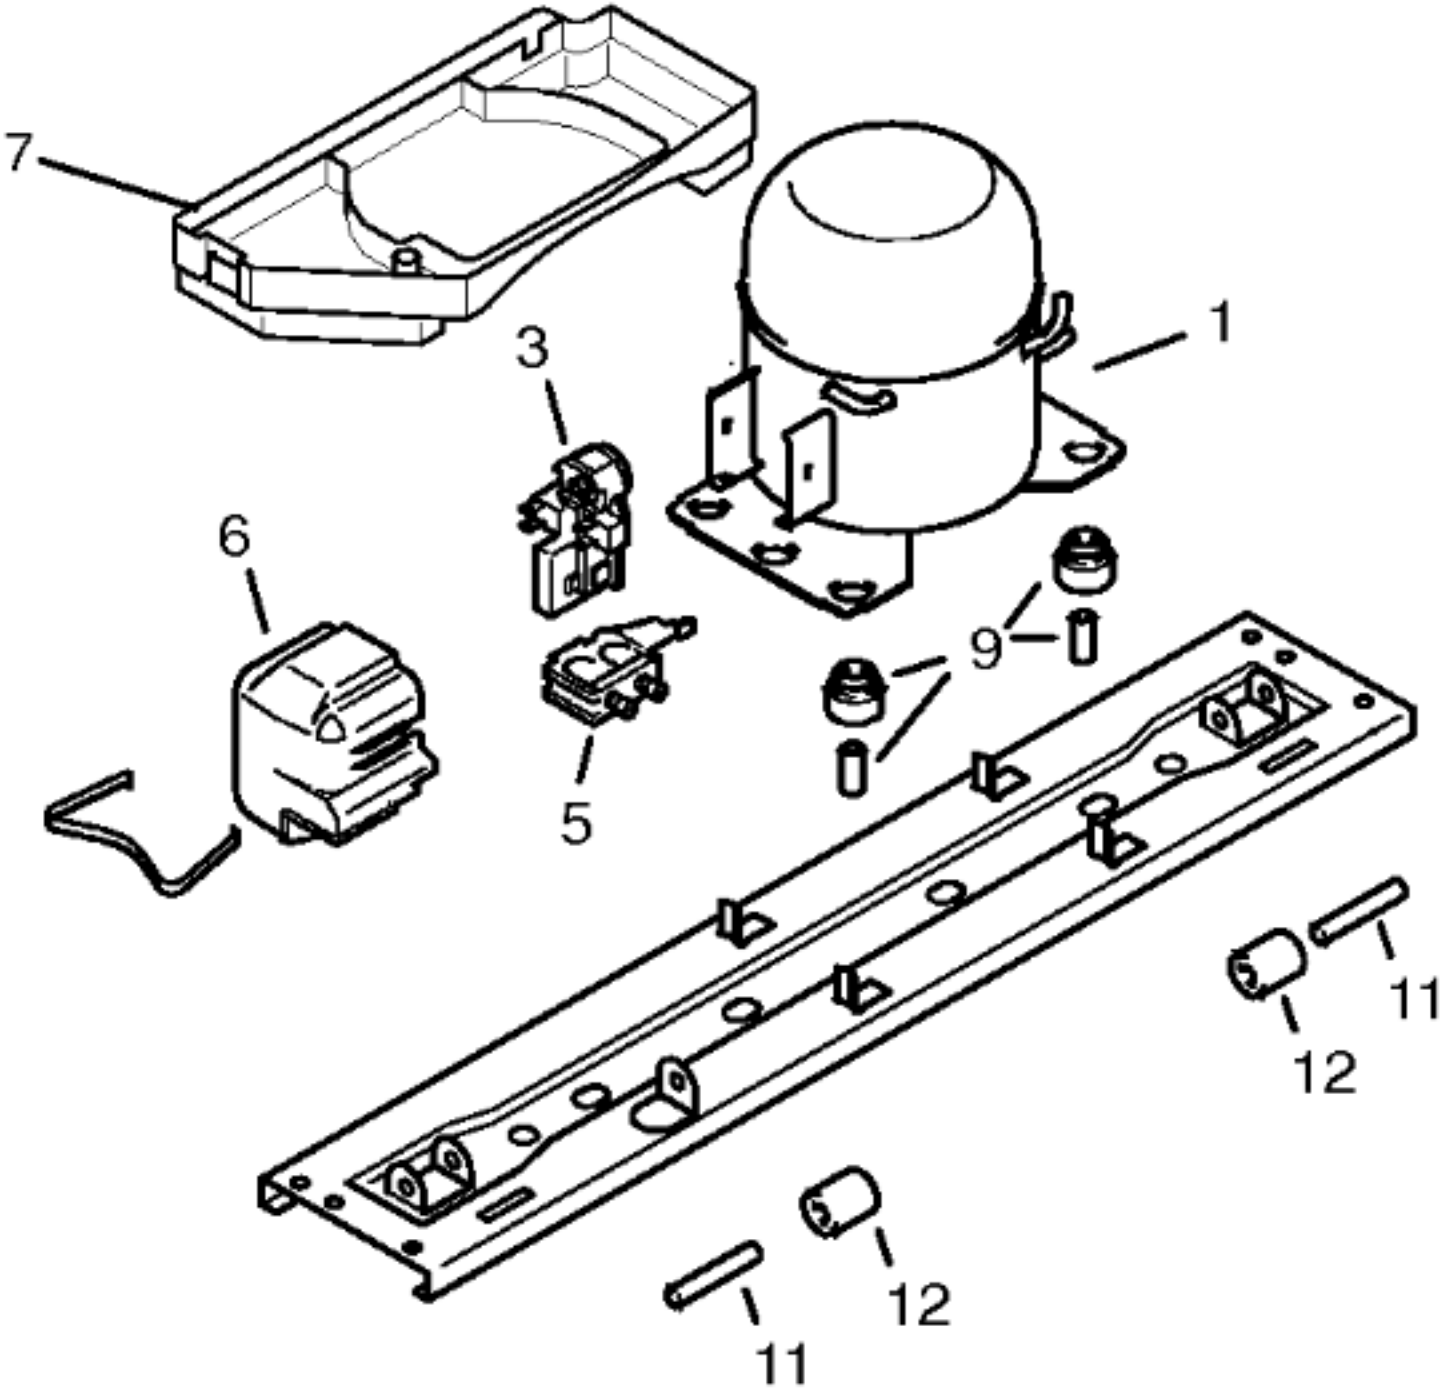

	V01		
Pos.	Danfoss		
	NLY 13K		
1	14 1747		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7	09 6212		
8			
9	05 0166		
10			
11	01 9017		
12	01 1916		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		NLY 13 K			
Förderleistung/Delivery/Débit		l/h	2394		
Anlaufstrom/Starting current/Cour de démarrage		A	11,3		
Widerstand/Resistance/Résistance		Ha/main/prin	Ω	10,5	
		Hi/aux	Ω	11,0	
Temp.-Regler/Thermostat		Elektronisch			
Typ/Type		EIN	AUS		
Regelstellung/Position		-15	-16		
Schaltwerte/Switching values		"warm"	-19	-20	
Valeurs de commutation		"kalt"	-23	-24	
		"alarm"	-9	-14	
Füllmenge/Fill.quantity/Charge		R600a	*	*	
Anschlußwert/Conn.load/Puiss. connectée		W	133		
Heizung/Heater/Chauffage		Abtauheizung		Rinnenheizung	
Widerstand/Resistance/Résistance		Ω	288	240	
Leistung/Power/Puissance		W	200	24	
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω	560		
Raumtemperaturfühler		C	K	C	k
		+10	9,9	-18	43,3
		+5	12,7	-22	54,6
		+0	16,3	-26	69,4
Widerstand NTC-Fühler		°C	kΩ	°C	kΩ
		-1	17,3	-15	36,5
		-9	26,2	-16	38,8
		-14	34,5	-19	45,9
				-20	48,6
				-23	58,1
				-24	61,6
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

* siehe Typenschild