




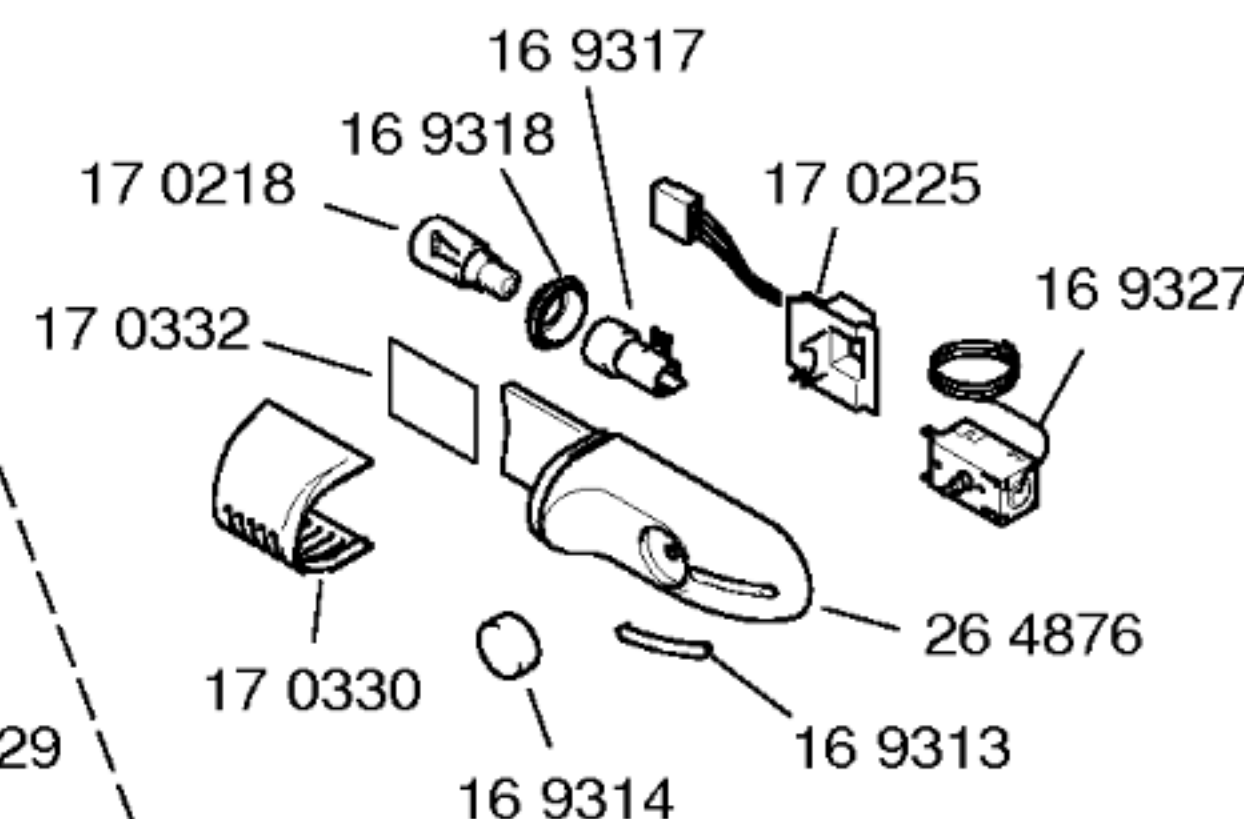

07 4445
V01,V03,V05
09 6325
V02,V04,V06

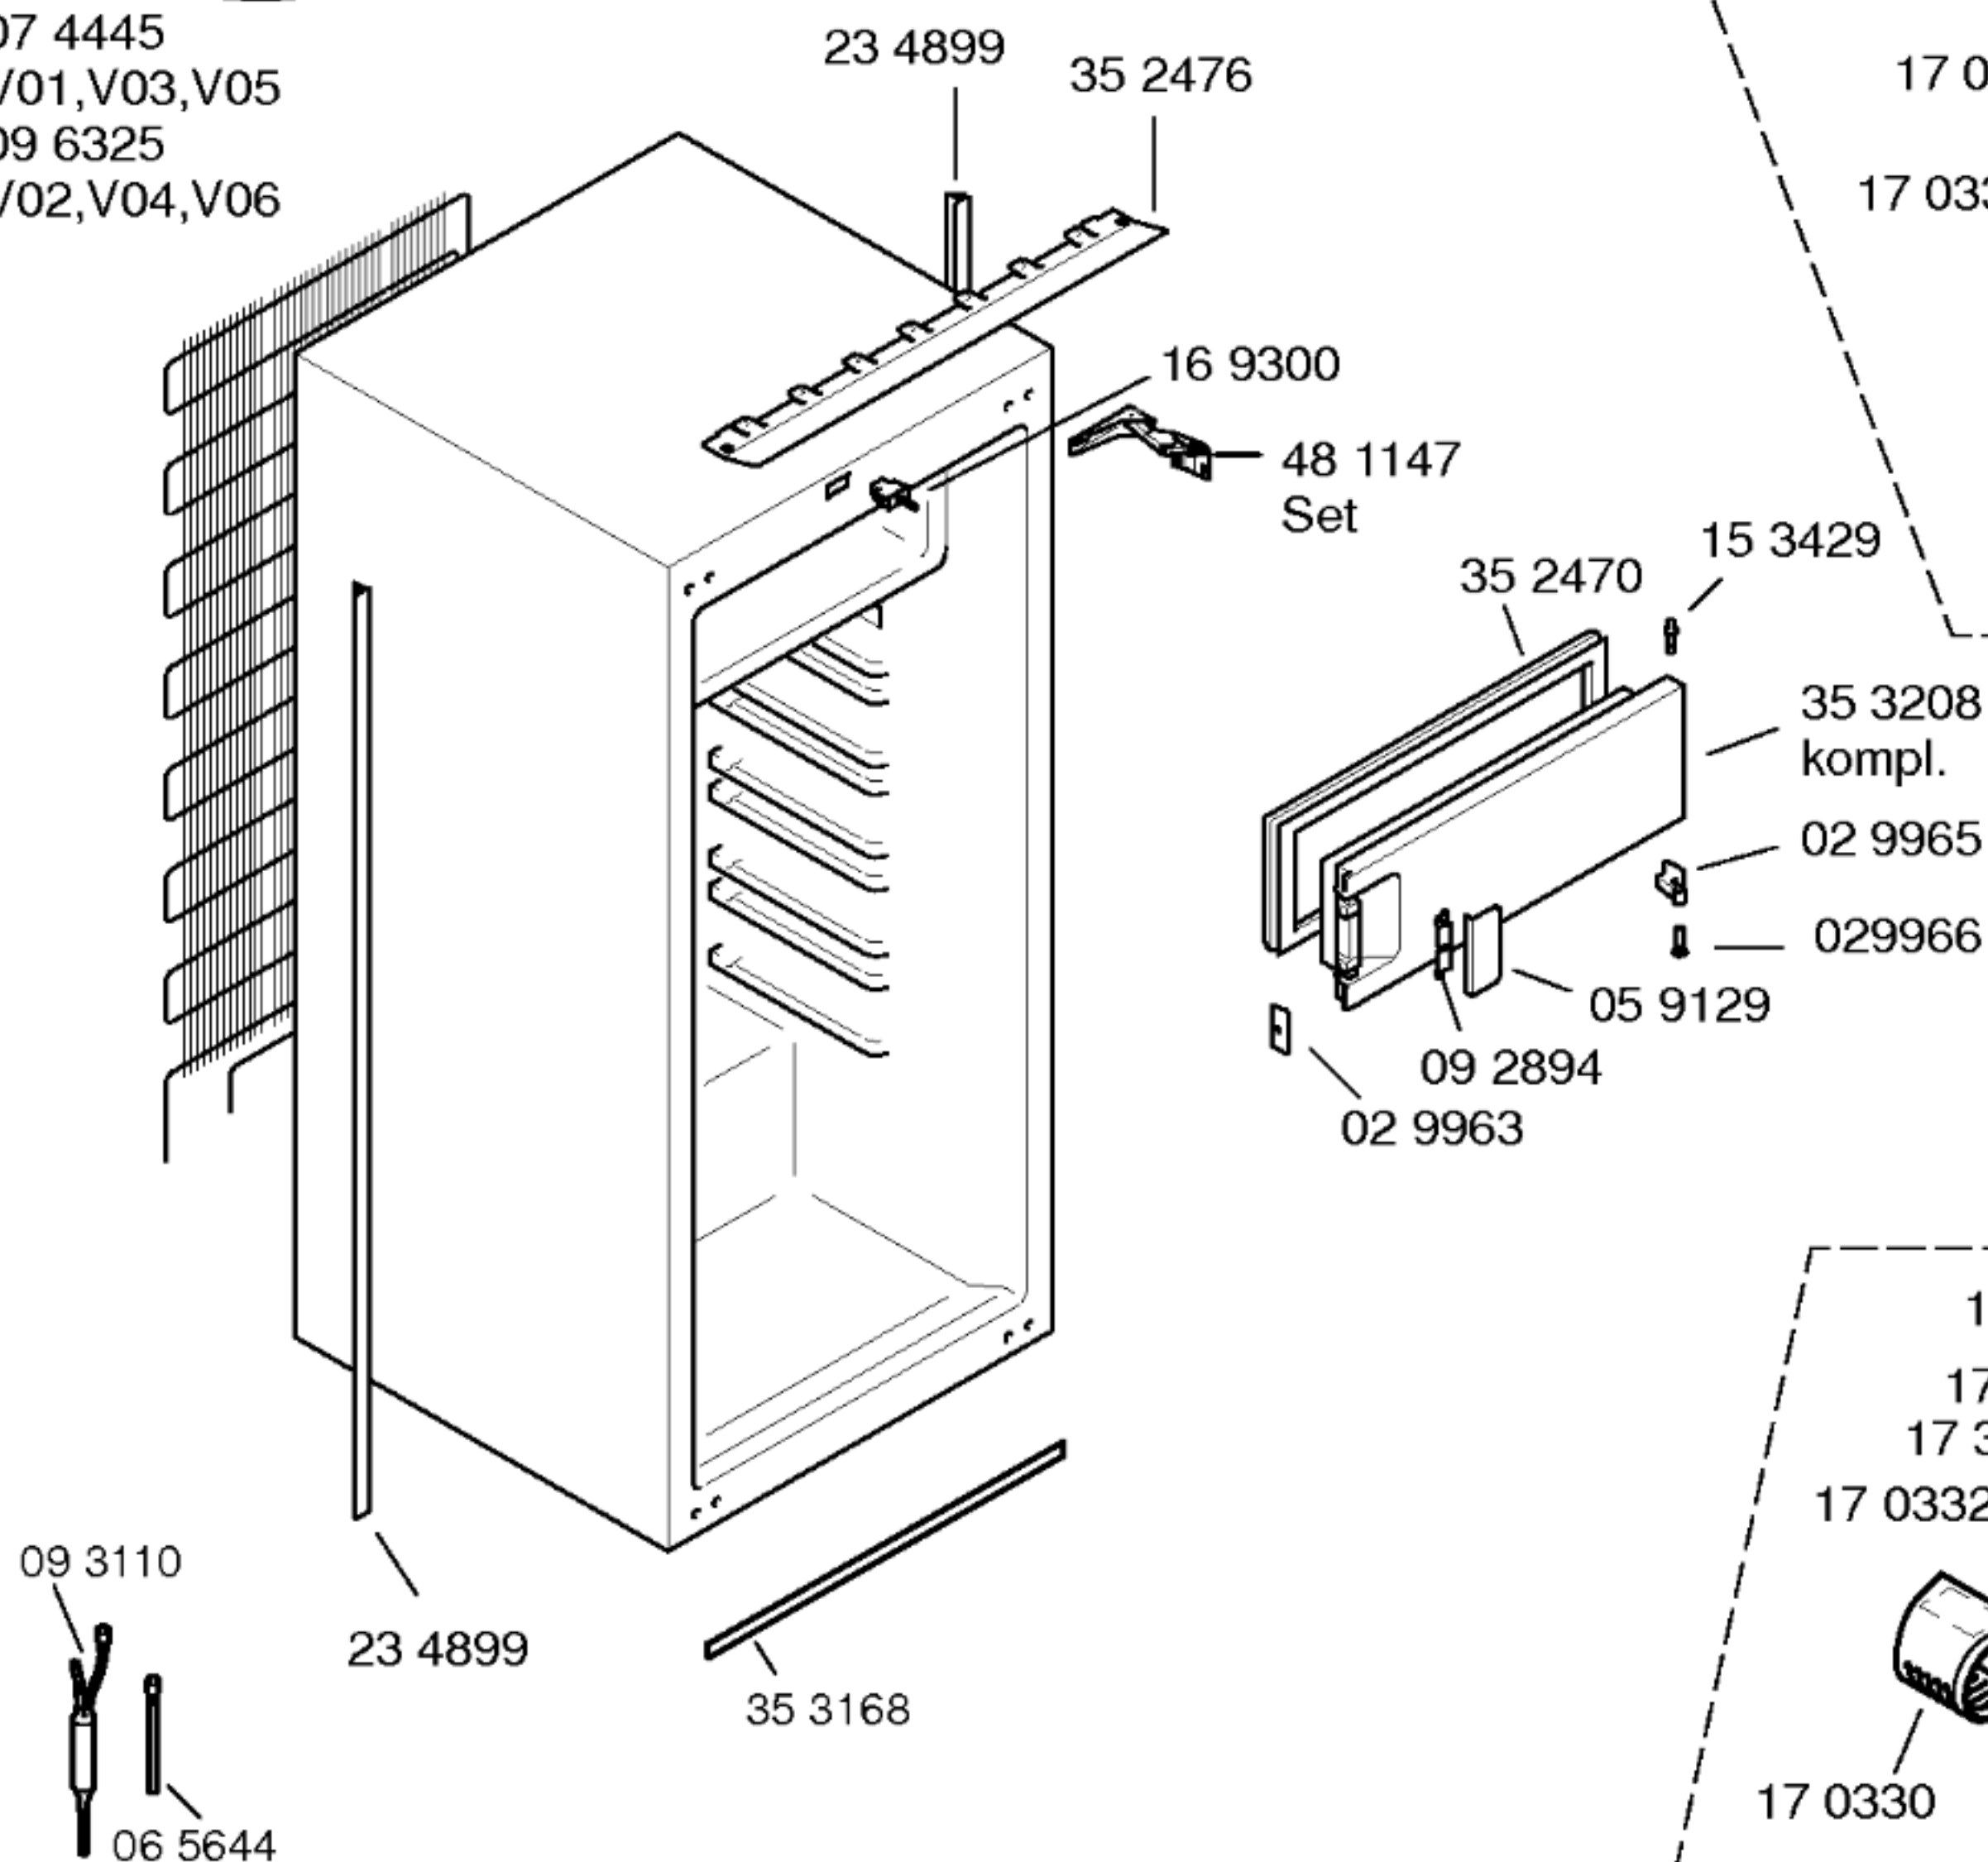

V01,V02

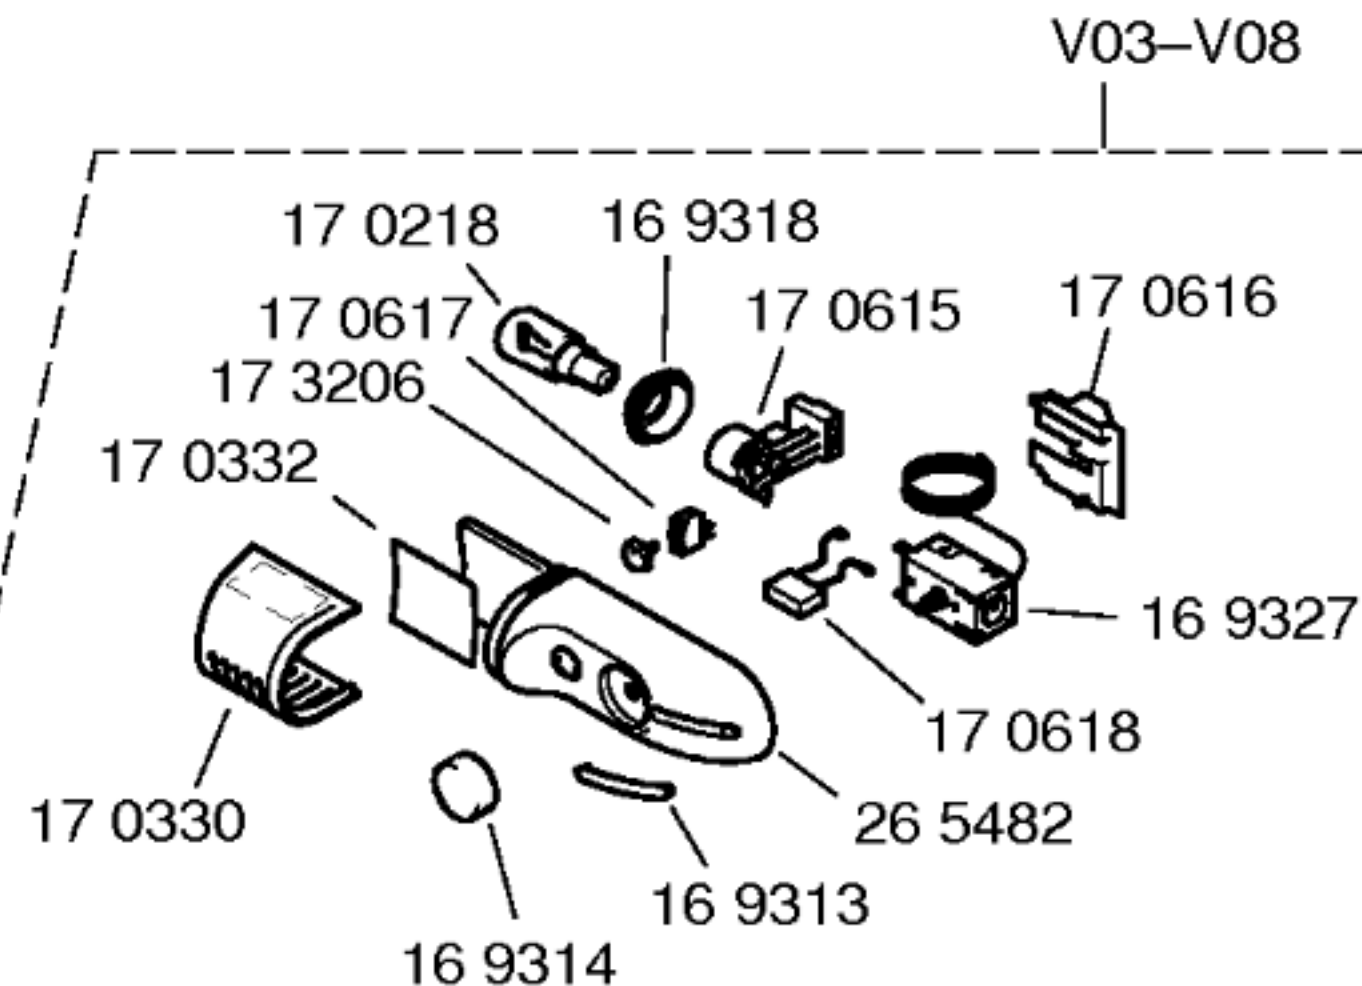



V03-V08

Gebrauchsanweisung
52 2548
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5163

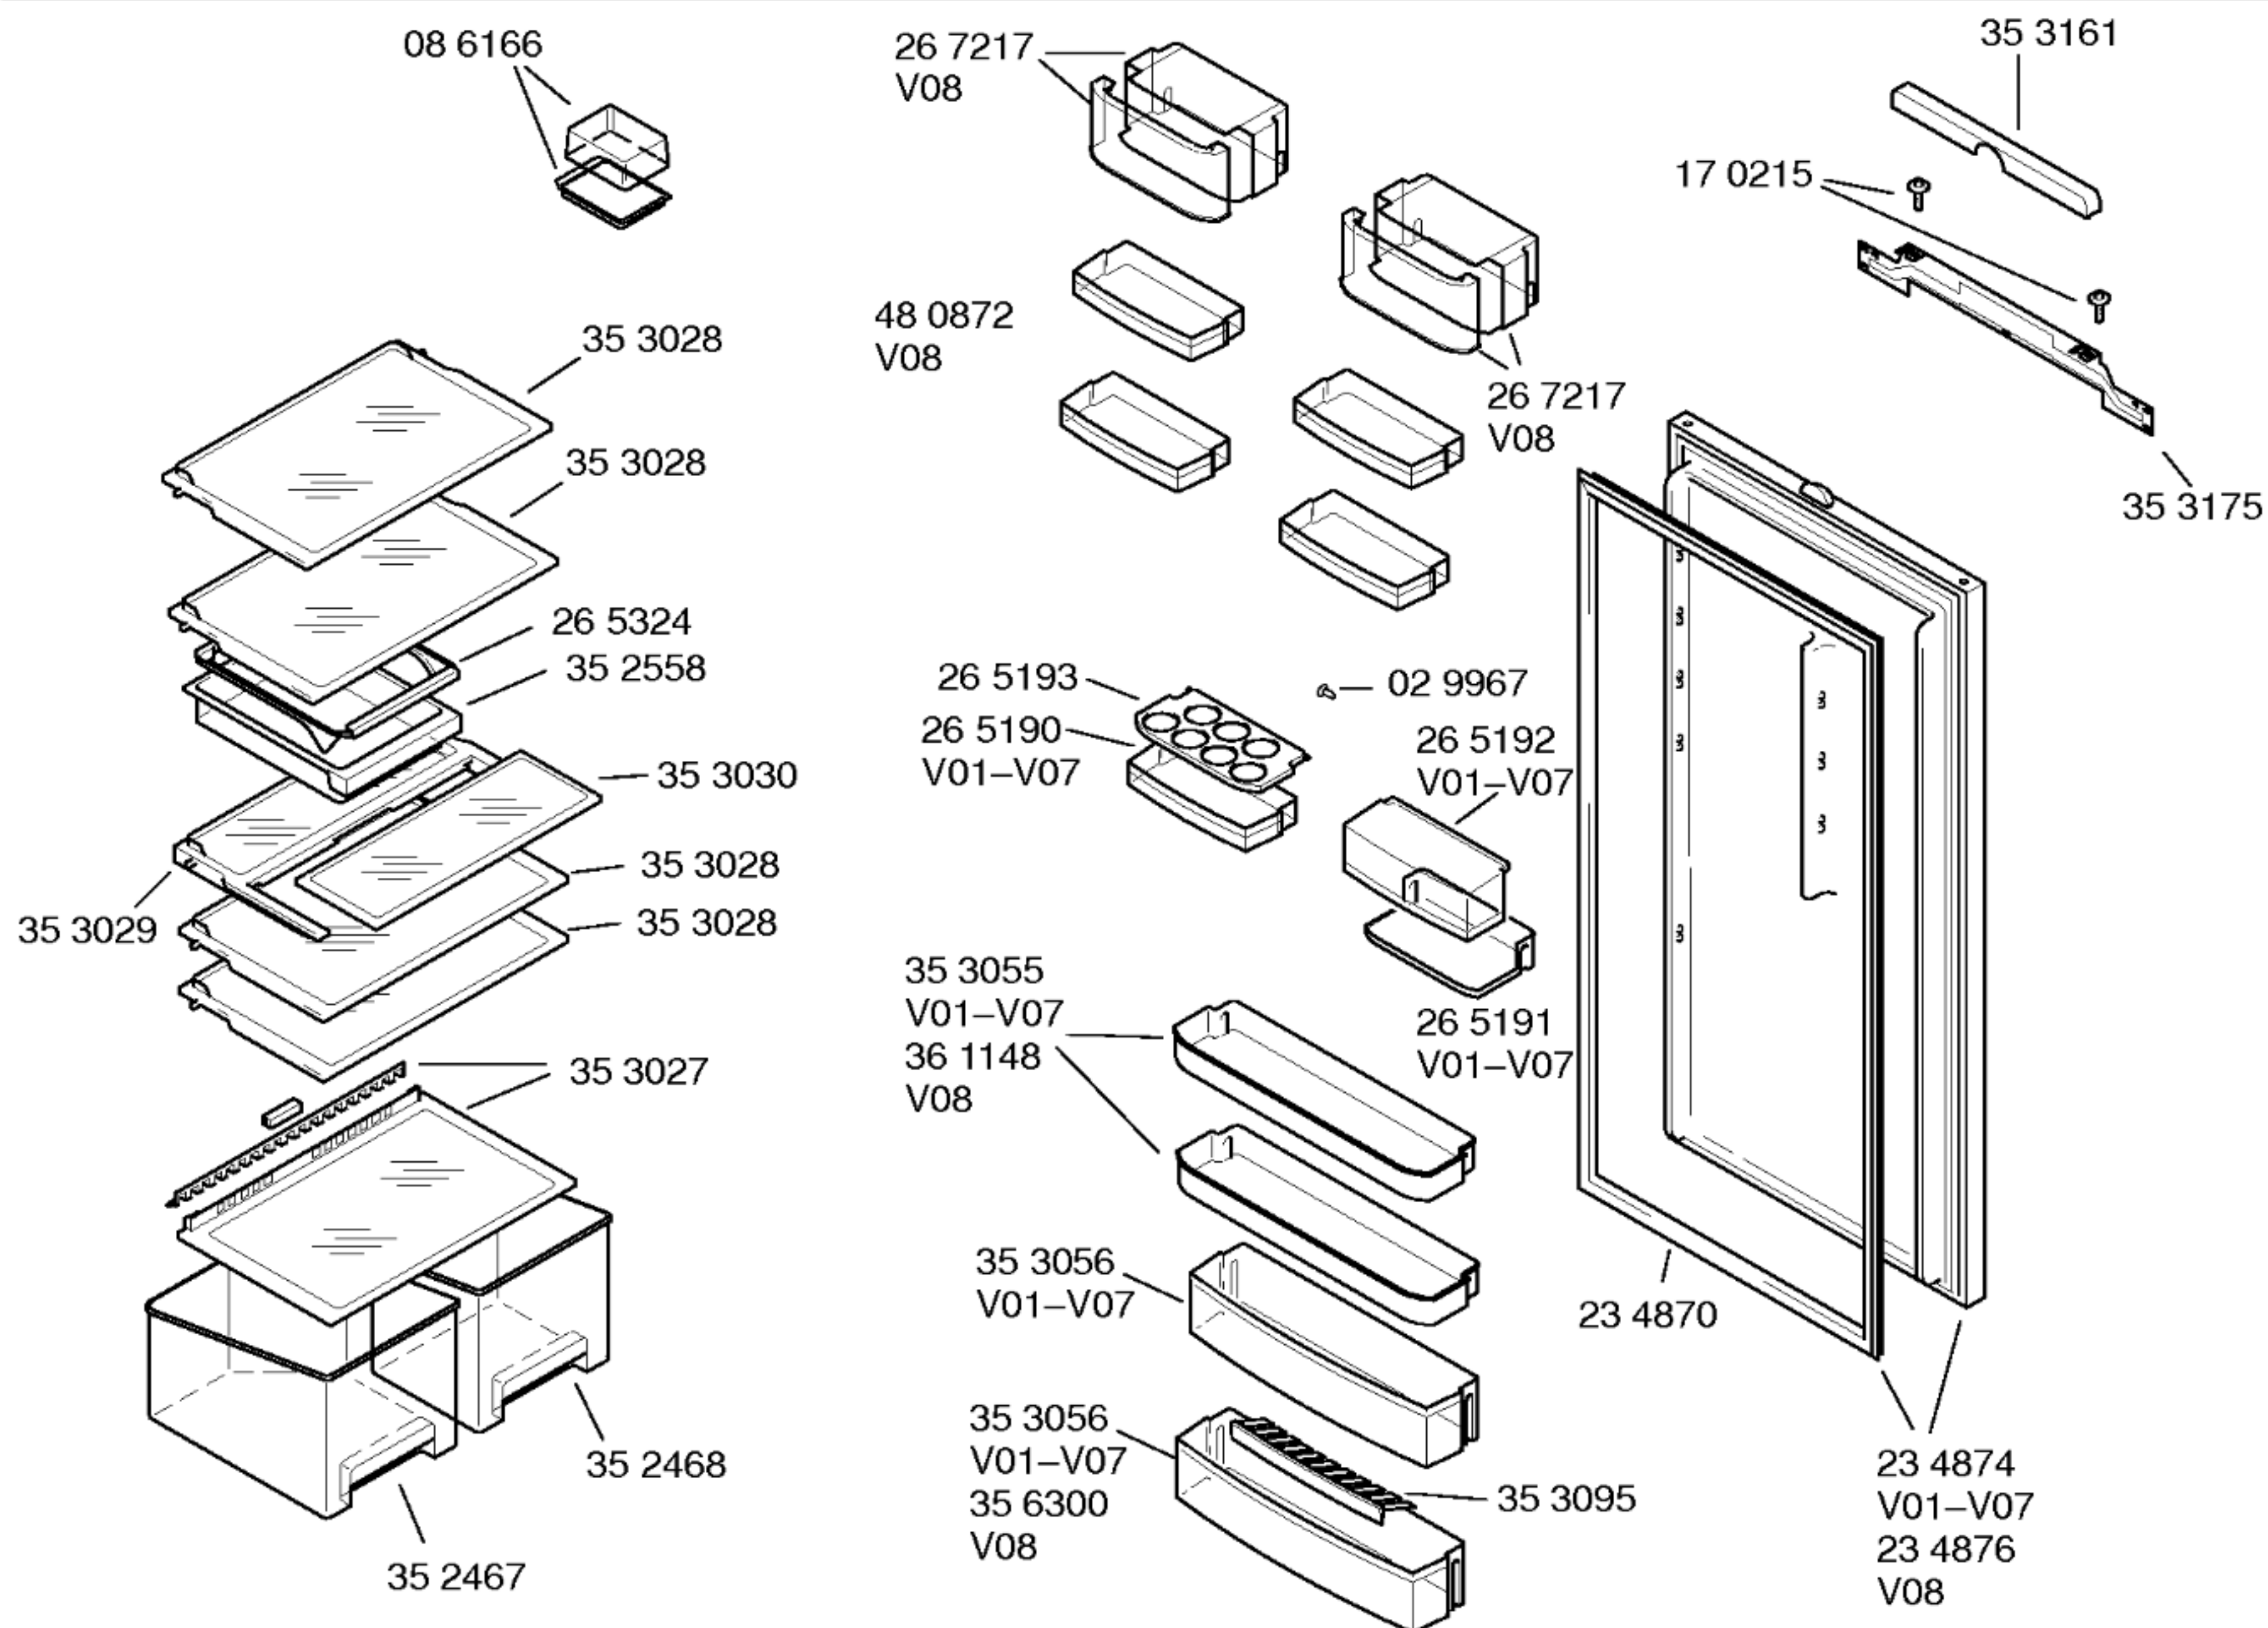

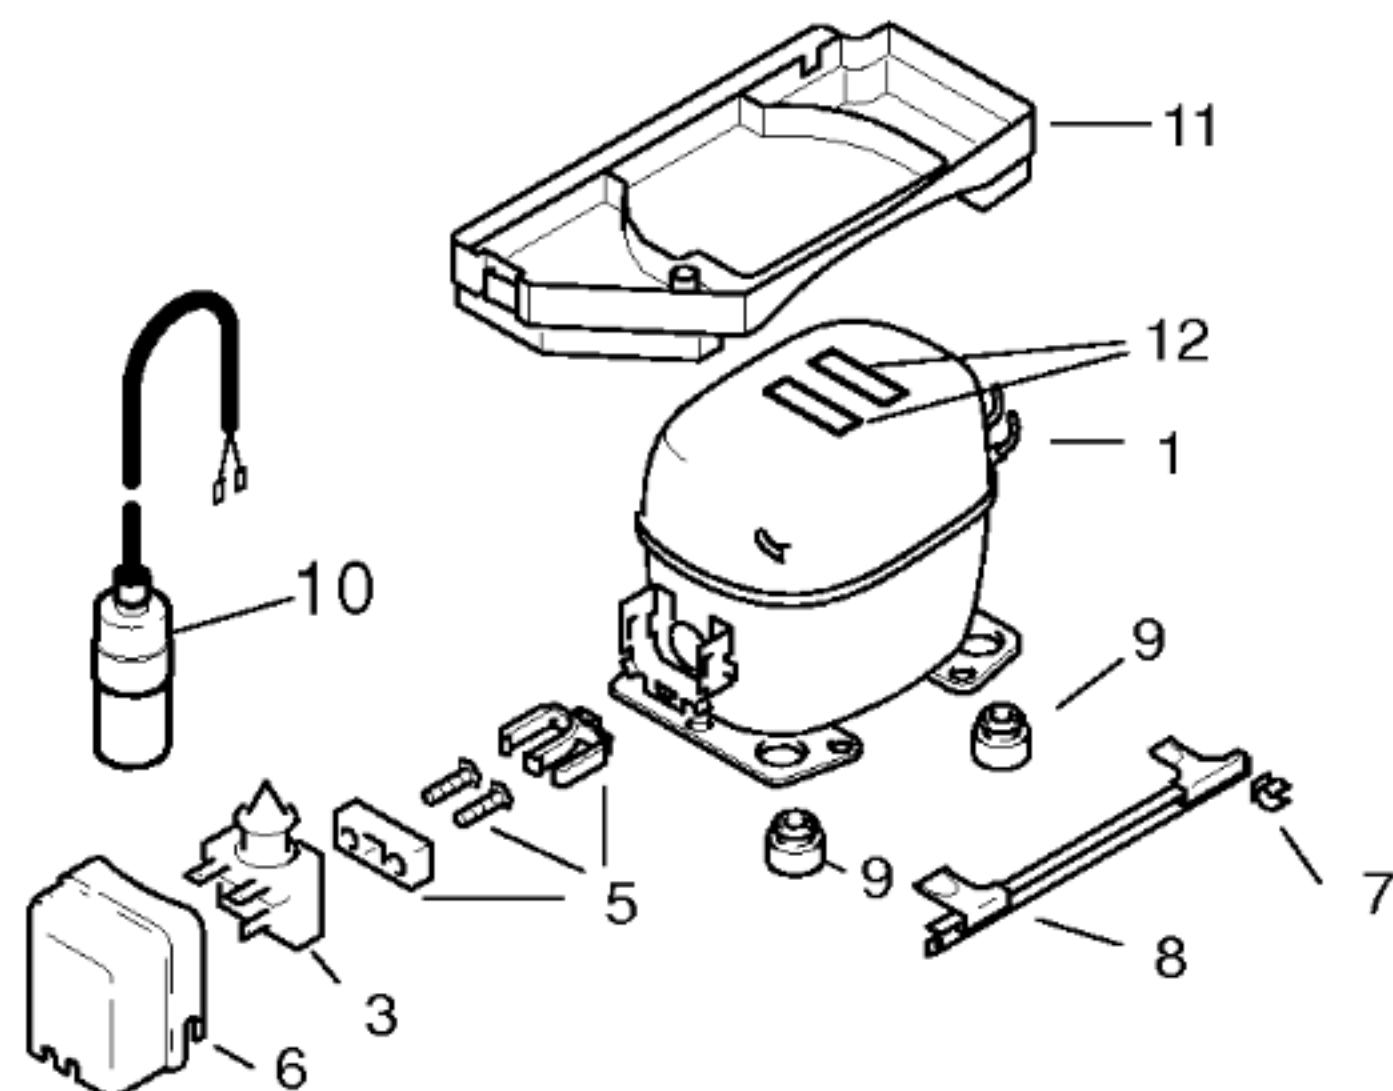

	V01-V04	V05, V06	V07, V08
Pos.	Danfoss TLY8K	Aspera EMT 32 CLP	Danfoss TLY7K
1	14 1657	14 1838	14 1816
2			
3	15 1055	17 0880	15 1055
4			
5	15 0760	17 0882	15 0760
6	15 1072	17 0881	15 1072
7	16 9319		16 9319
8	26 4879	26 4879	26 4879
9	05 0166	05 0166	05 0166
10	16 5852		16 5852
11	26 4878	26 4878	26 4878
12	05 6008	05 6008	05 6008

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss	Aspera	Danfoss
Typ/Type		TLY8K	EMT 32 CLP	TLY 7 K
Förderleistung/Delivery/Débit		l/h	1073	1168
Anlaufstrom/Starting current/Cour de démarrage		A	3,5	5,7
Widerstand/Resistance/Résistance Ha/main/prin		W	28,4	27,1
Hi/aux		W	24,7	27,2
Temp.-Regler/Thermostat		Ranco		
Typ/Type		K59		
Regelstellung/Position		kalt	warm	
Schaltwerte/Switching values		+5,2	+5,2	
Valeurs de commutation		-32,0	-15,0	
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	90	68
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		W		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		W		
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		W		
Spannung/Voltage/Tension		V		

* siehe Typenschild