



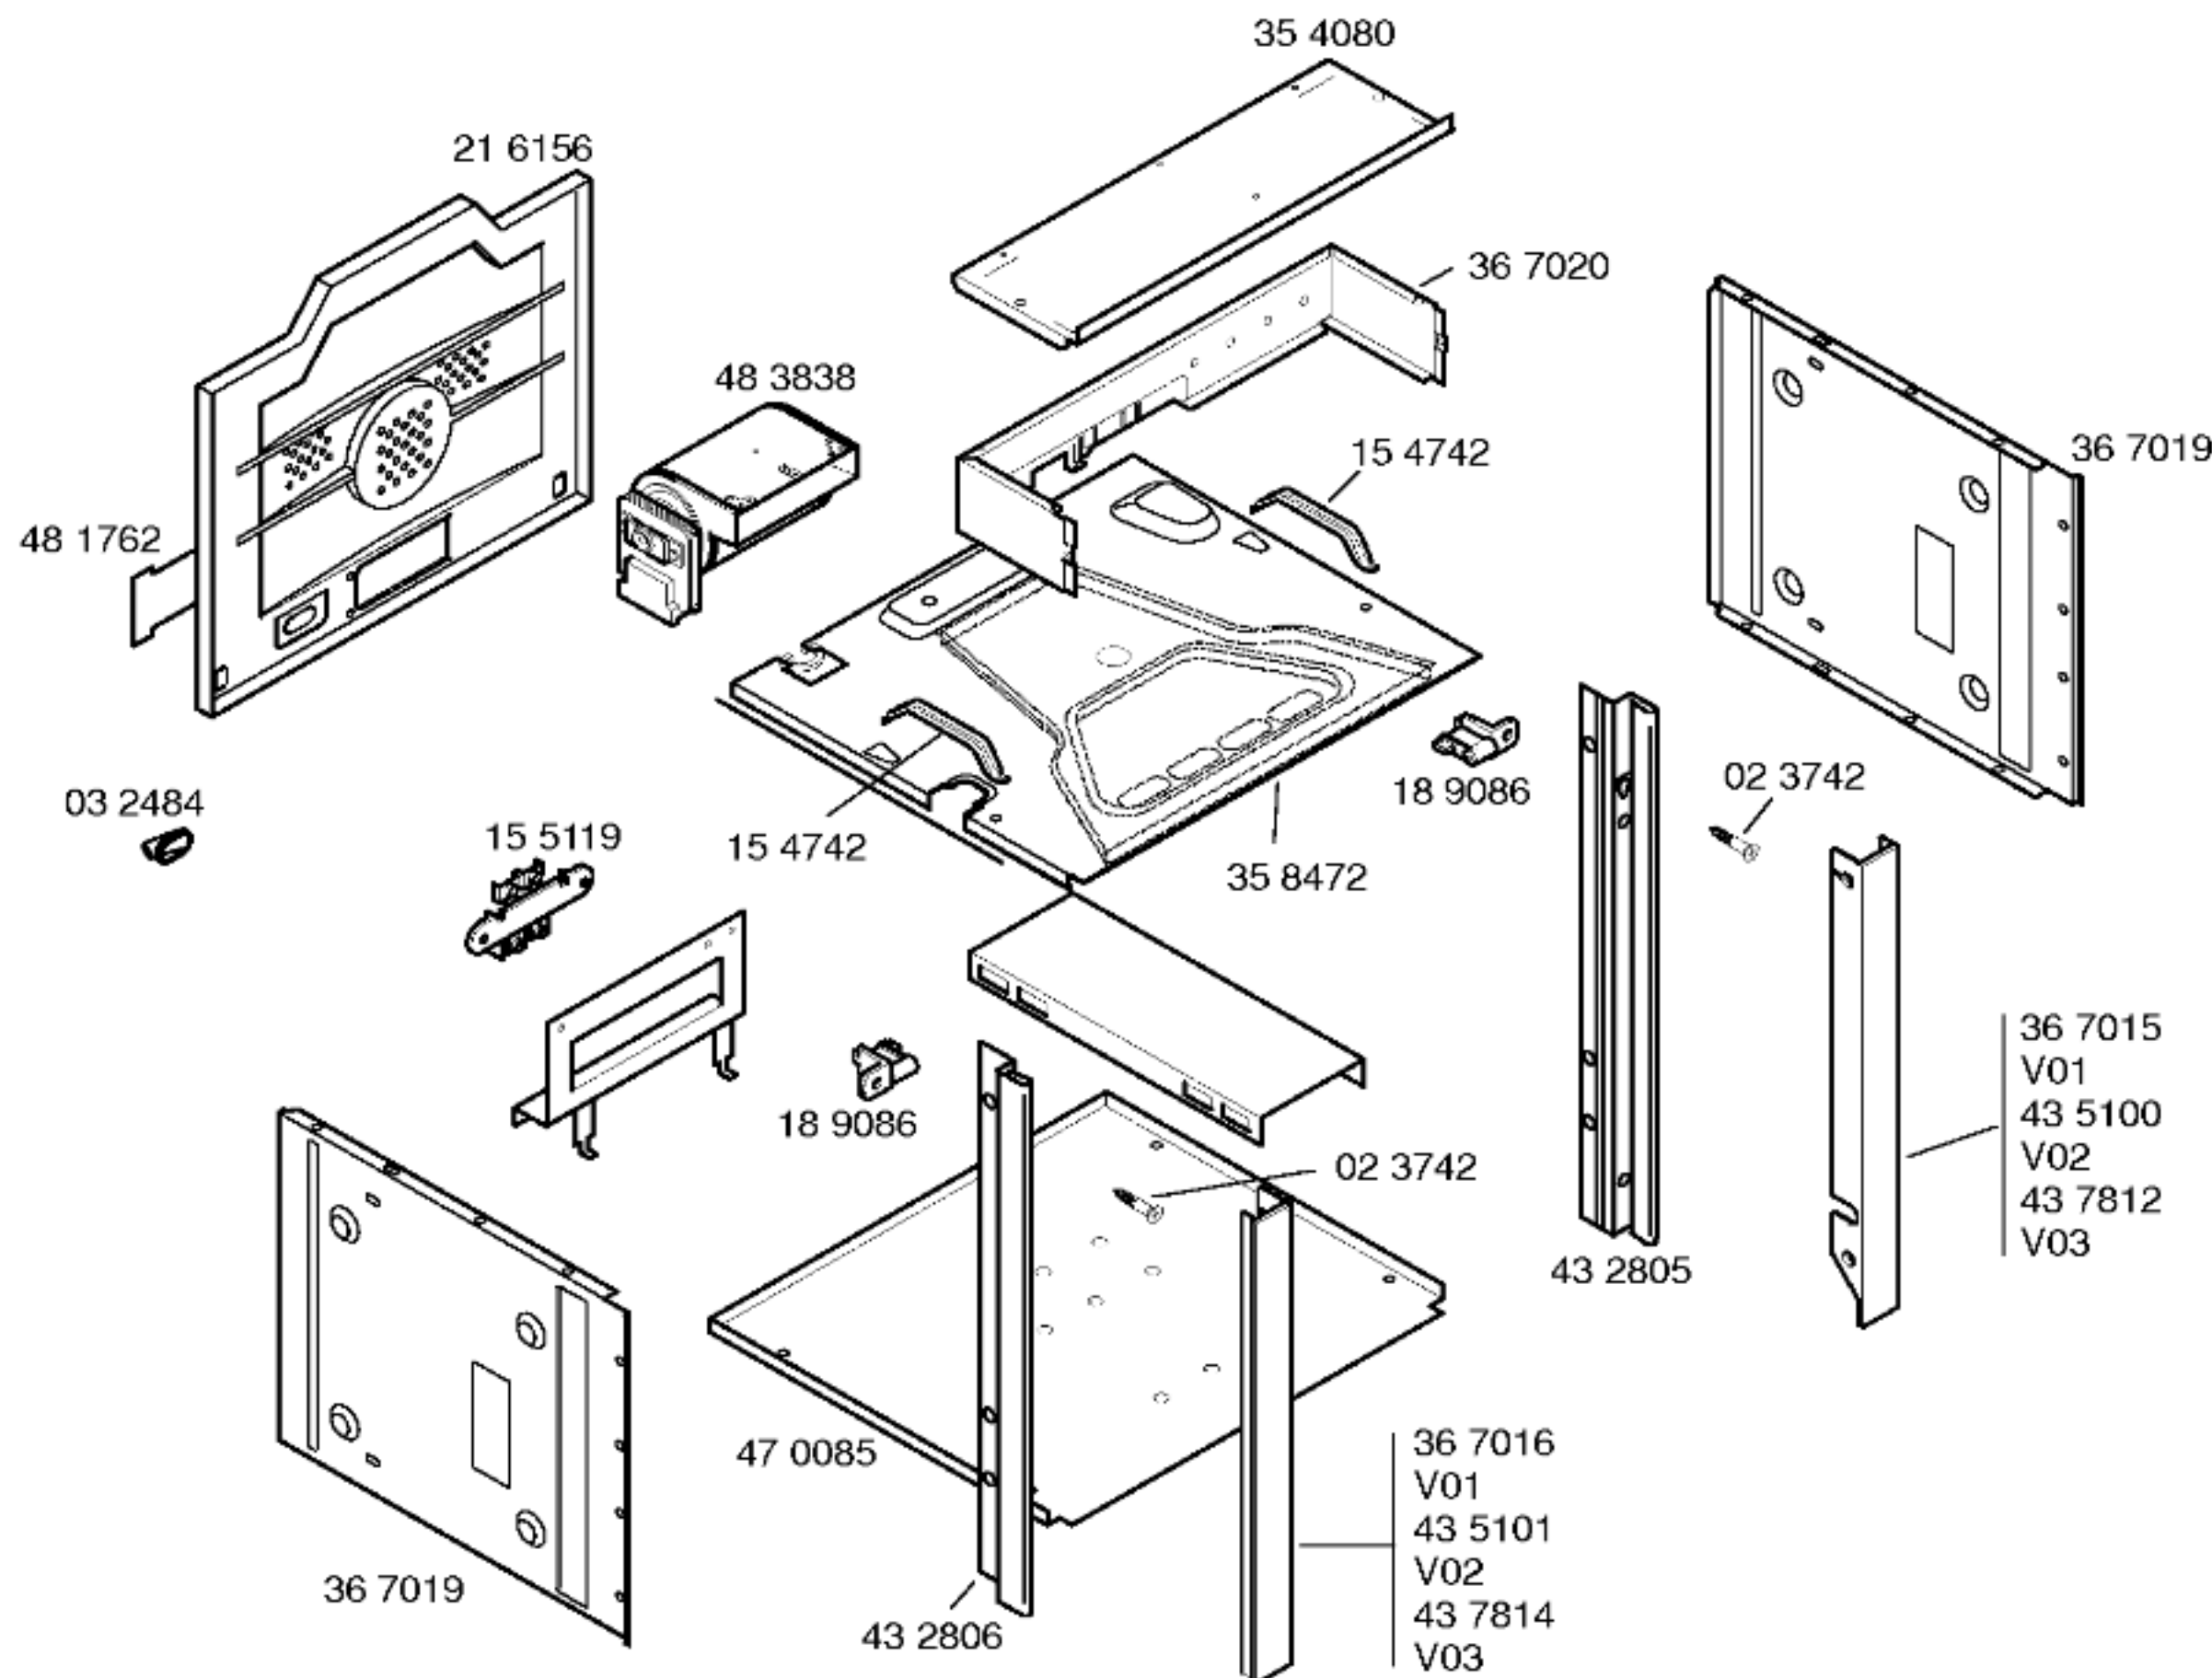


Gebrauchsanweisung
58 6333
(de,en)
Gebrauchsanweisung
58 6334
(fr,nl,it,es,el)
Montageanleitung
51 7991
(de,en,fr,nl,it,es,el)
Kochbuch
58 5532
(de)
Kochbuch
58 6292
(de,en,fr,nl,it,es)


Zubehör:

Dampfgarer
N8640X2
Bratrost engmaschig
Z1440X0
Bratrost gekröpft
Z1430X0
Backblech, Alu
Z1330X0
Backblech, email
Z1340X2
Bratenblech
Z1510X2
Brotbackstein
Z1910X0
Grillpfanne u. Bratrost
Z1230X2
Auflaufform
Z1270X2
Funkantenne
Z1980X0

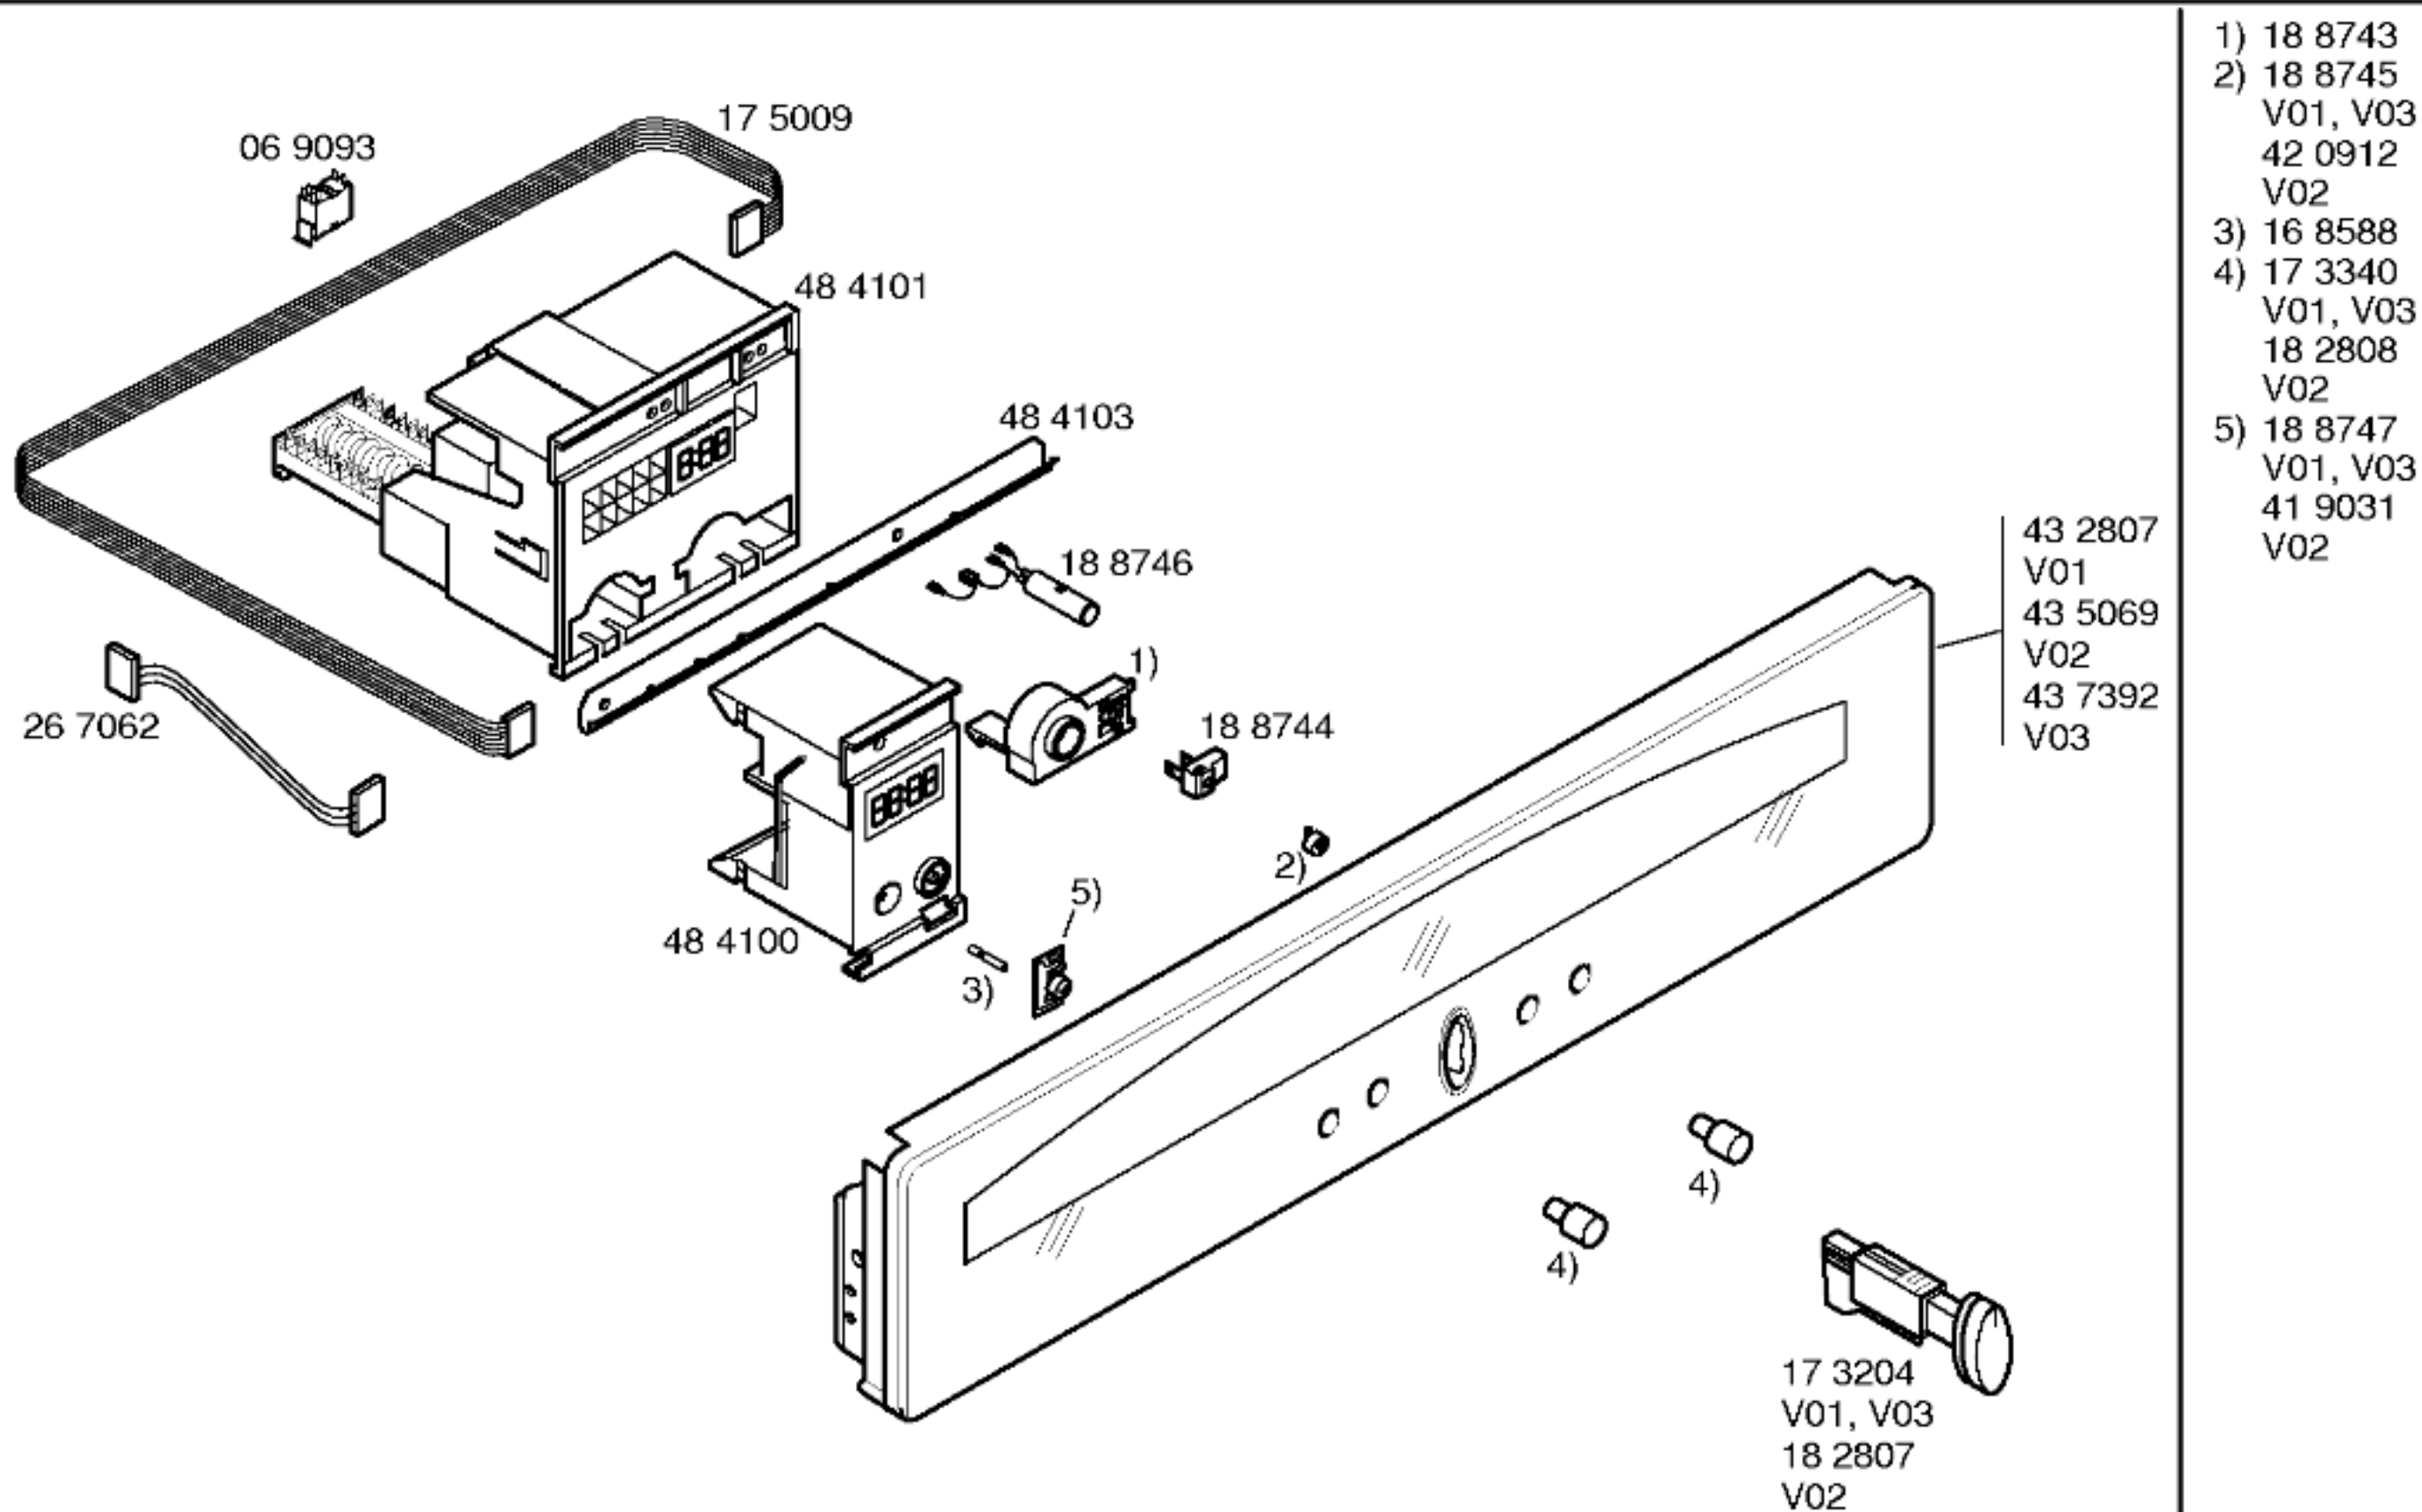

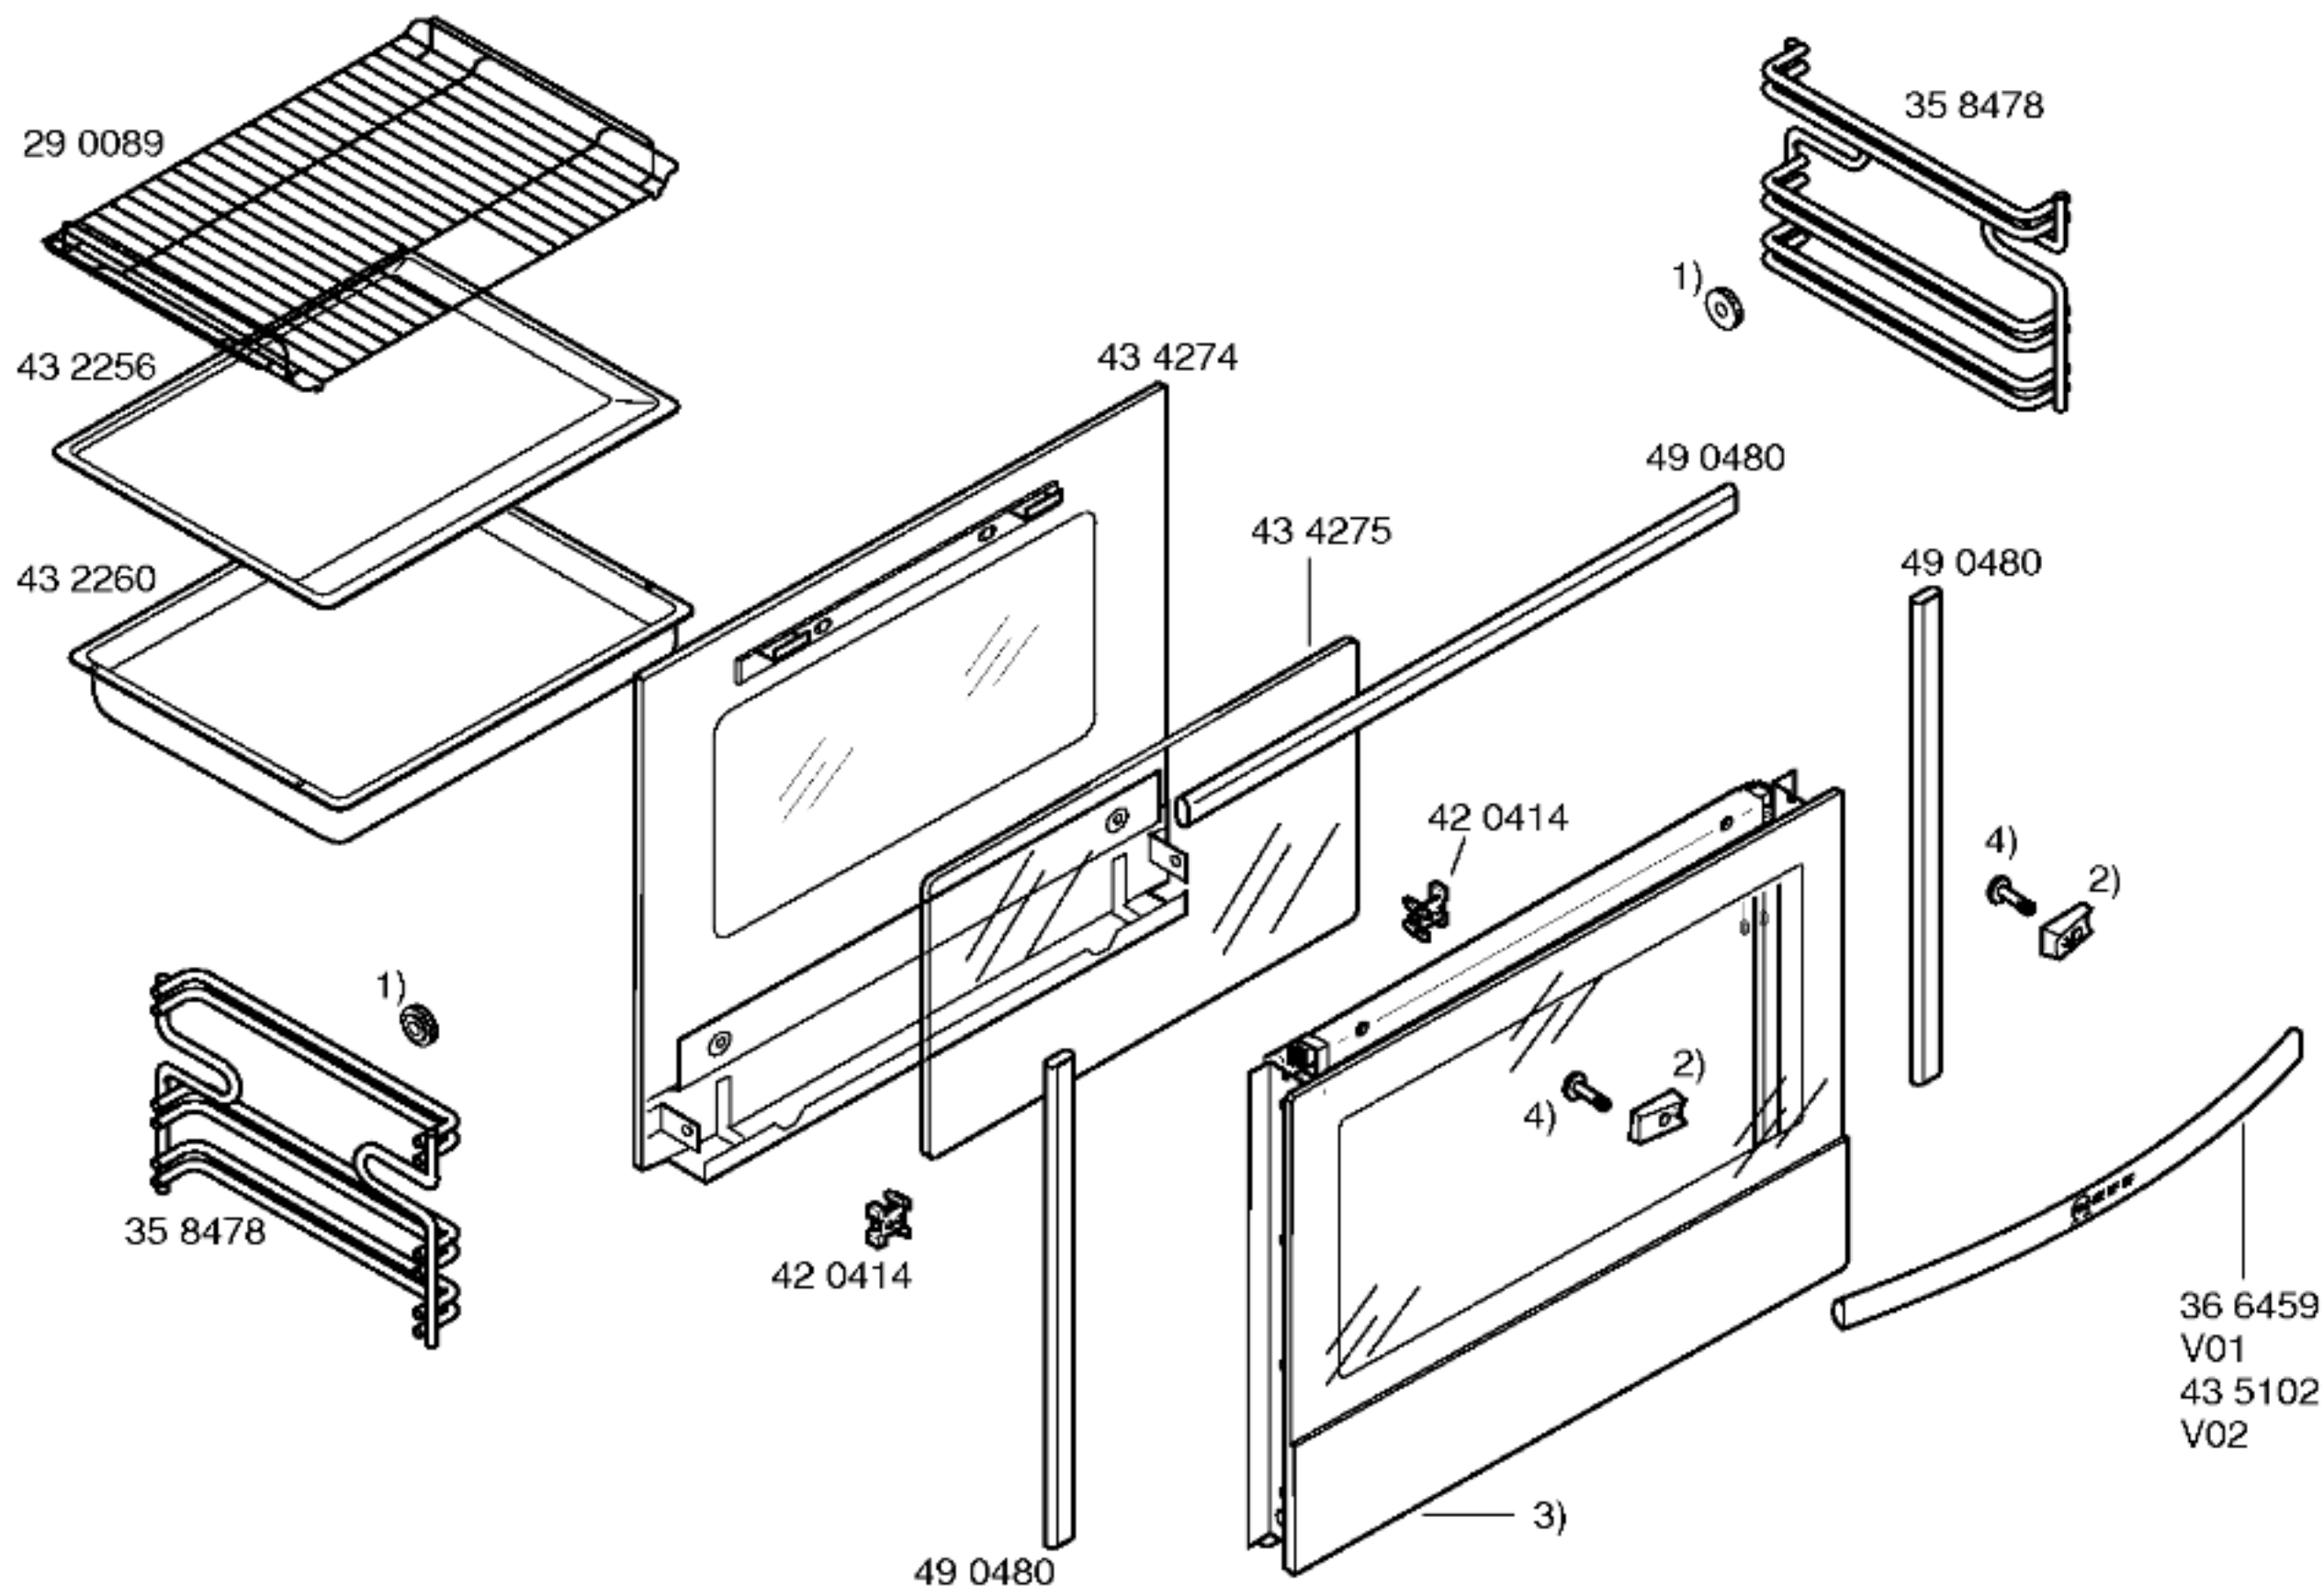

- 1) 02 6593
- 2) 18 8656
- 3) 43 4276
- Kompl.
- V01
- 43 5103
- Kompl.
- V02
- 43 7412
- Kompl.
- V03
- 4) 61 1616

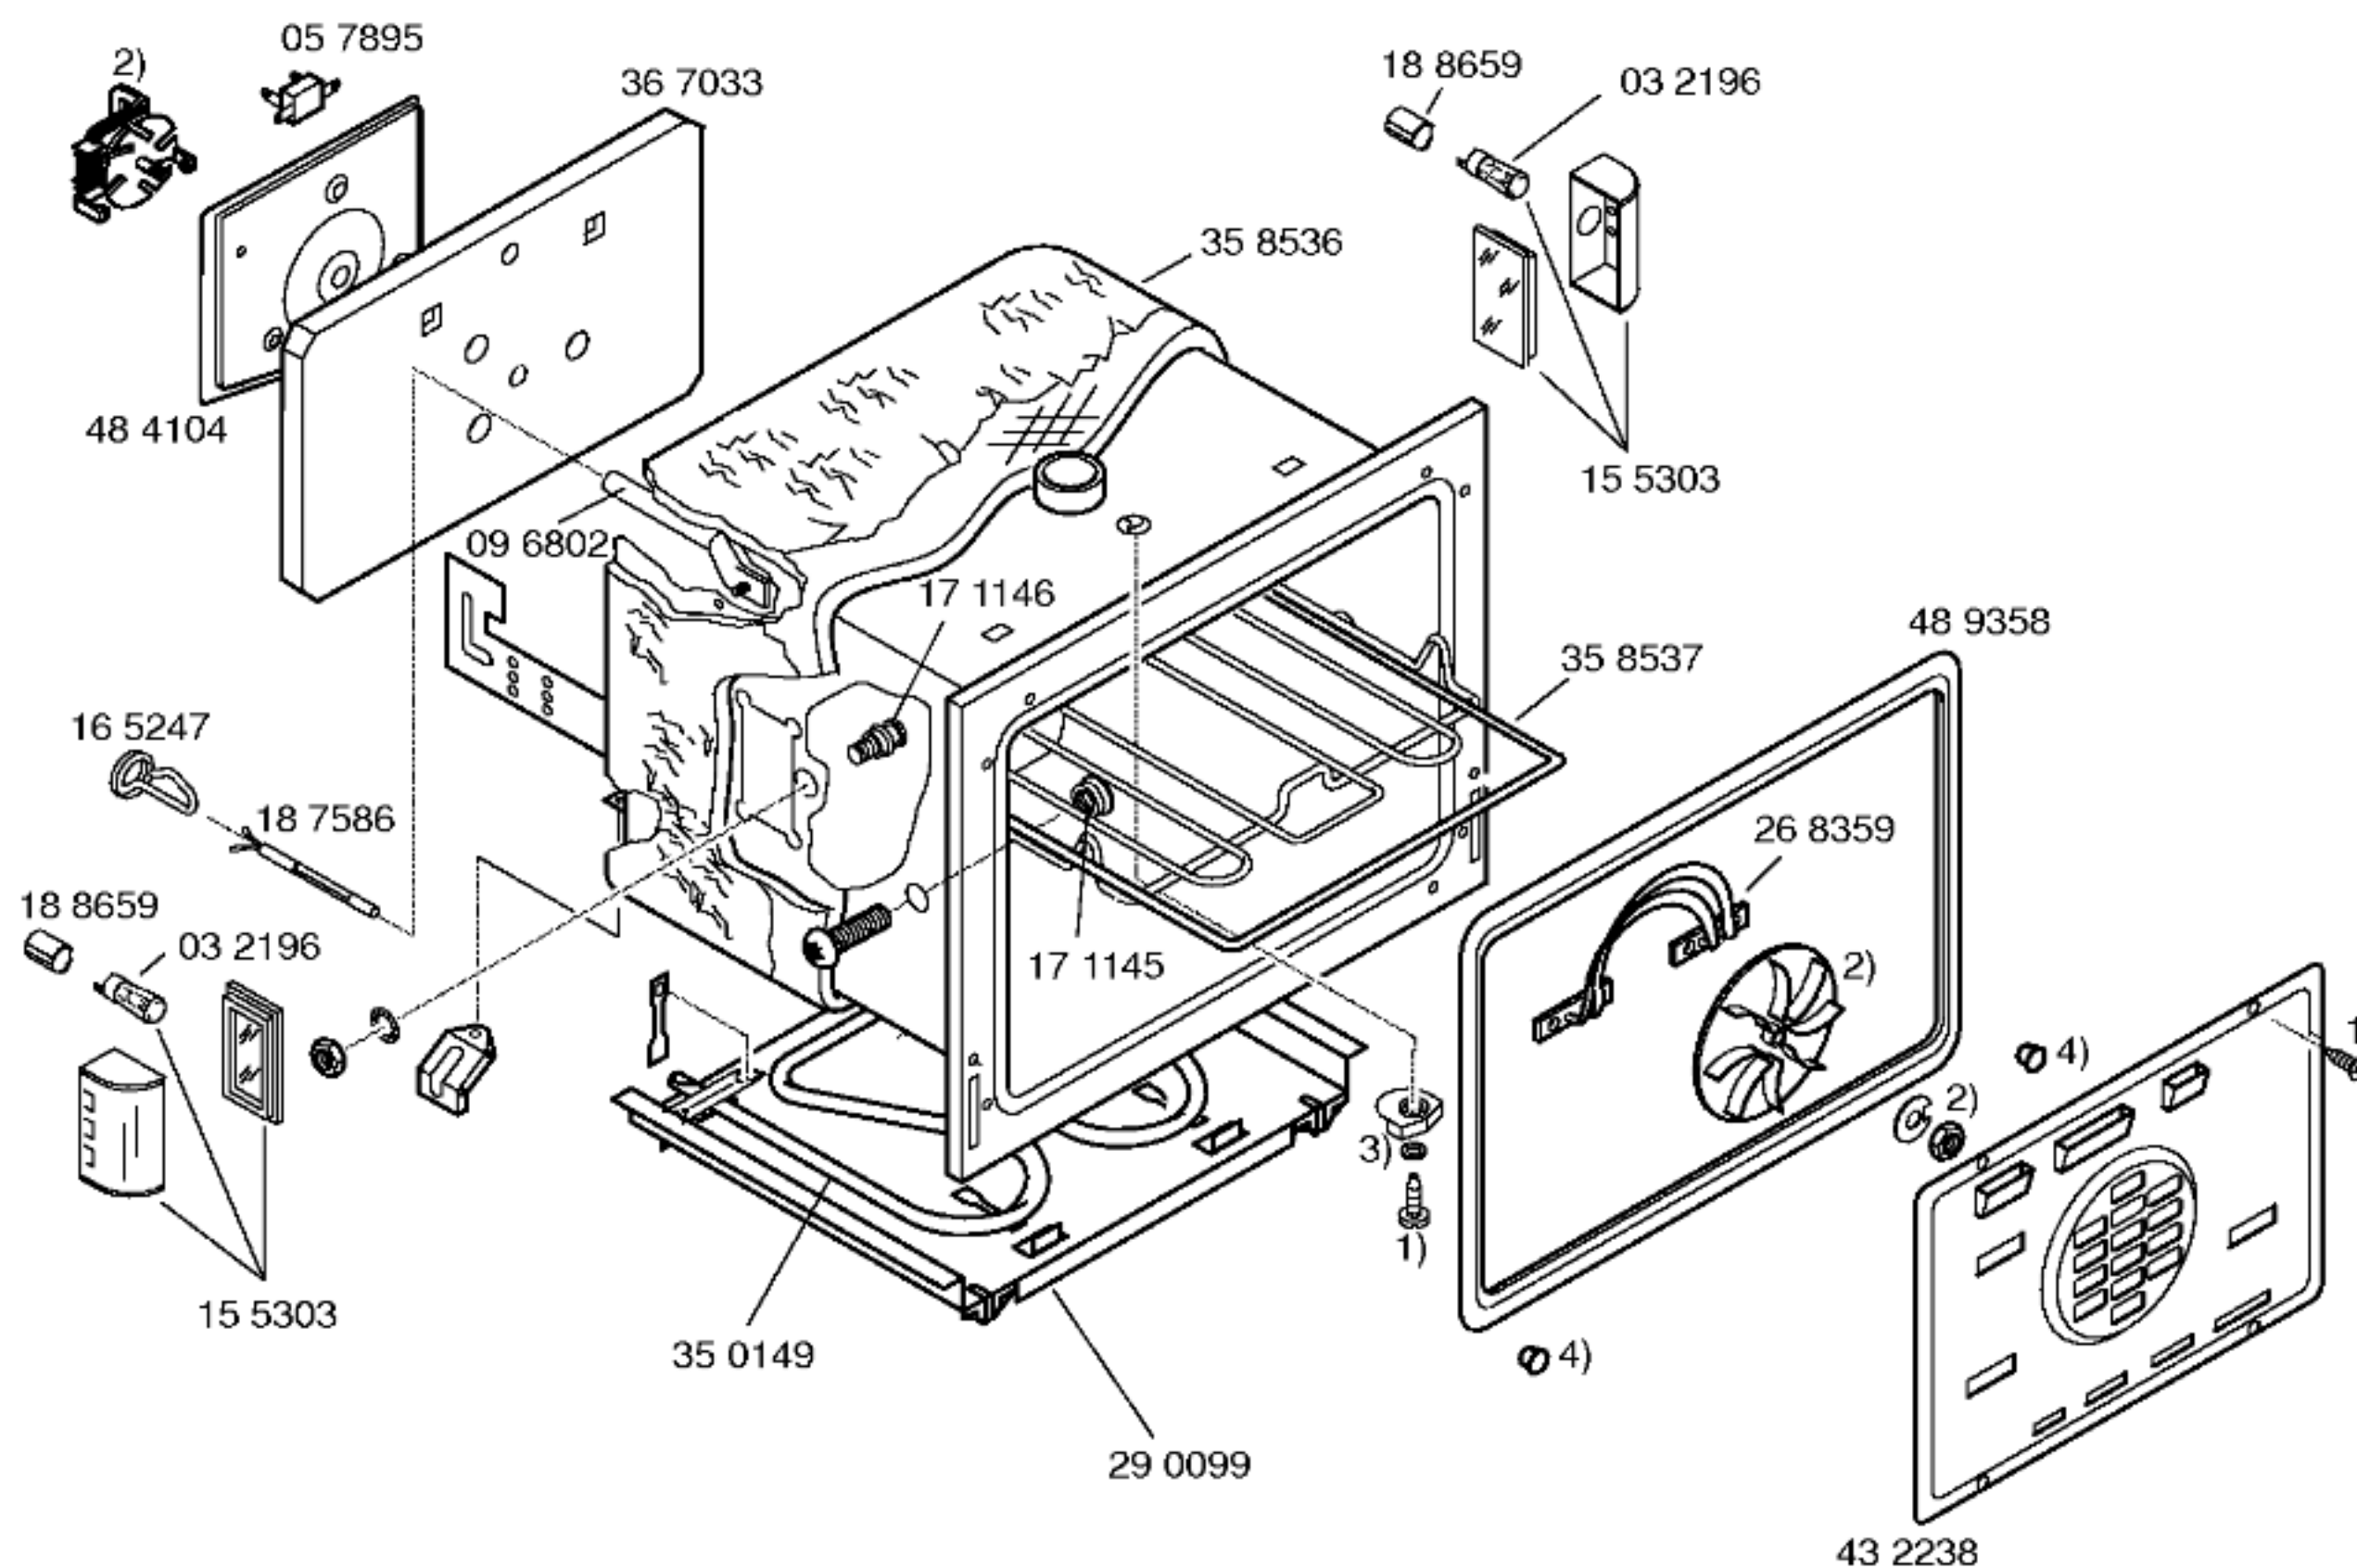

- 1) 41 8562
- 2) 48 3856
 kompl.
- 3) 15 5033
- 4) 41 8456

