 
 


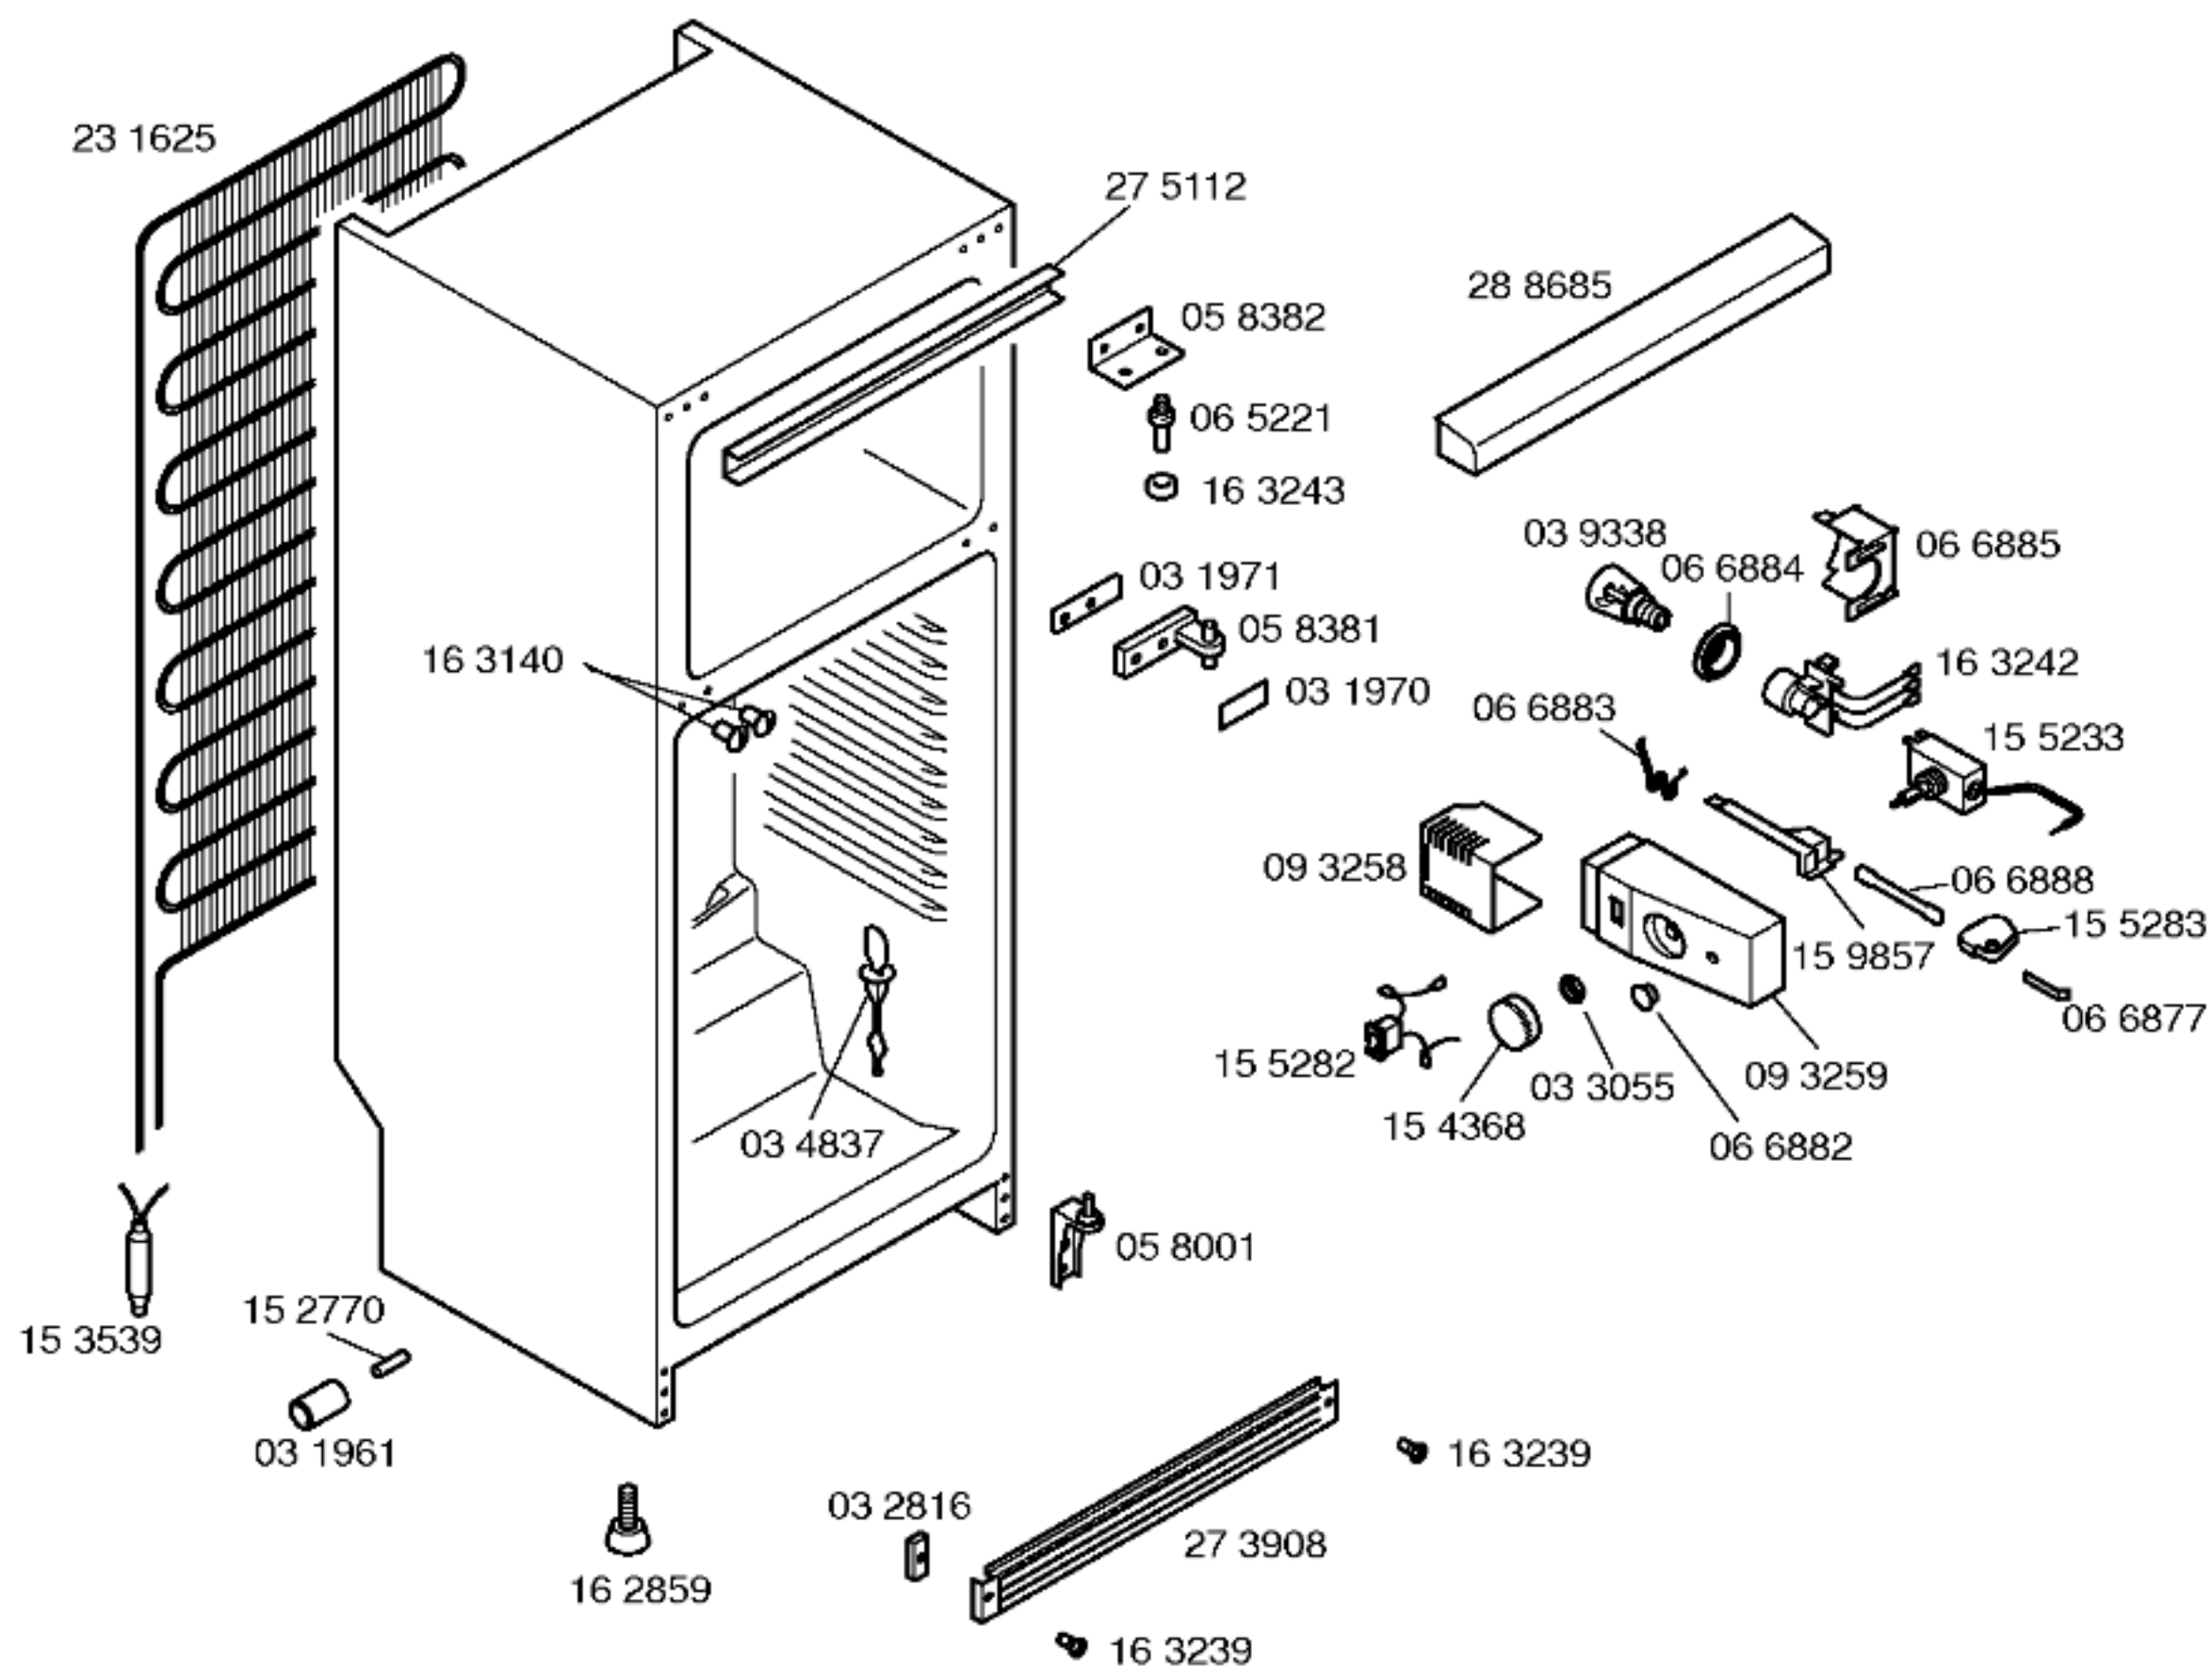 


Libro de instrucciones
51 7394
(E,GB,F,P,D)

Instrucciones de montaje
51 9729
(E,GB,F,P,D,I,NL,N,GR)

Libro de instrucciones
R600
51 9240
(E,GB,F,P,D,I,NL,N,
GR,DK,S,SF,TR)

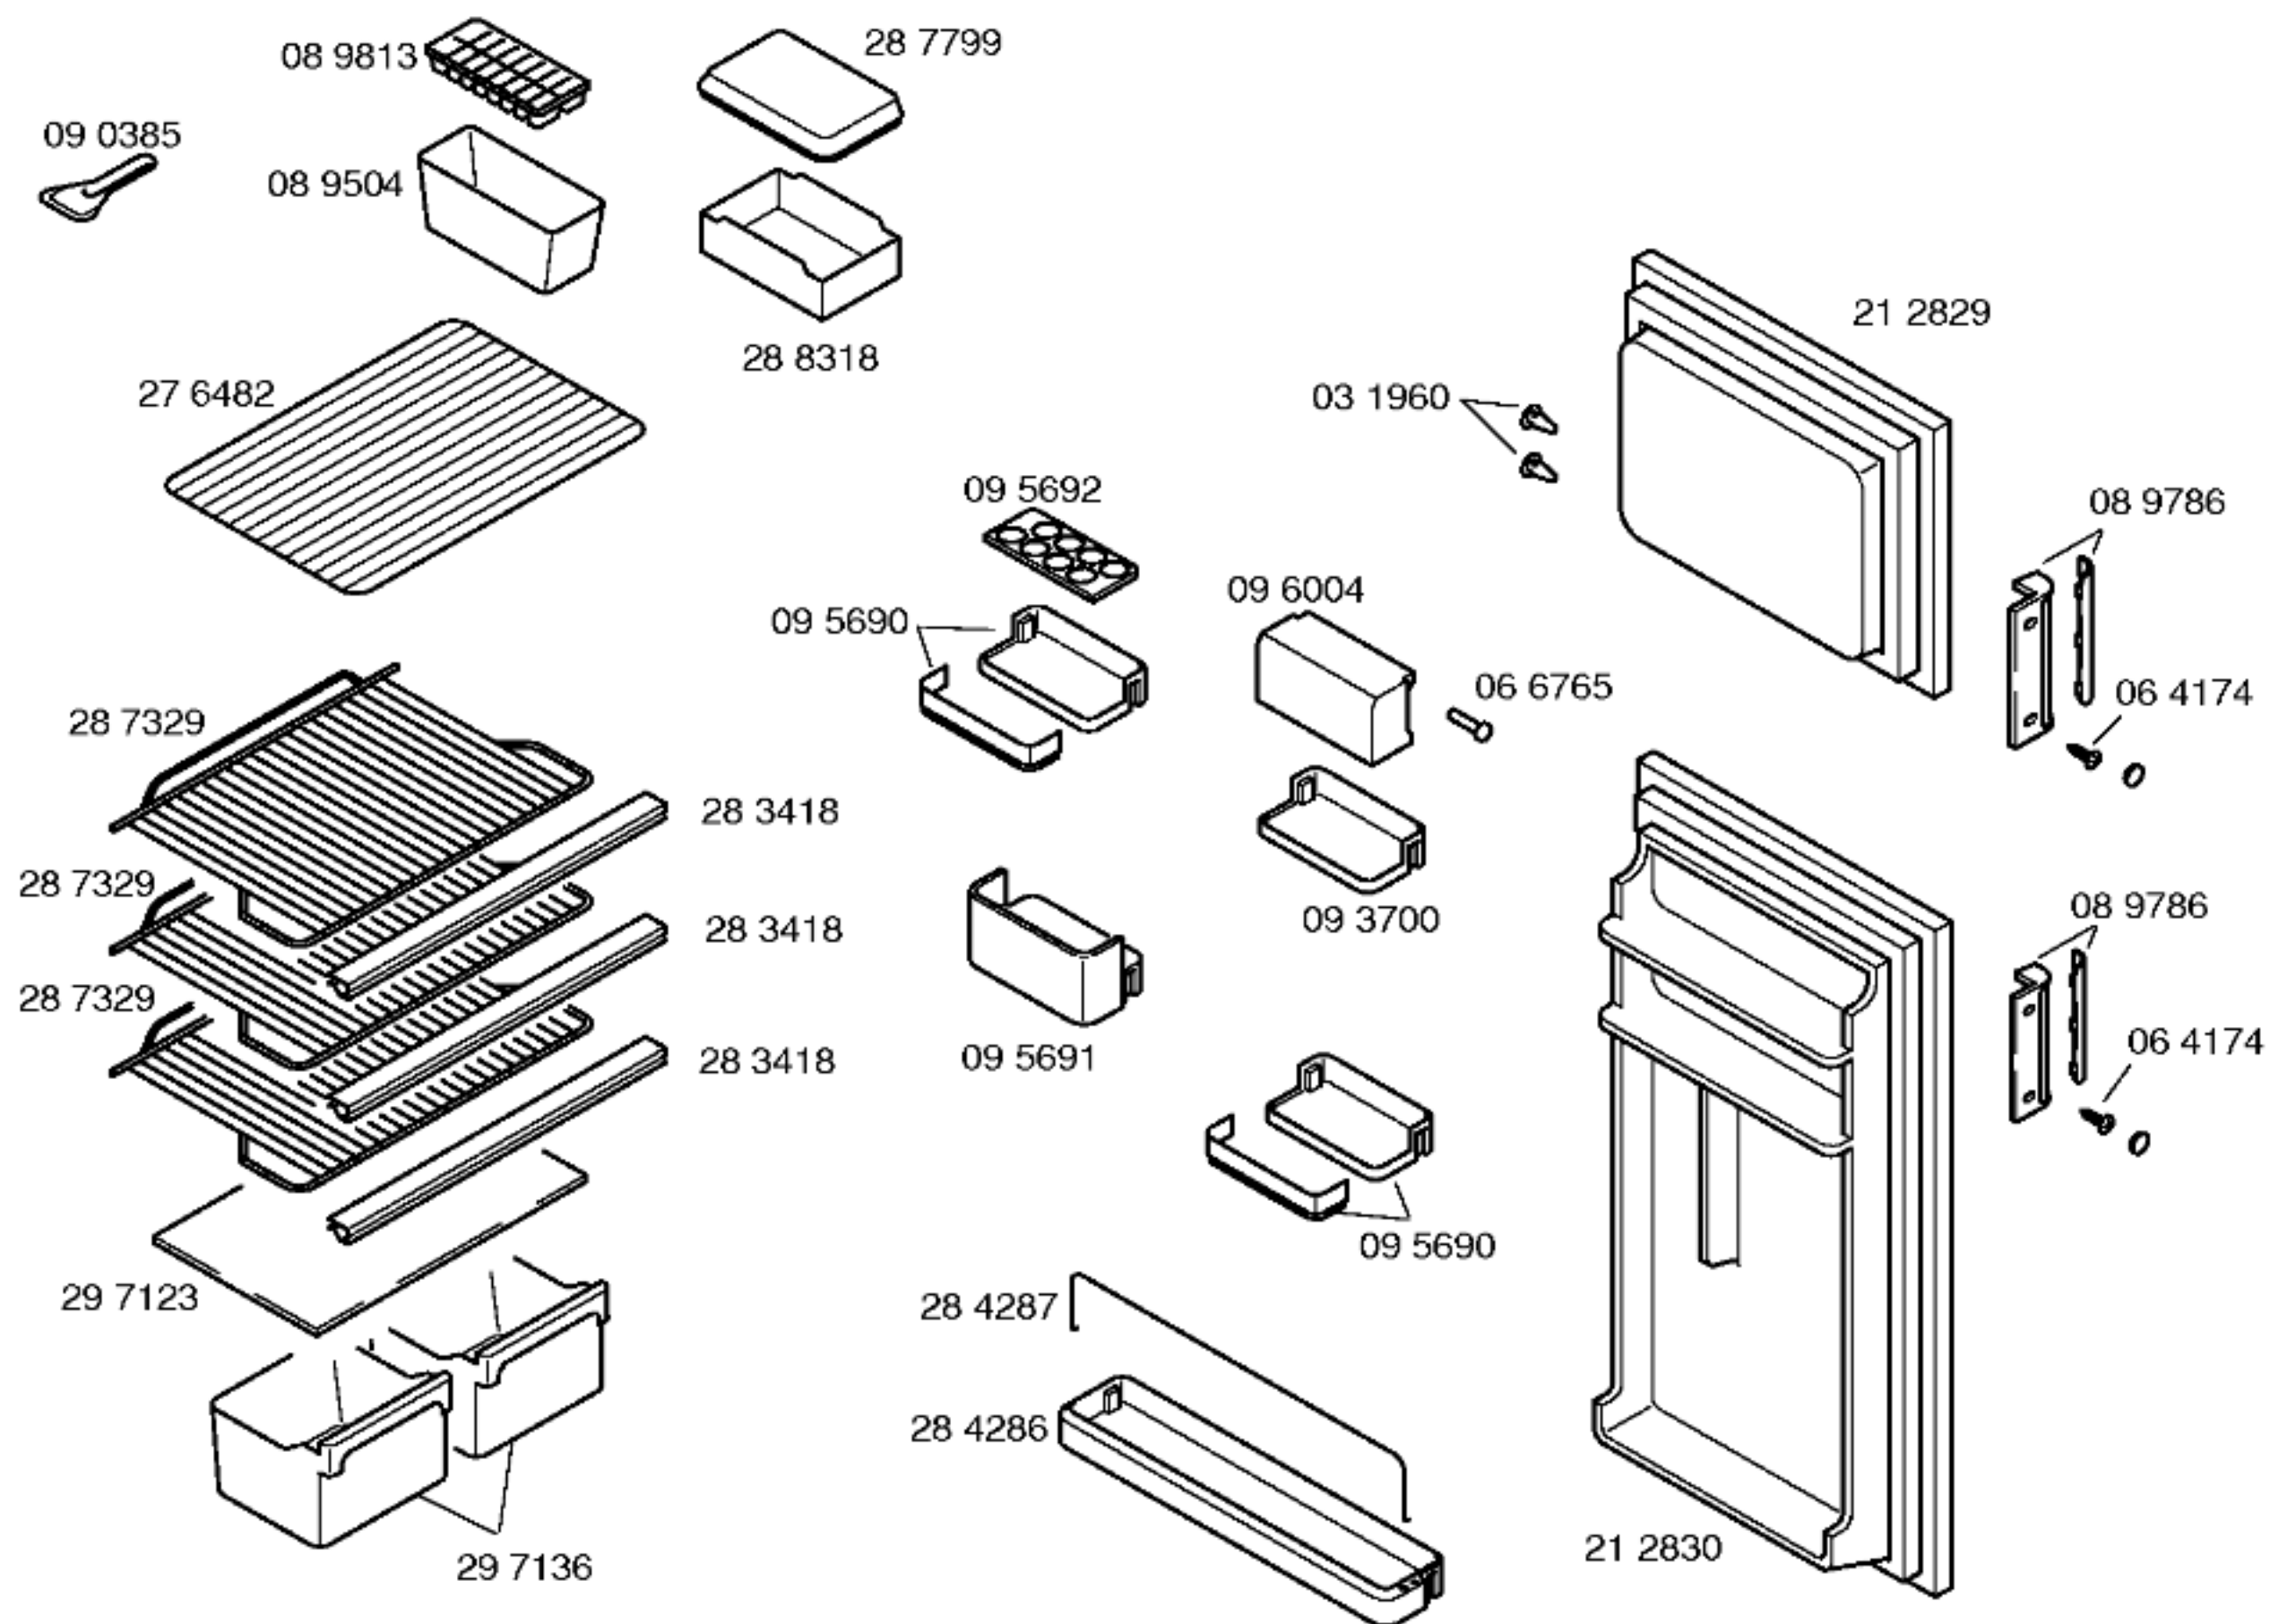

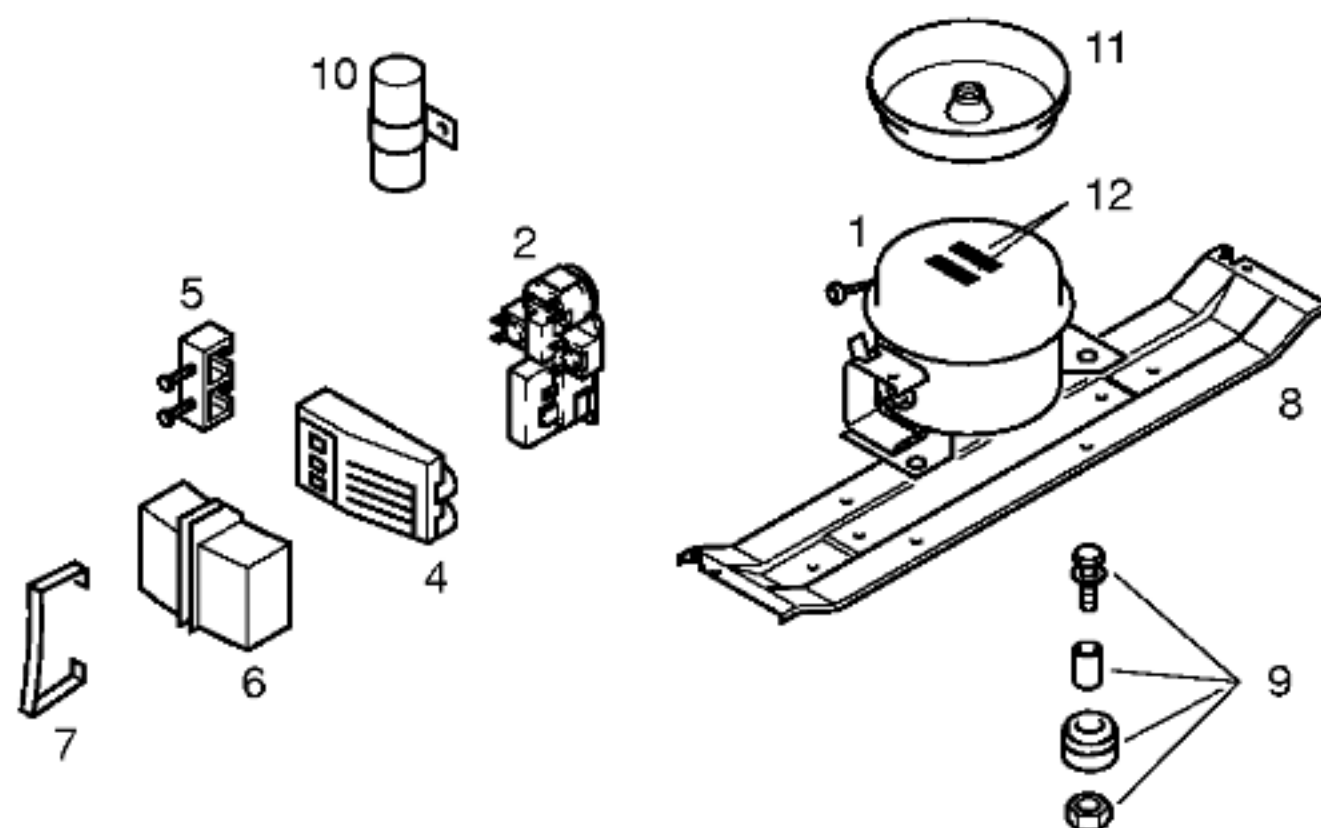

Pos.	Kühlgeräte	
	Matsushita	
	DA125E	
1	14 1553	
2	06 6875	
3		
4		
5		
6		
7		
8	28 8253	
9	05 0166	
10		
11	09 3771	
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS		
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Matsushita DA125E	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	RANCO K52L1561 MIN MAX. 3,5° 6° 4° 14°	
Füllmenge/Fill. quantily/Charge/Carga R600a g	80	
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W		
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W		
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V		
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador		