

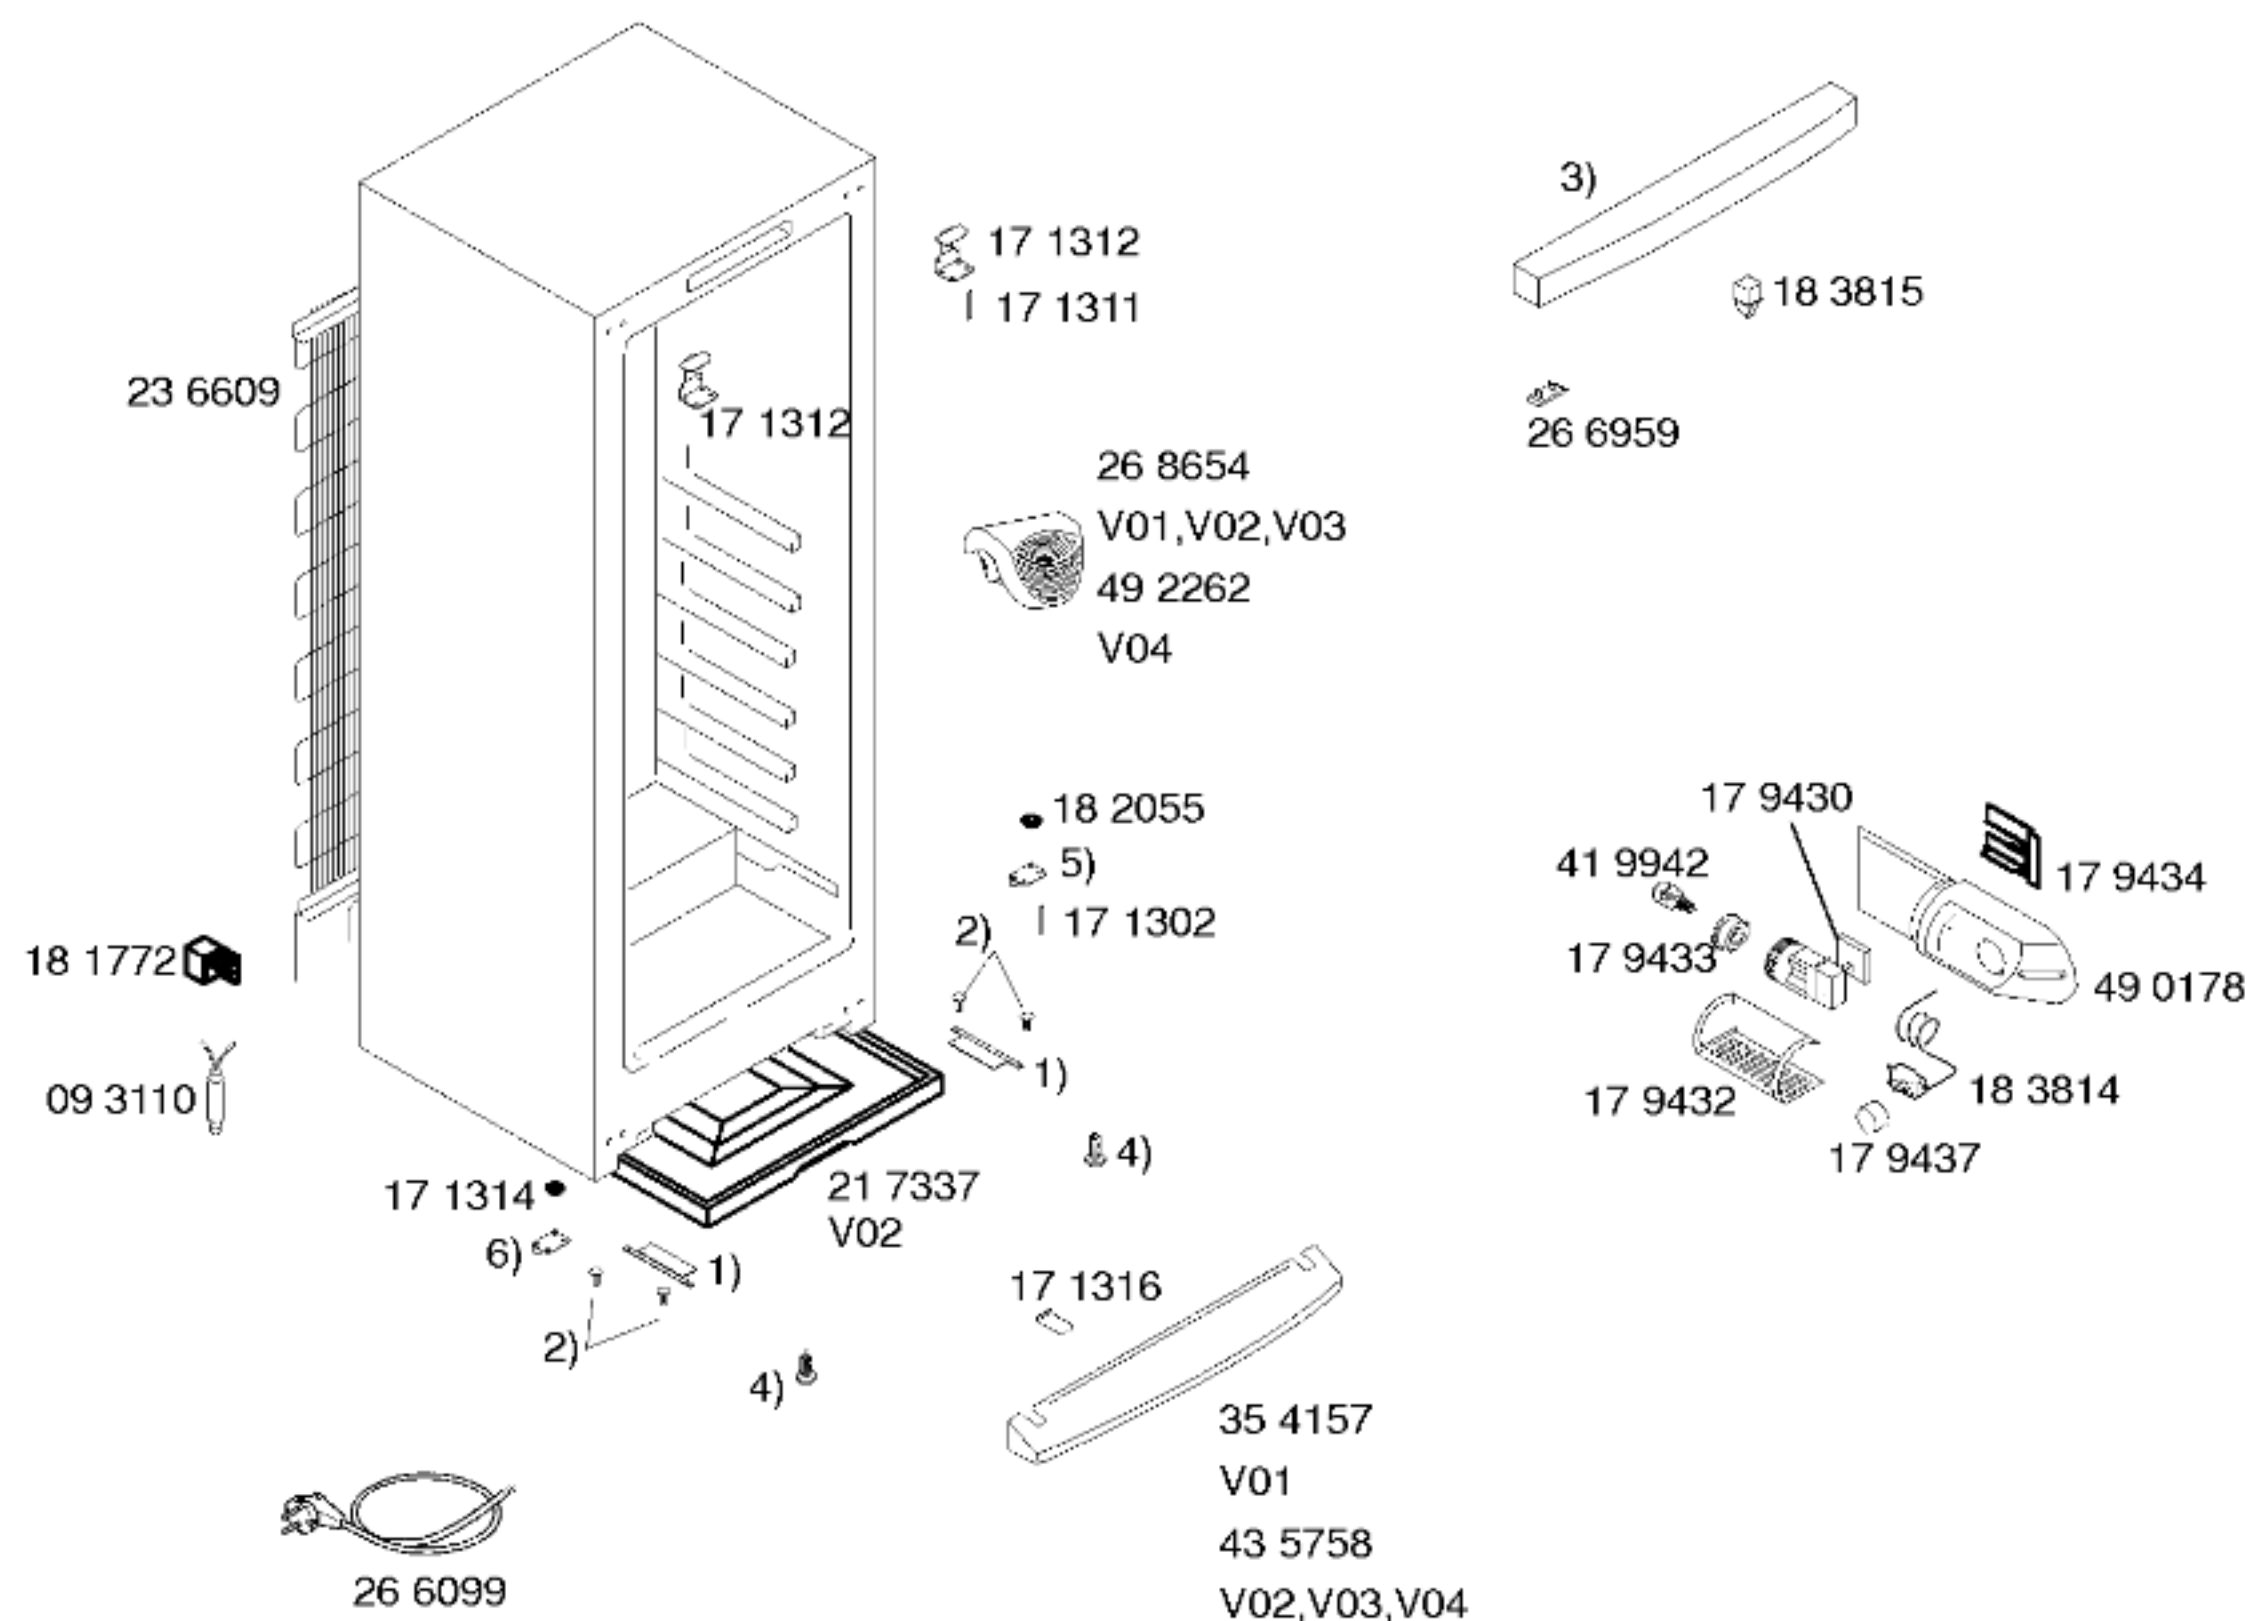
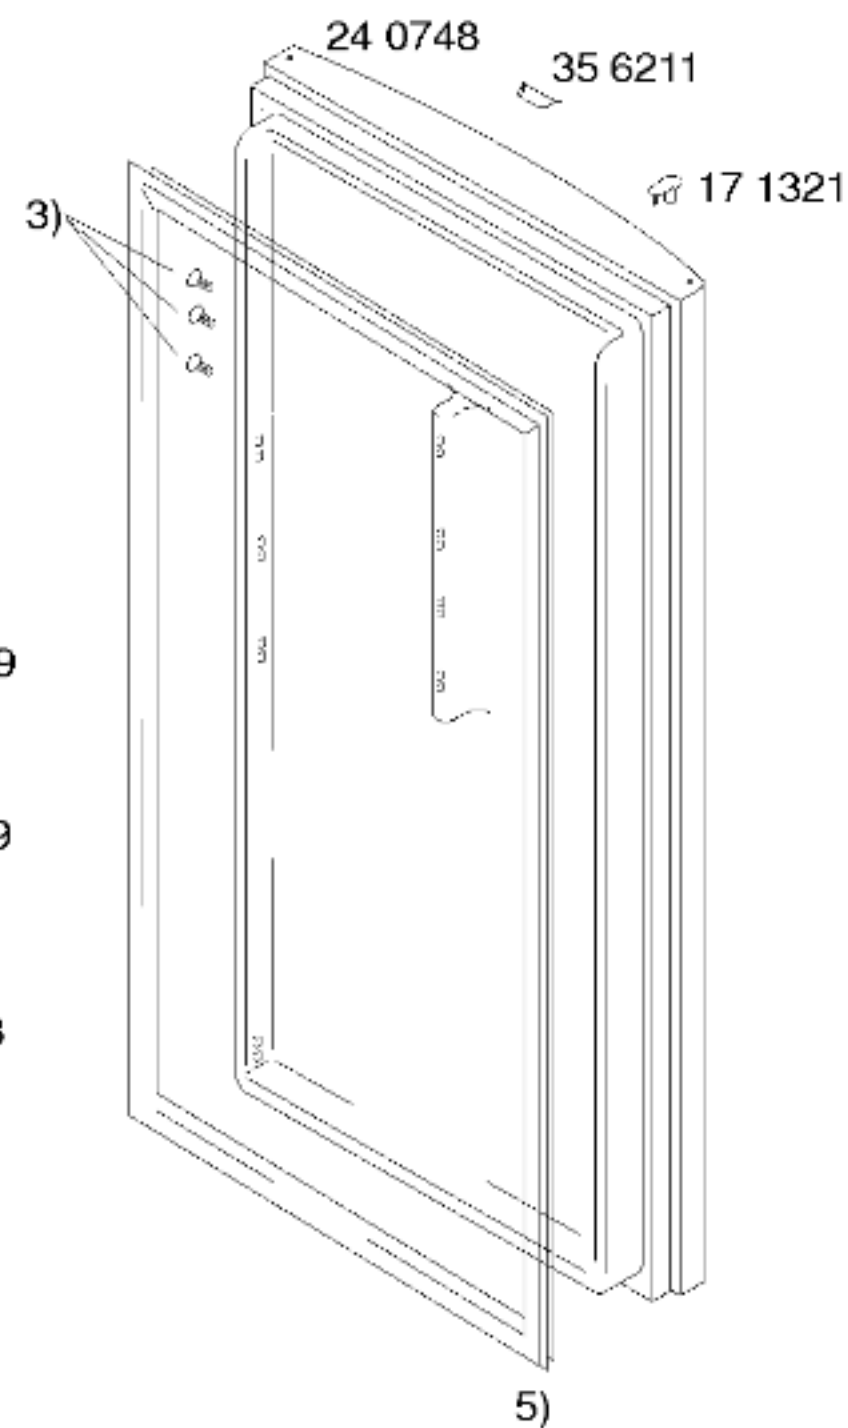
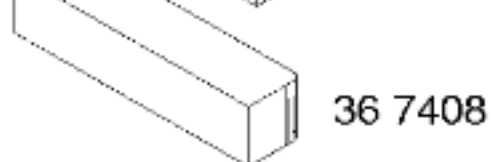
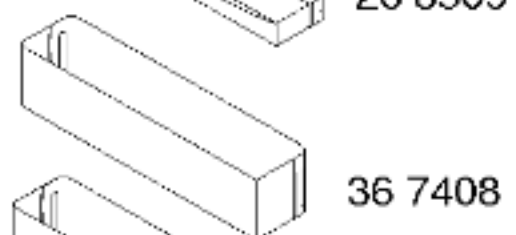
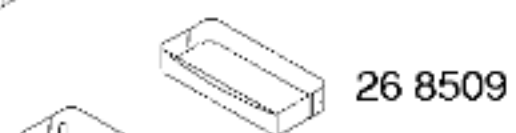
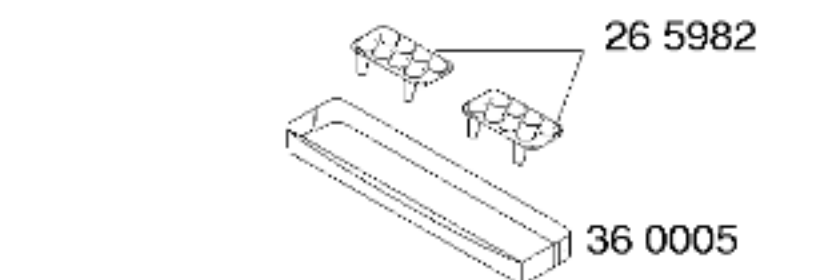
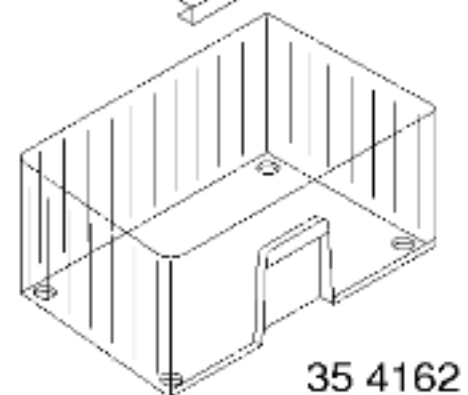


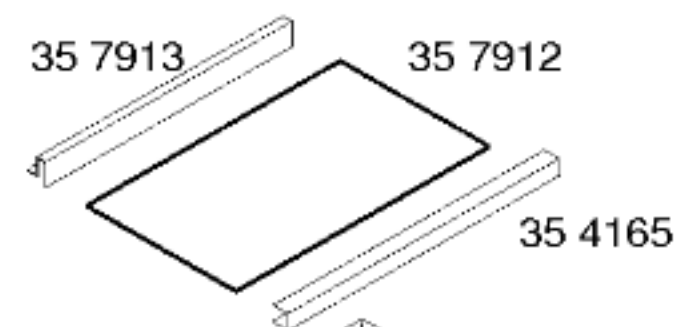


Gebrauchsanweisung
58 7330
(ES)

- 1) 48 1783
2) 16 3505
3) 43 5490
4) 18 9089
 V01
 42 1516
 V02,V03,V04
- 5) 17 1303
 V01
 42 1601
 V02,V03,V04
- 6) 17 1303
 V01
 42 1602
 V02,V03,V04

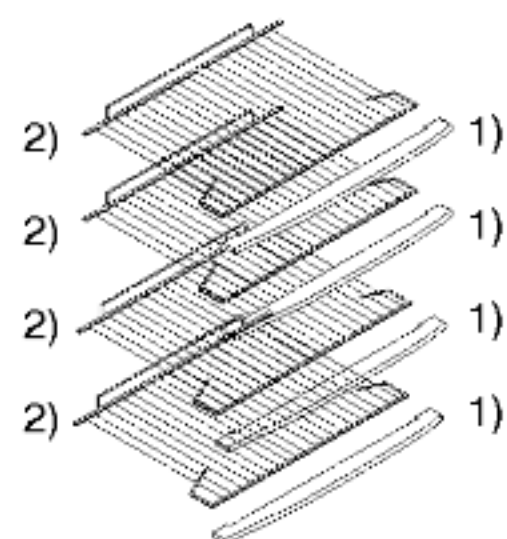

- 1) 36 1407
- 2) 35 4166
- 3) 16 6484
- 4) 16 5557
- 5) 23 8414
- V01,V02,V03
- 24 1323
- V04

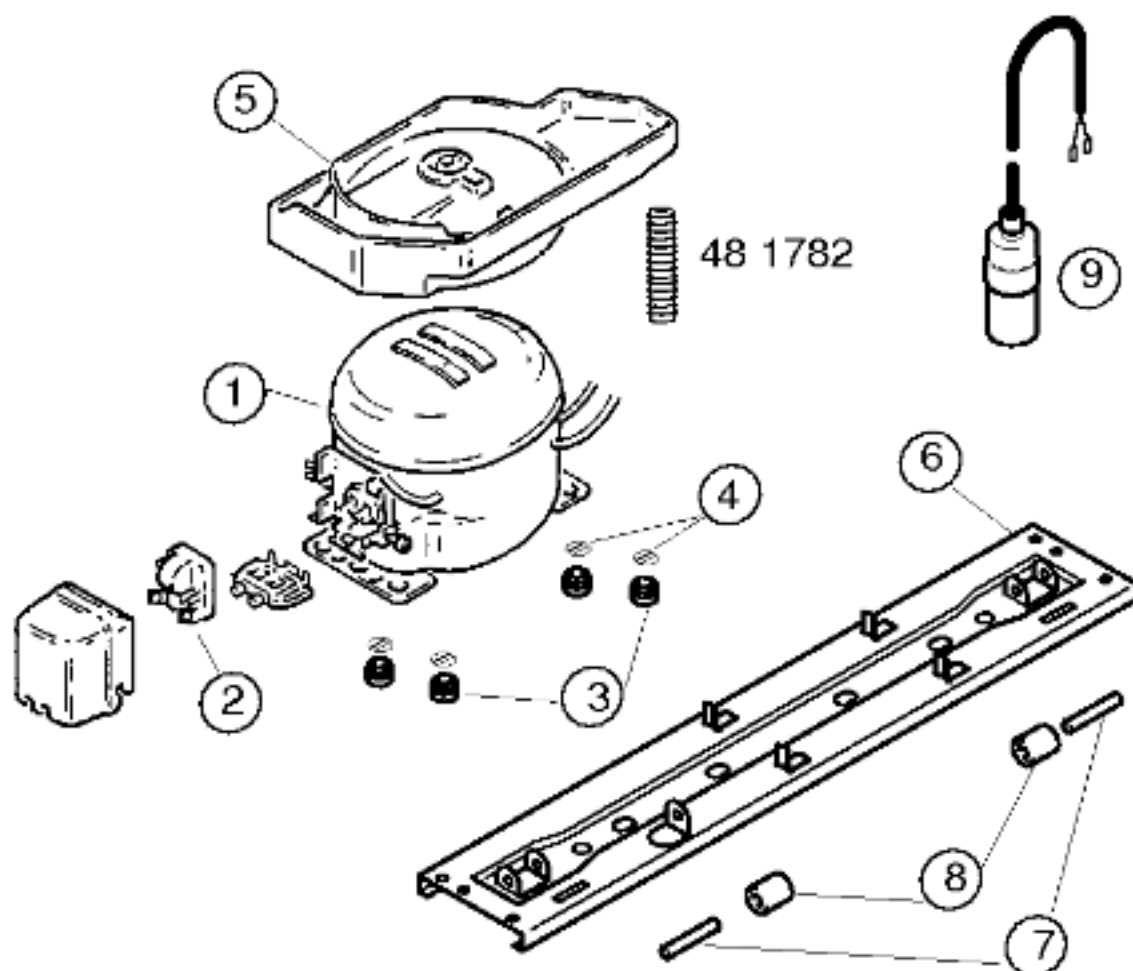

Pos.	Danfoss		
	TLY7KK2		
1	14 3519		
2	16 5570		
3	16 3427		
4	17 1519		
5	48 9208		
6	35 4158		
7	18 1014		
8	17 1318		
9	17 4093		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER

Verdichter/Compressor/Kompresör

Typ/Type/Tip

Förderleistung/Delivery/Verim/h

Anlaufstrom/Starting current/Giris akimi

Widerstand/Resistance/Rezistans Ha/

A

Ohm

Hi/aux.

Danfoss

TLY7KK2

23

Temp.Reyler/Thermostat/Termostat

Typ/Type/Tip

Reglerstellung/Position/Termostat pozisyonu

Schaltwerte/Acta kapama degerleri

..ein/acma °C

Valeurs de commutation/Termostat degeri

..aus"/kapama

(..abtaven' od)

..alam'

Danfoss

077B52

+4 +10.5

-21 -10.7

Füllmenge/Fill. quantily/ Dolum miktarı

R600a

g

*

Anschlusswert/Comm. load/Giris gucu

W

*

Heizung/Heater/Rezistans

Widerstand/Resistance/Direnc

Ohm

Leistung/Power/Guc

W

Ventilador/Blower/Vantilatör

Widerstand/Resistance/Rezistans

Ohm

Magnetventil/Magnetic valve/Manyetik valf

Widerstand/Resistance/Rezistans

Ohm

Spannung/Voltage/Gerilim

V

Temp.Reyler/Thermostat/Termostat

* Siehe Typenschild/Mamul etiketine bakiniz