




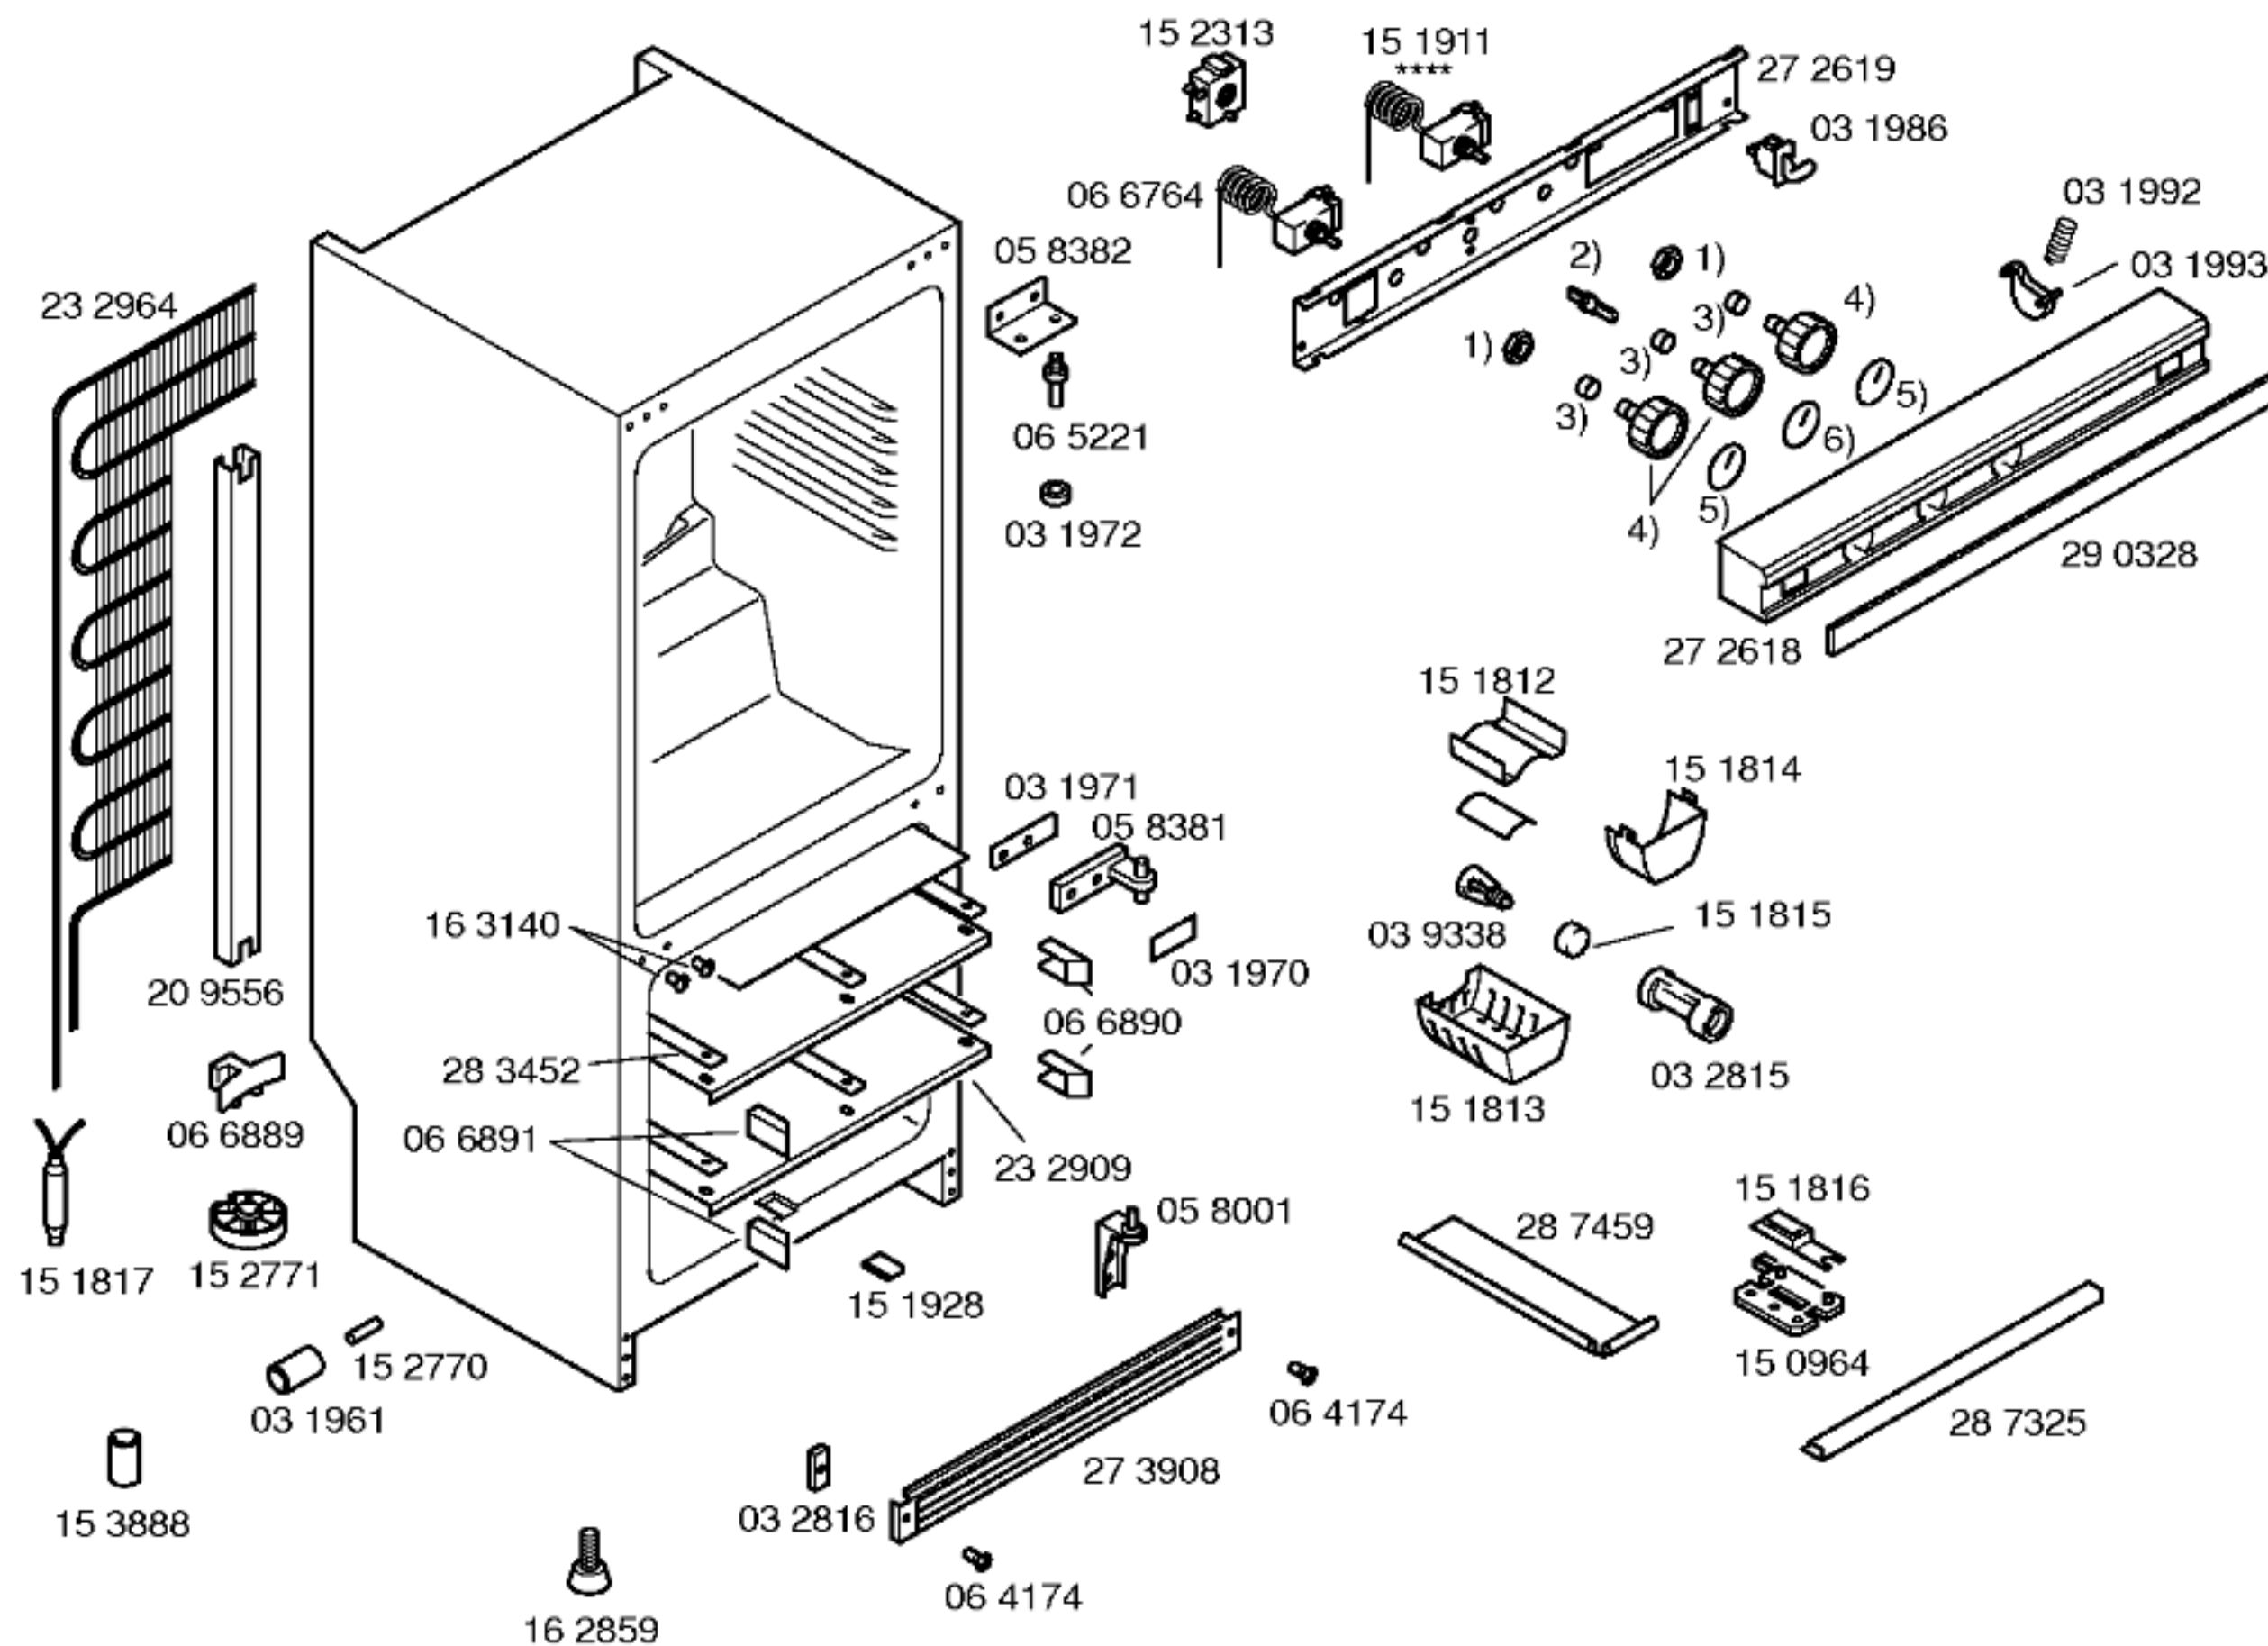

Libro instrucciones
51 7522
(E)

- 1) 03 3055
- 2) 03 1989
- 3) 03 5731
- 4) 03 1985
- 5) 06 6770
- 6) 15 2326

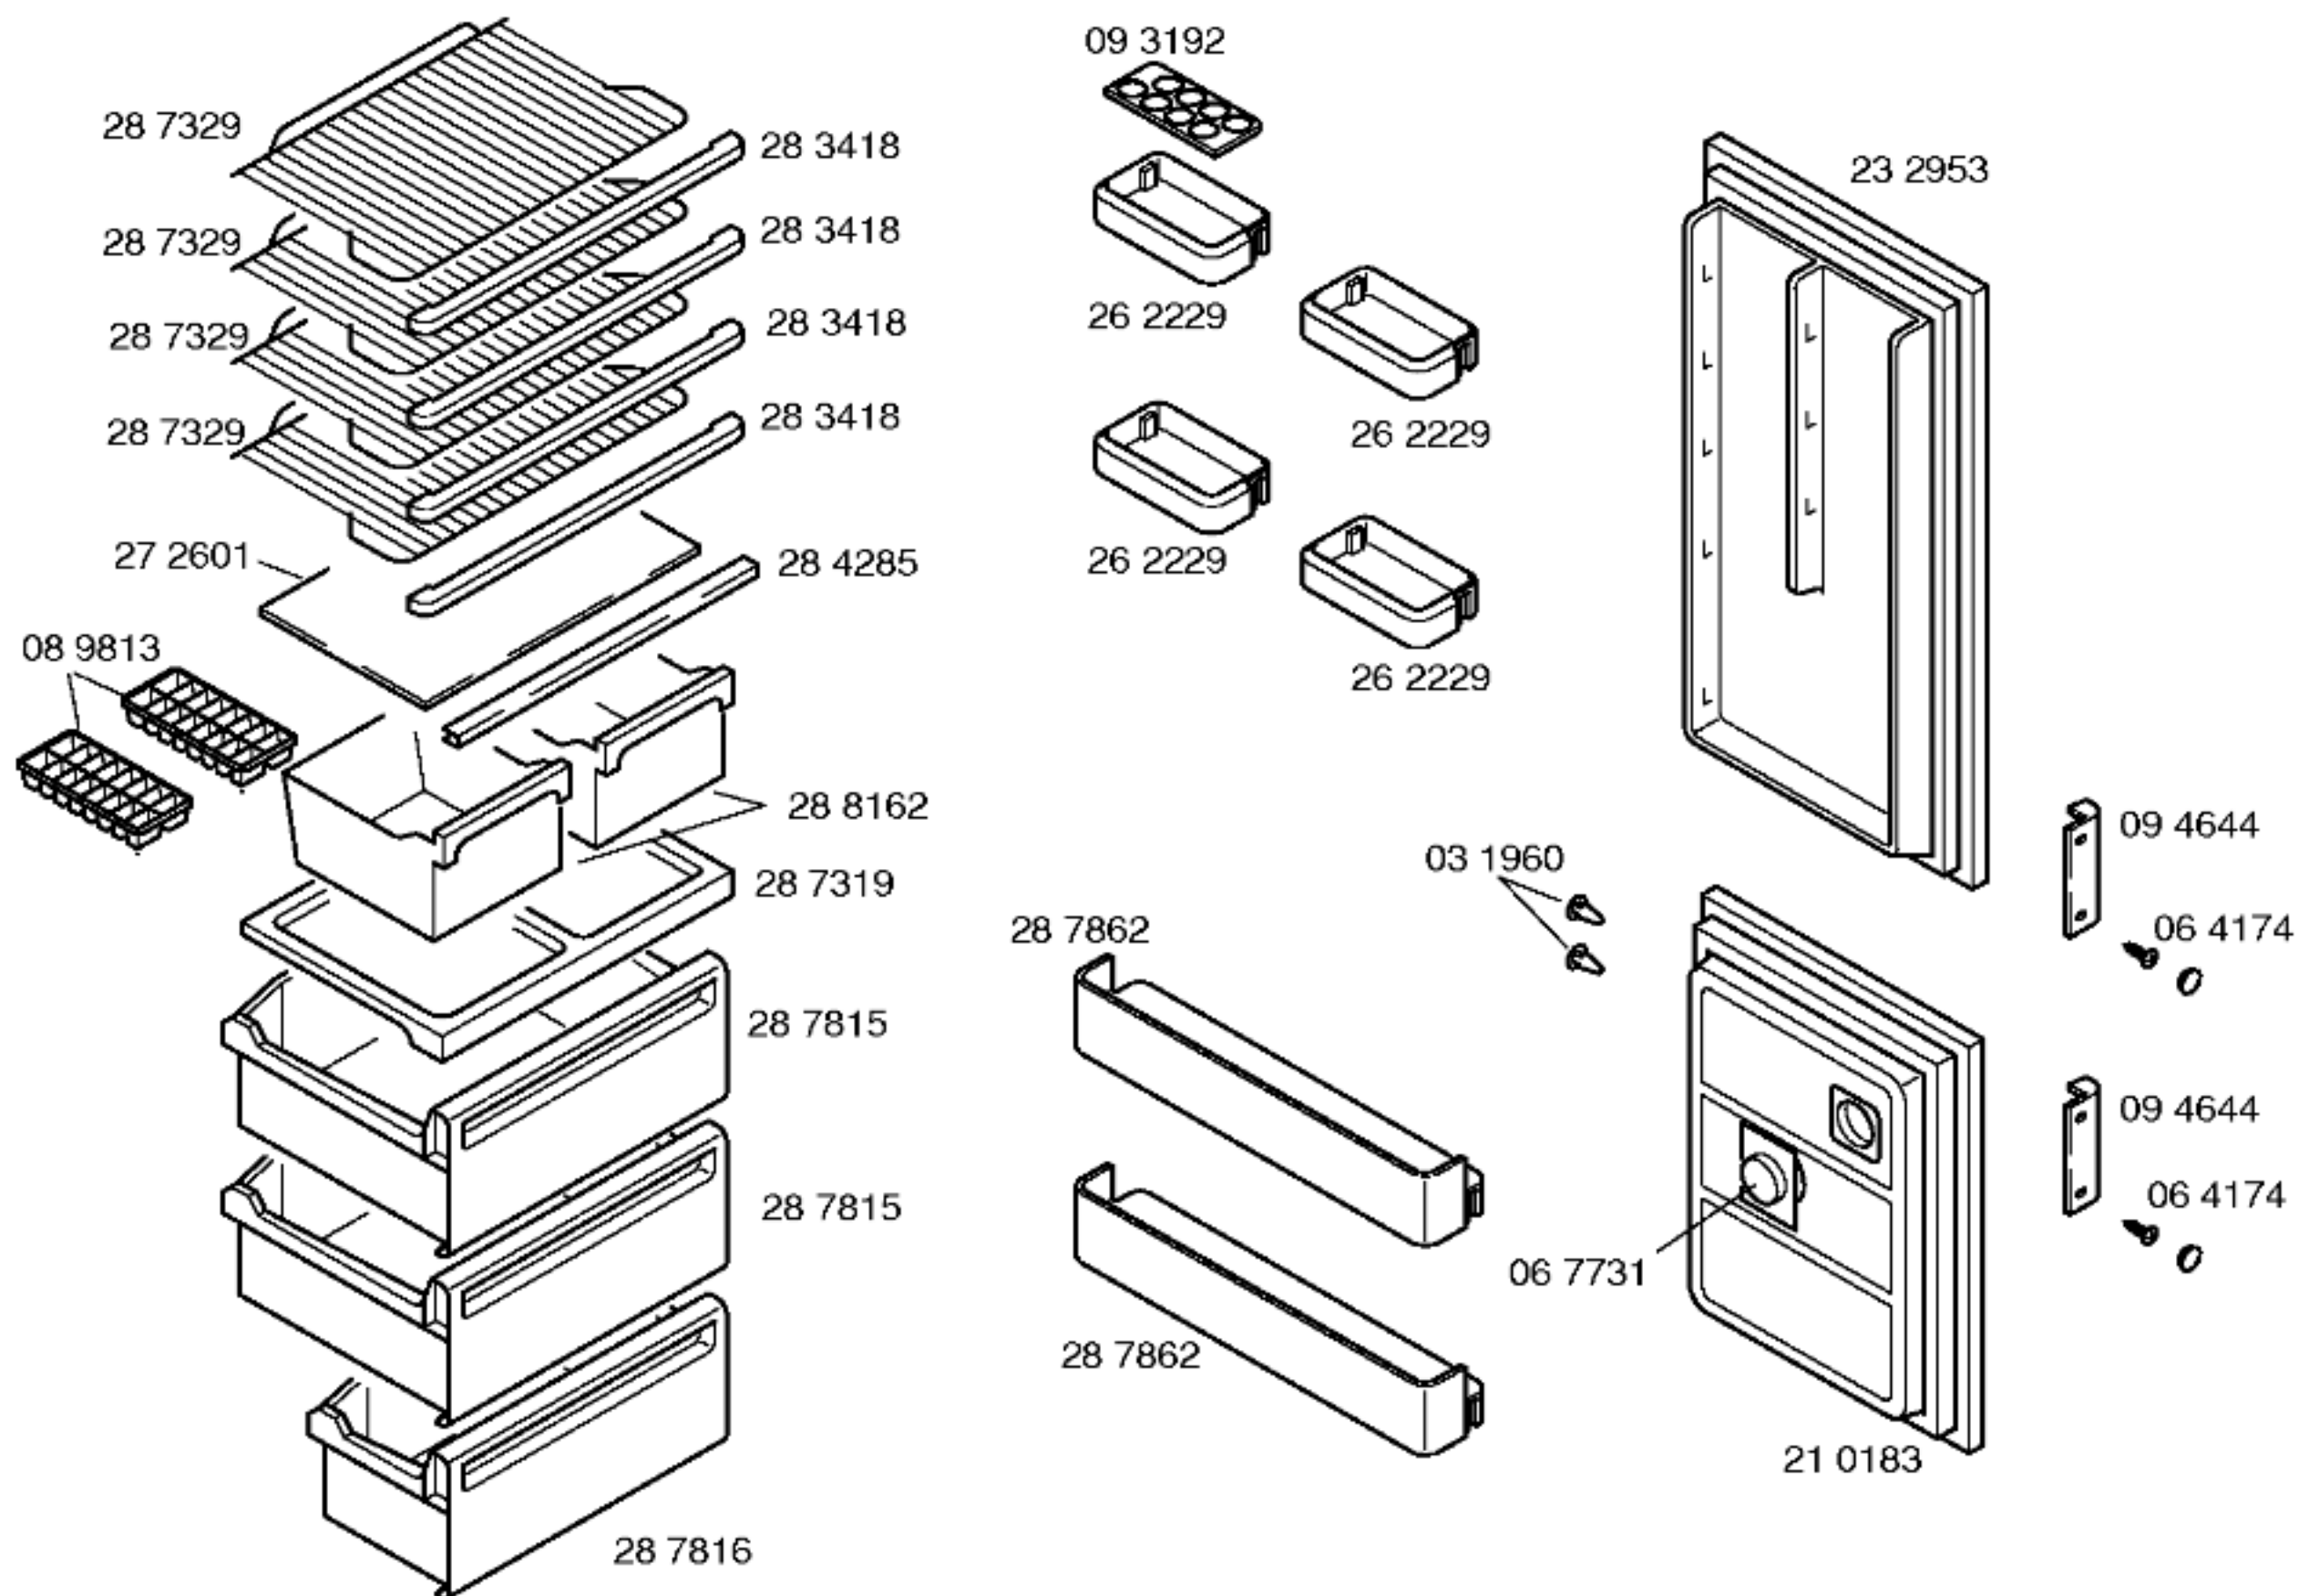

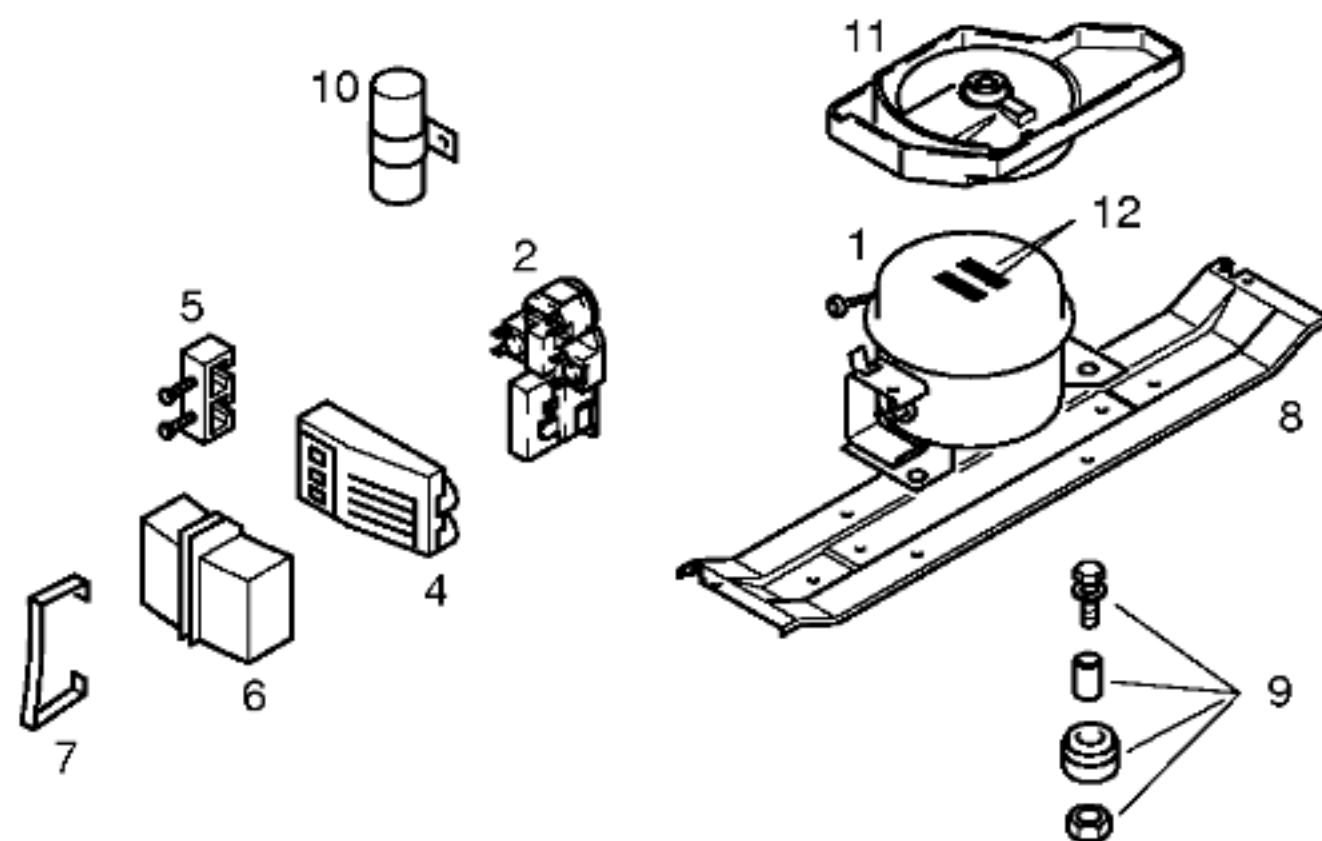

Pos.	Aspera	U.Hermetica		
	BPM1084Z	GL45AA		
1	14 1374	14 1374		
2	15 4315	15 5130		
3	16 2056			
4				
5				
6	16 2690			
7				
8	28 8253	28 8253		
9	05 0166	05 0166		
10				
11	09 6883			
12				
13				

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Aspera BPM1084Z	U.Hermetica GL45AA	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	Danfoss 077B62 MIN. MAX +6° -13° -28°	Ranco K54-L1924 MIN. MAX -14° -24° -21° -31° -15°	
Füllmenge/Fill. quantily/Charge/Carga 134a g	60	125	
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	84	87	
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm			
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V			
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			