



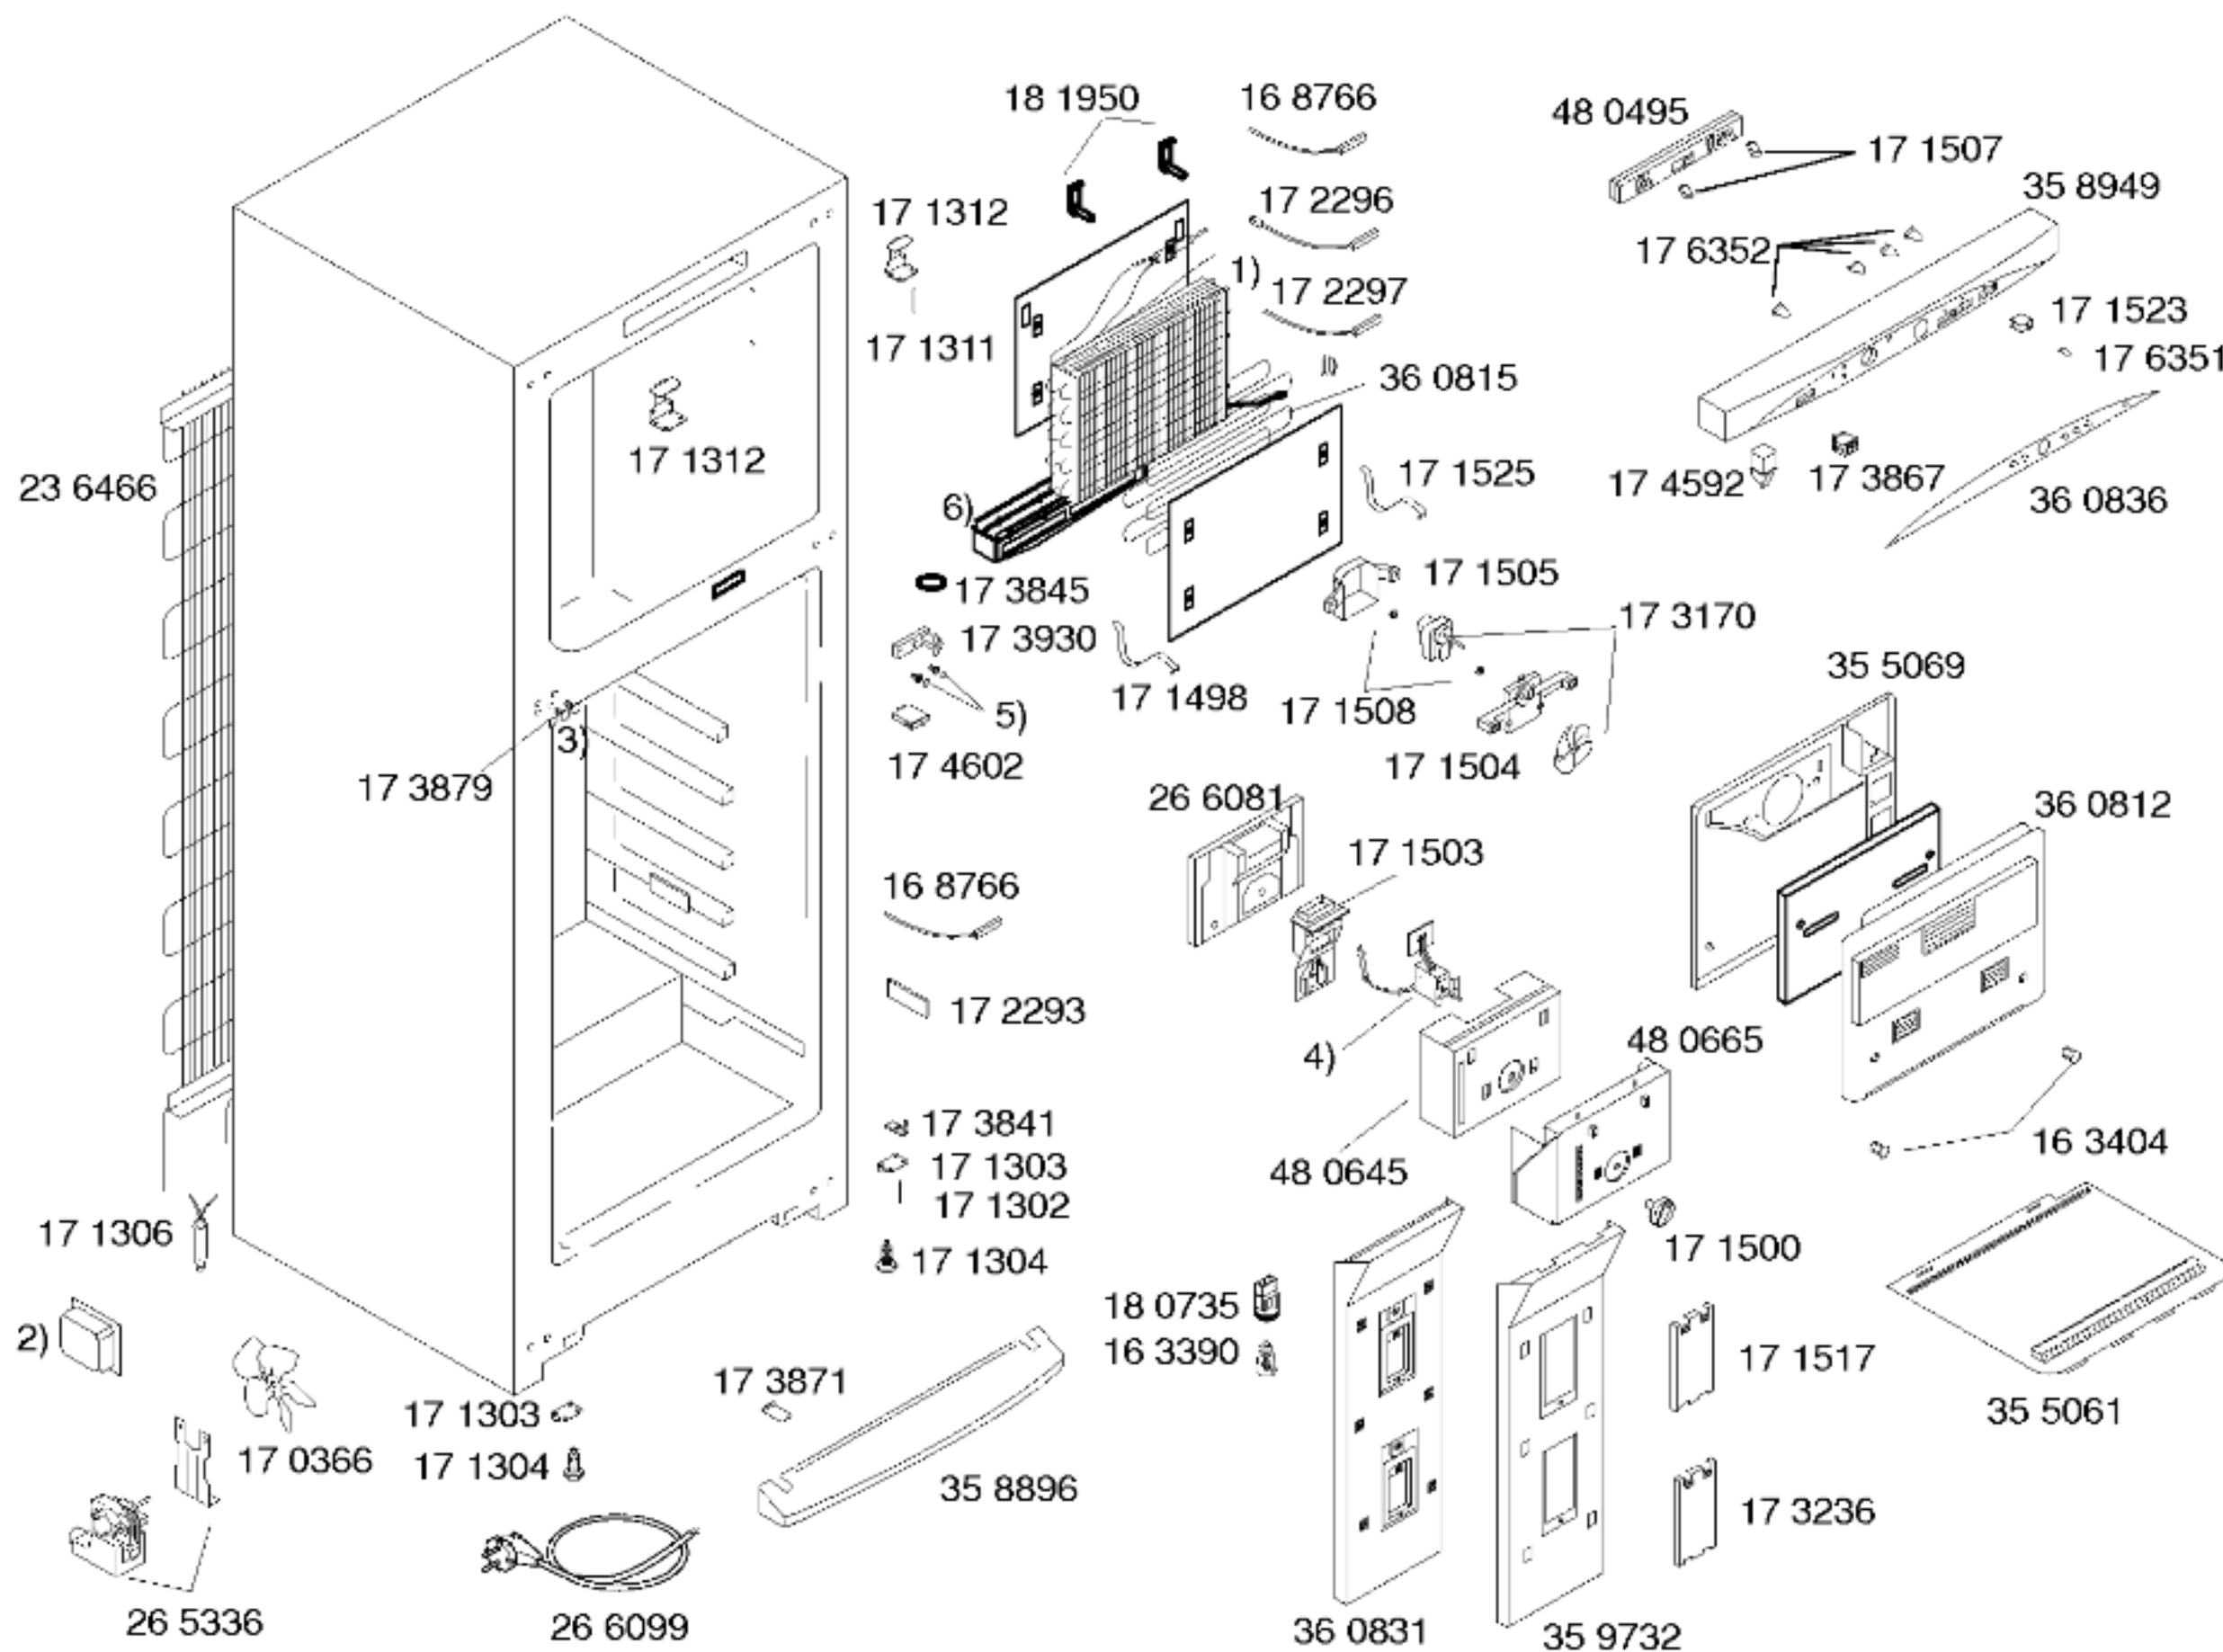


Kullanma kılavuzu
52 7025
(TR)

- 1) 36 0821
2) 17 8140
3) 17 3866
4) 26 6580
V01
18 2029
V02,V03
5) 17 3863
6) 36 0850

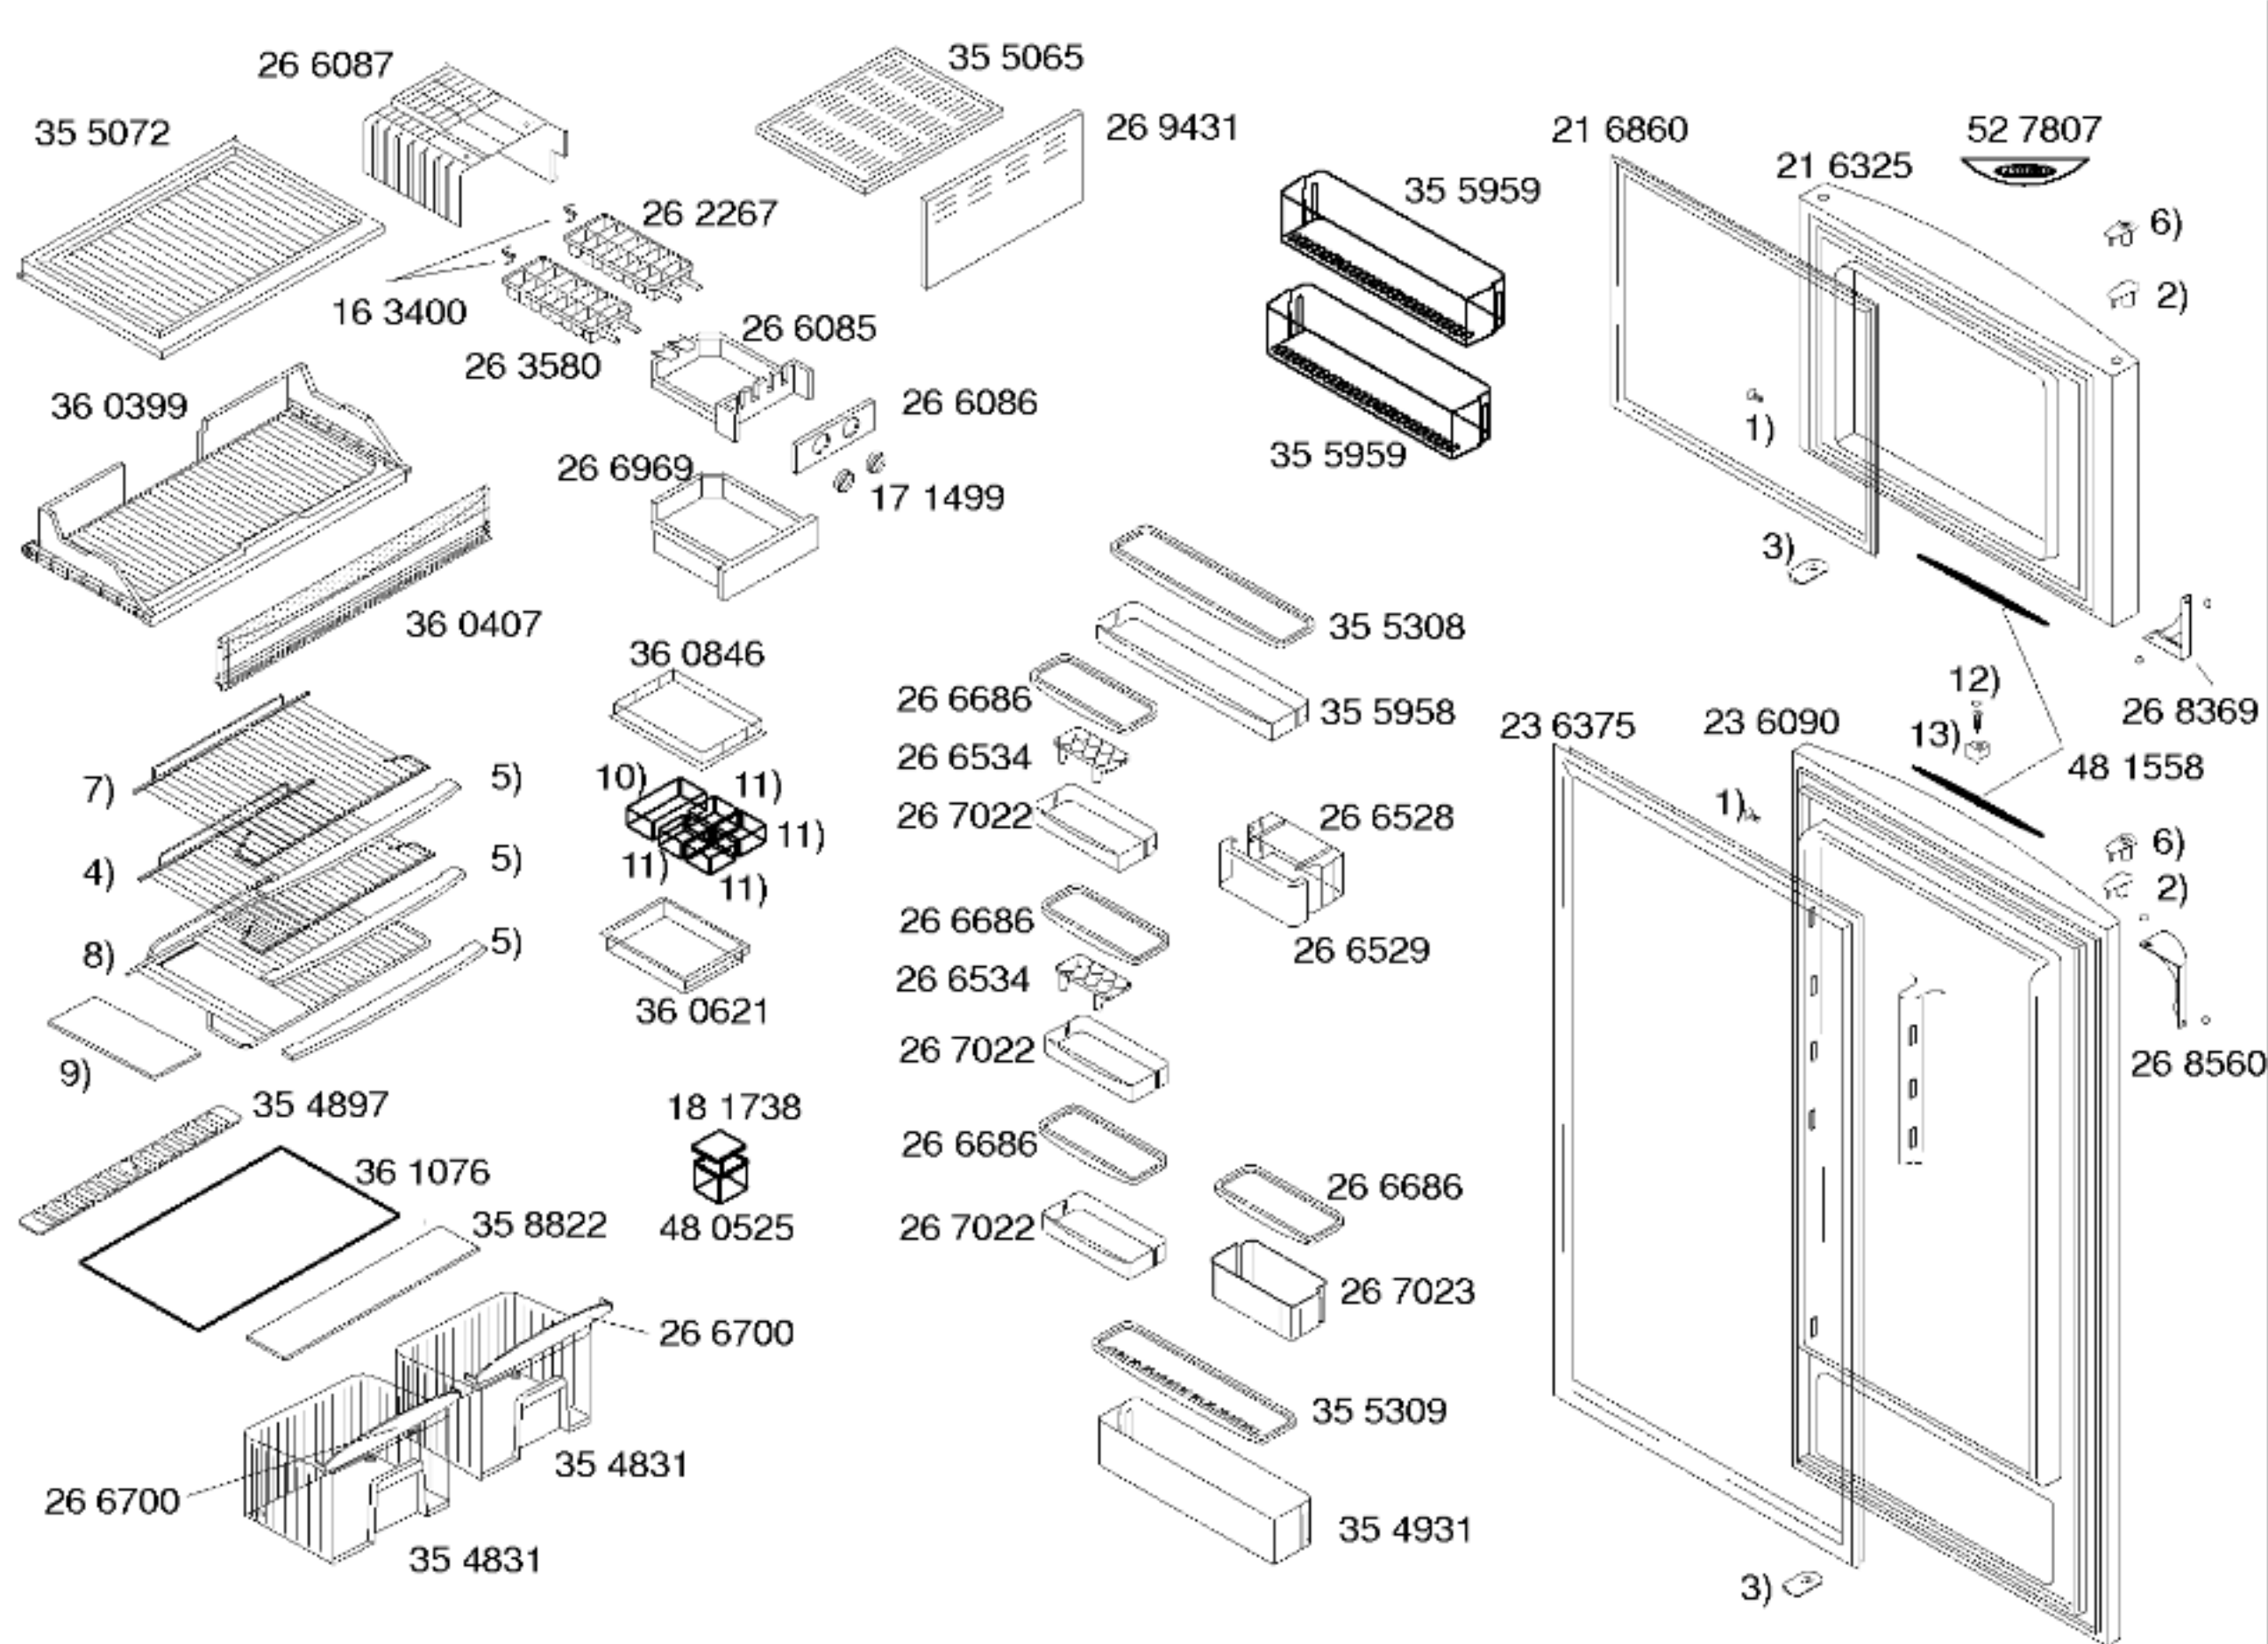

- 1) 17 3862
- 2) 17 3856
- 3) 17 4593
- 4) 35 5835
- 5) 35 4789
- 6) 17 3850
- 7) 36 0844
- 8) 36 0840
- 9) 36 0841
- 10) 48 0522
- 11) 48 0523
- 12) 17 3880
- 13) 17 3849

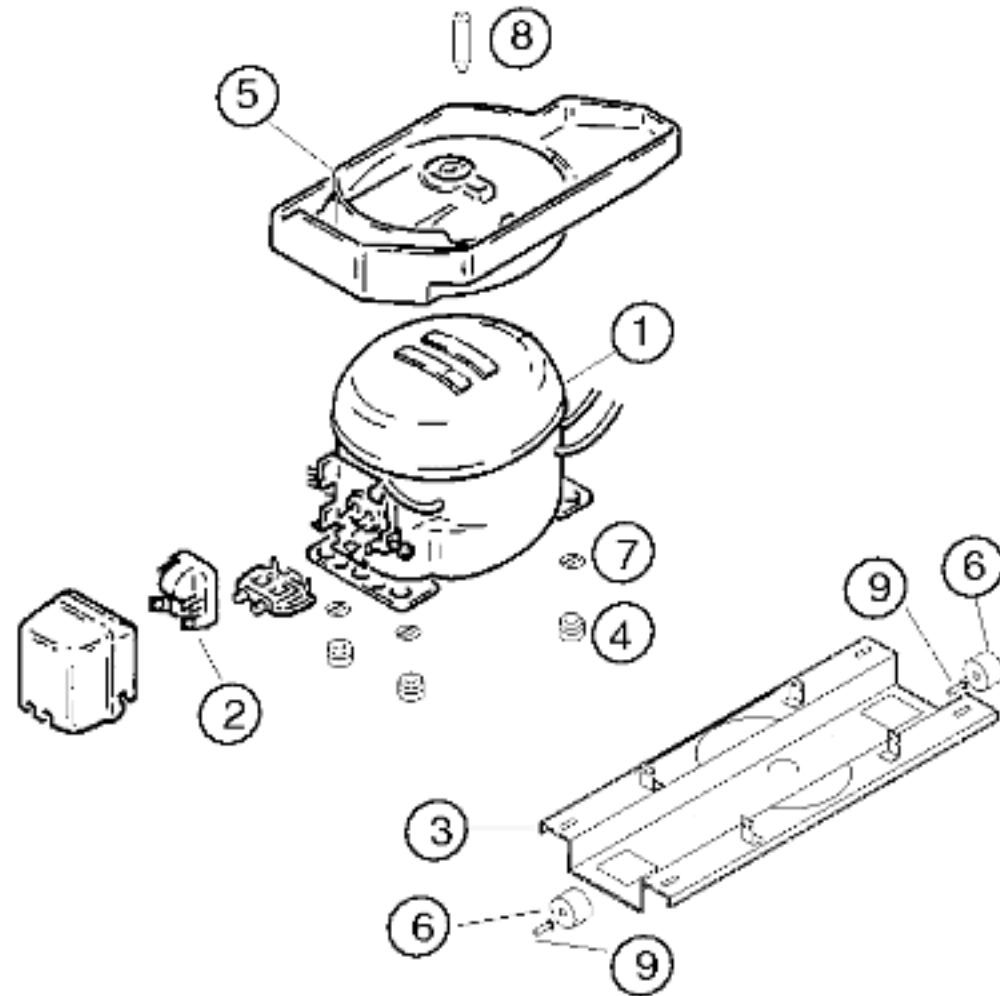

Pos.	Danfoss		
	NL11F		
1	14 1916		
2	16 5570		
3	35 4583		
4	16 3427		
5	26 5327		
6	17 1318		
7	17 1519		
8	17 2776		
9	18 1014		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER

Verdichter/Compressor/Kompresör	Danfoss		
Typ/Type/Tip	NL11F		
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	A	13.6	
Widerstand/Resistance/Rezistans Ha/	Ω	8.2	
Hi/aux.		14.7	
Temp.Reyler/Thermostat/Termostat	Elektronisch		
Typ/Type/Tip			
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Actua kapama degerleri	..ein/acma °C		
Valeurs de commutation/Termostat degeri	..aus"/kapama		
(..abtaven' od)	..alarm'		
Füllmenge/Fill quantily/ Dolum miktari	R134a	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans	Ω	Verdampfer	Ablaufrinne
Widerstand/Resistance/Direnc	W	190	67
Leistung/Power/Guc			
Ventilador/Blower/Vantilatör	Verdampfer		
Widerstand/Resistance/Rezistans			
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans			
Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz