




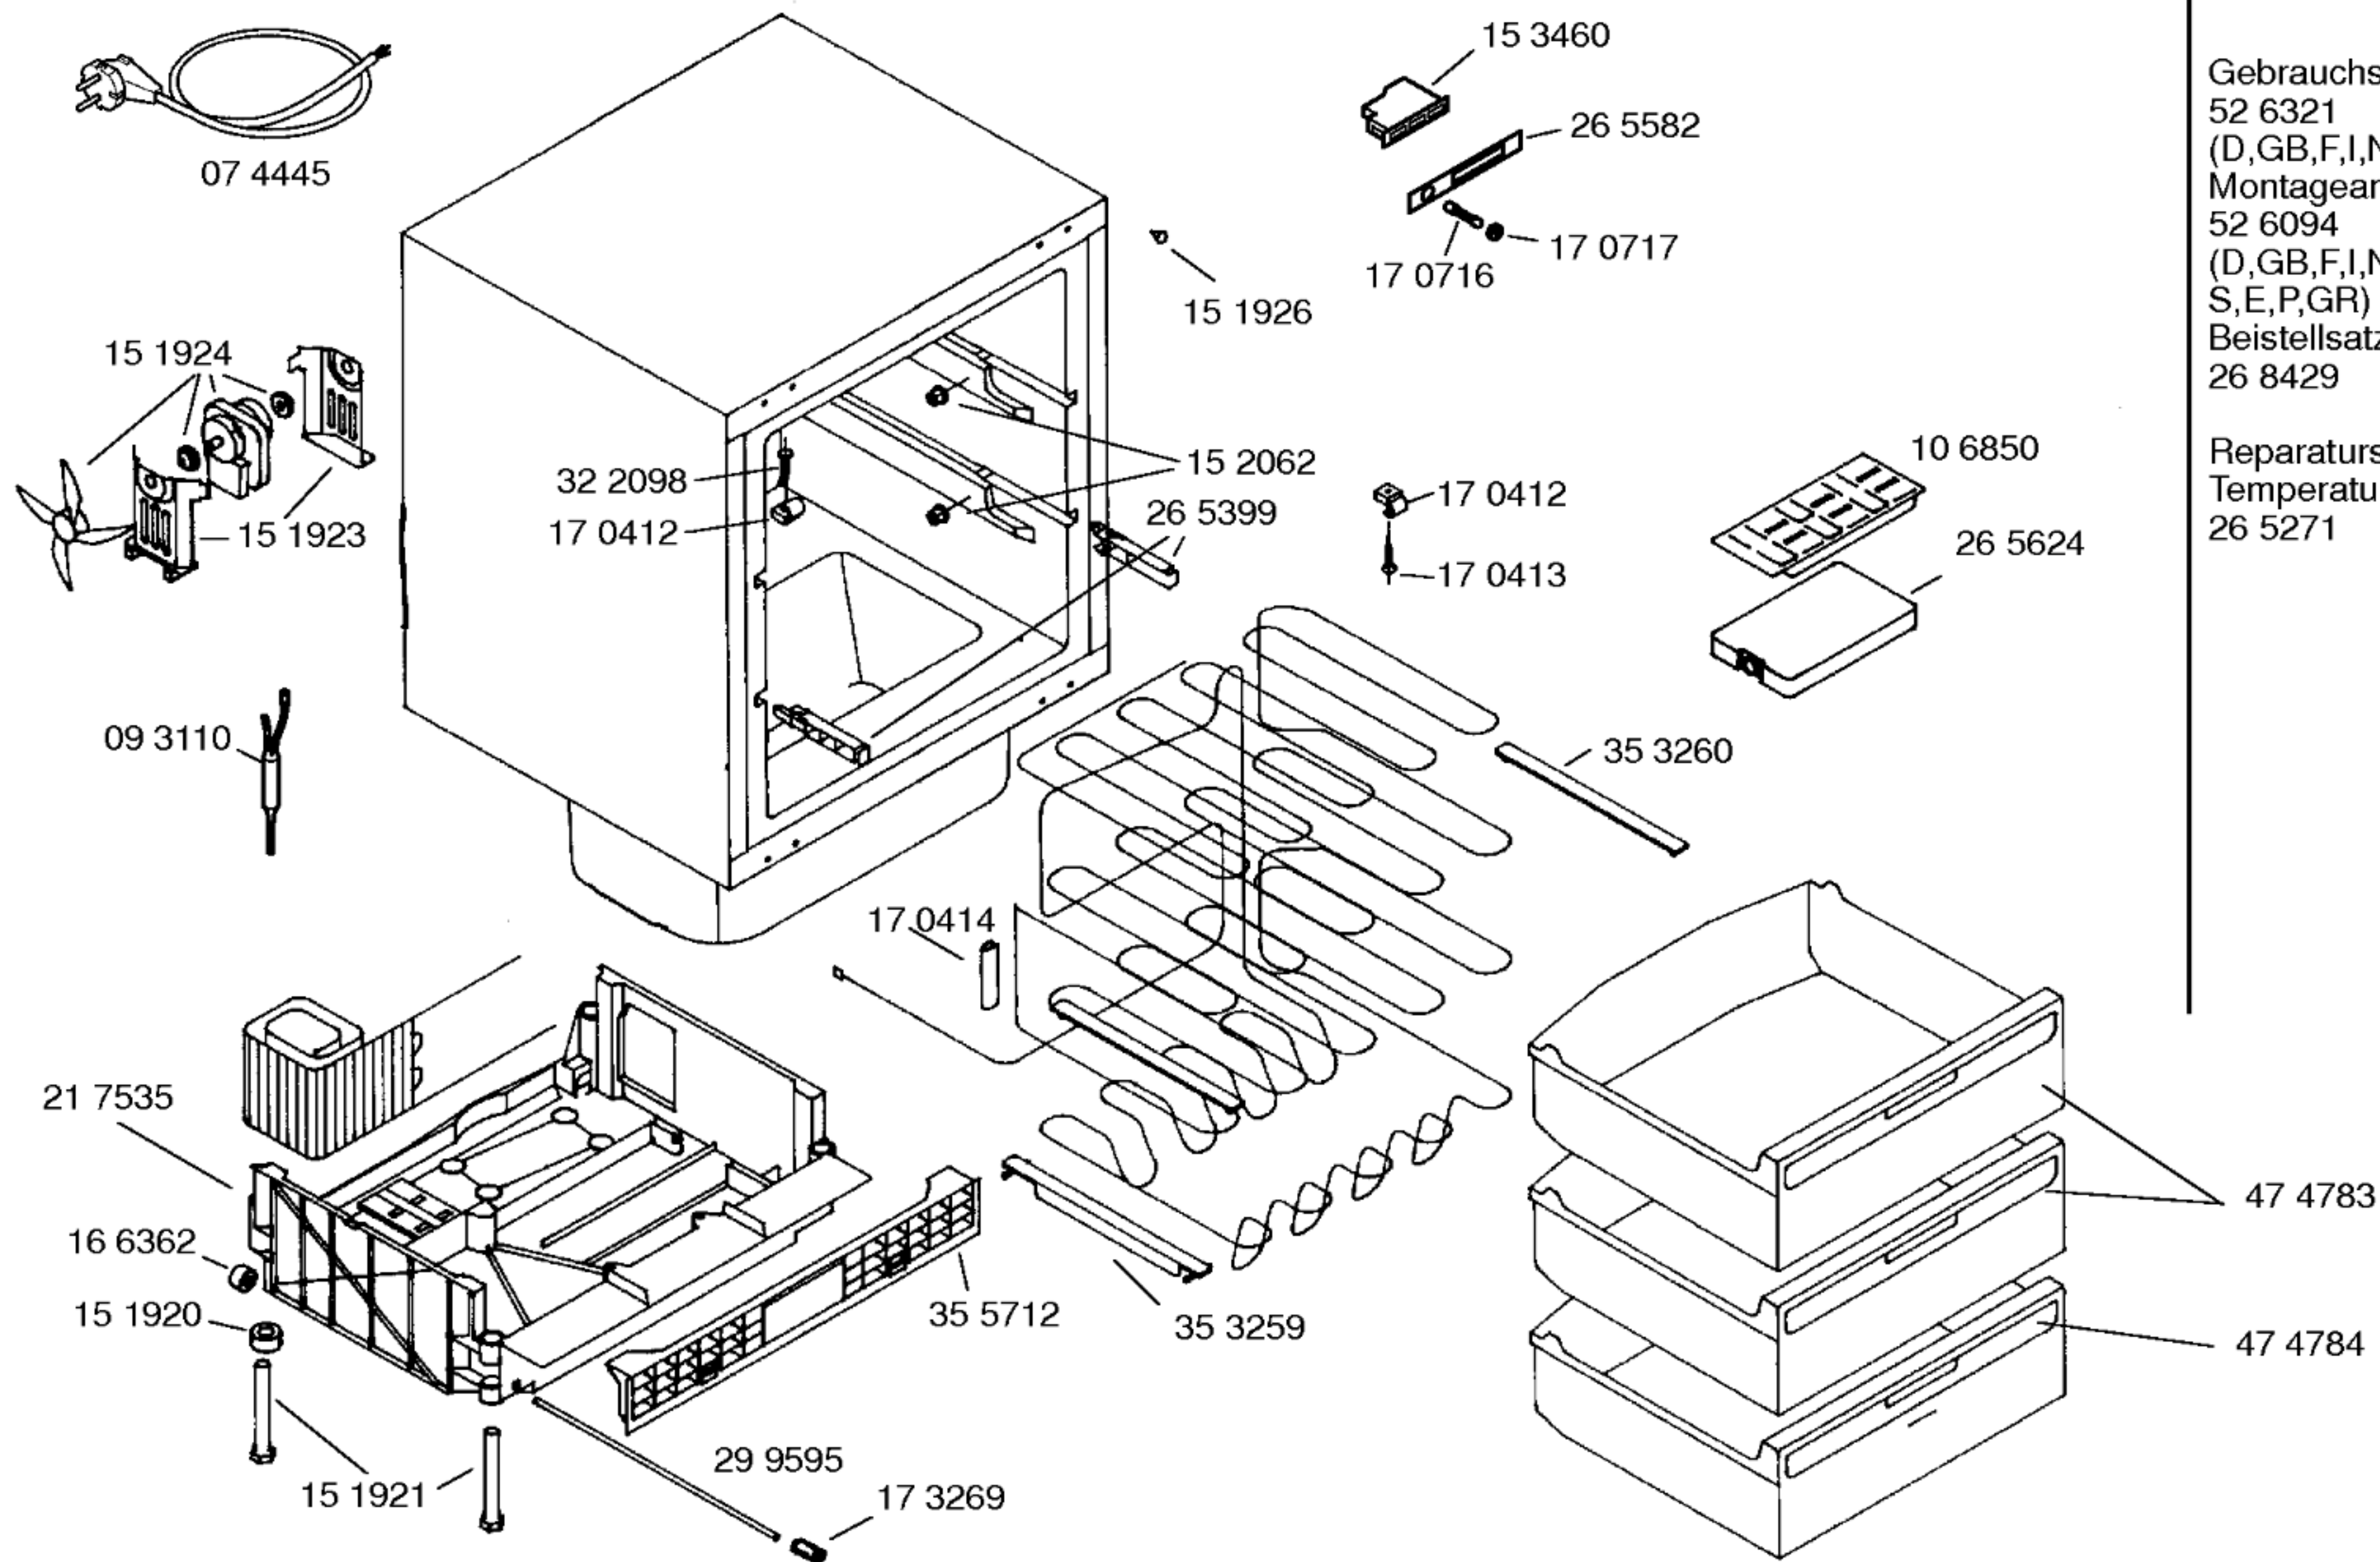

Gebrauchsanweisung
 52 6321
 (D,GB,F,I,NL)
 Montageanleitung
 52 6094
 (D,GB,F,I,NL,DK,N,SF,
 S,E,P,GR)
 Beistellsatz
 26 8429

Reparatursatz
 Temperaturregler
 26 5271

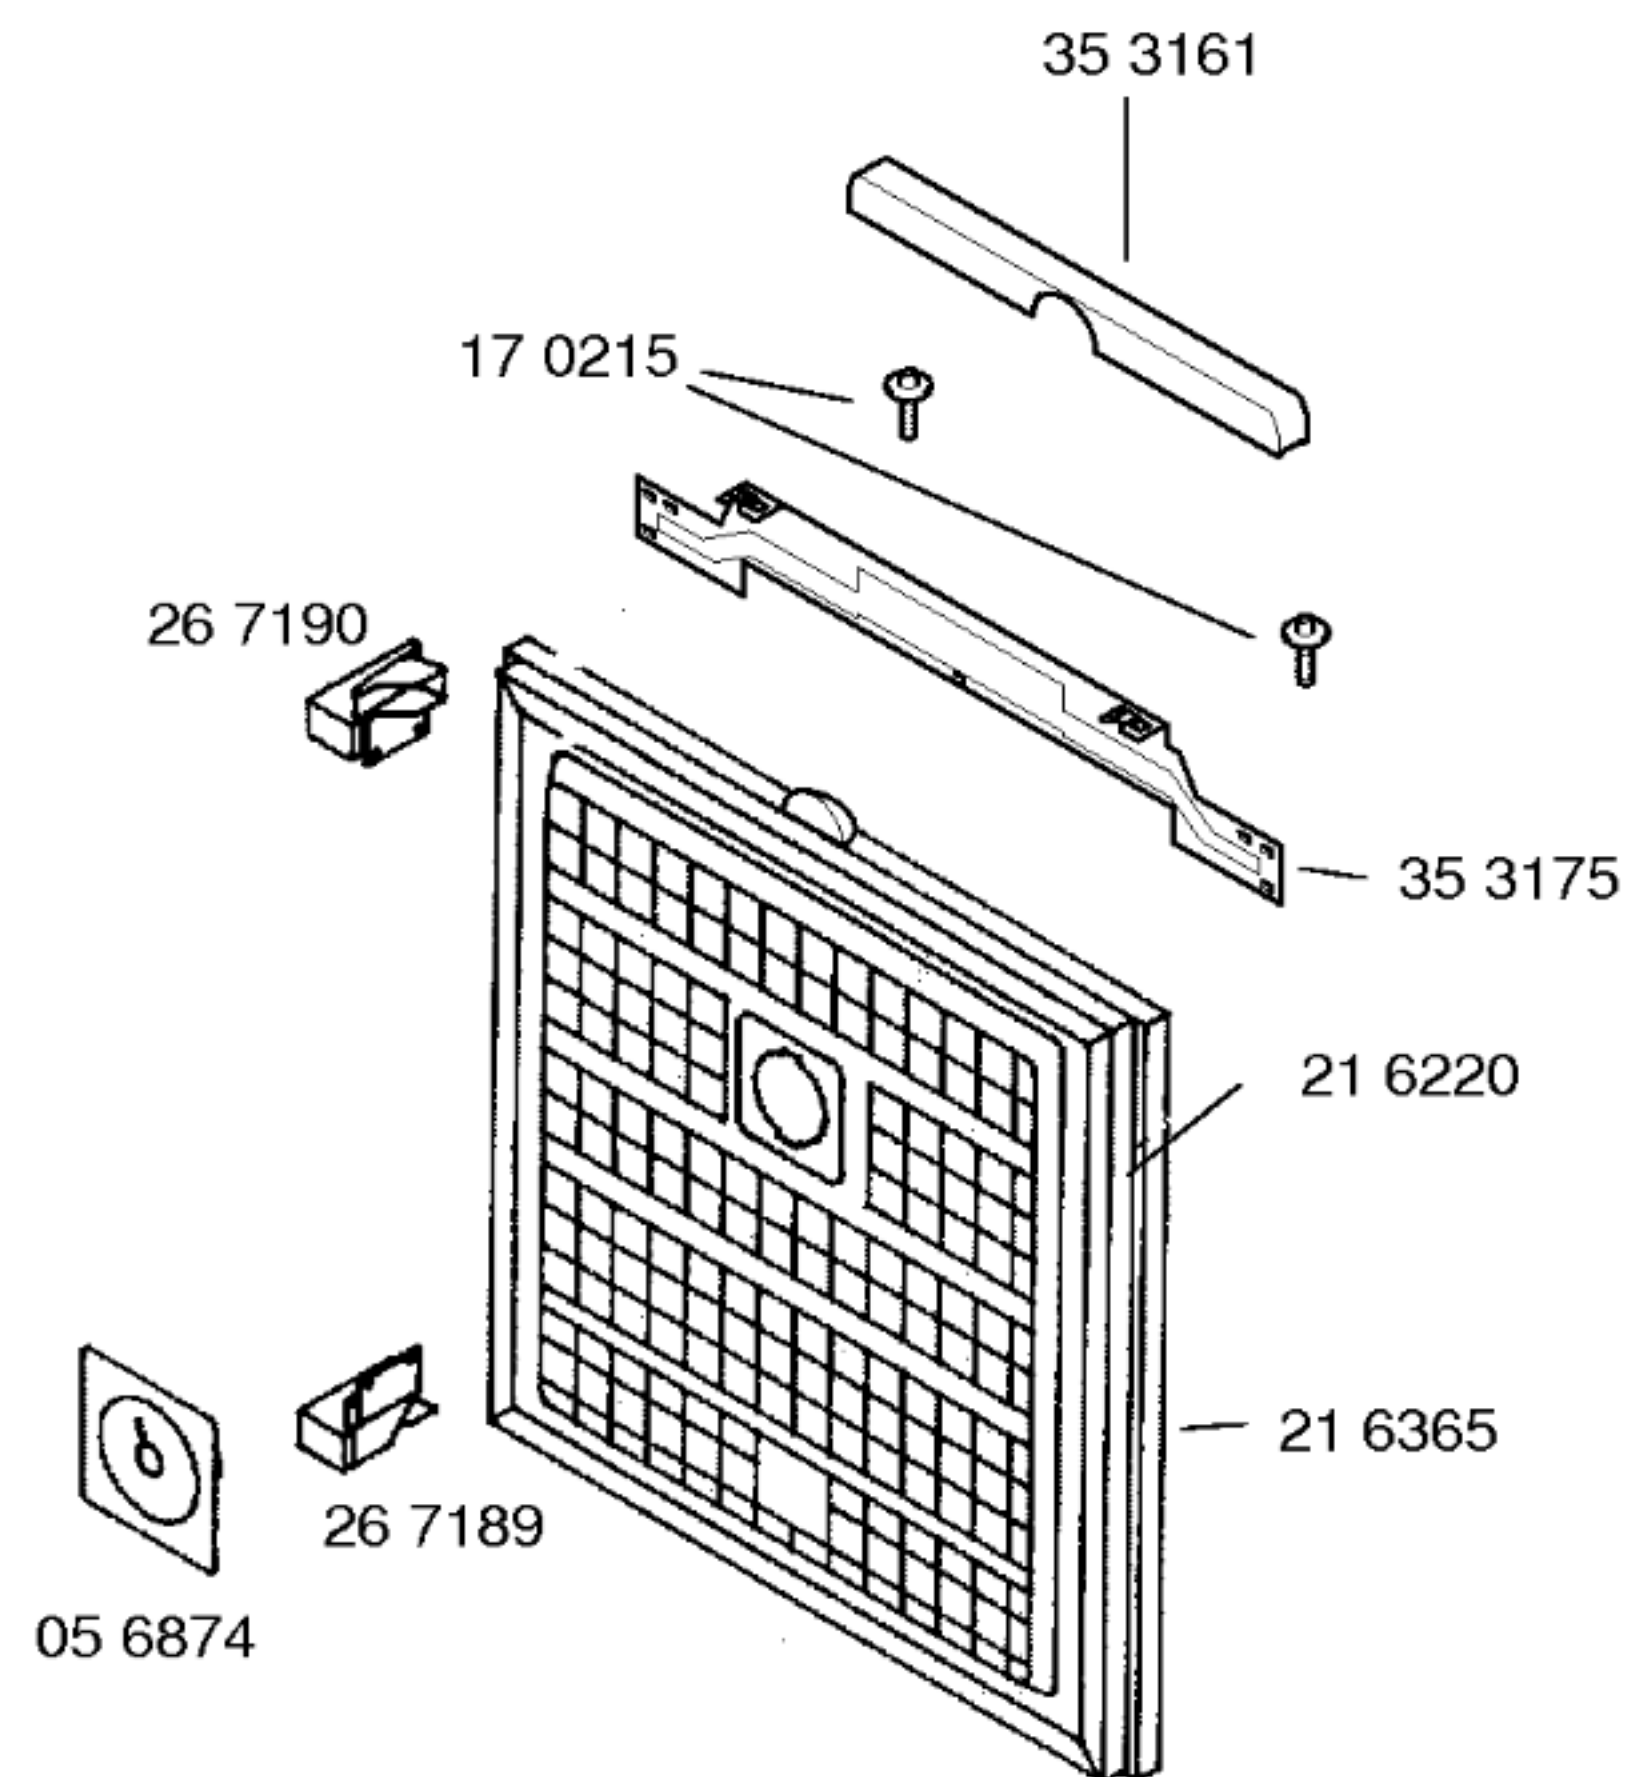

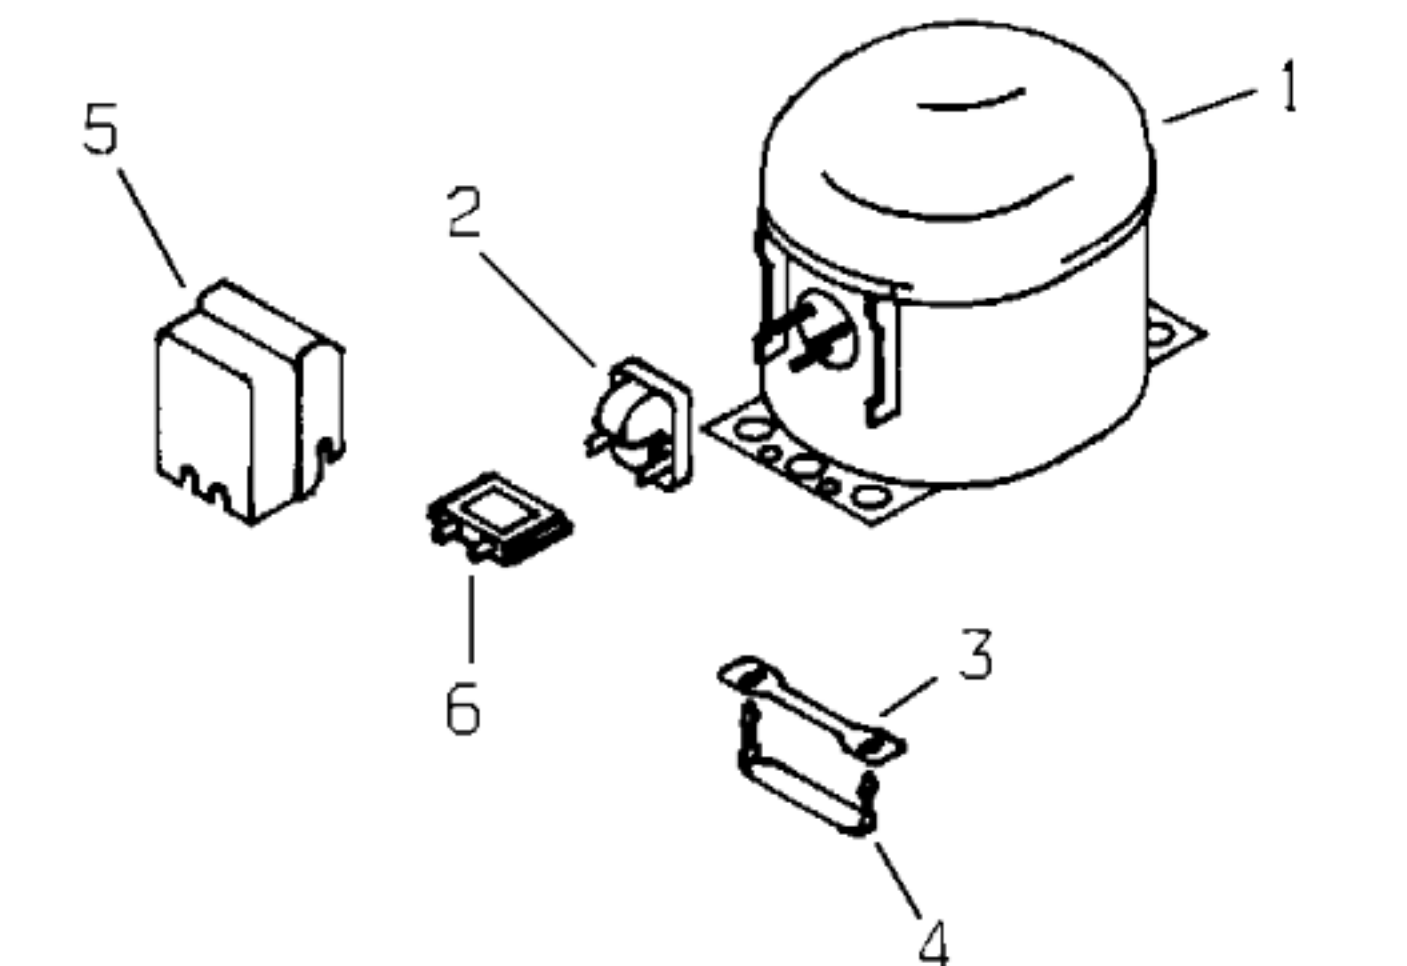

Pos.			
	Danfoss		
	TLES 9 KK2		
1	14 1308		
2	15 1055		
3	15 1919		
4	15 1918		
5	15 1072		
6	15 1053		
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLES 9 KK2	
Förderleistung/Delivery/Débit	l/h	1584	
Anlaufstrom/Starting current/Cour de démarrage	A	4,5	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	16,5
	Hi/aux	Ω	16,9
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K56-1	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“	°C	-25
Valeurs de commutation	„aus“		-15
(„abtauen“ od.)	„alarm“		-36
			-23
Füllmenge/Fill.quantity/Charge	R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée	W	70	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur		MES F61-10	
Widerstand/Resistance/Résistance	Ω	680	
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild