



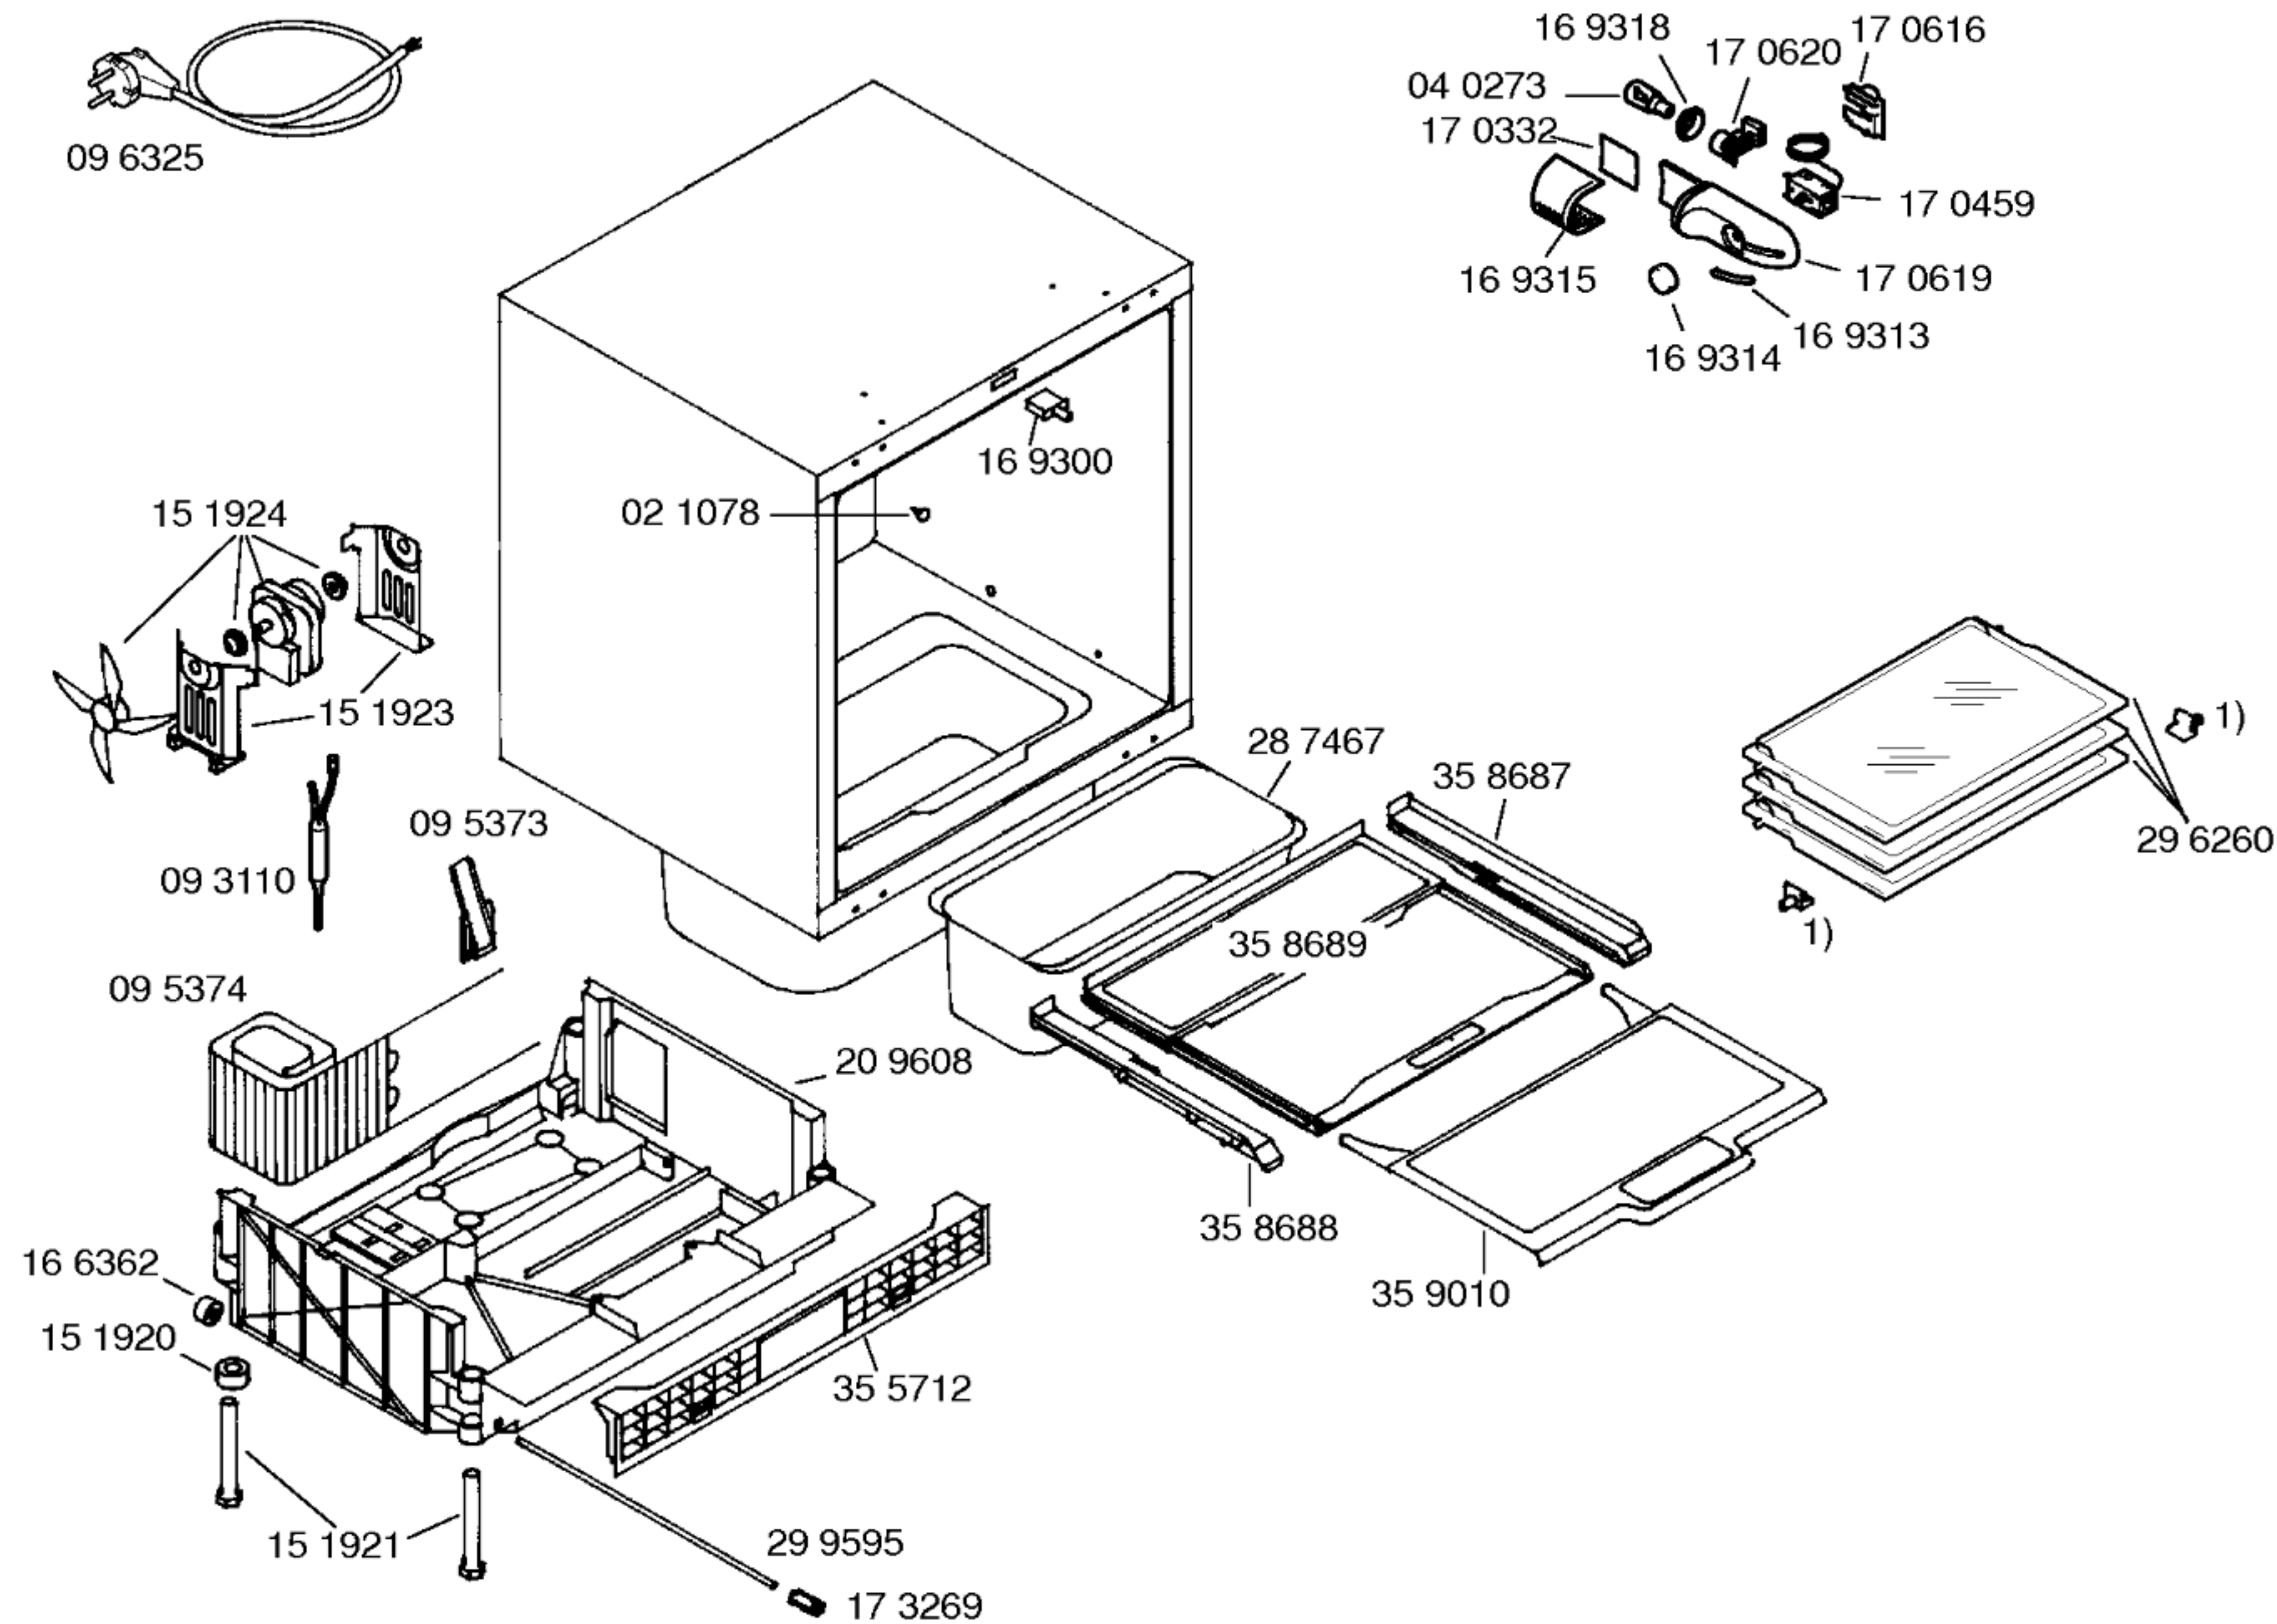


Mat. – Nr. – Konstante
 3740

Gebrauchsanweisung
 58 0475
 Montageanleitung
 52 3494 (V01, V02)
 54 6639 (V03)
 Beistellsatz
 26 8429

1) 16 5789

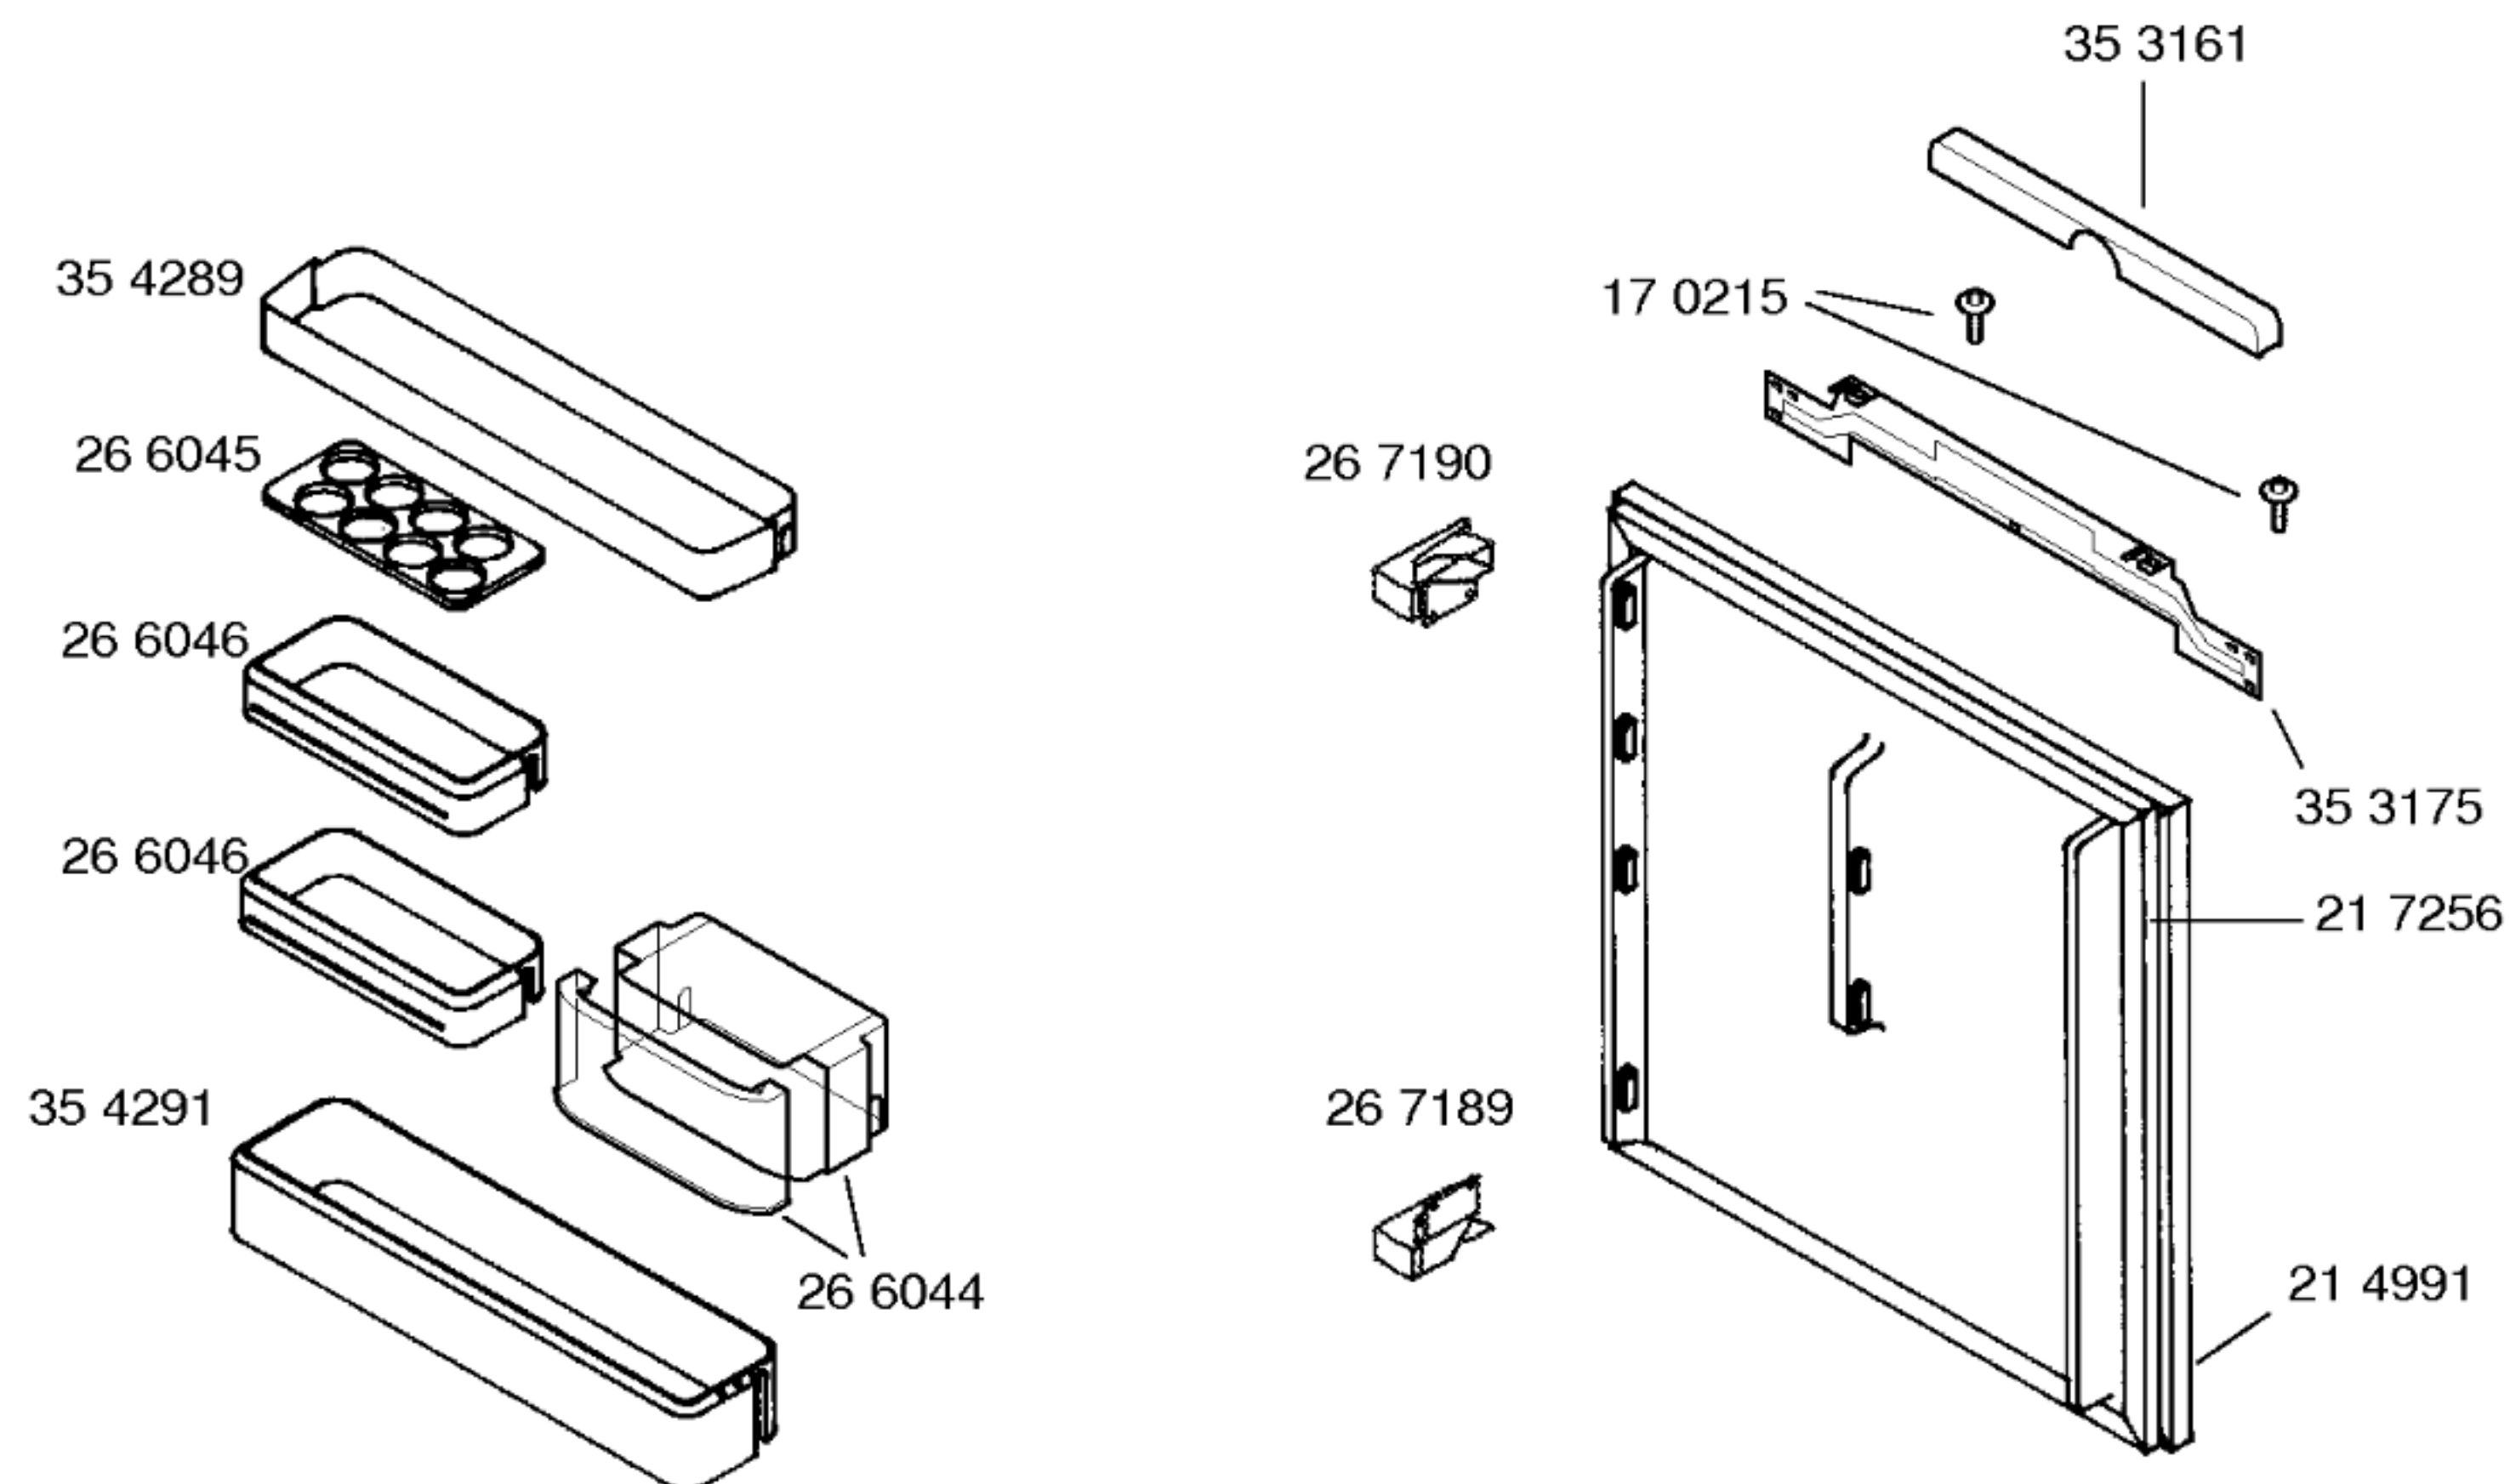

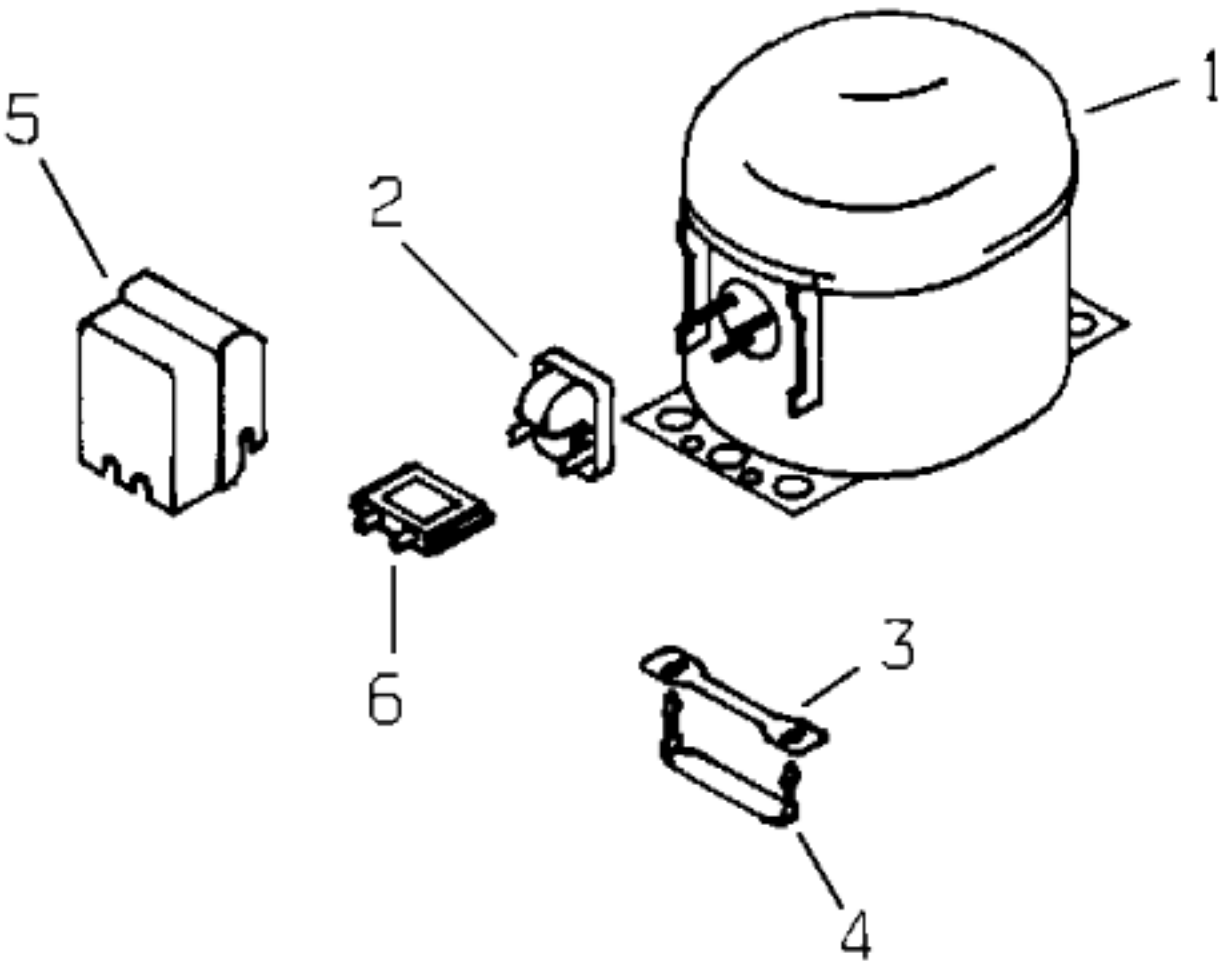

Pos.	V01	V02	V03
	Danfoss	Goldstar	Danfoss
	TLES 5 KK2	NDA62NAEM	TLES 5,7 KK3
1	14 1633	14 2037	14 4918
2	15 1055	17 0743	15 1055
3	15 1919	15 1919	15 1919
4	15 1918	15 1918	15 1918
5	15 1072	17 0744	15 1072
6	15 0760	15 0745	15 0760
7			
8			
9			
10			
11			
12			