




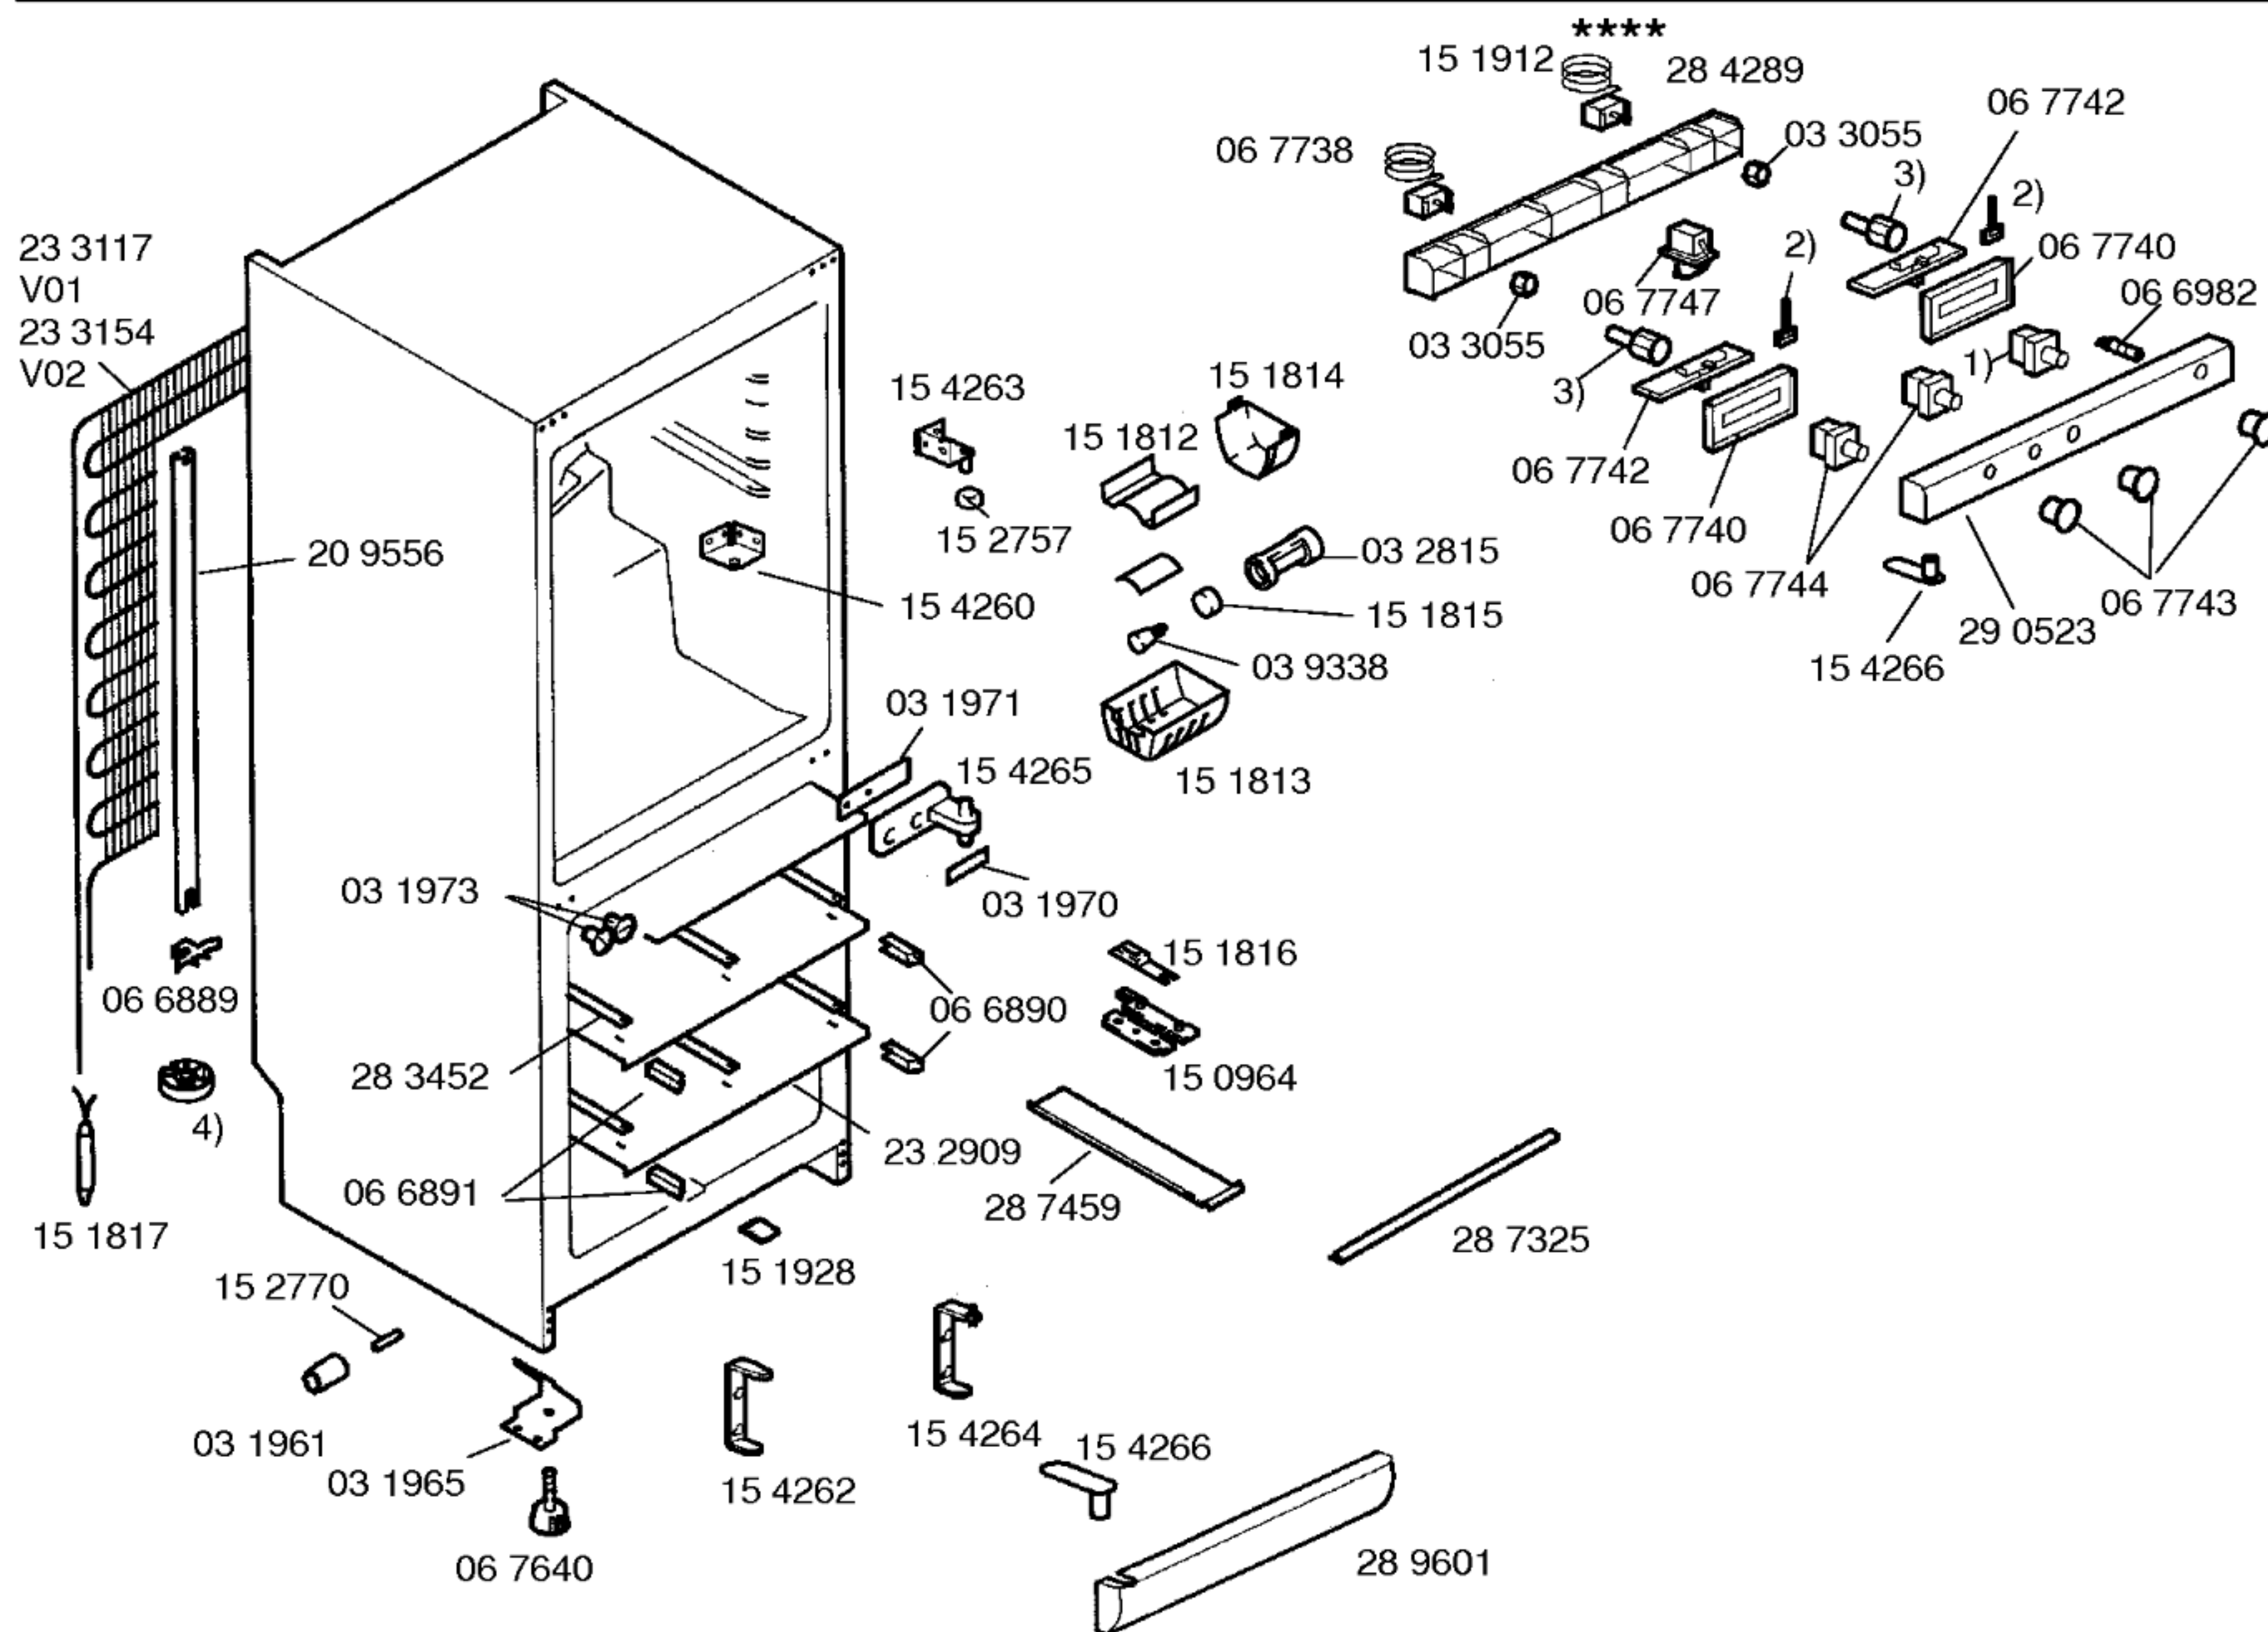

Libro de instrucciones
51 7464
(E,P,GB,F,NL,GR)
Instrucciones de montaje
51 7252
(D,GB,F,I,NL,E,P,GR)

- 1) 06 7745
 - 2) 06 7748
 - 3) 06 7746
 - 4) 15 2763
- V01
15 2771
V02

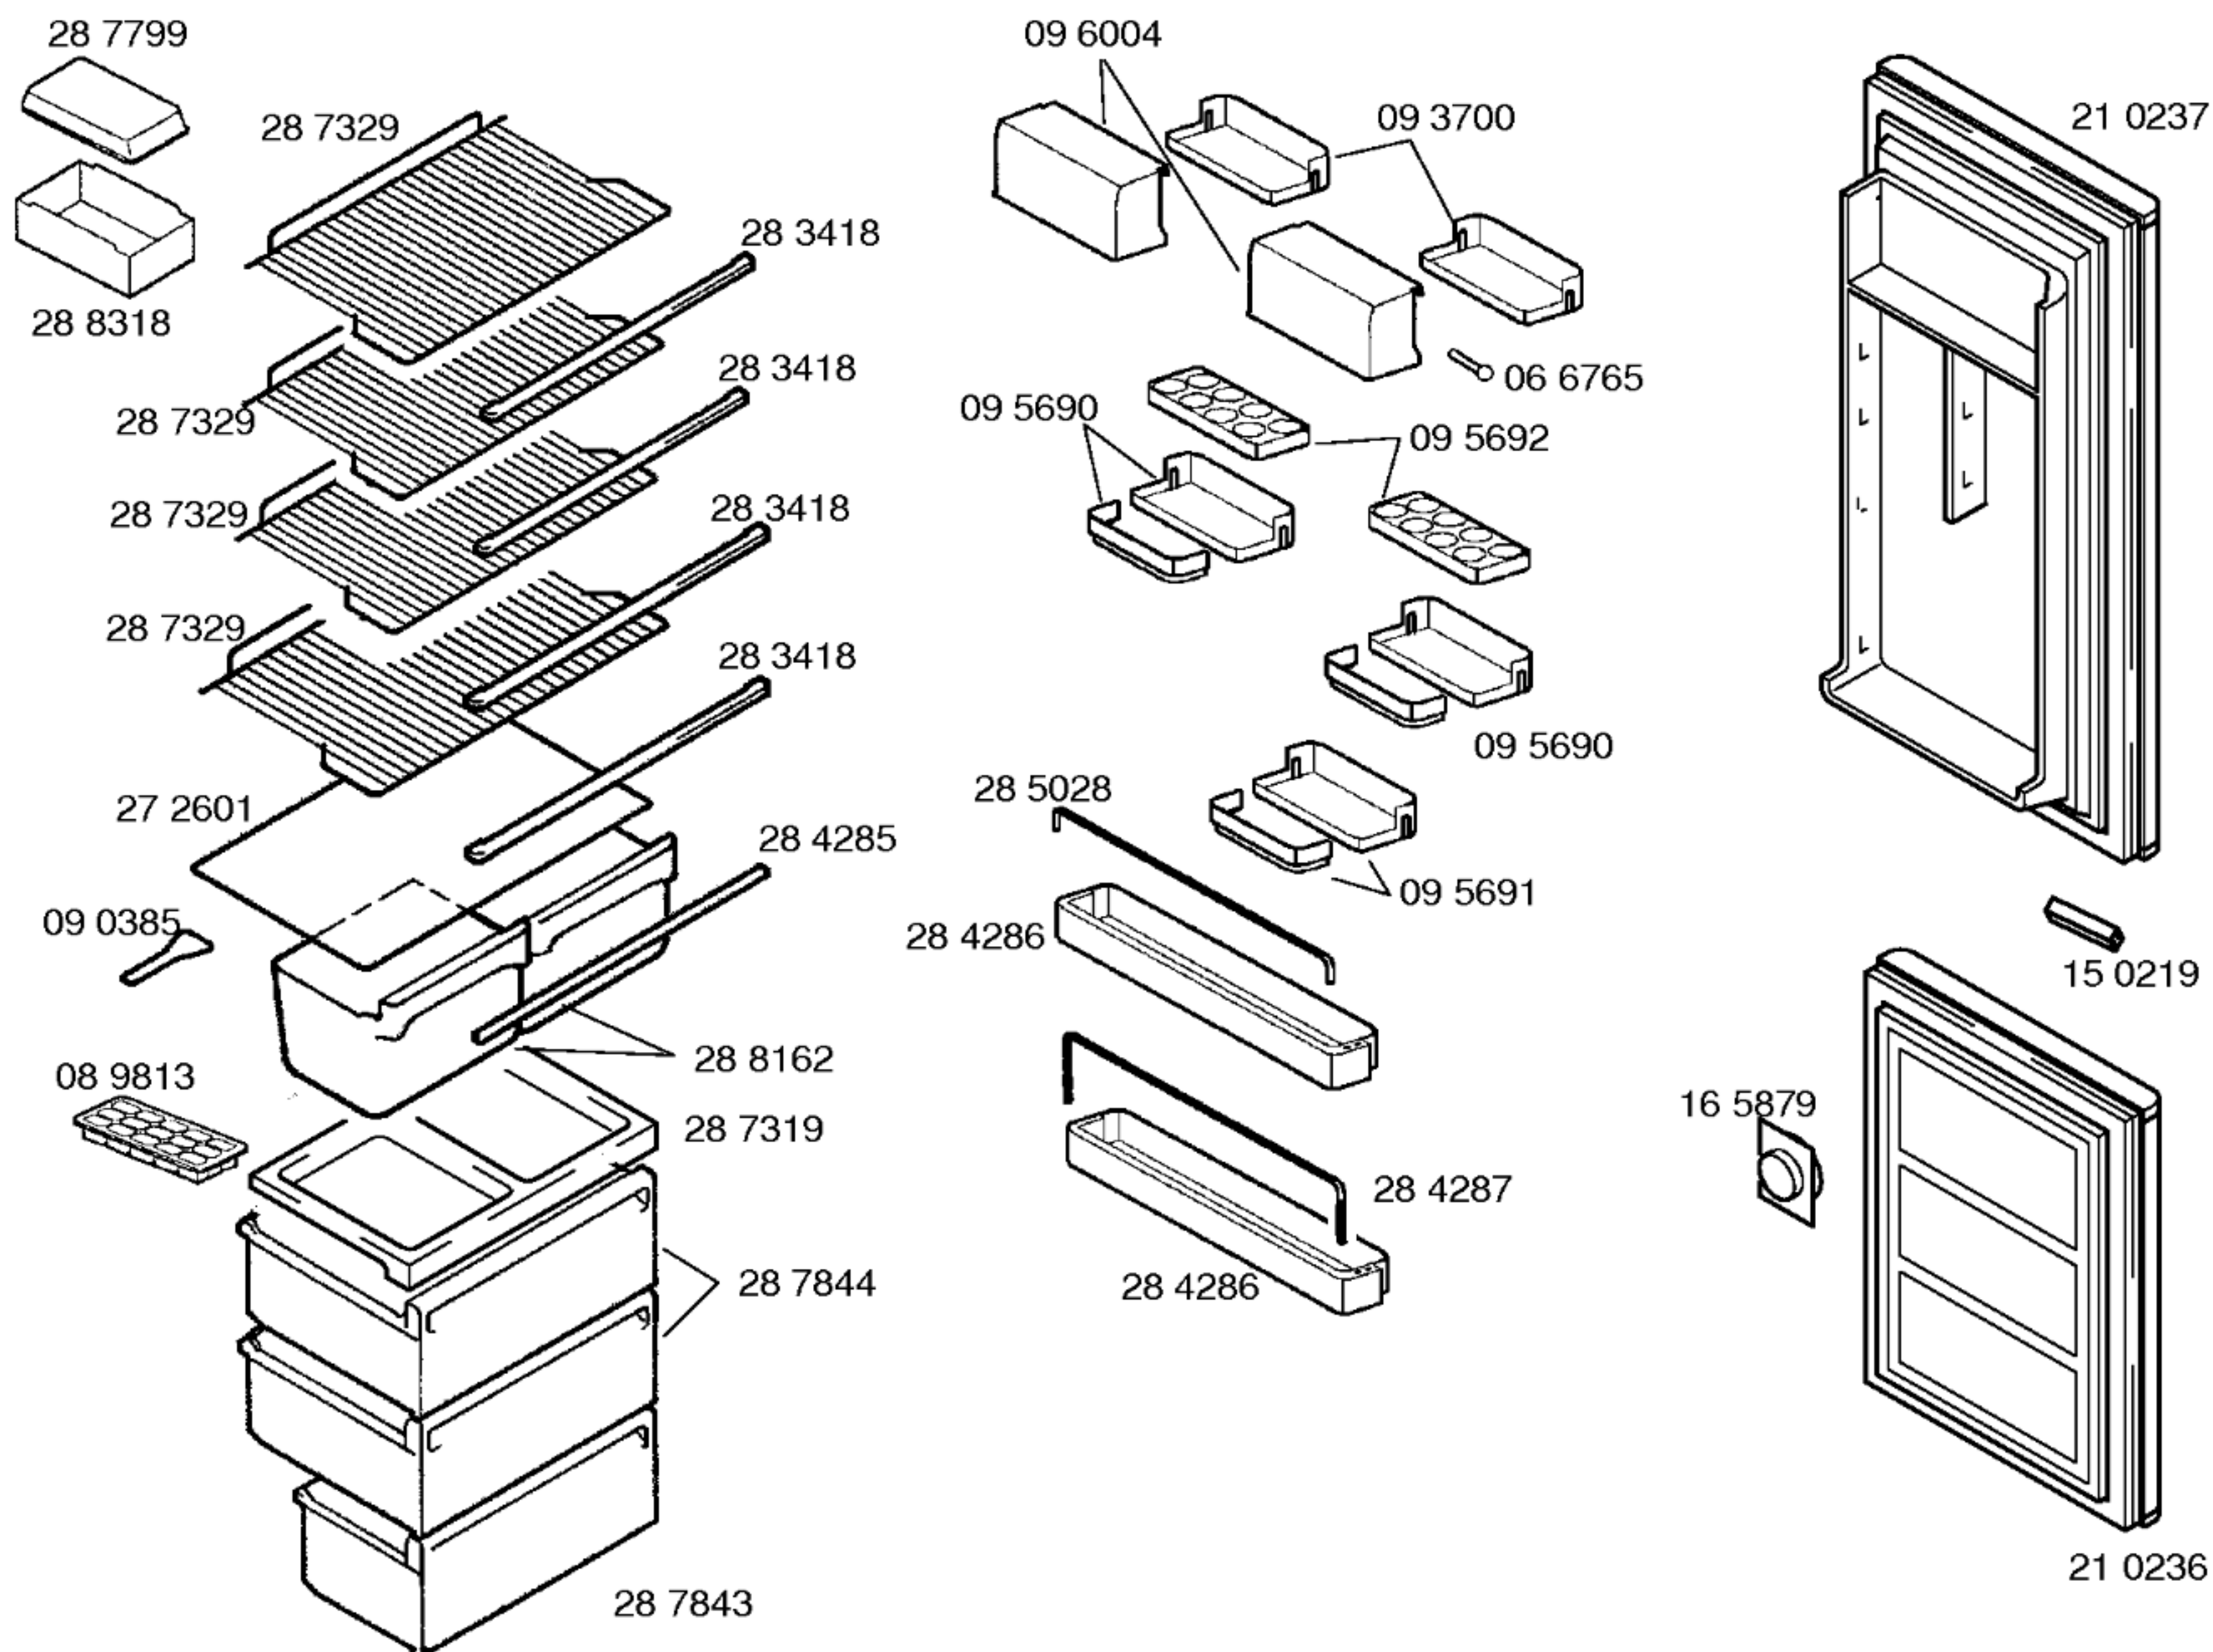

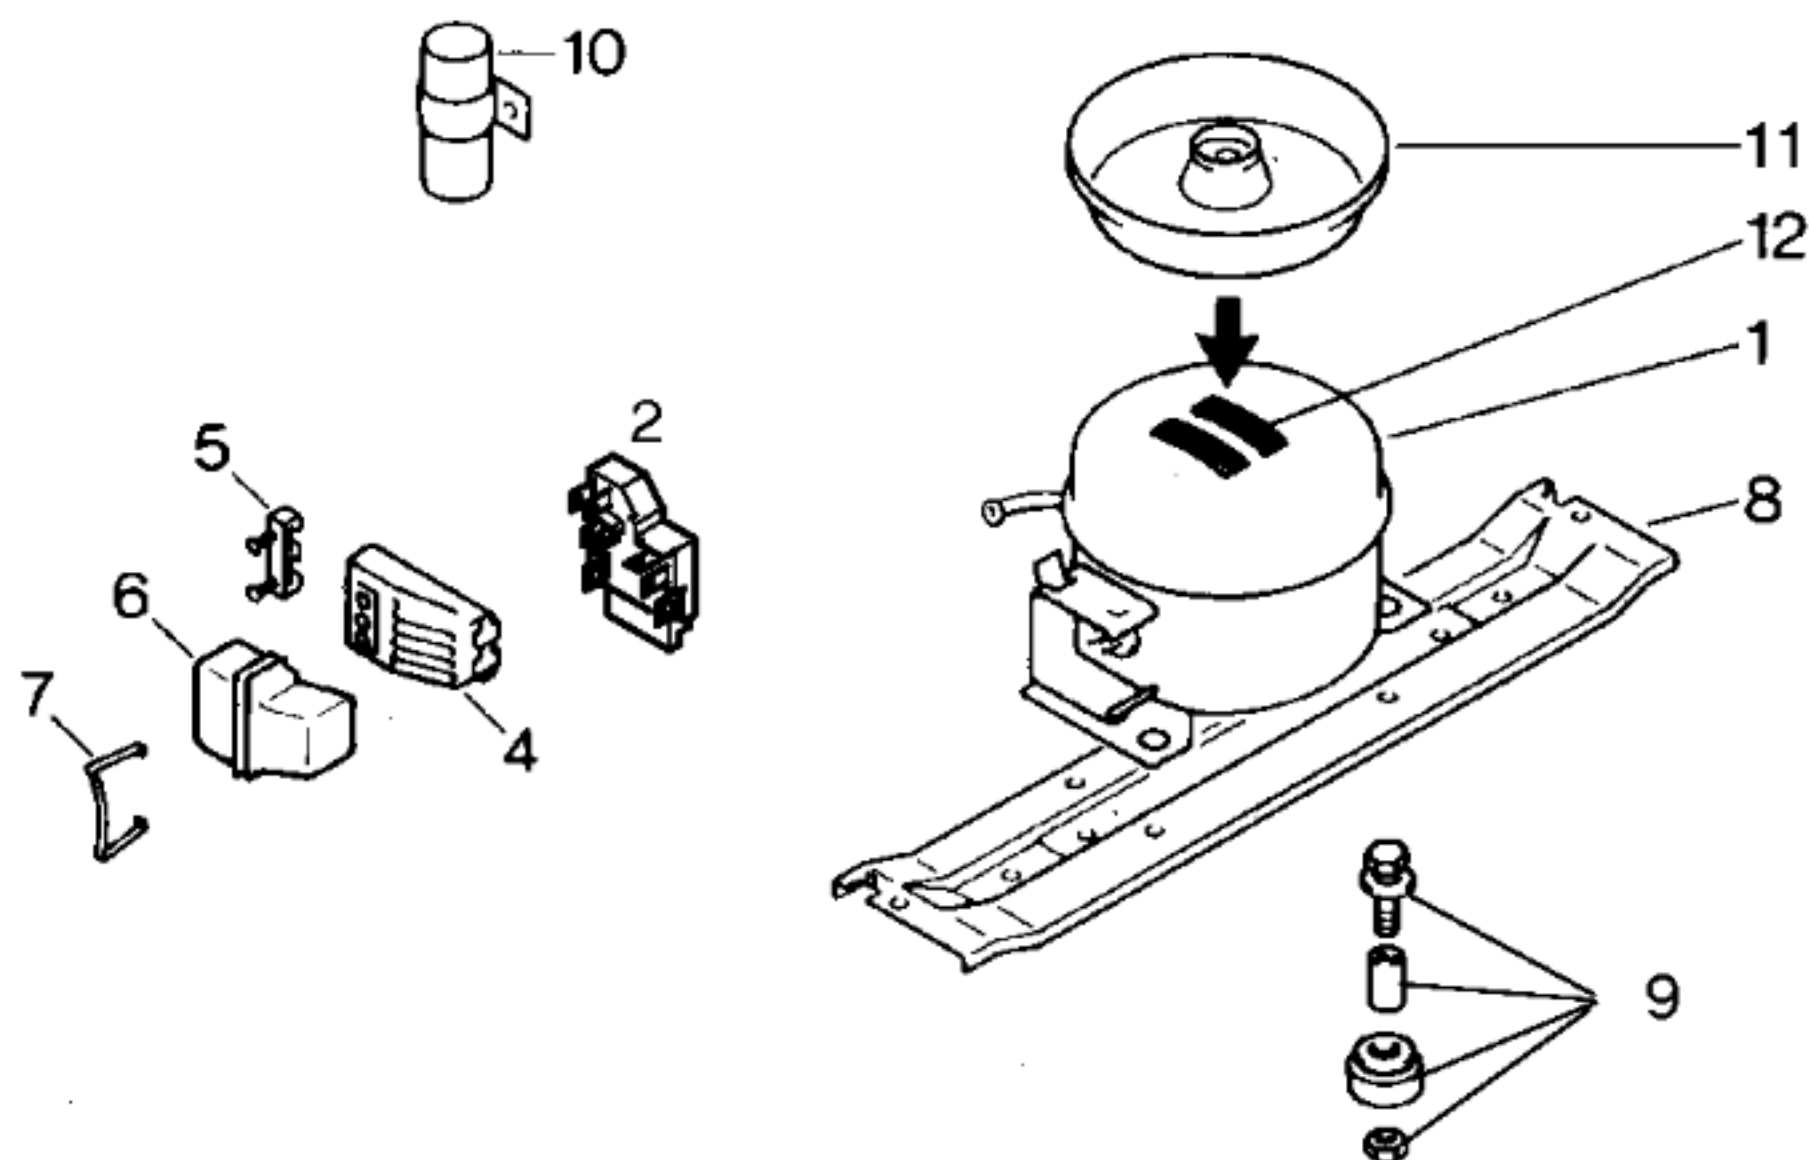

Pos.	V01 Matsushita SB43C90WA	V02 U. Hermét. GL45AA	V01-V02 Aspera BPM1084Z
1	14 1291	14 1374	14 1343
2	15 1824	15 5130	15 4315
3			
4			
5			
6			
7			
8	28 8253	28 0162	
9	05 0166	05 0166	05 0166
10			
11	09 5320	09 6883	
12			
13			

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
	V01	V02	V01-V02
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	Matsushita D77C15RA 6,45 18,92 31,40	U. Hermét. GL45AA 8,30 21,20 24,30	Aspera BPM1084Z 27,80 38,5
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	DANFOS 077B62 MIN. MAX +6° — -13° -28°	DANFOS 077B62 MIN. MAX. +6° -13° -28°	RANCO K54L1940 MIN. MAX. -14° -22° -20° -28° -10° -18°
Füllmenge/Fill. quantily/Charge/Carga 134a g	50	50	125
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	94	87	84
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W			
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm			
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V			
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			