




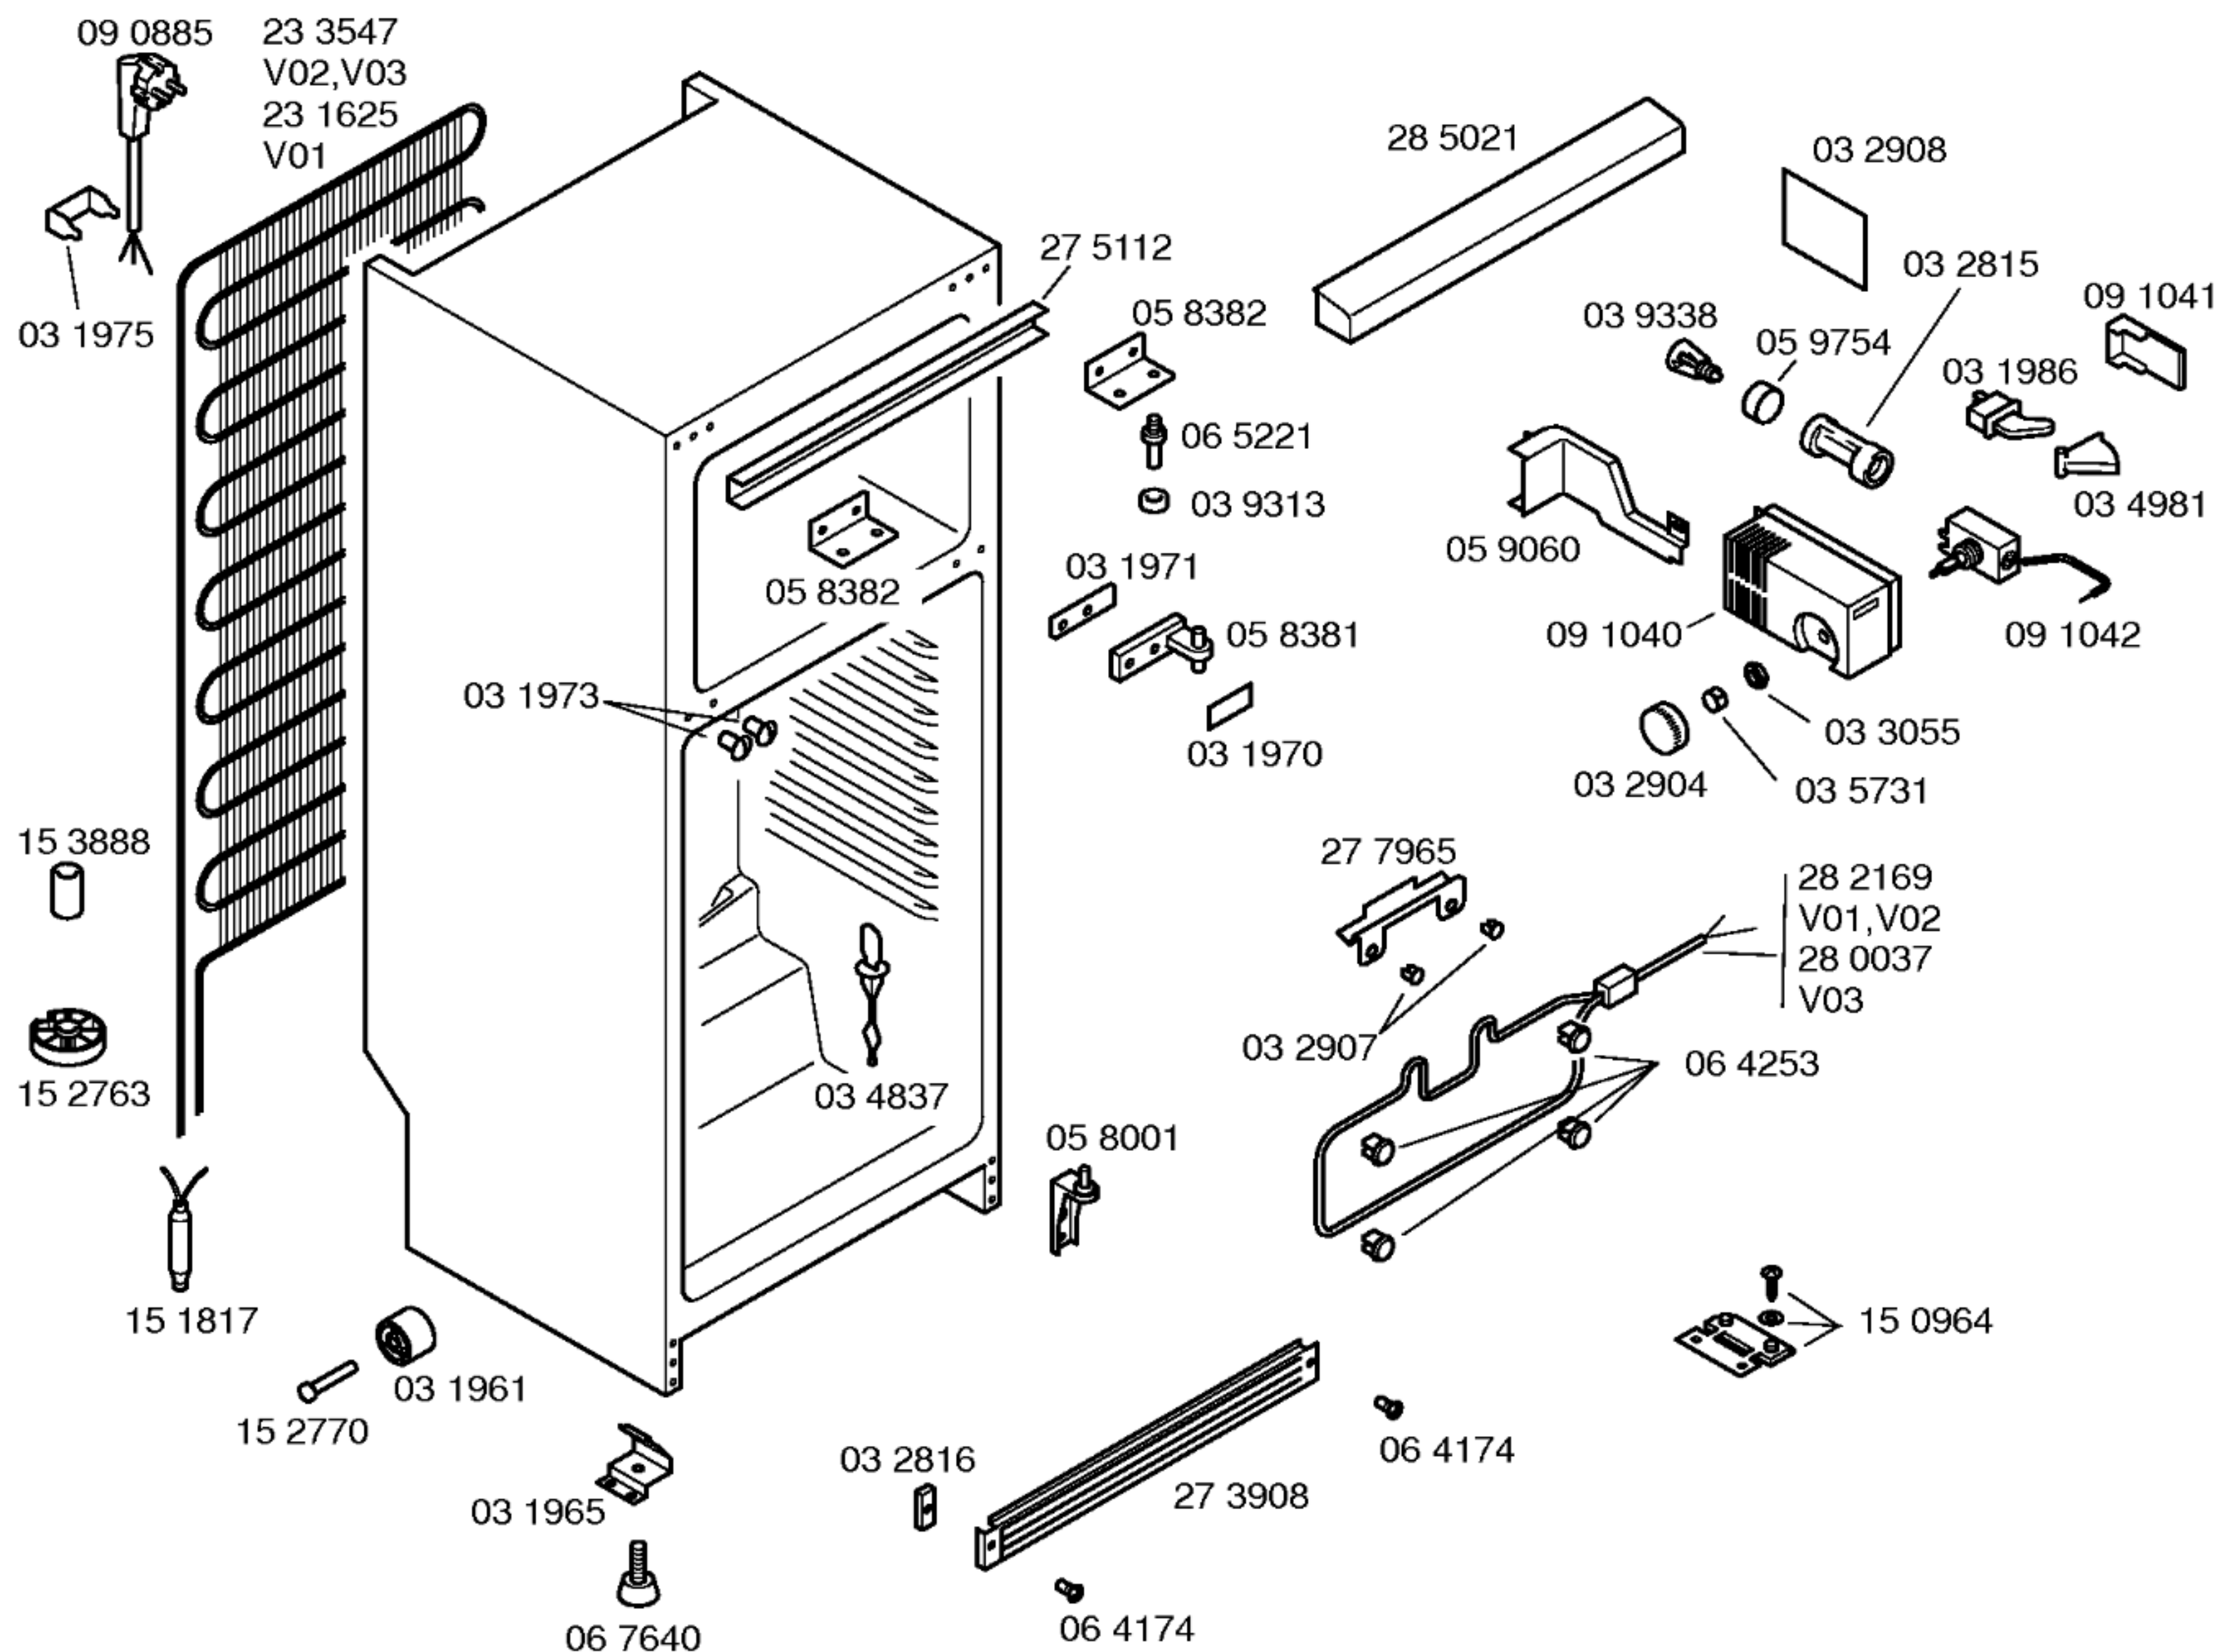

Libro de instrucciones
51 5200
(E, P, GB, F, NL, GR)

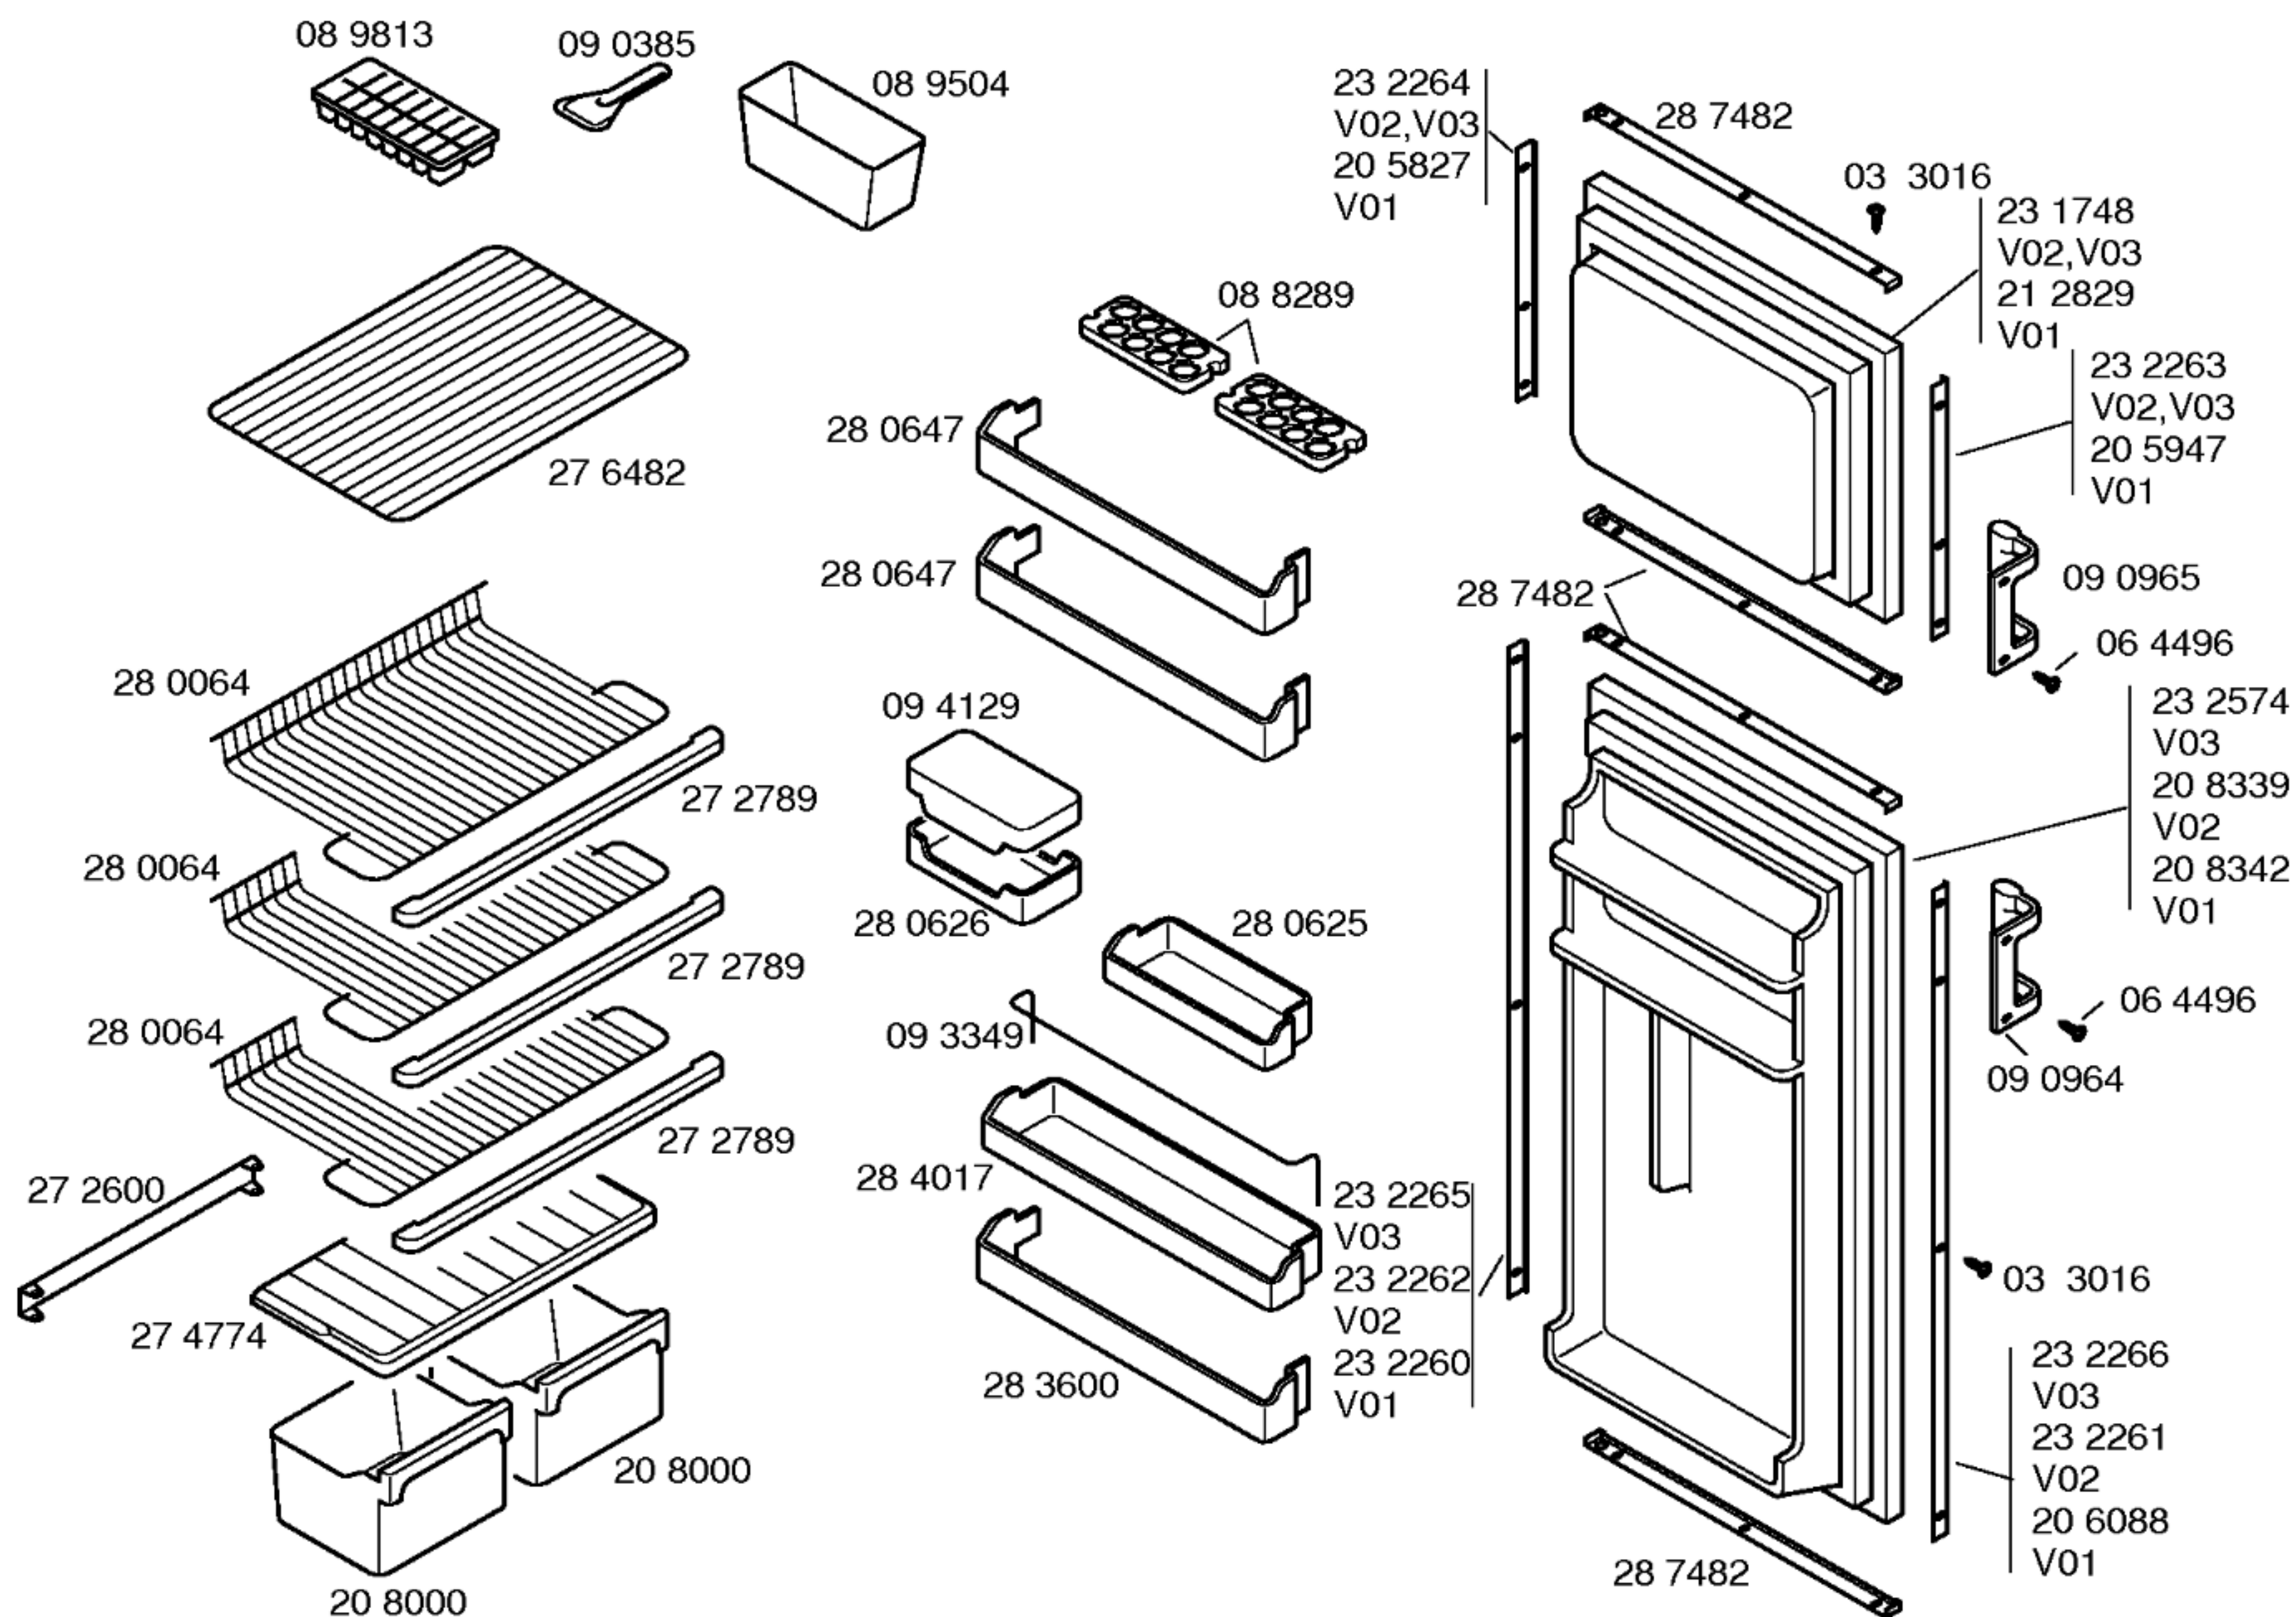

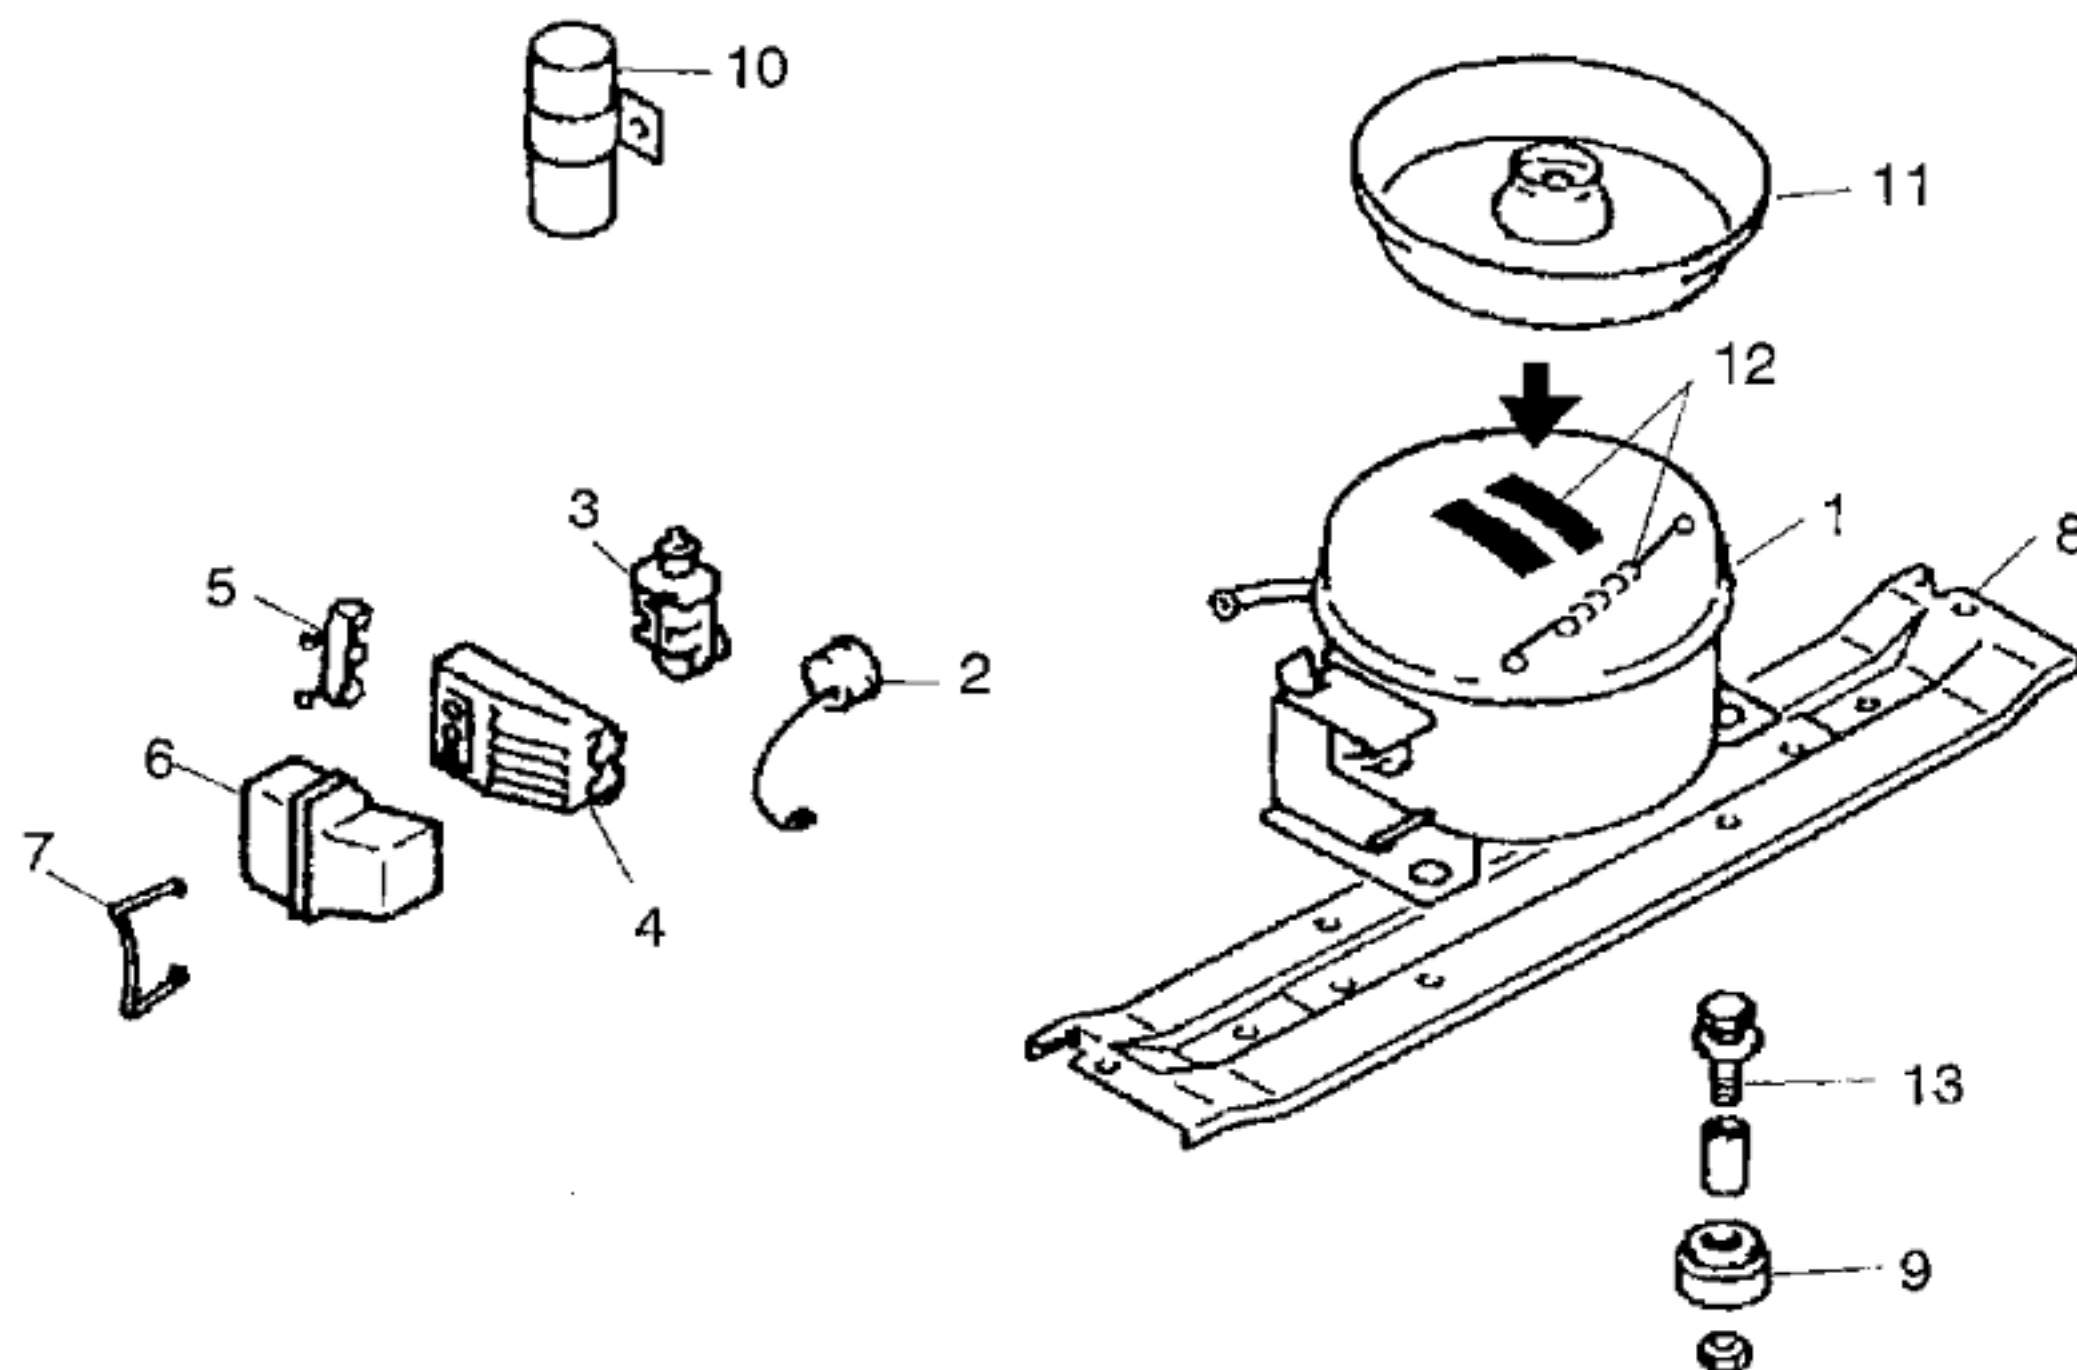

	V02 - V03	V01	
	U. HERMÉTICA	U. HERMÉTICA	
	L88AV	L76AT	
1	14 0608	14 0788	
2	03 5116	03 5242	
3	03 5337	03 5122	
4			
5			
6			
7			
8	28 0162	28 0162	
9	06 4260	06 4260	
10			
11	27 5629	27 5629	
12	03 5392	03 5392	
13	06 4259	06 4259	

TECHNISCHE DATEN/ TECHNICAL DATA/ DONNEES TECHNIQUES/ DATOS TECNICOS

Verdichter/ Compressor/ Compresseur/ Compresor		U. HERMÉTICA	U. HERMÉTIC
Typ/ Type/ Tipo		L88AV	L76AT
Förderleistung/ Delivery/ Debit/ Aspiración	l/h	150	125
Anlaufstrom/Starting current/ Cour. démarrage/ Int. arranque	A	10,5	7,1
Widerstand/ Resistance/ Resistencia. Ha/main/prin.	Ohm	9,9	10,8
Hi/aux.	Ohm	22,2	32,3

Temp. Reyler/ Thermostat/ Termostato doble bulbo		ATEA	ATEA
Typ/ Type/ Tipo		MANUAL	MANUAL
Reglerstellung/ Position/ Conexión		+ 5 °	+ 5 °
Schaltwerte/ Switching values/ ..ein"/conex. °C		- 15 °	- 15 °
Valeurs de commutation/ Desconex. ..aus"/descon. ..alarm"		- 32 °	- 32 °

Füllmenge/ Fill. quantity/ Charge/ Carga	R12	g	230	230
--	-----	---	-----	-----

Anschlußwert/ Comm. load/ Puiss. Connect./ Potenc.	W	150	125
--	---	-----	-----

Heizung/ Heater/Chaufrage/ Resistenc. descongel.			
Widerstand/ Resistance/ Resistencia	Ohm	3782	3782
Leistung/ Power/ Puissance/ Potencia	W	12,5	12,5

Ventilator/ Blower/ Ventilateur/ Ventilador			
Widerstand/ Resistance/ Resistencia del ventilador	Ohm		

Magnetventil/ Magnetic valve/ Electrovanne/ Electrovalvula			
Widerstand/ Resistance/ Resistencia	Ohm		
Spannung/ Voltare/ Tension/ Tensión	V		

Temp. Reyler/ Thermostat/ Termostato ambiente para ventilador refrigerador.			
---	--	--	--

V02 - V03

V01