




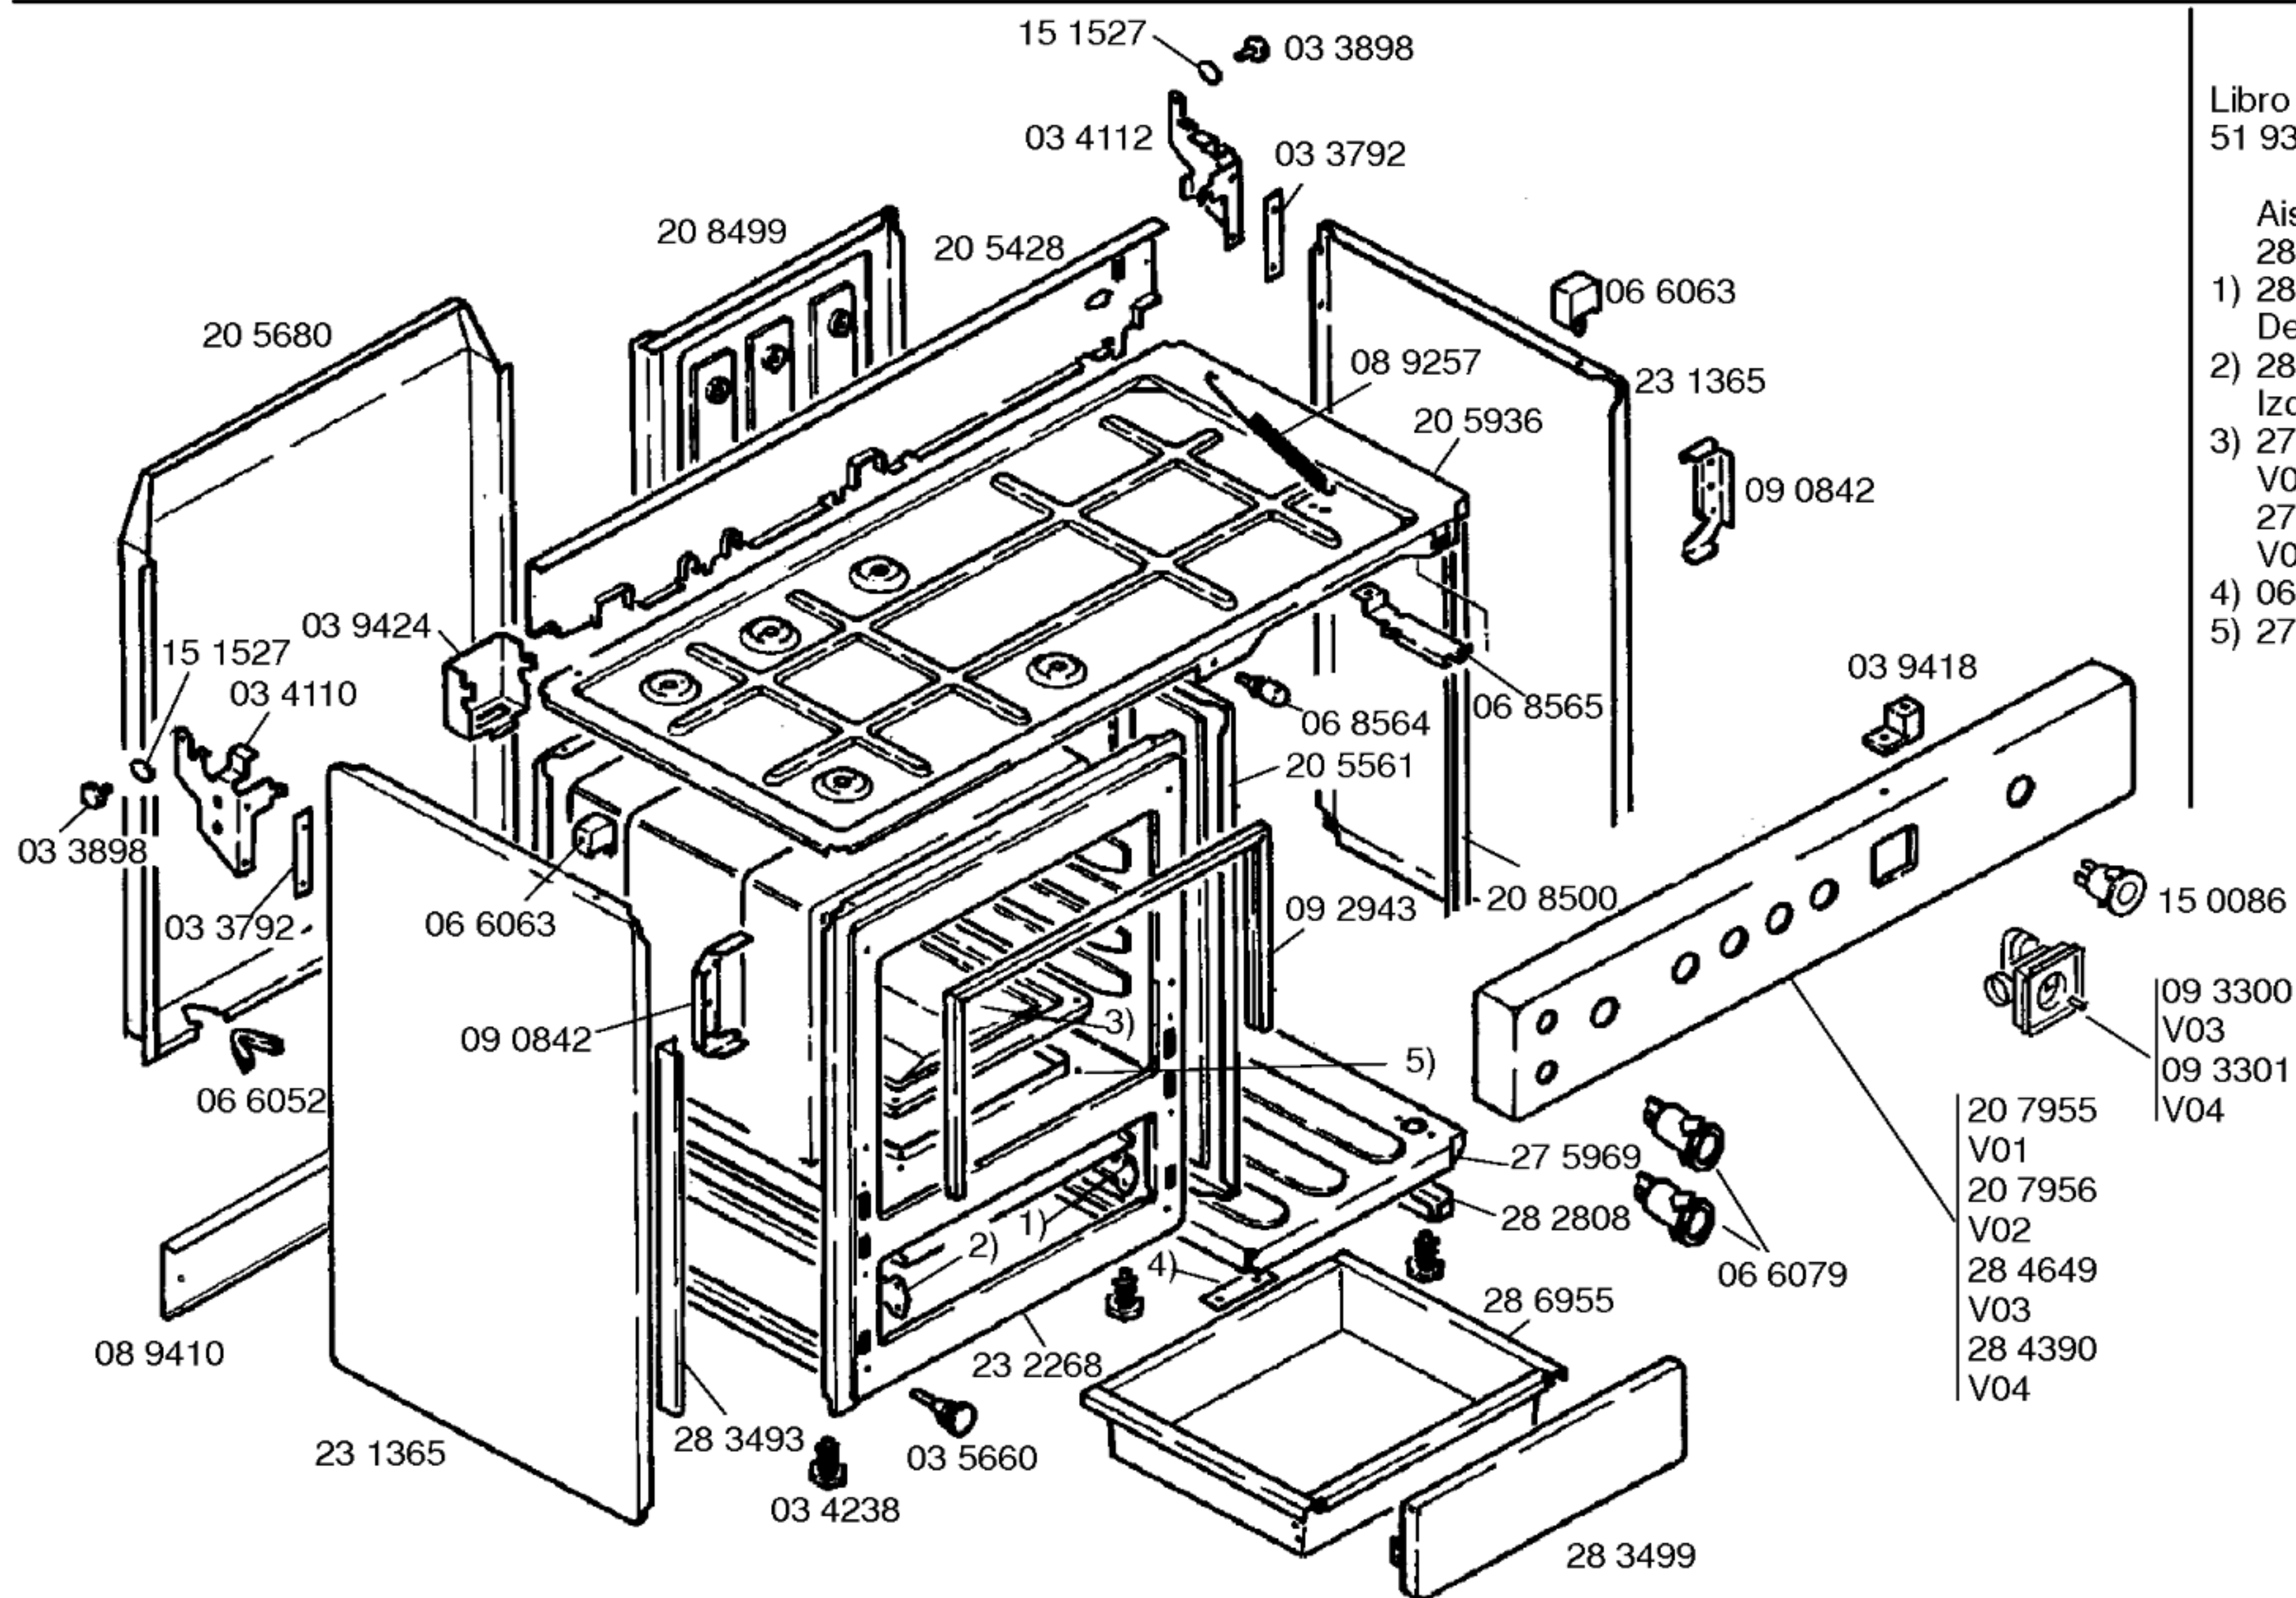


Libro de instrucciones
51 9303


Aislante
28 2818
1) 28 4081
Derecha
2) 28 4082
Izquierda
3) 27 4895
V01,V03
27 4425
V02,V04
4) 06 4371
5) 27 6219

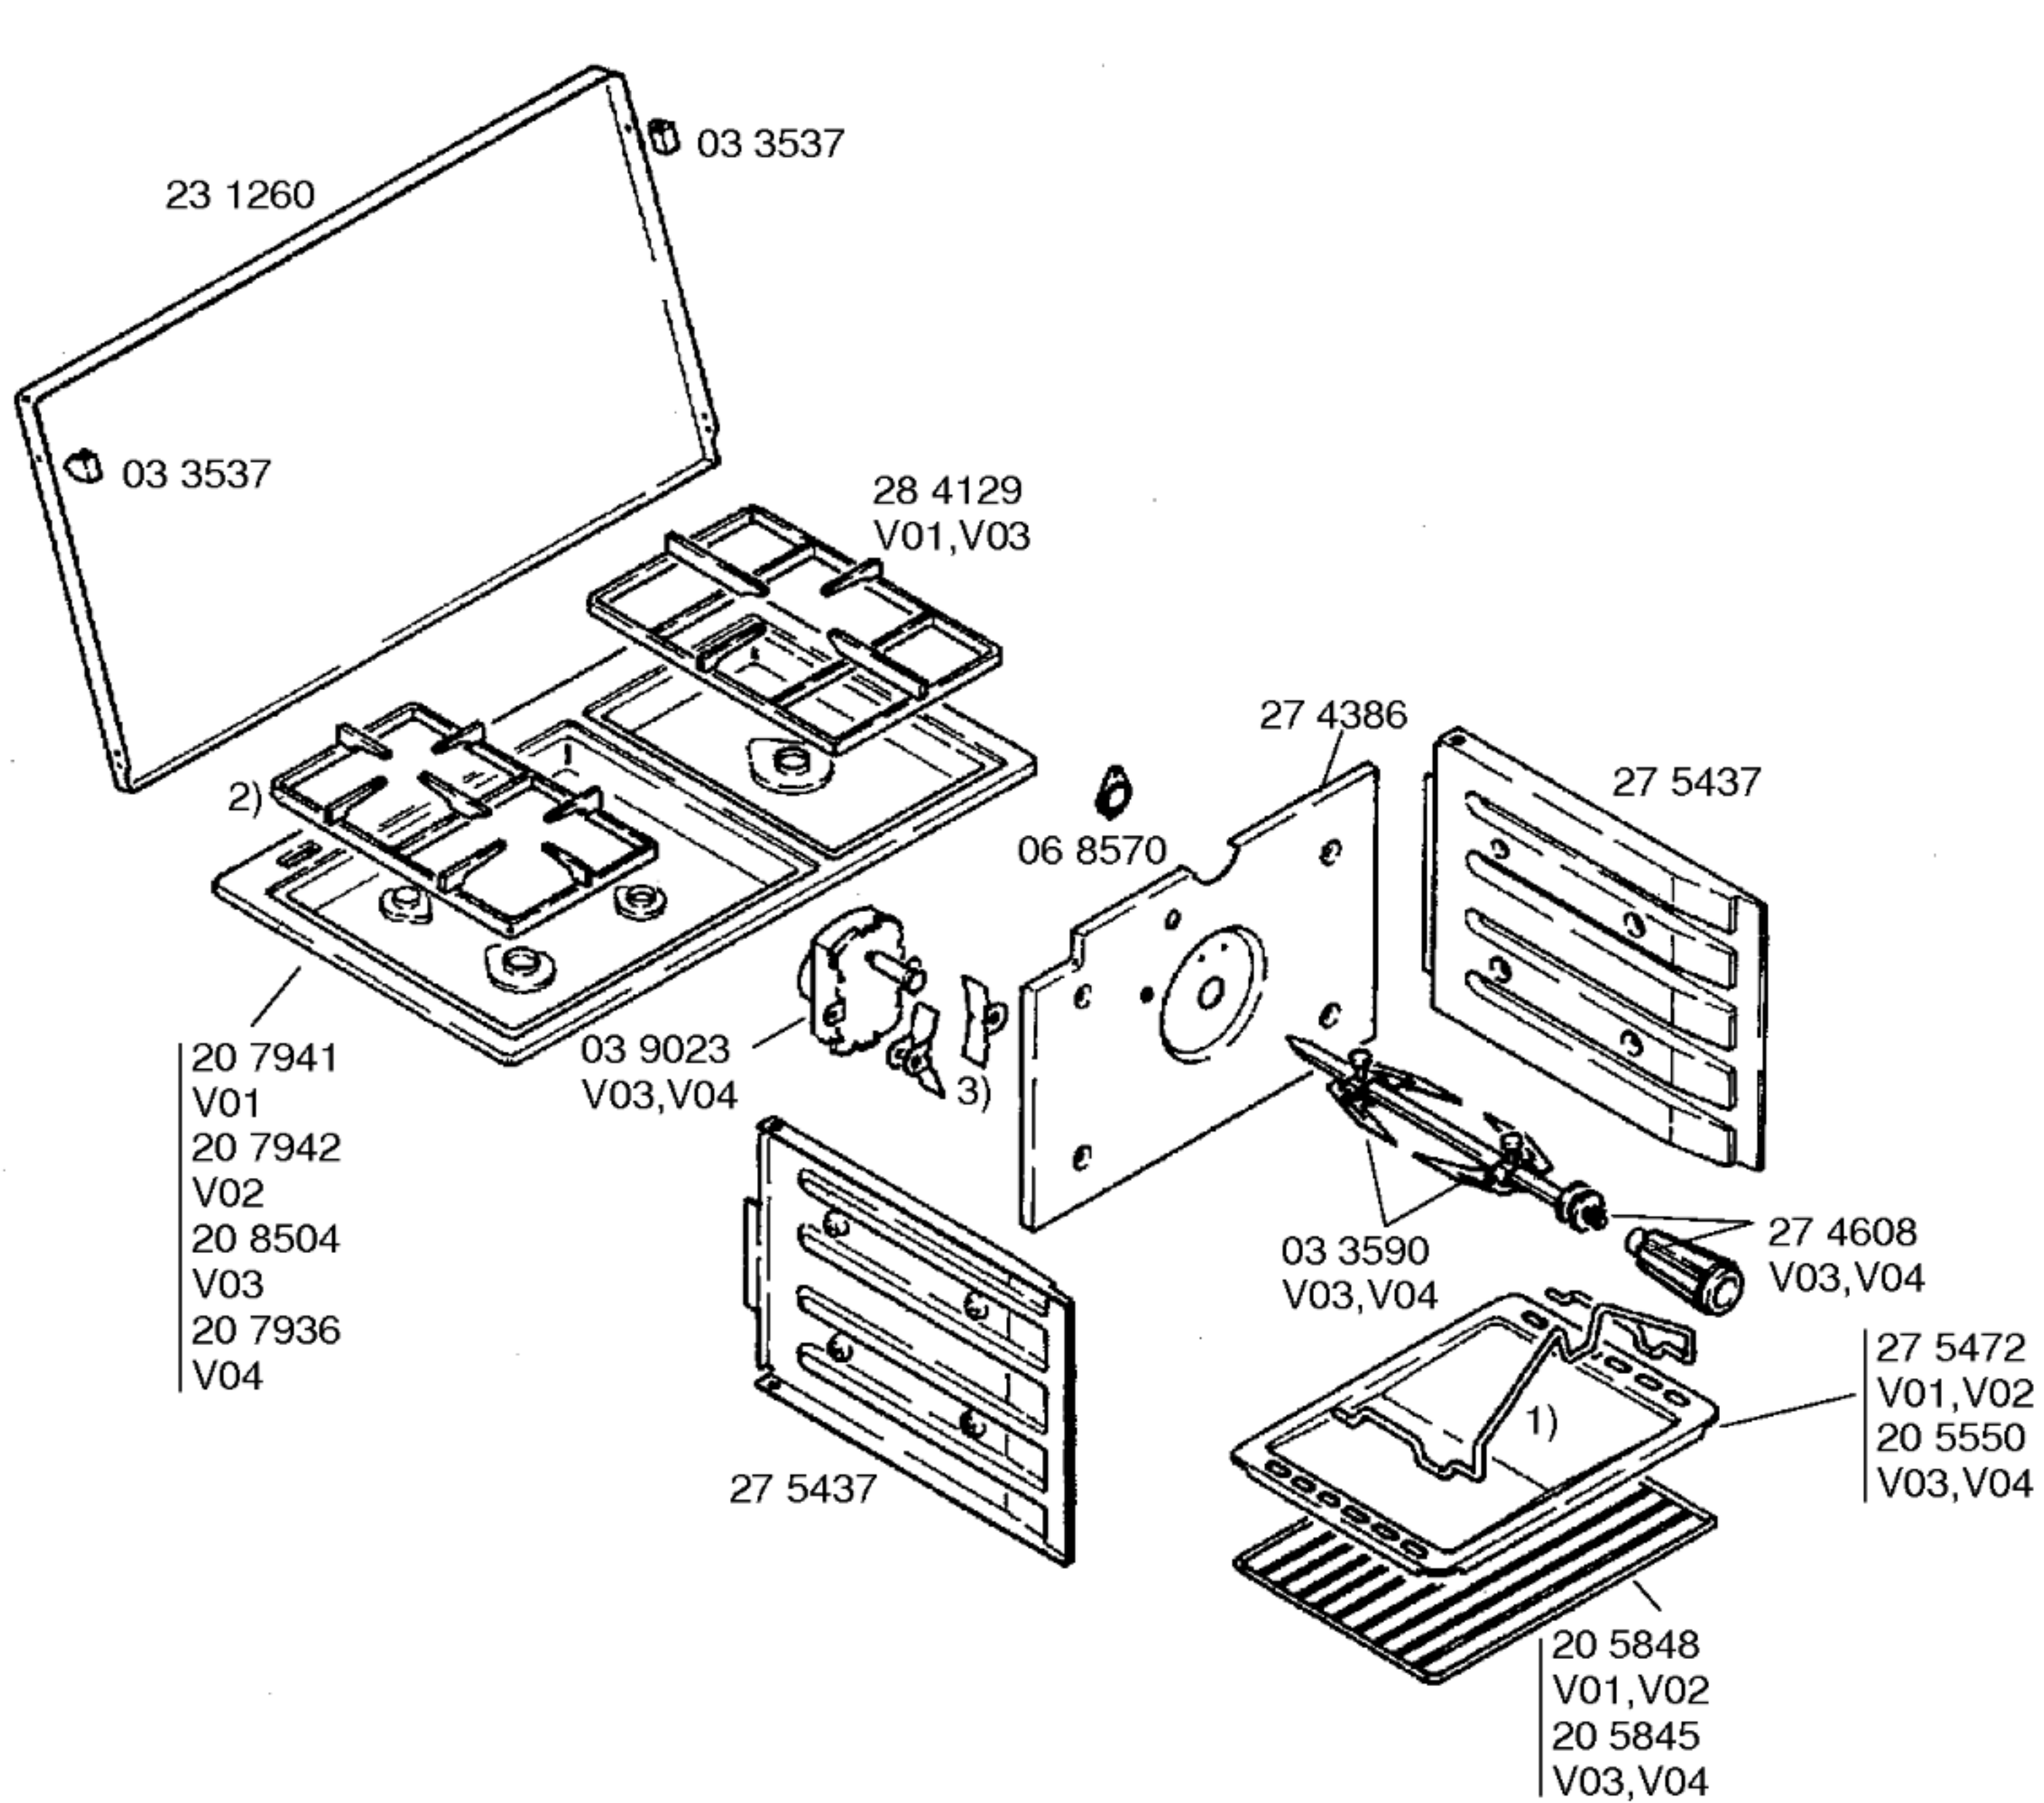


- 1) 27 4639
V03,V04
- 2) 28 9612
V01,V02
28 4156
V03
- 3) 03 3520
V03,V04

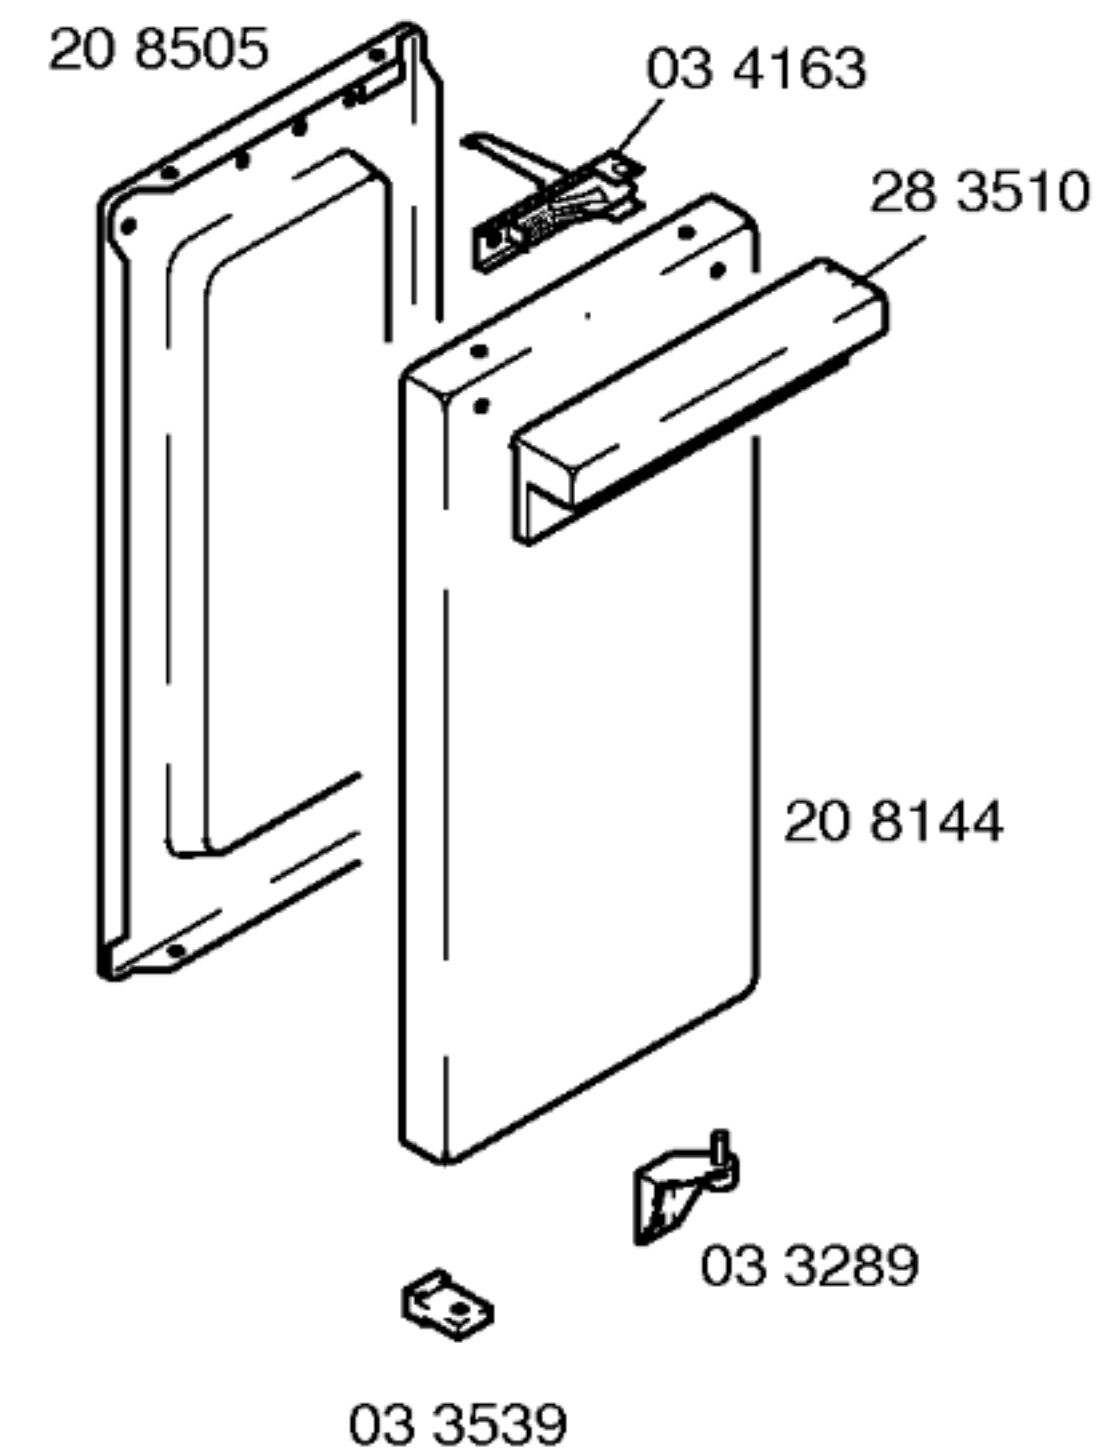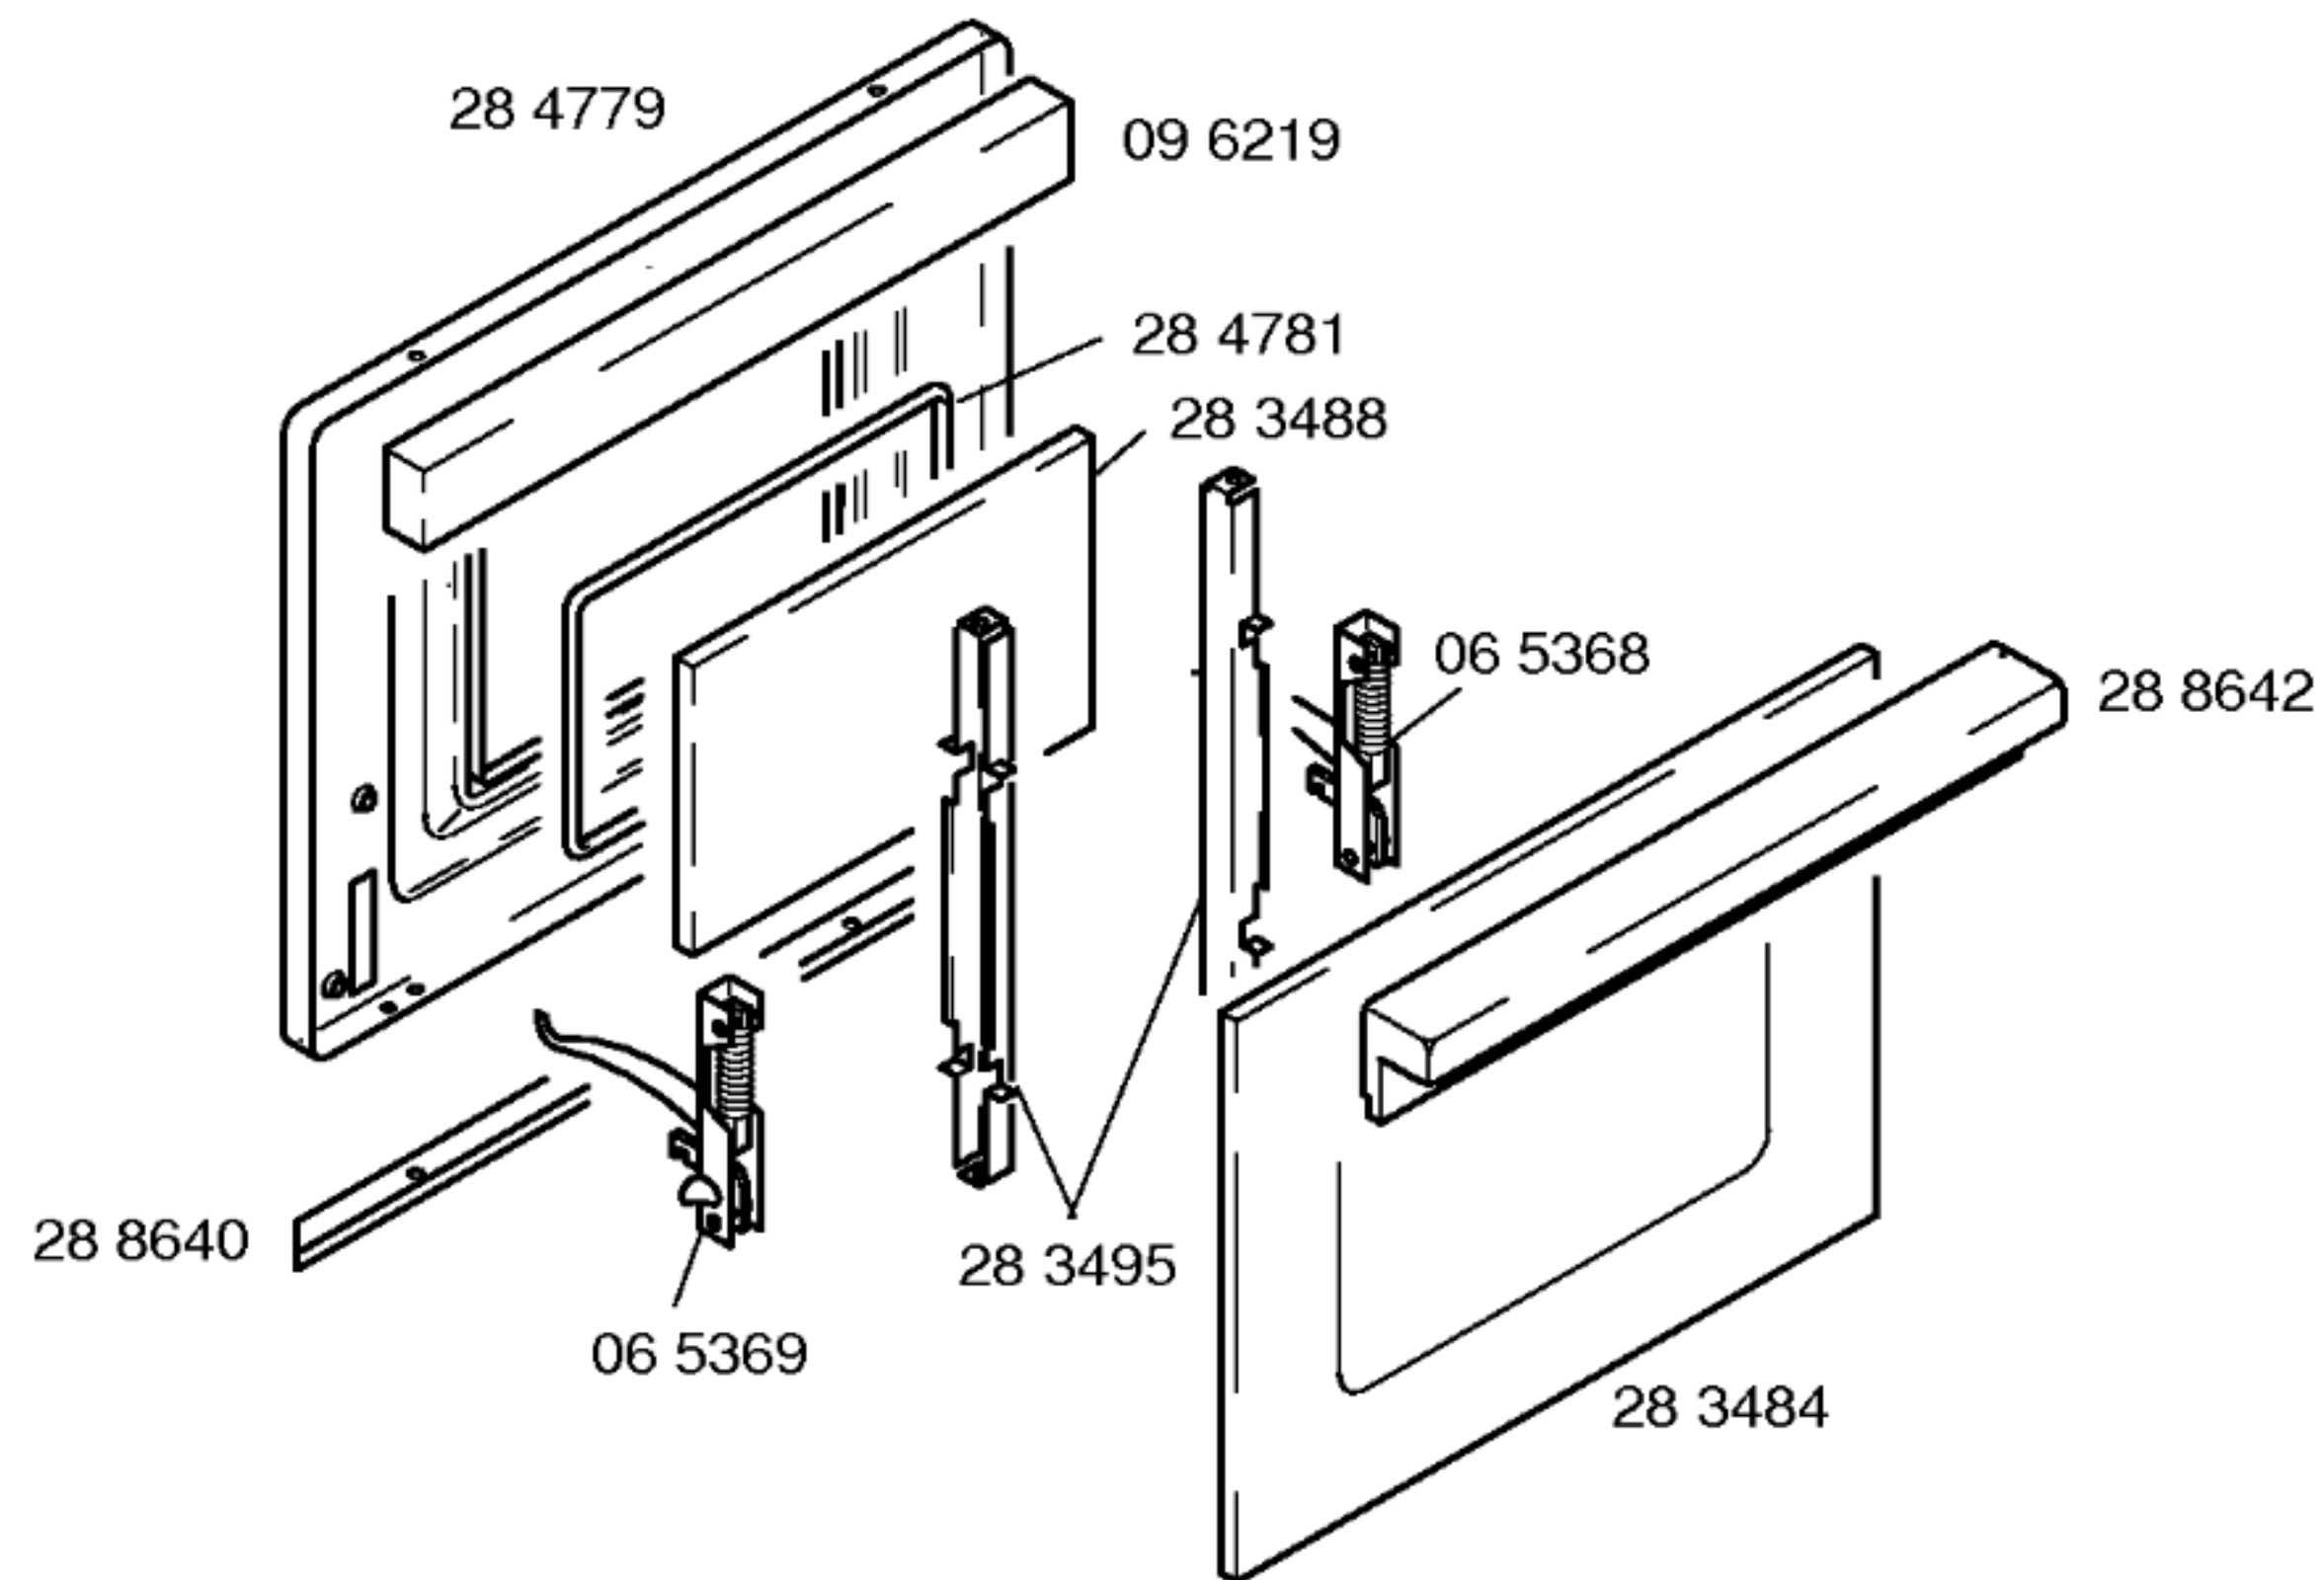


KCL2041A-V01

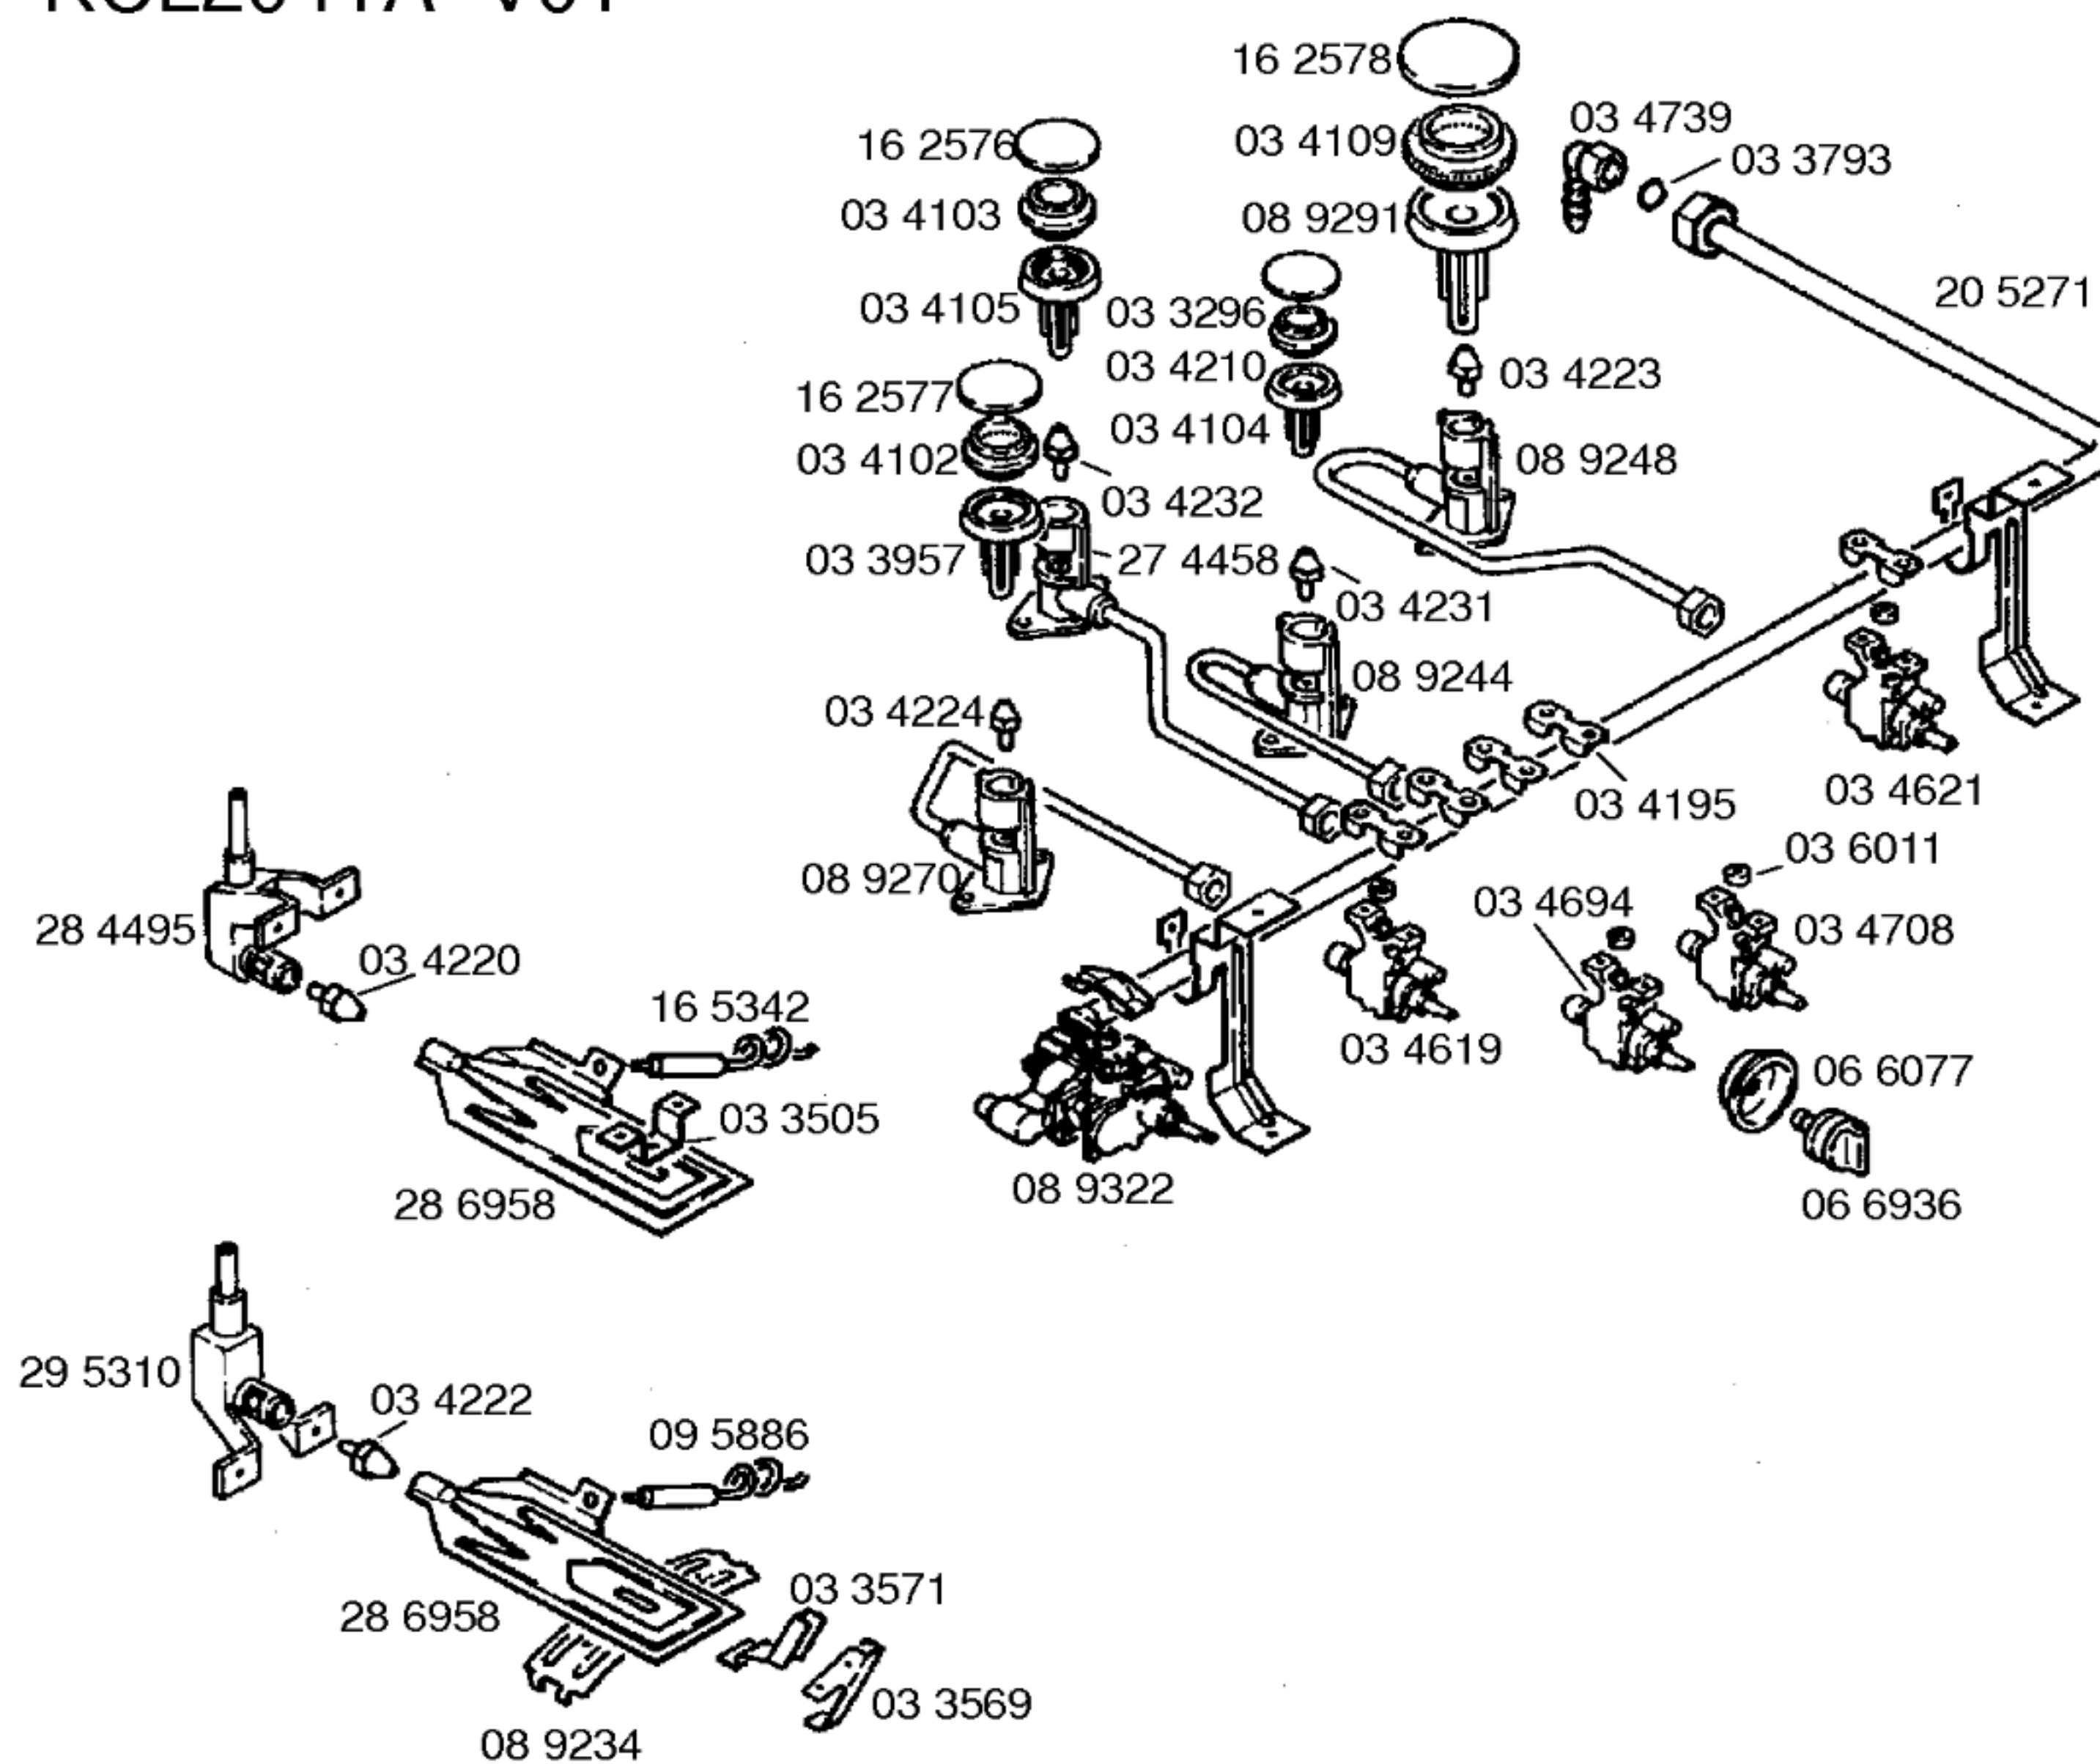


KCL22321A-V02

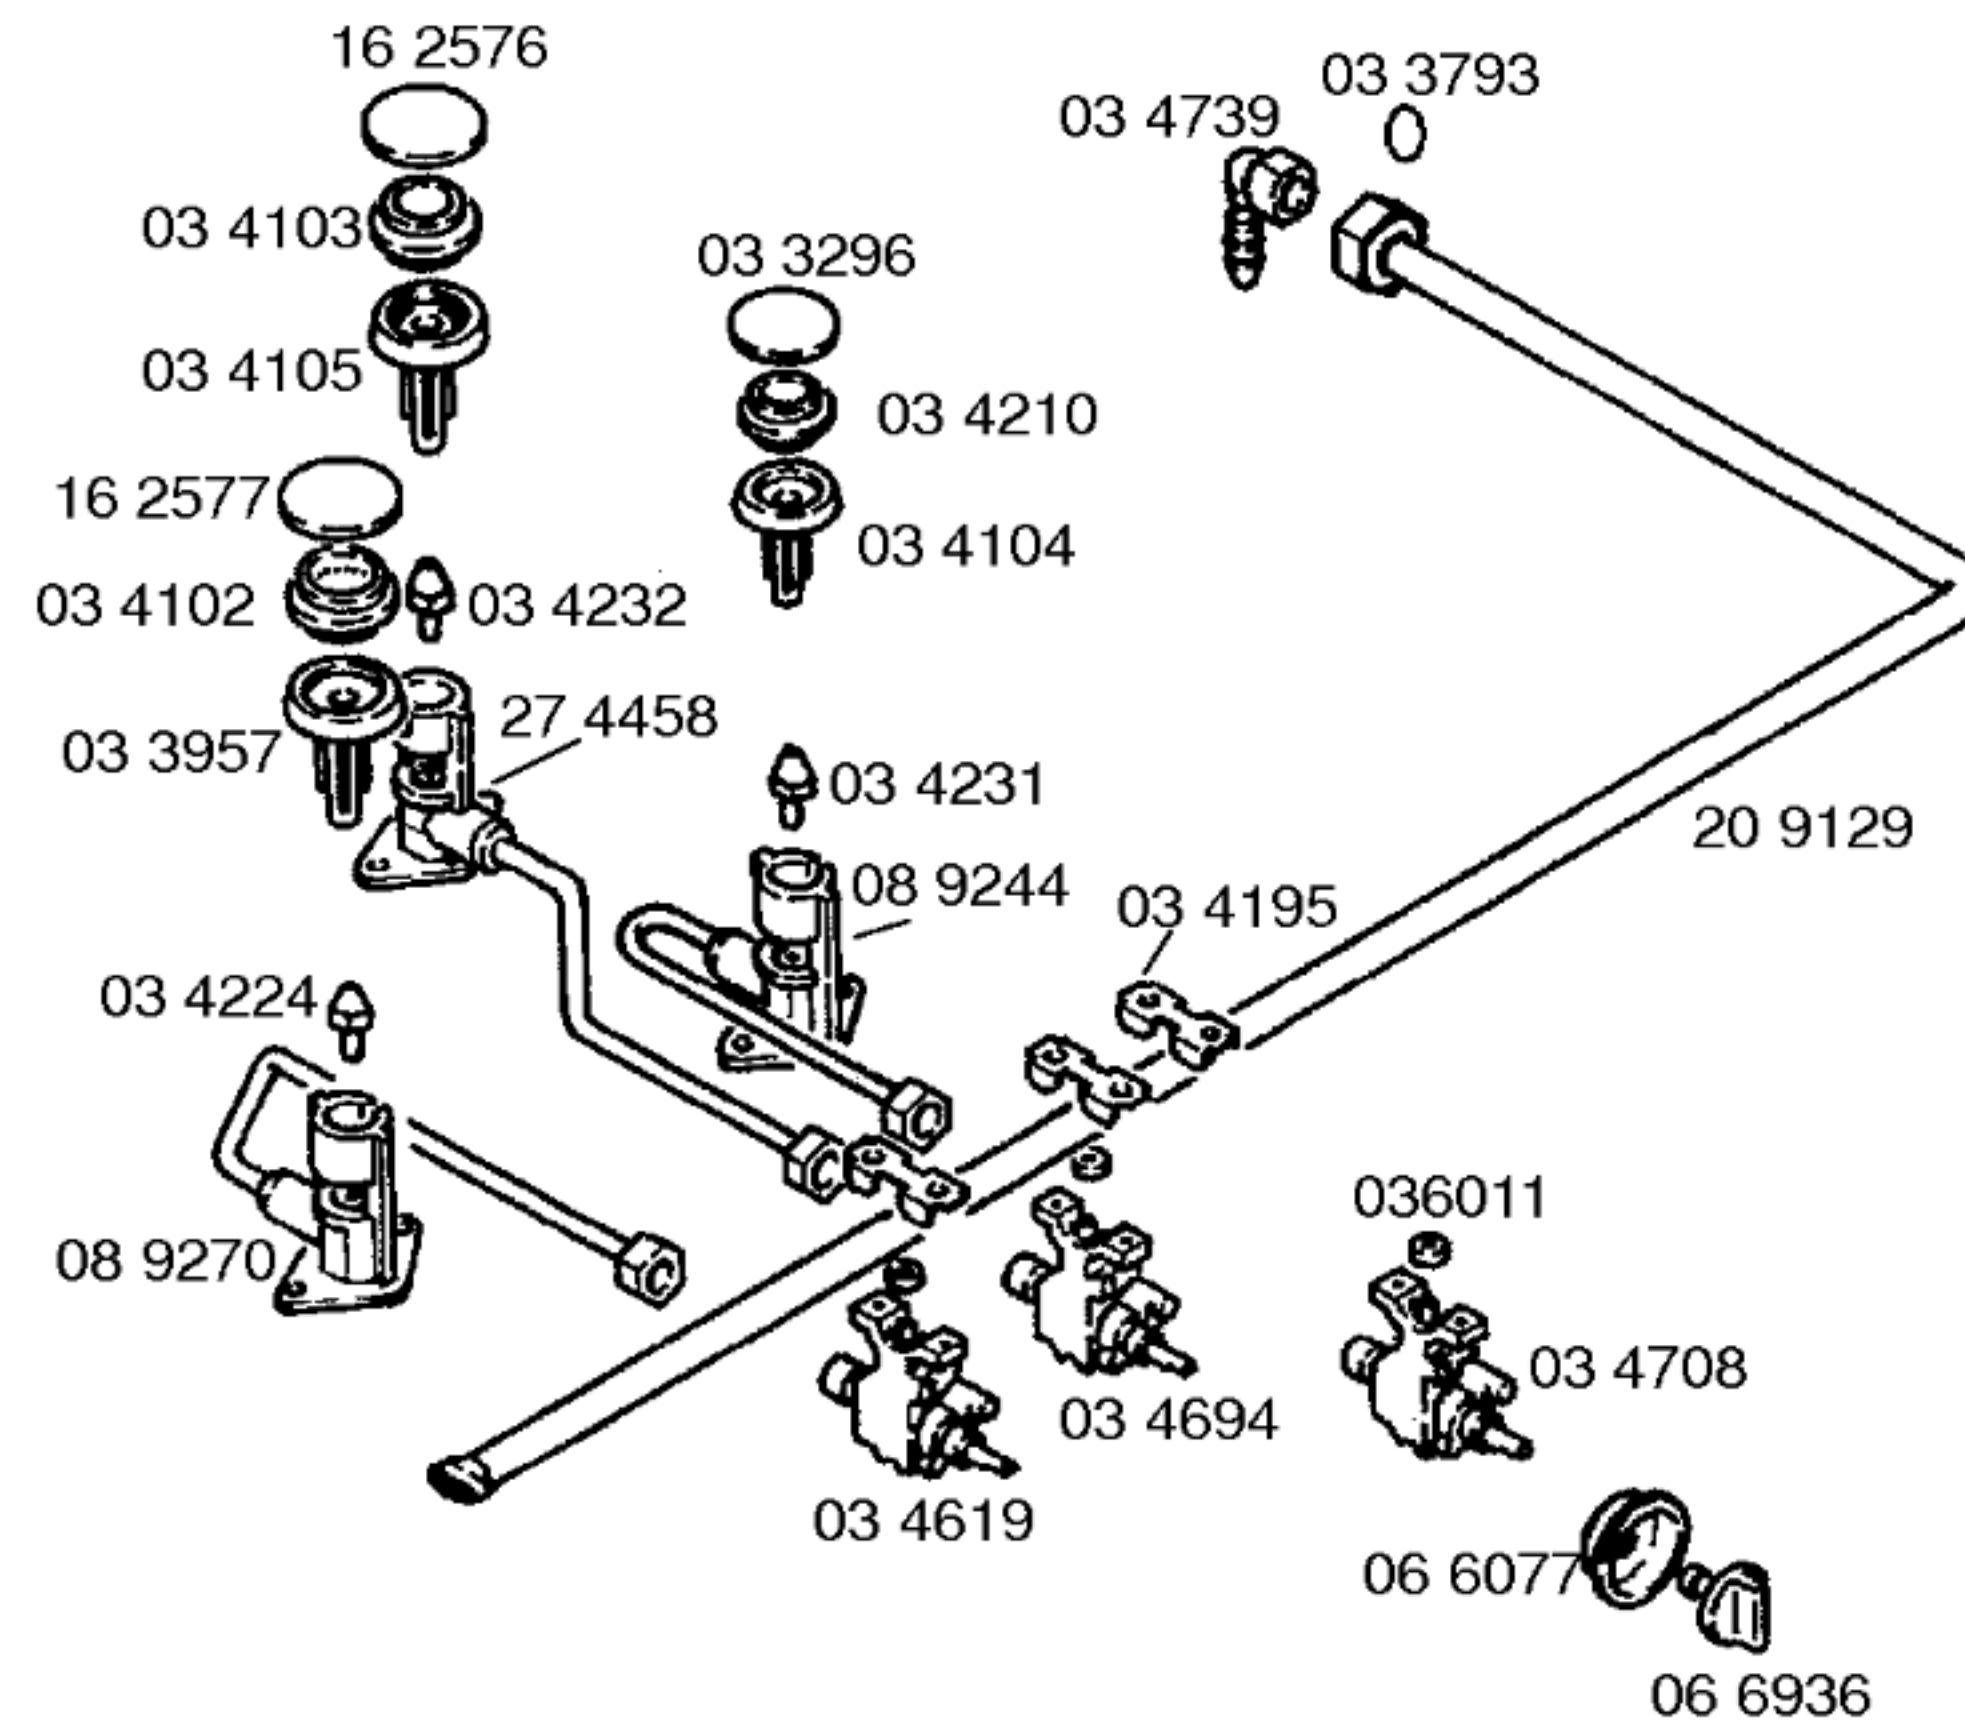


KCL30511A-V03

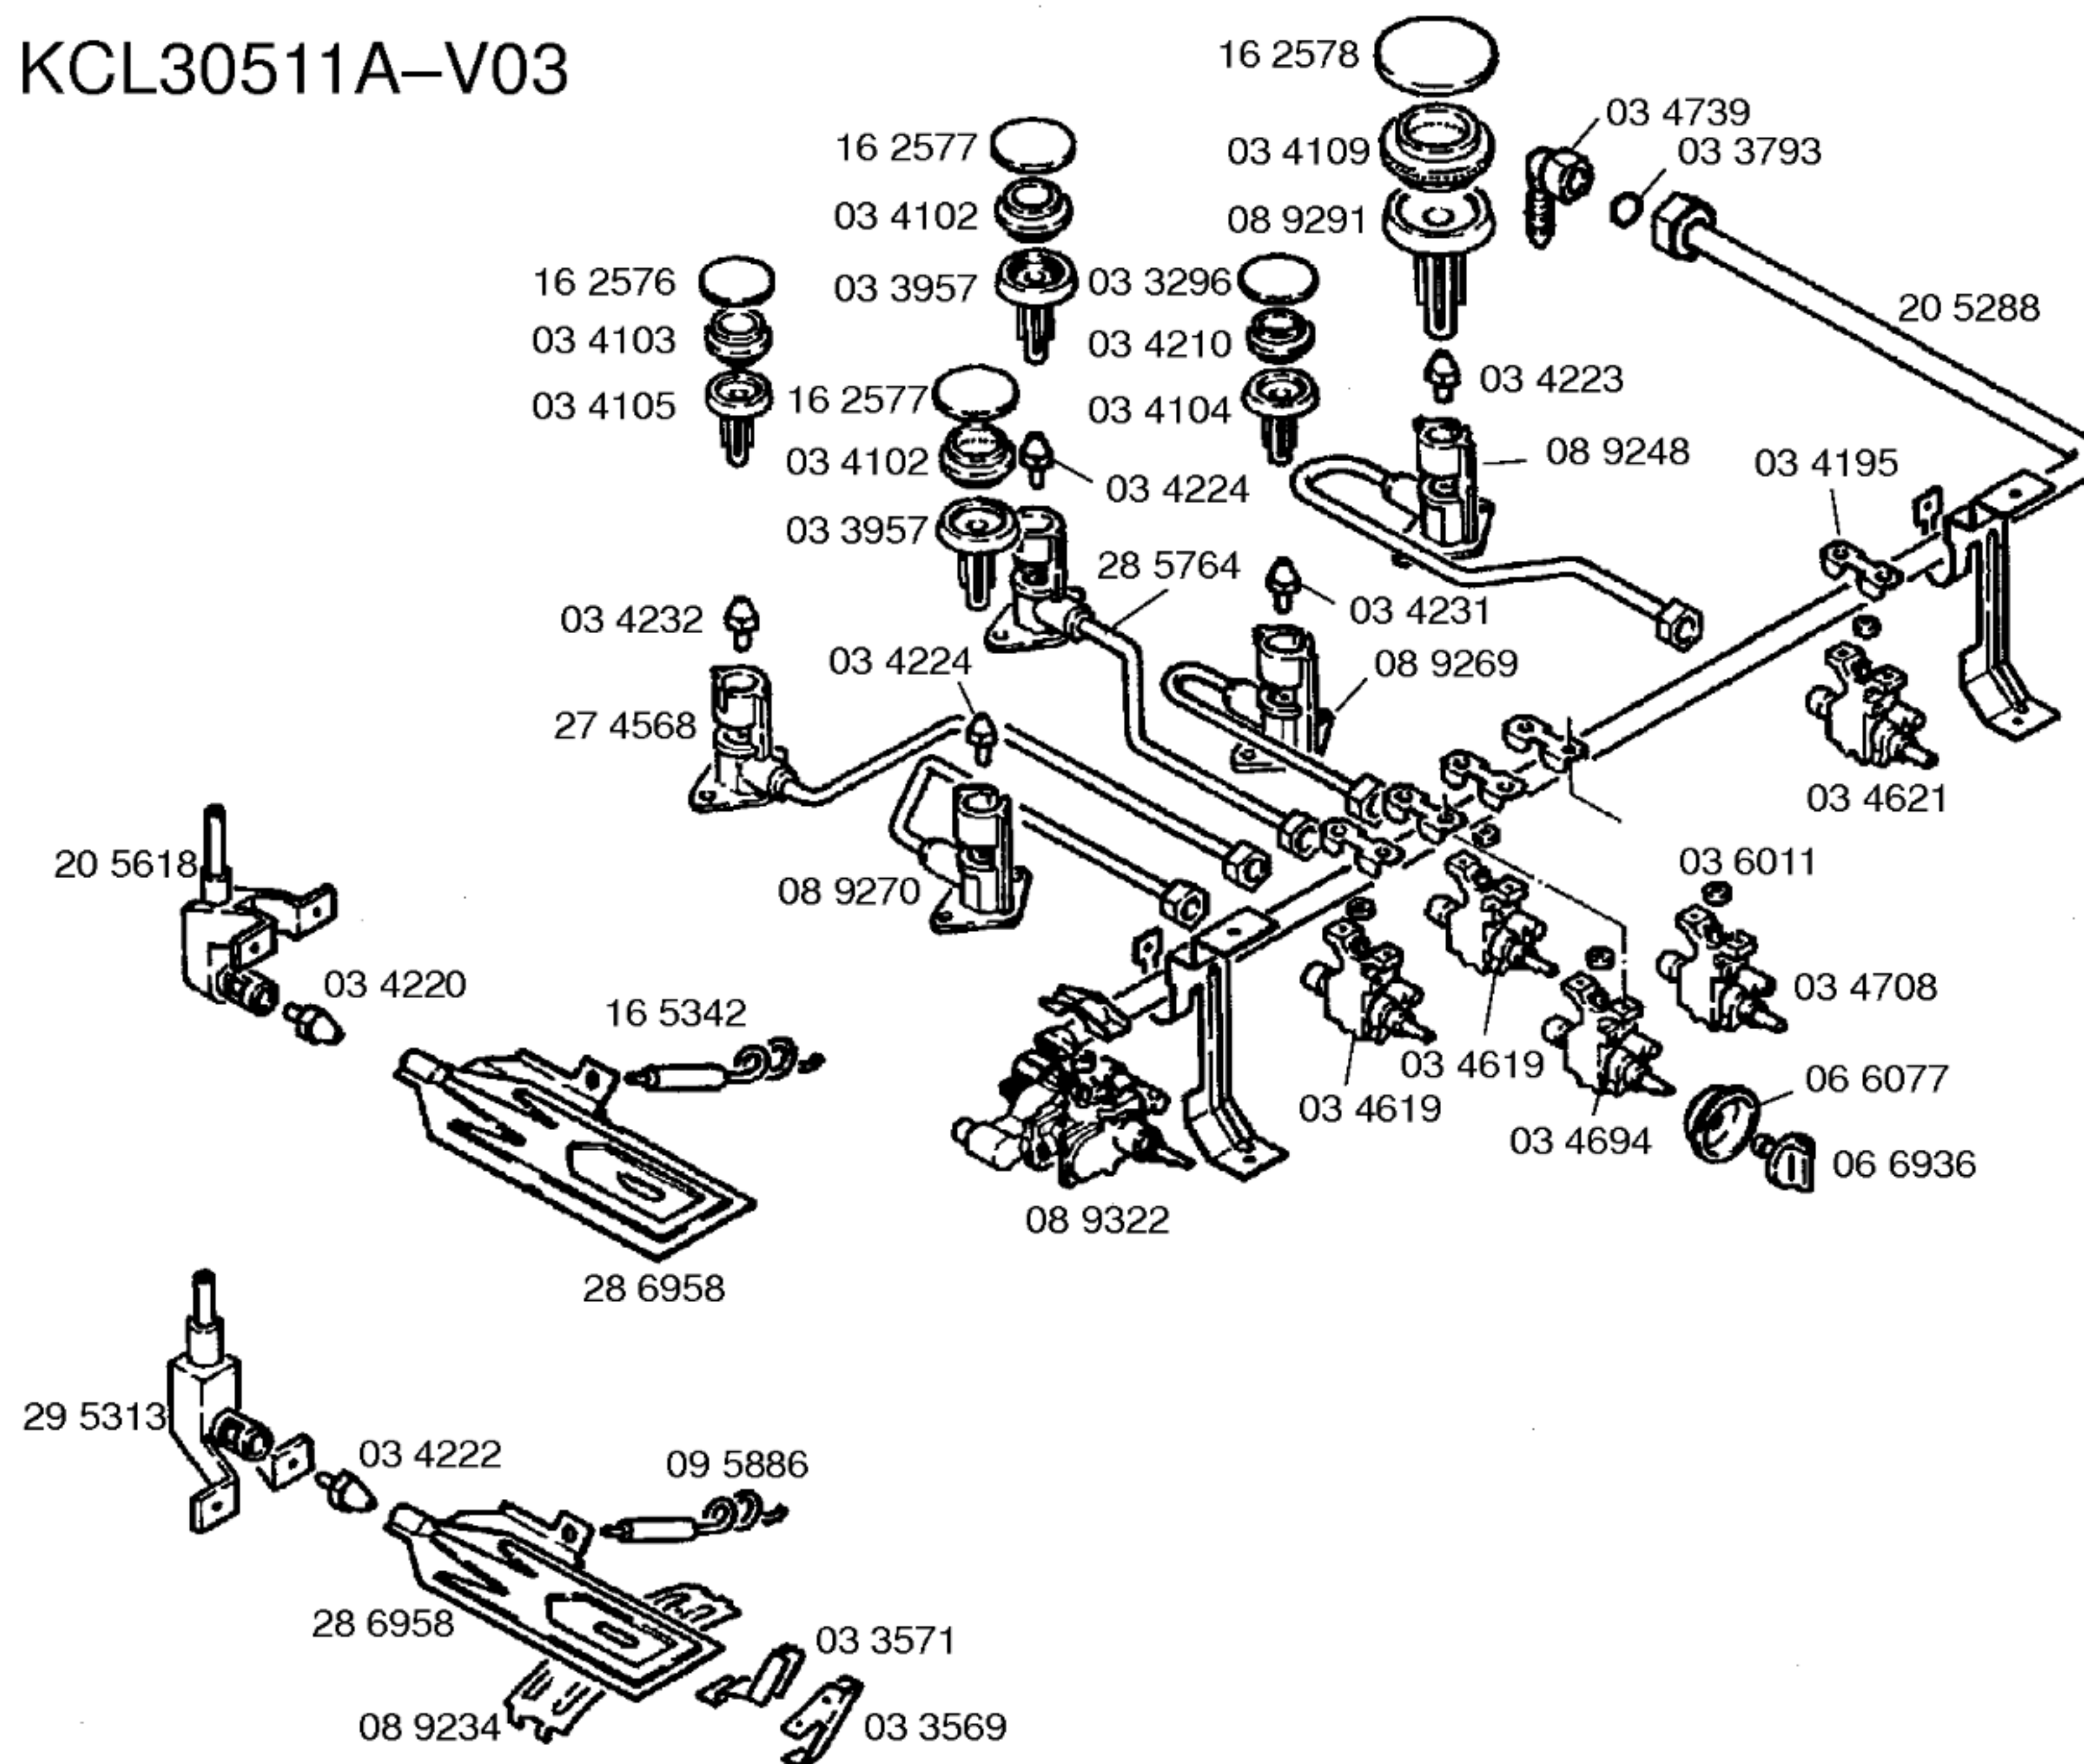

KCL32421A-V04

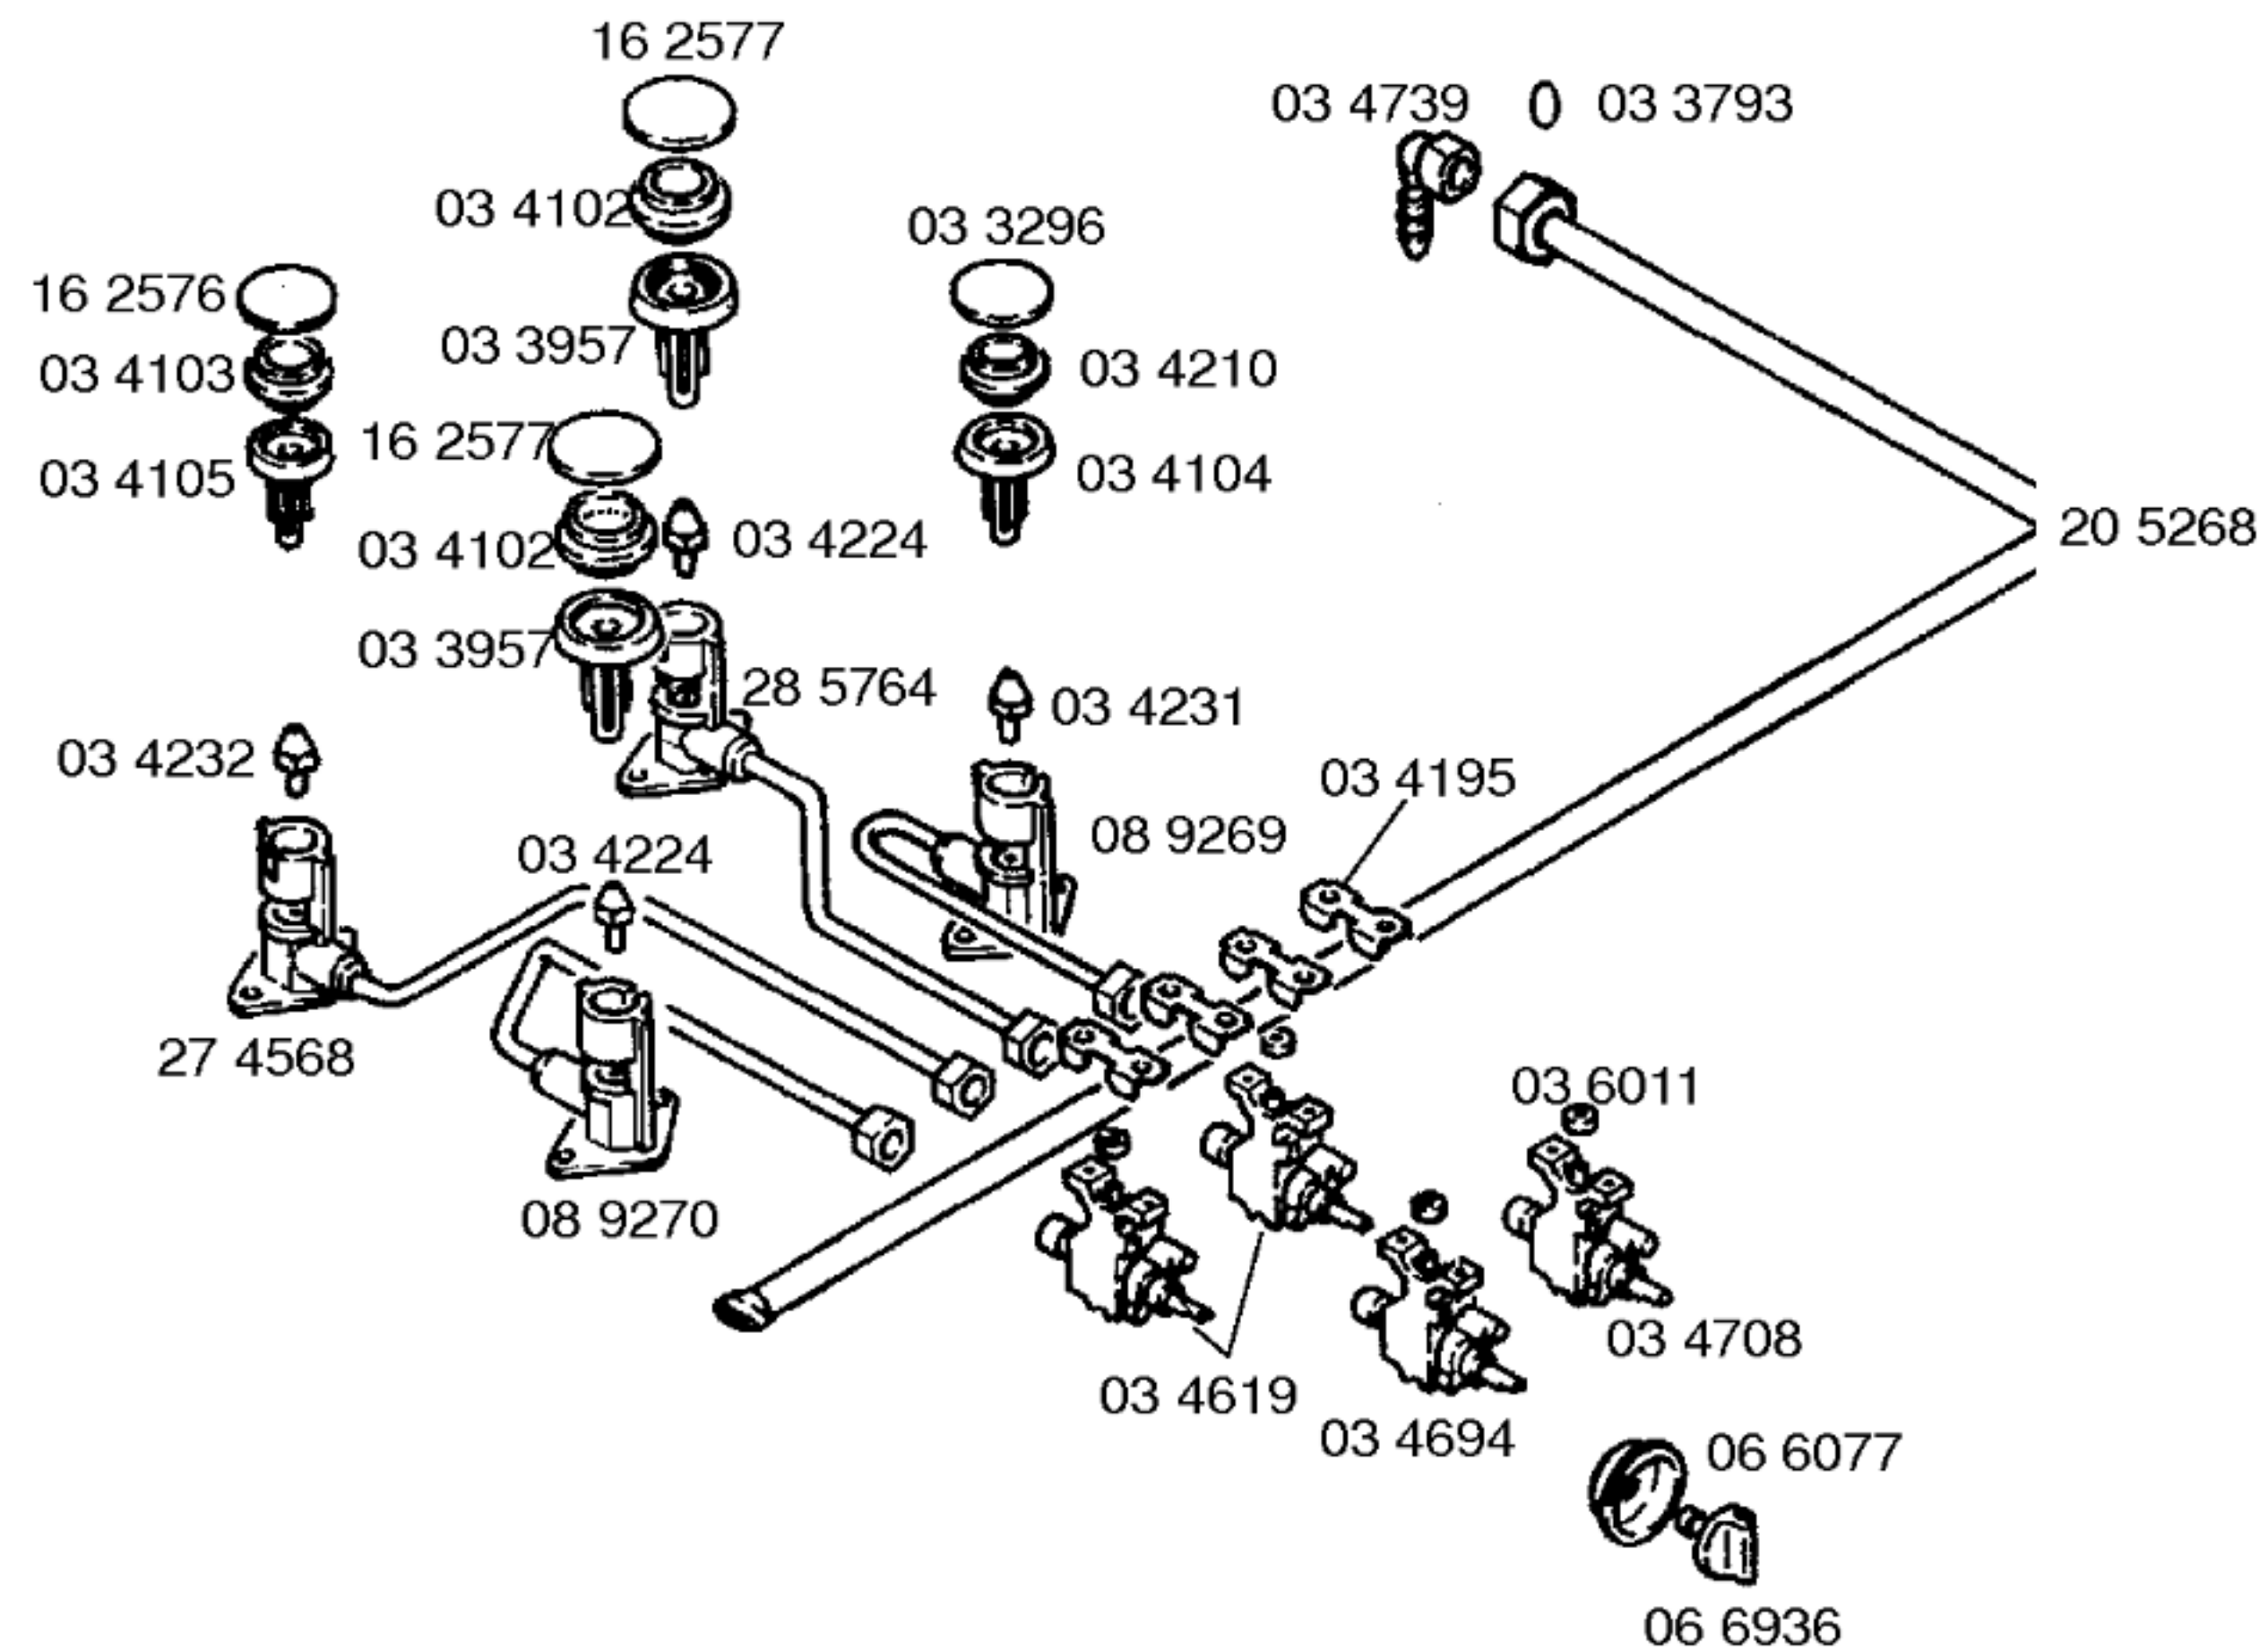

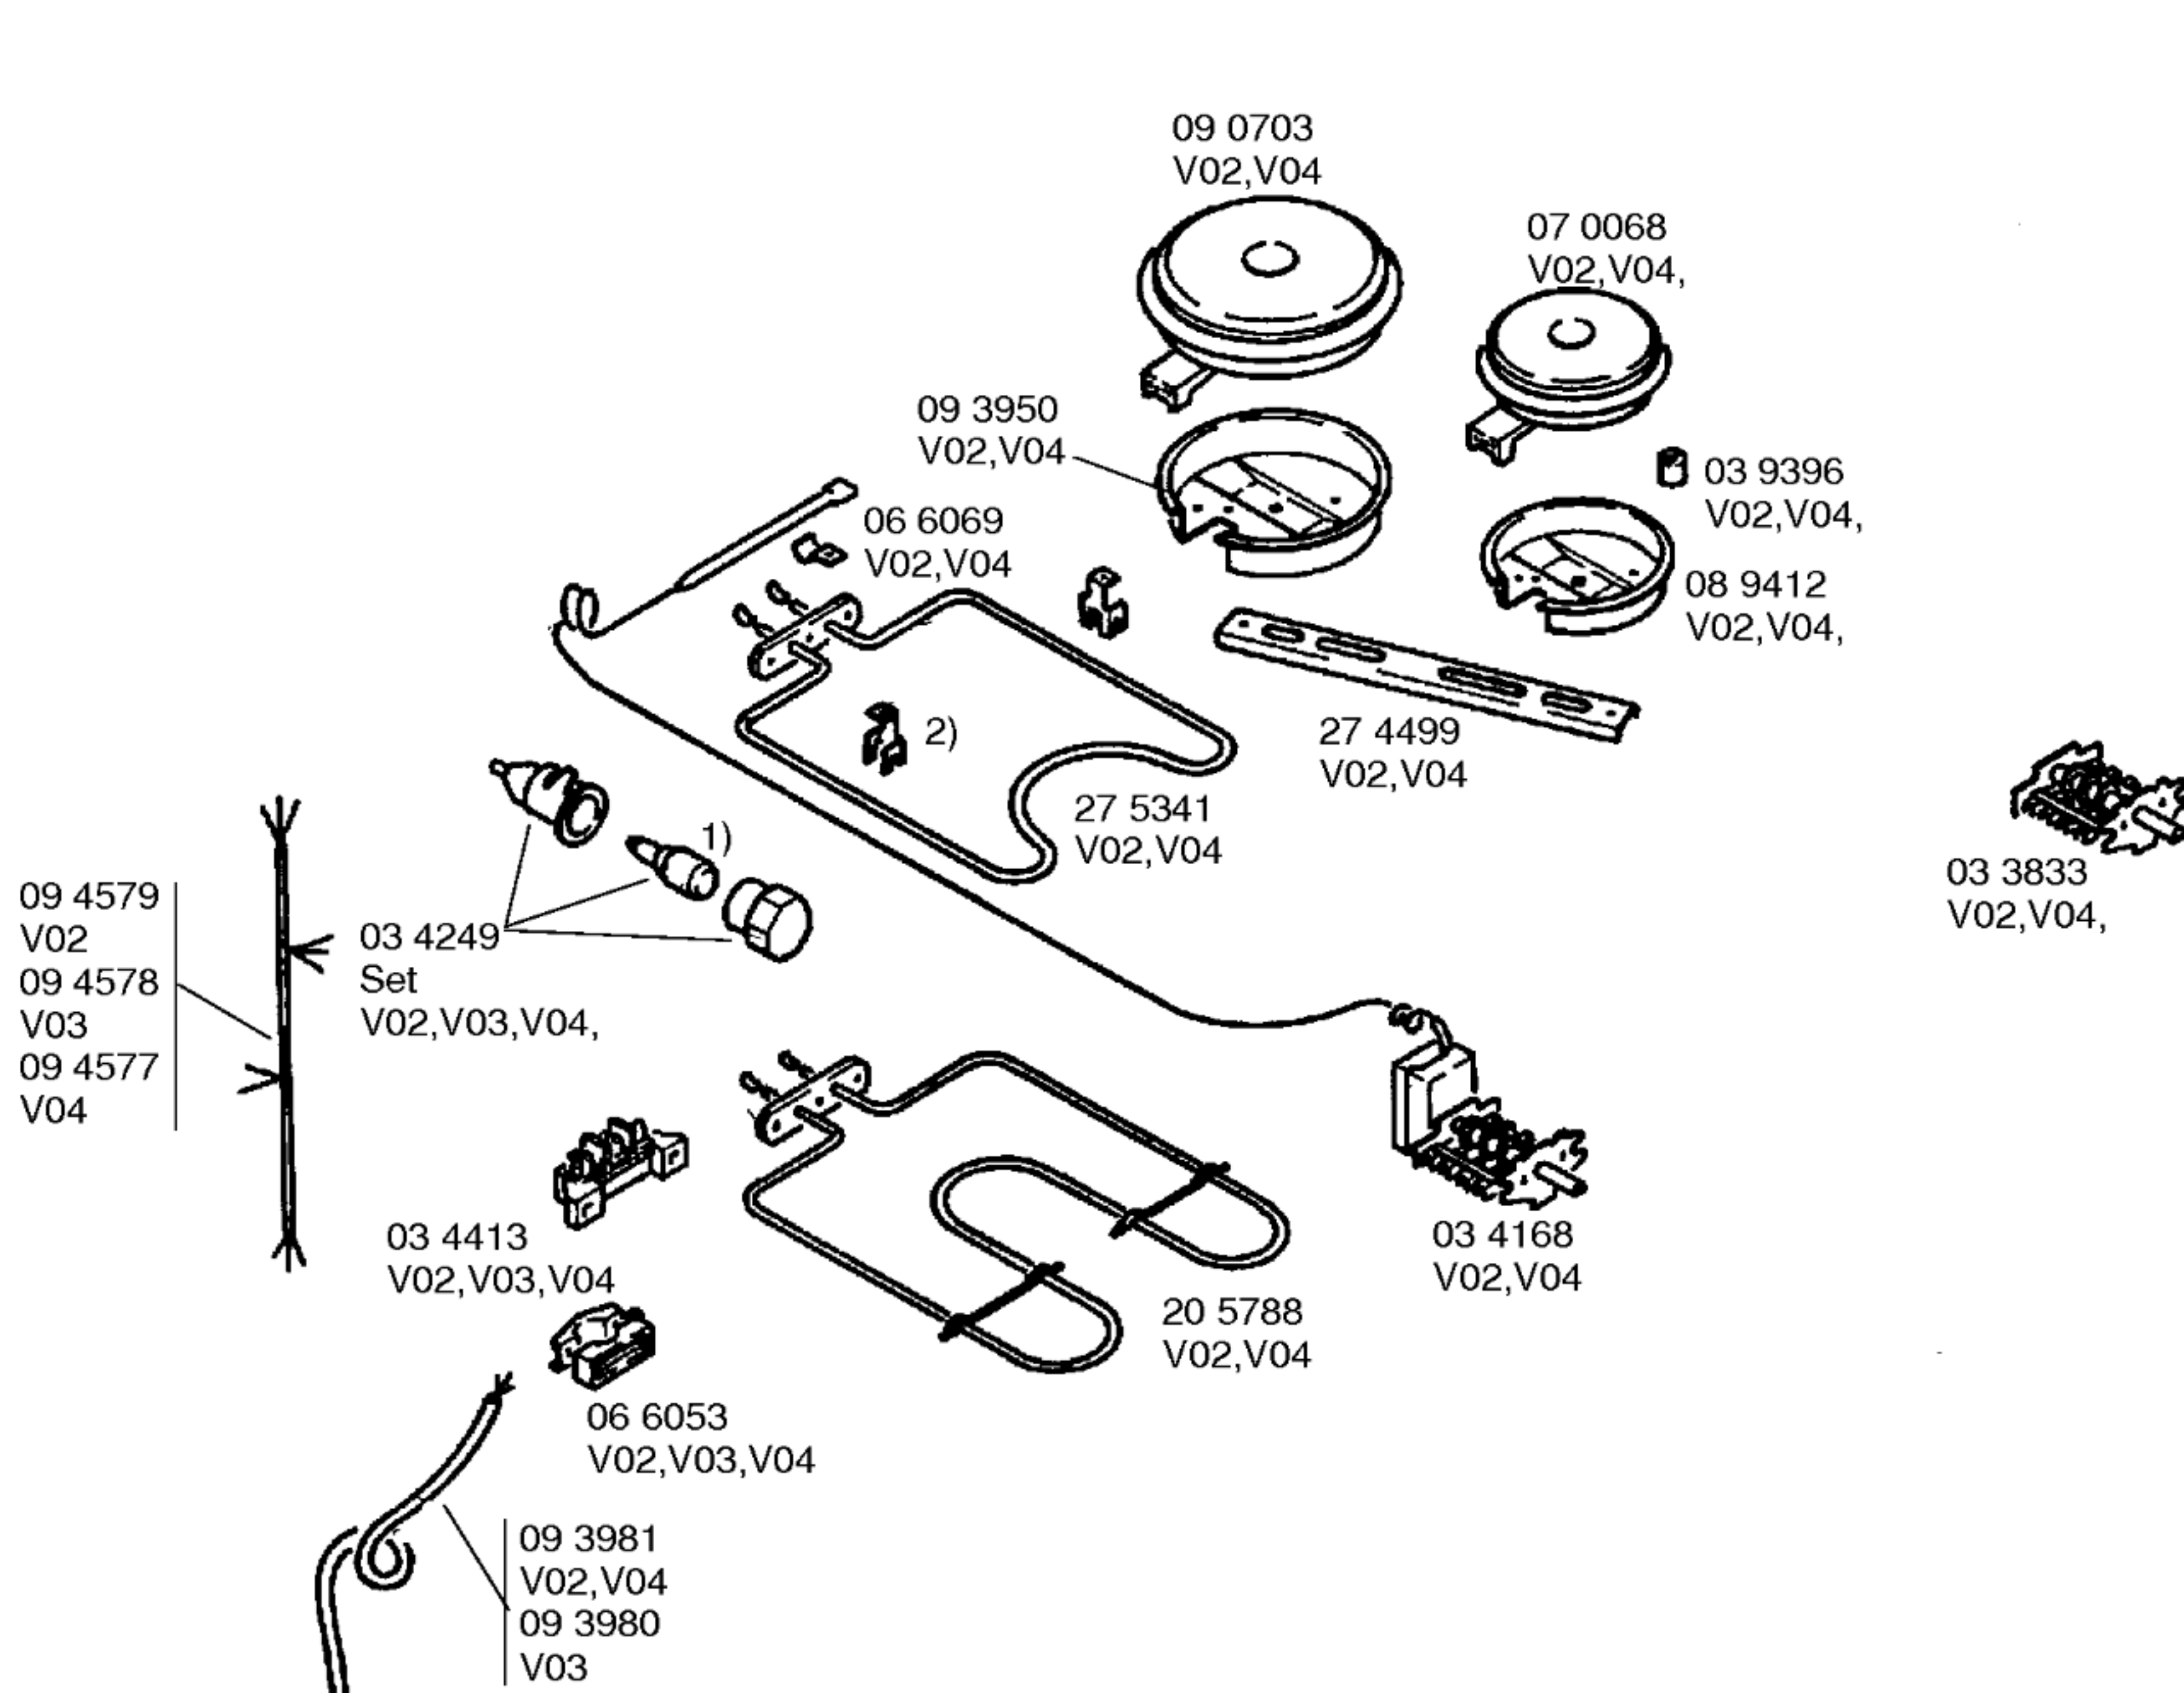

- 1) 03 3923
- 2) 03 3599
V02, V04,