


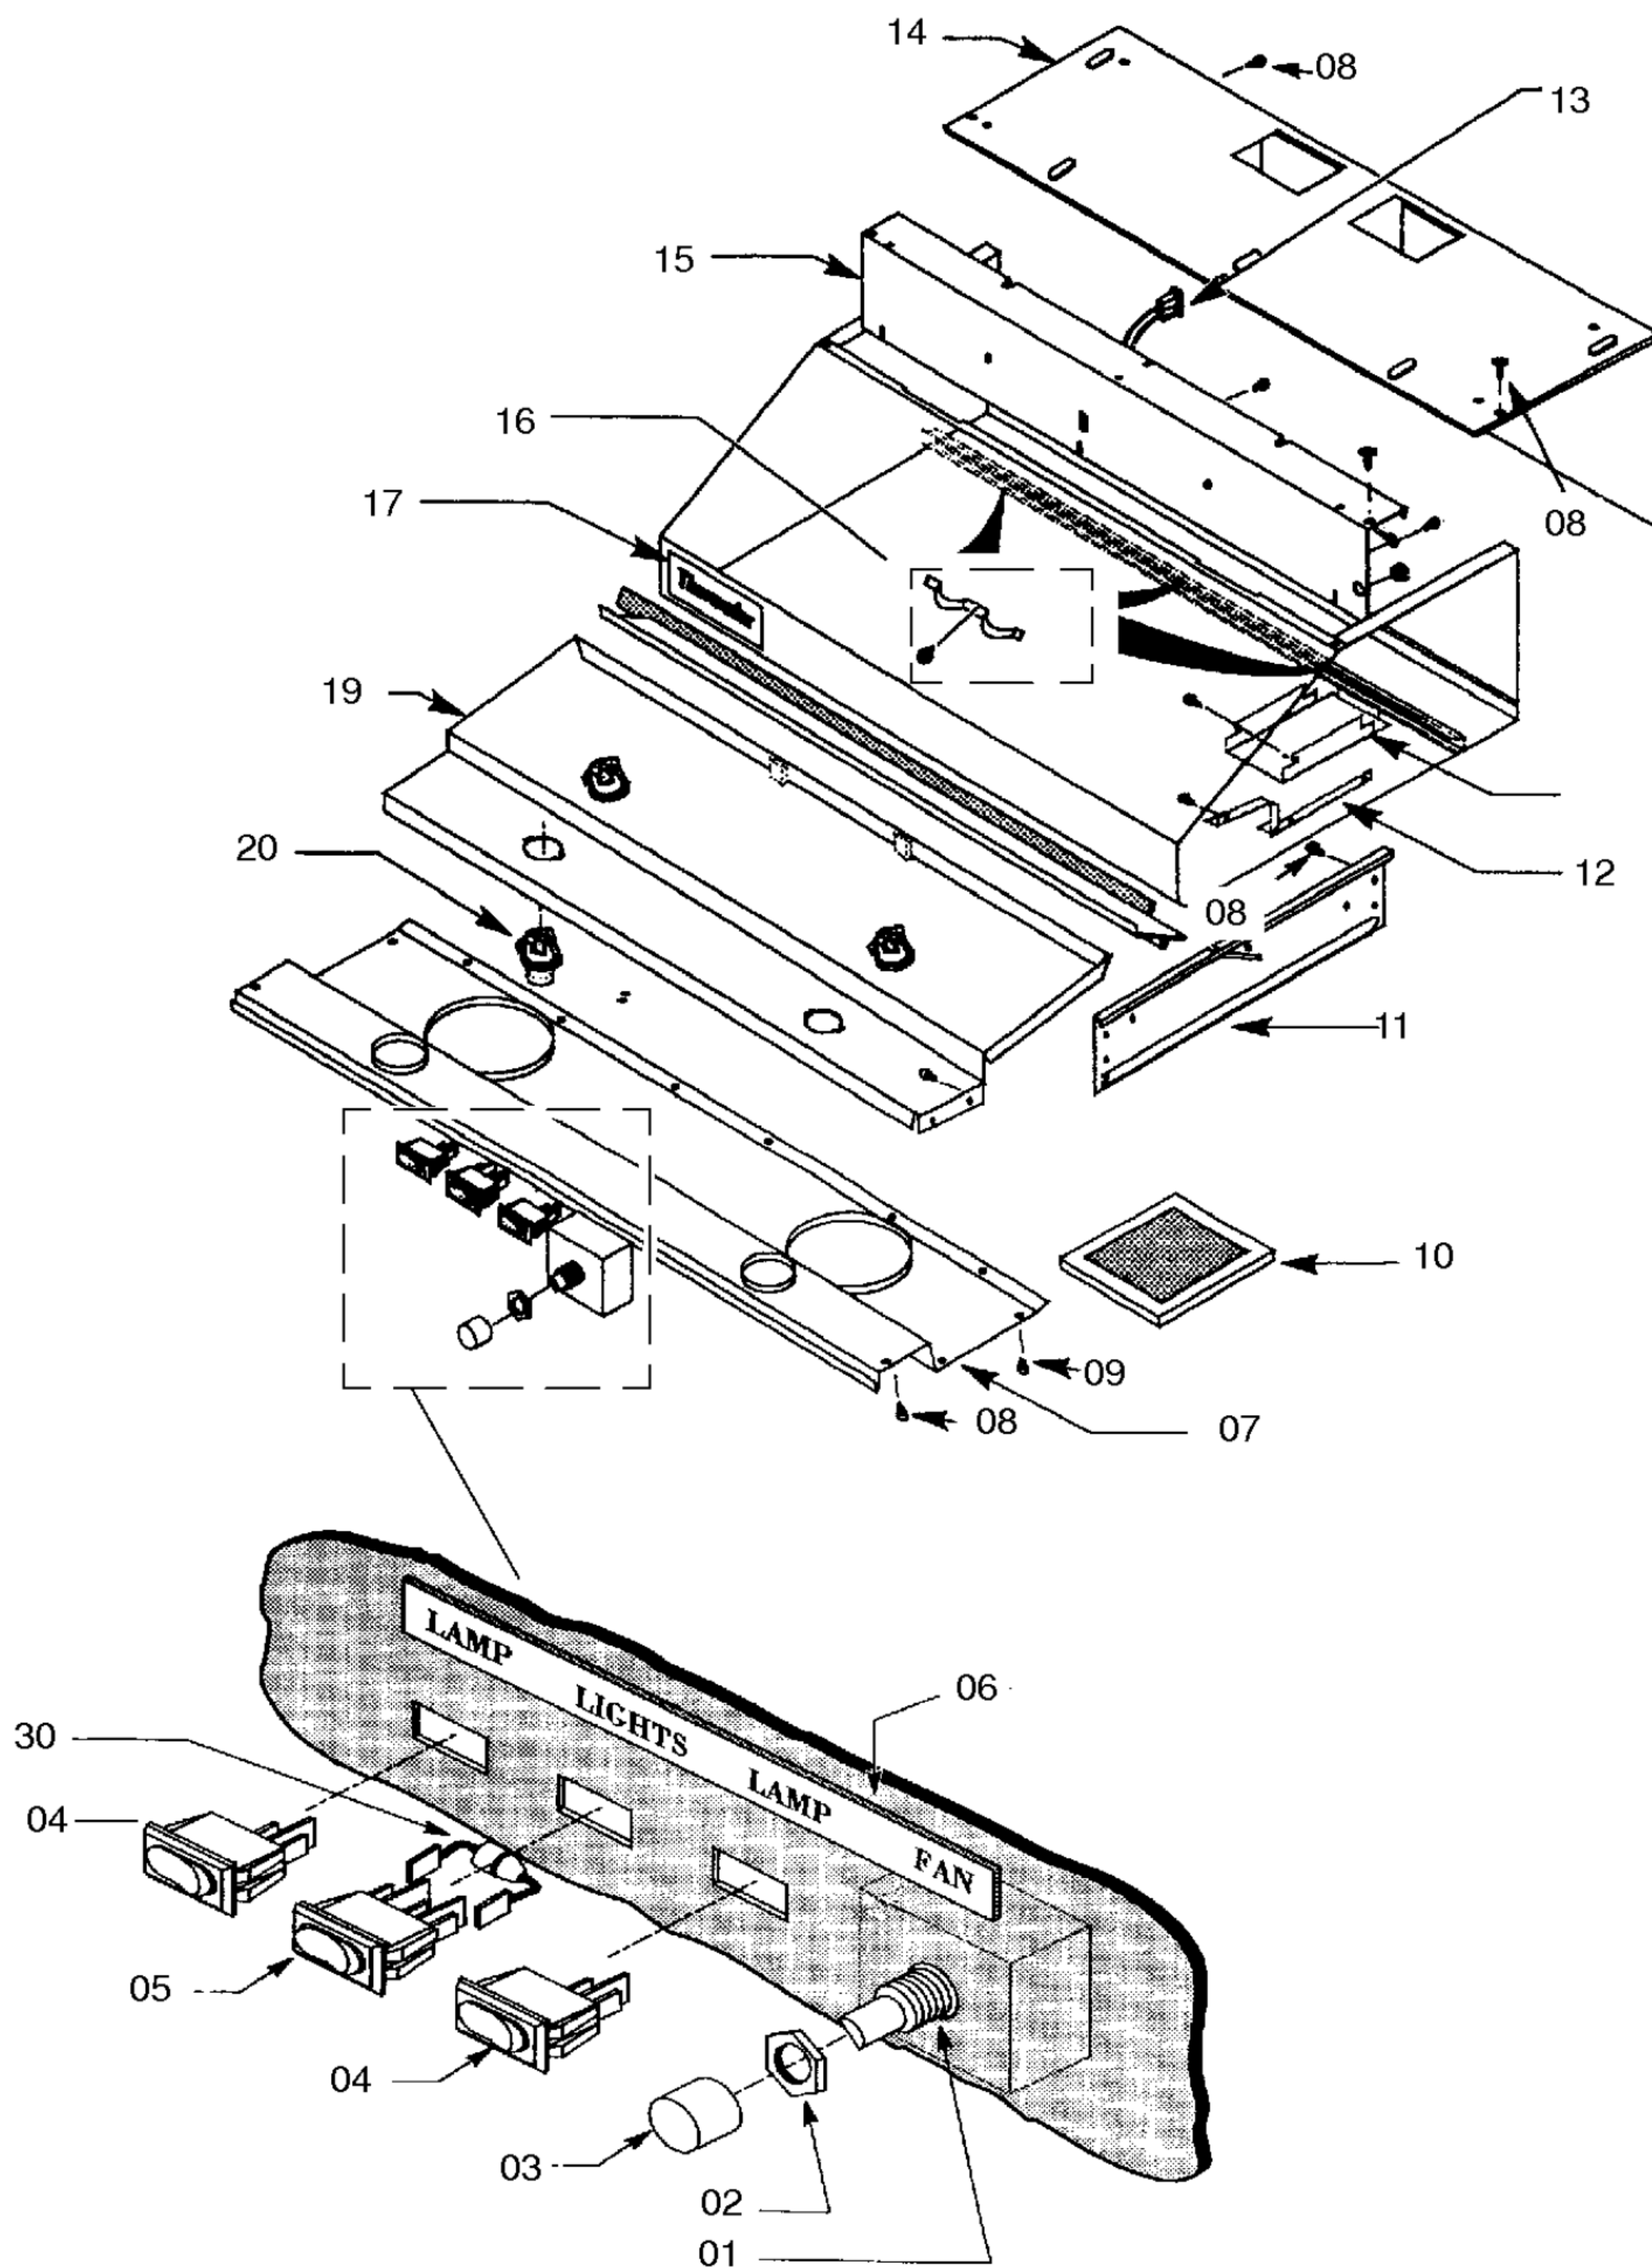

Page/Item	Part No.	Image	Part Description
01 01	48 6762	MODULE–MOTOR	KIT, SPEED CONTROL SWITCH
01 02	18 9246	NUT	NUT, HEX 10–24 KEPS (ZNC)
01 03	41 4416	KNOB	KNOB, SPEED CONTROL BLK
01 03	V01,V02, 41 4420	KNOB	KNOB, SPEED CNTRL A/WHT
01 04	V03,V04, 41 4736	SWITCH	SWITCH, ROCKER (HEAT LAMP
01 04	V01,V02, 41 4737	SWITCH	SWITCH, ROCKER (HEAT LAMP
01 05	V03,V04, 41 4732	SWITCH	SWITCH, ROCKER (SPDT)
01 05	V01,V02, 41 4733	SWITCH	SWITCH, ROCKER (SPDT) WHT
01 06	V03,V04, 41 4744	PLATE	NAMEPLATE, SWITCH SS (H/H
01 06	V01,V02, 41 4745	PLATE	NAMEPLATE, SWITCH WHT (H/
01 07	V03,V04, 36 8879	HOUSING	HOUSING, LAMP & SWITCH 36
01 07	V01,V02, 36 8651	HOUSING	HOUSING, LAMP & SWITCH 36
01 08	V03,V04, 41 1500	SCREW	SCREW 8X1/2 PH PN HD
01 09	18 9417	SCREW	SCREW, 6 X 1/2 " PH
01 10	48 7064	FILTER–METALL	FILTER, ALUMINUM ANODIZED
01 11	36 8657	RAIL	INSIDE WALL, LT SS
01 12	V01,V02, 41 3757	BRACKET	BRACKET, INSIDE WALL LT W
01 13	41 4726	CABLE SUPPLY	CONVENIENCE OUTLET ASSY
01 14	36 8647	PLATE	TOP W/A H30HQ/HB30Q
01 15	36 8665	PANEL	PARTITION, TOP 30" CORE H
01 16	41 4735	SPRING	SPRING, LEAF .008t (.500)
01 17	41 4742	PLATE	NAMEPLATE, THERMADOR SS
01 17	V01,V02, 41 4441	PLATE	NAMEPLATE, THERMADOR WHT
01 19	V03,V04, 48 7066	PANEL	PANEL, SOCKET 30" CORE HD
01 20	18 9251	LAMP HOUSING	HOLDER, LAMP (MP–VCH)
01 21	18 9250	SCREW	SCREW #8A X 3/8 PH PN HD
01 22	41 3758	BRACKET	BRACKET, INSIDE WALL RT W
01 23	36 8657	RAIL	INSIDE WALL, LT SS
* 01 24	V01,V02, 48 4555	Cable harness	WIRES CORE HOODS HXXHQ/HT
* 01 25	41 1043	CABLE STRAP	TIE, CABLE 4" LONG
01 30	41 4738	DIODE	DIODE W/TERMINALS
30 01	KHS36QS	Assessory	
40 01	SH–30/0031E	CIRCUIT DIAGRAM	
50 01	RH30009E	Repair Instruction Hood	

* Not illustrated