




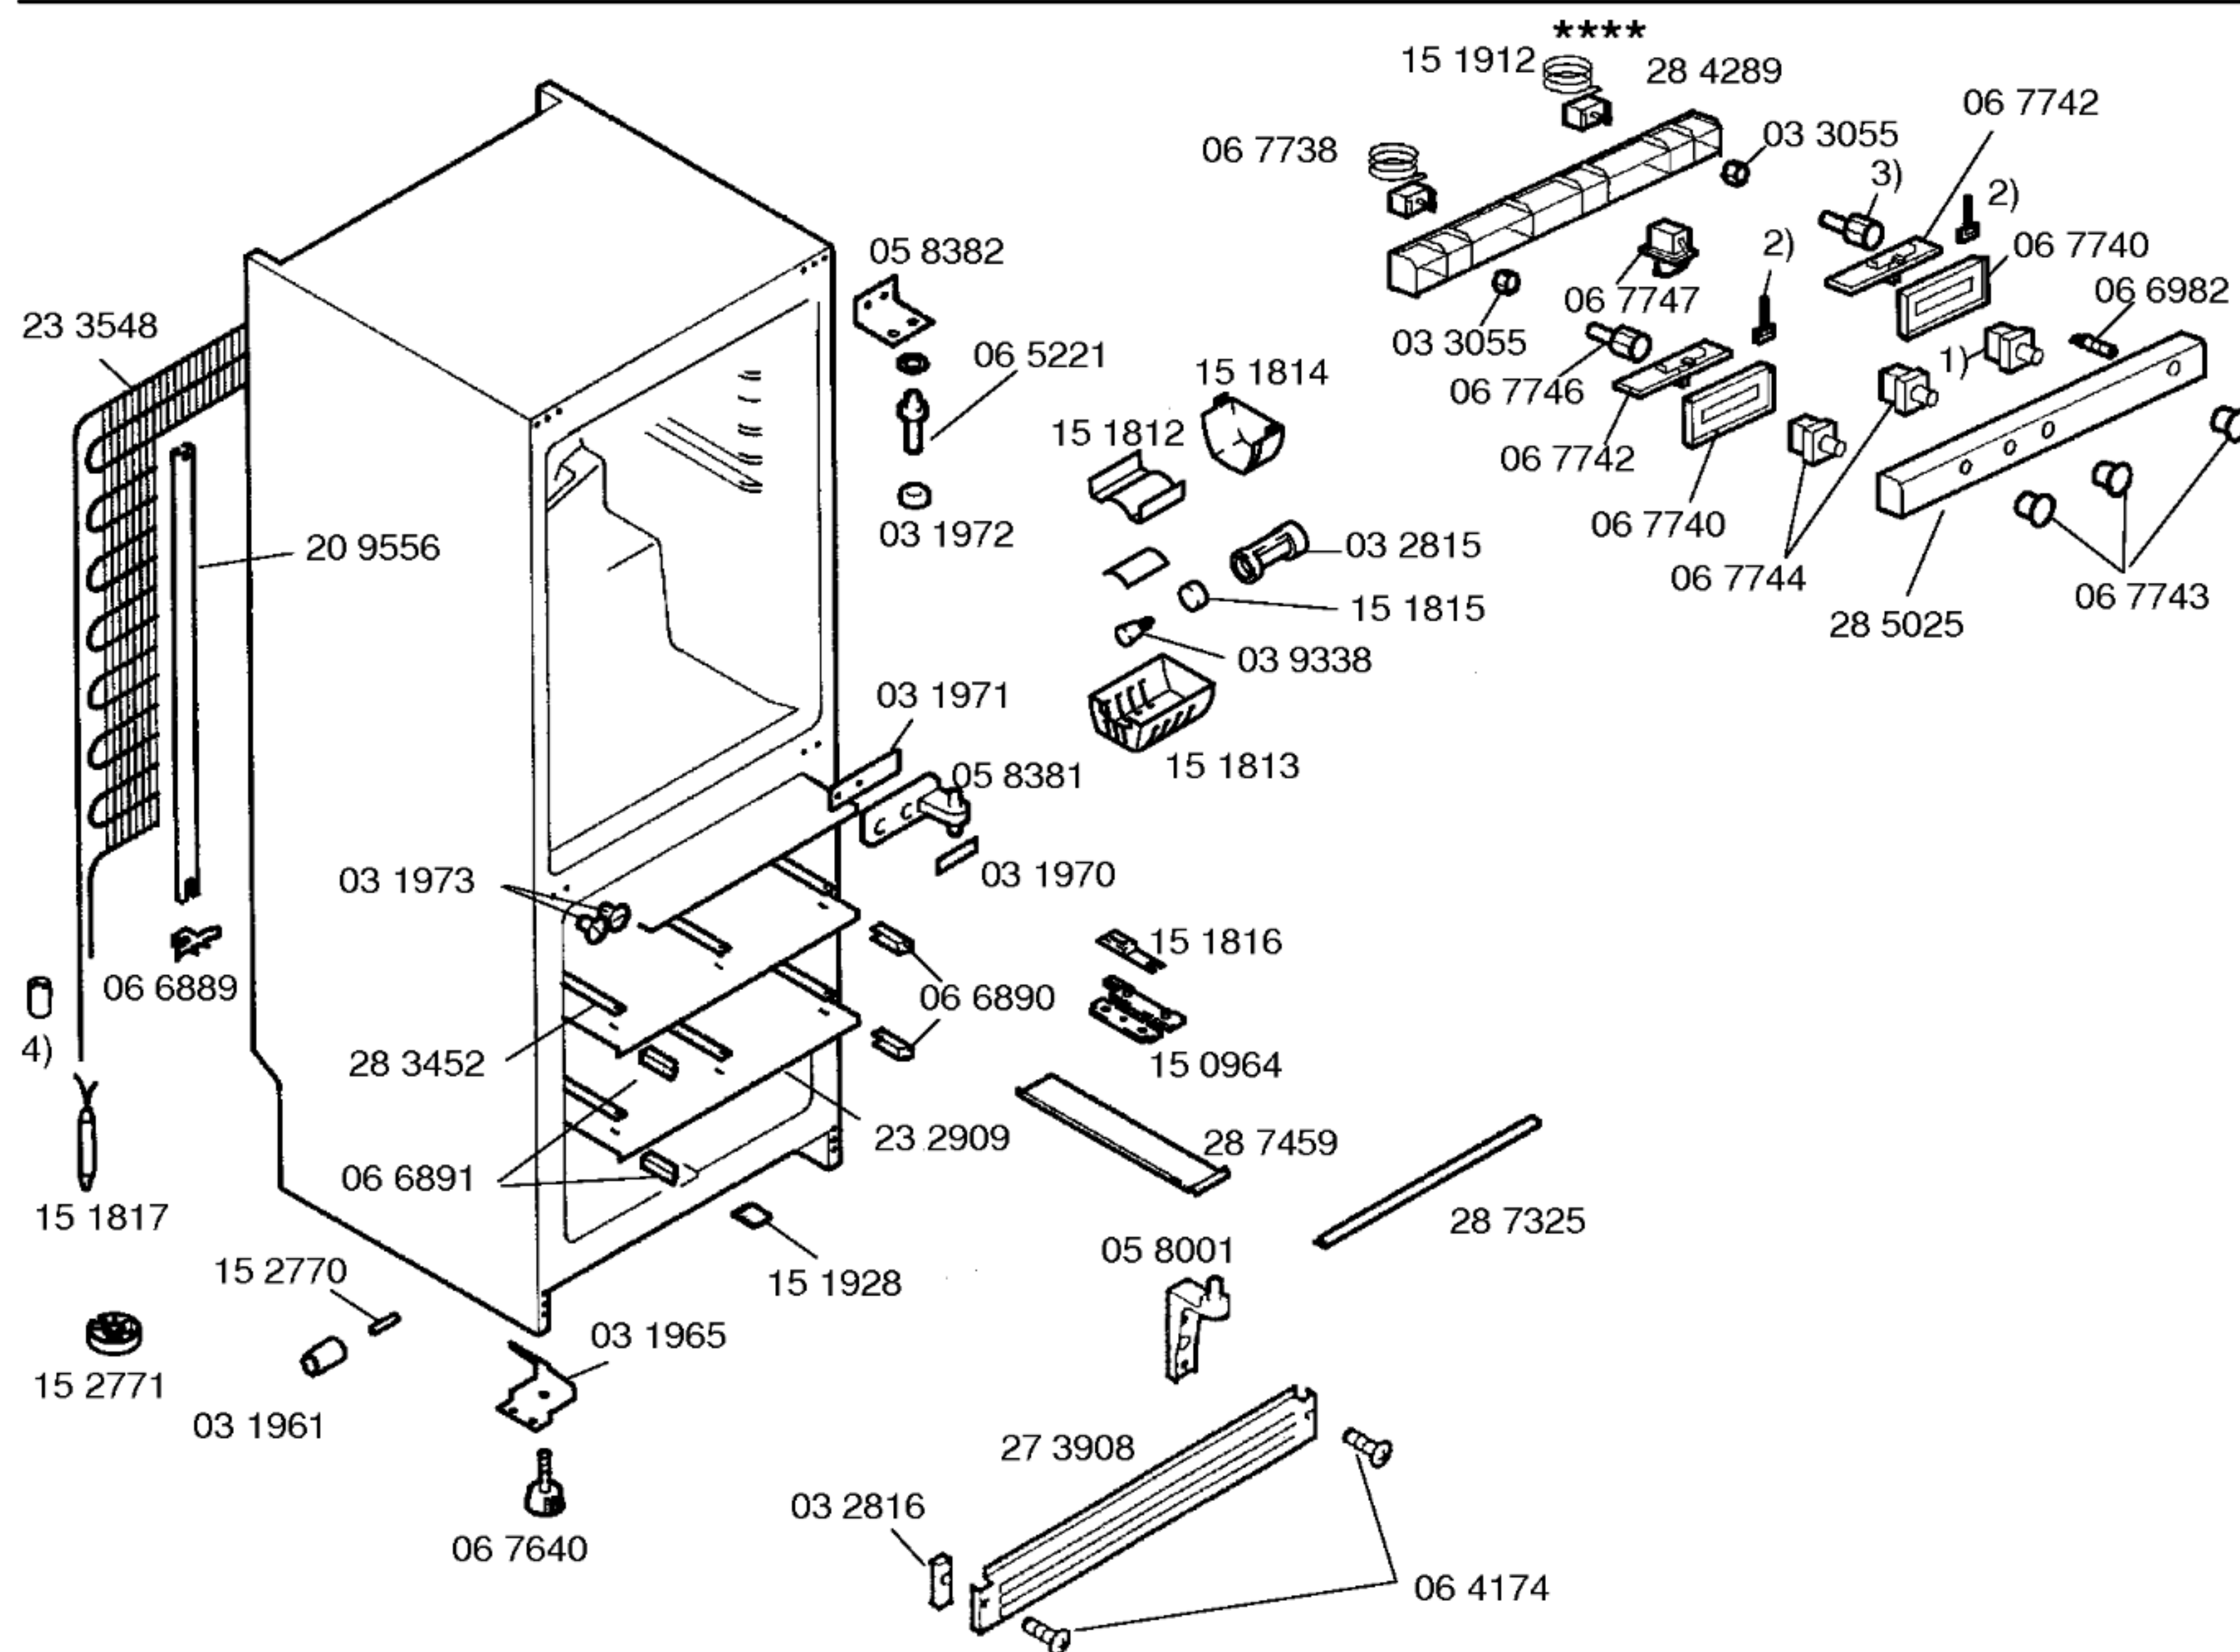

Libro de instrucciones
51 7462
(E,P,GB,F,NL,GR)

- 1) 06 7745
- 2) 06 7748
- 3) 06 7746
- 4) 15 3888

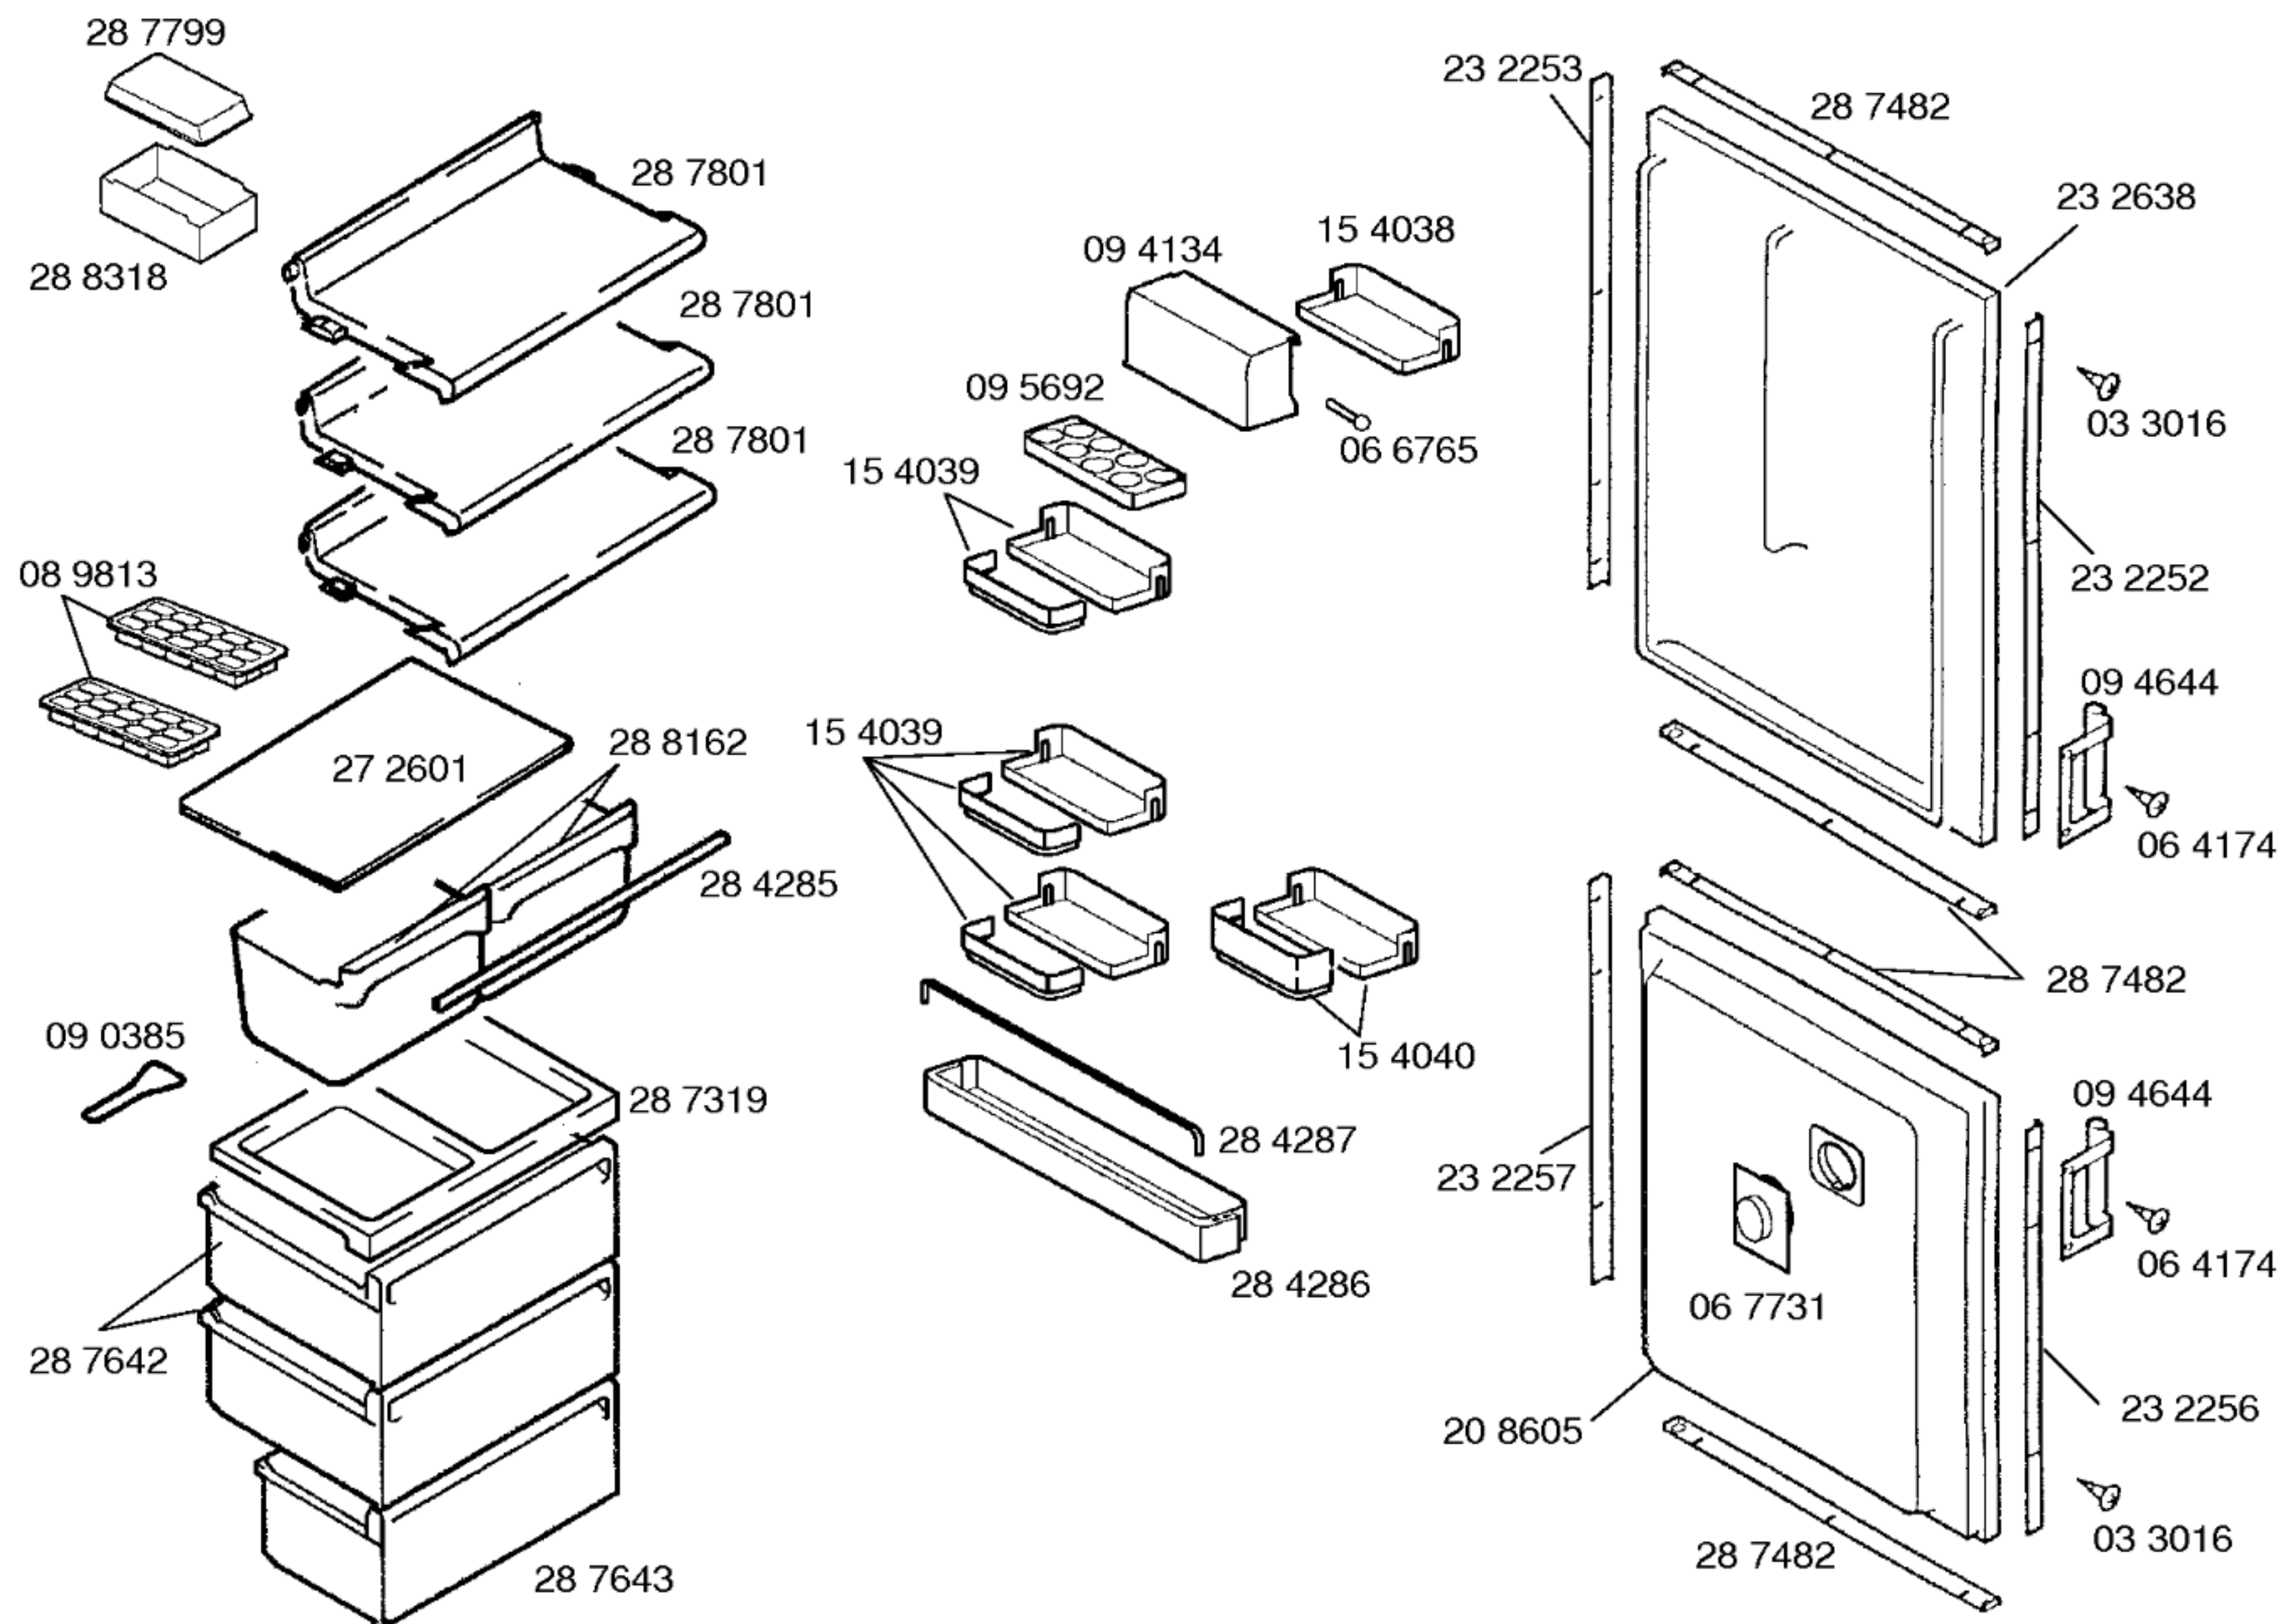

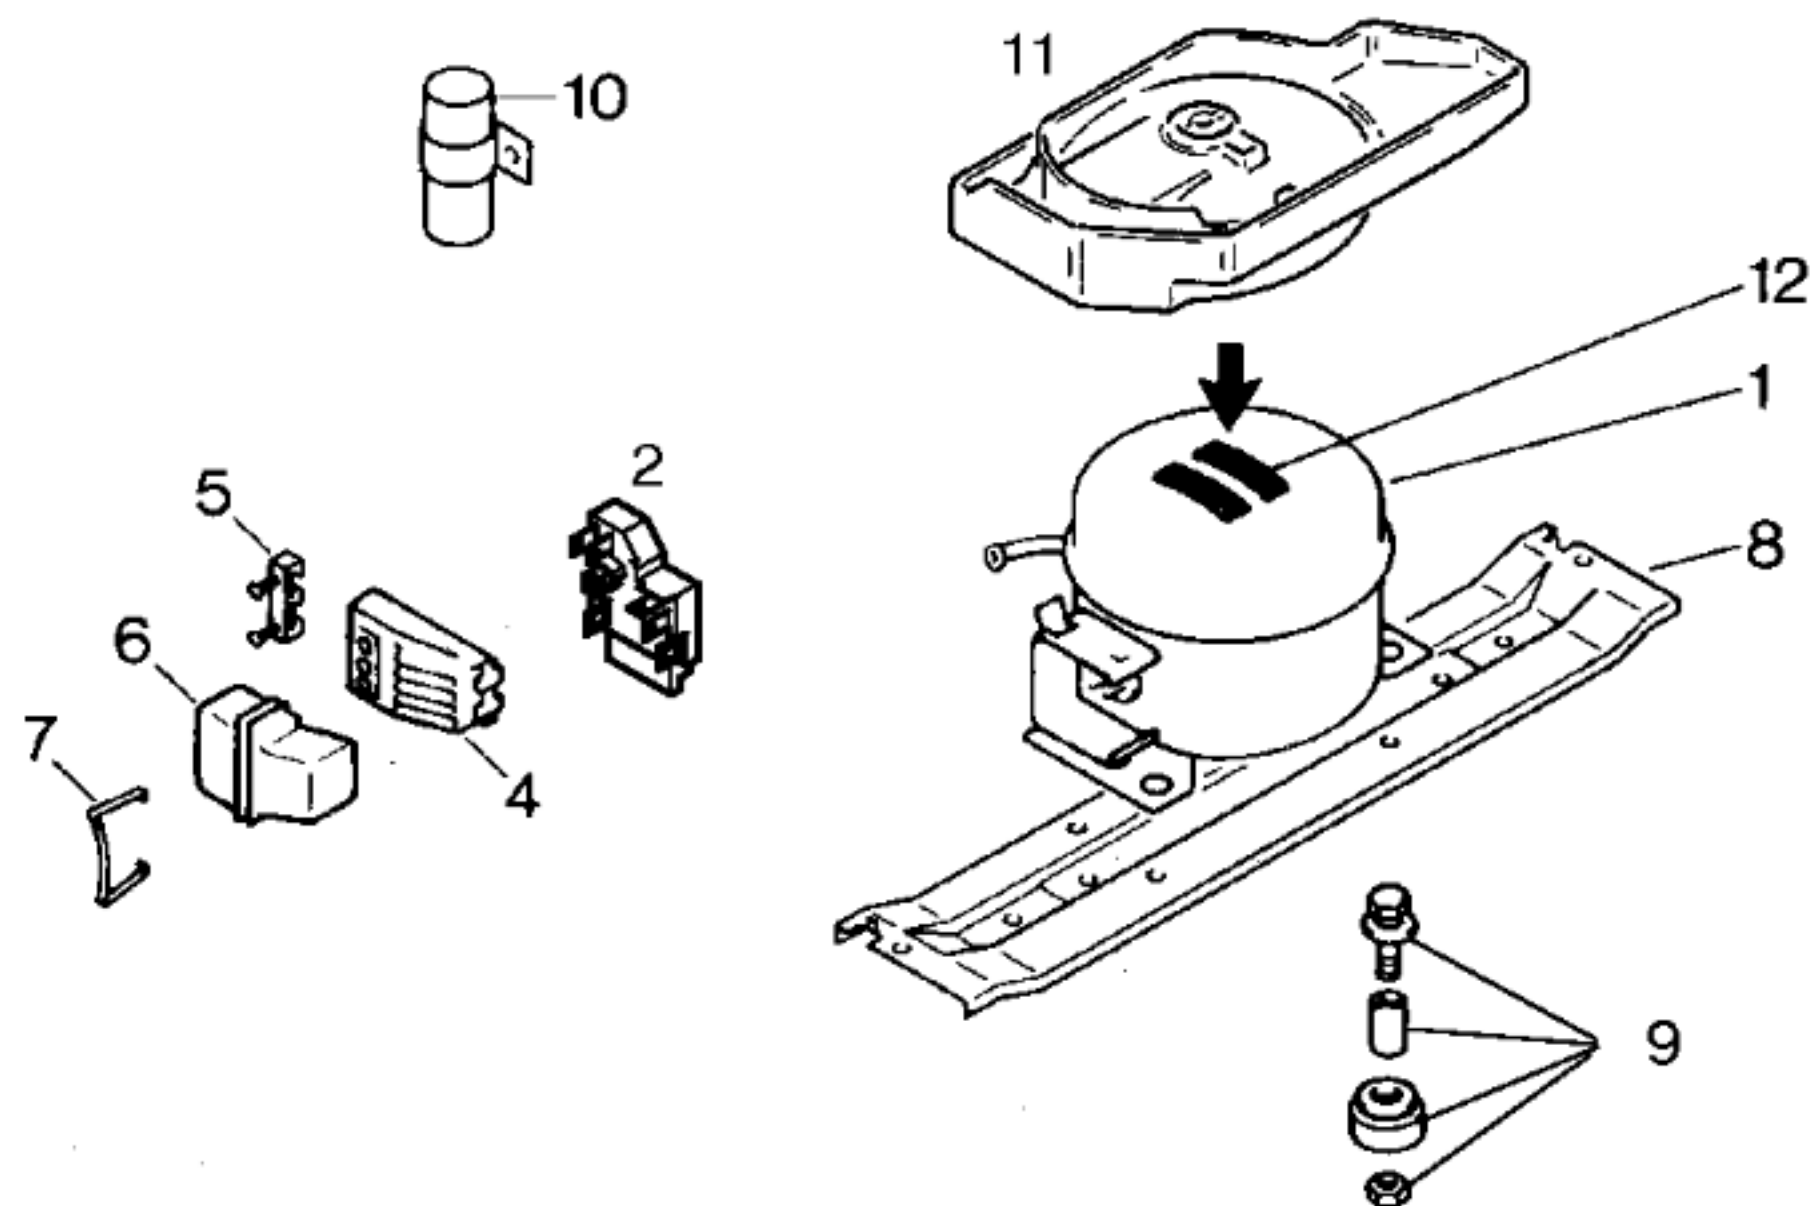

Pos.	U. HERMÉT.	DANFOSS
	GL45AA	TL5F
1	14 1374	14 1498
2	15 5130	
3		
4		
5		
6		
7		
8	28 0162	28 0162
9	05 0166	05 0166
10		
11	09 6864	
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS		
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	U. Hermét. GL45AA 8,3 21,2 24,3	Danfoss TL5F 4 18,9 15,3
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'	DANFOSS 077B62 MIN.-MAX +6° -13° -28°	RANCO K54 L1924 MIN.-MAX -14° -24° -21° -31° -15°
Füllmenge/Fill. quantity/Charge/Carga 134a	g	60 125
Anschlußwert/Comm. load/puiss. Connect./Potenc.	W	87 120
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W	
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm	
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Volage/Tension/Tensión	Ohm V	
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador		