 


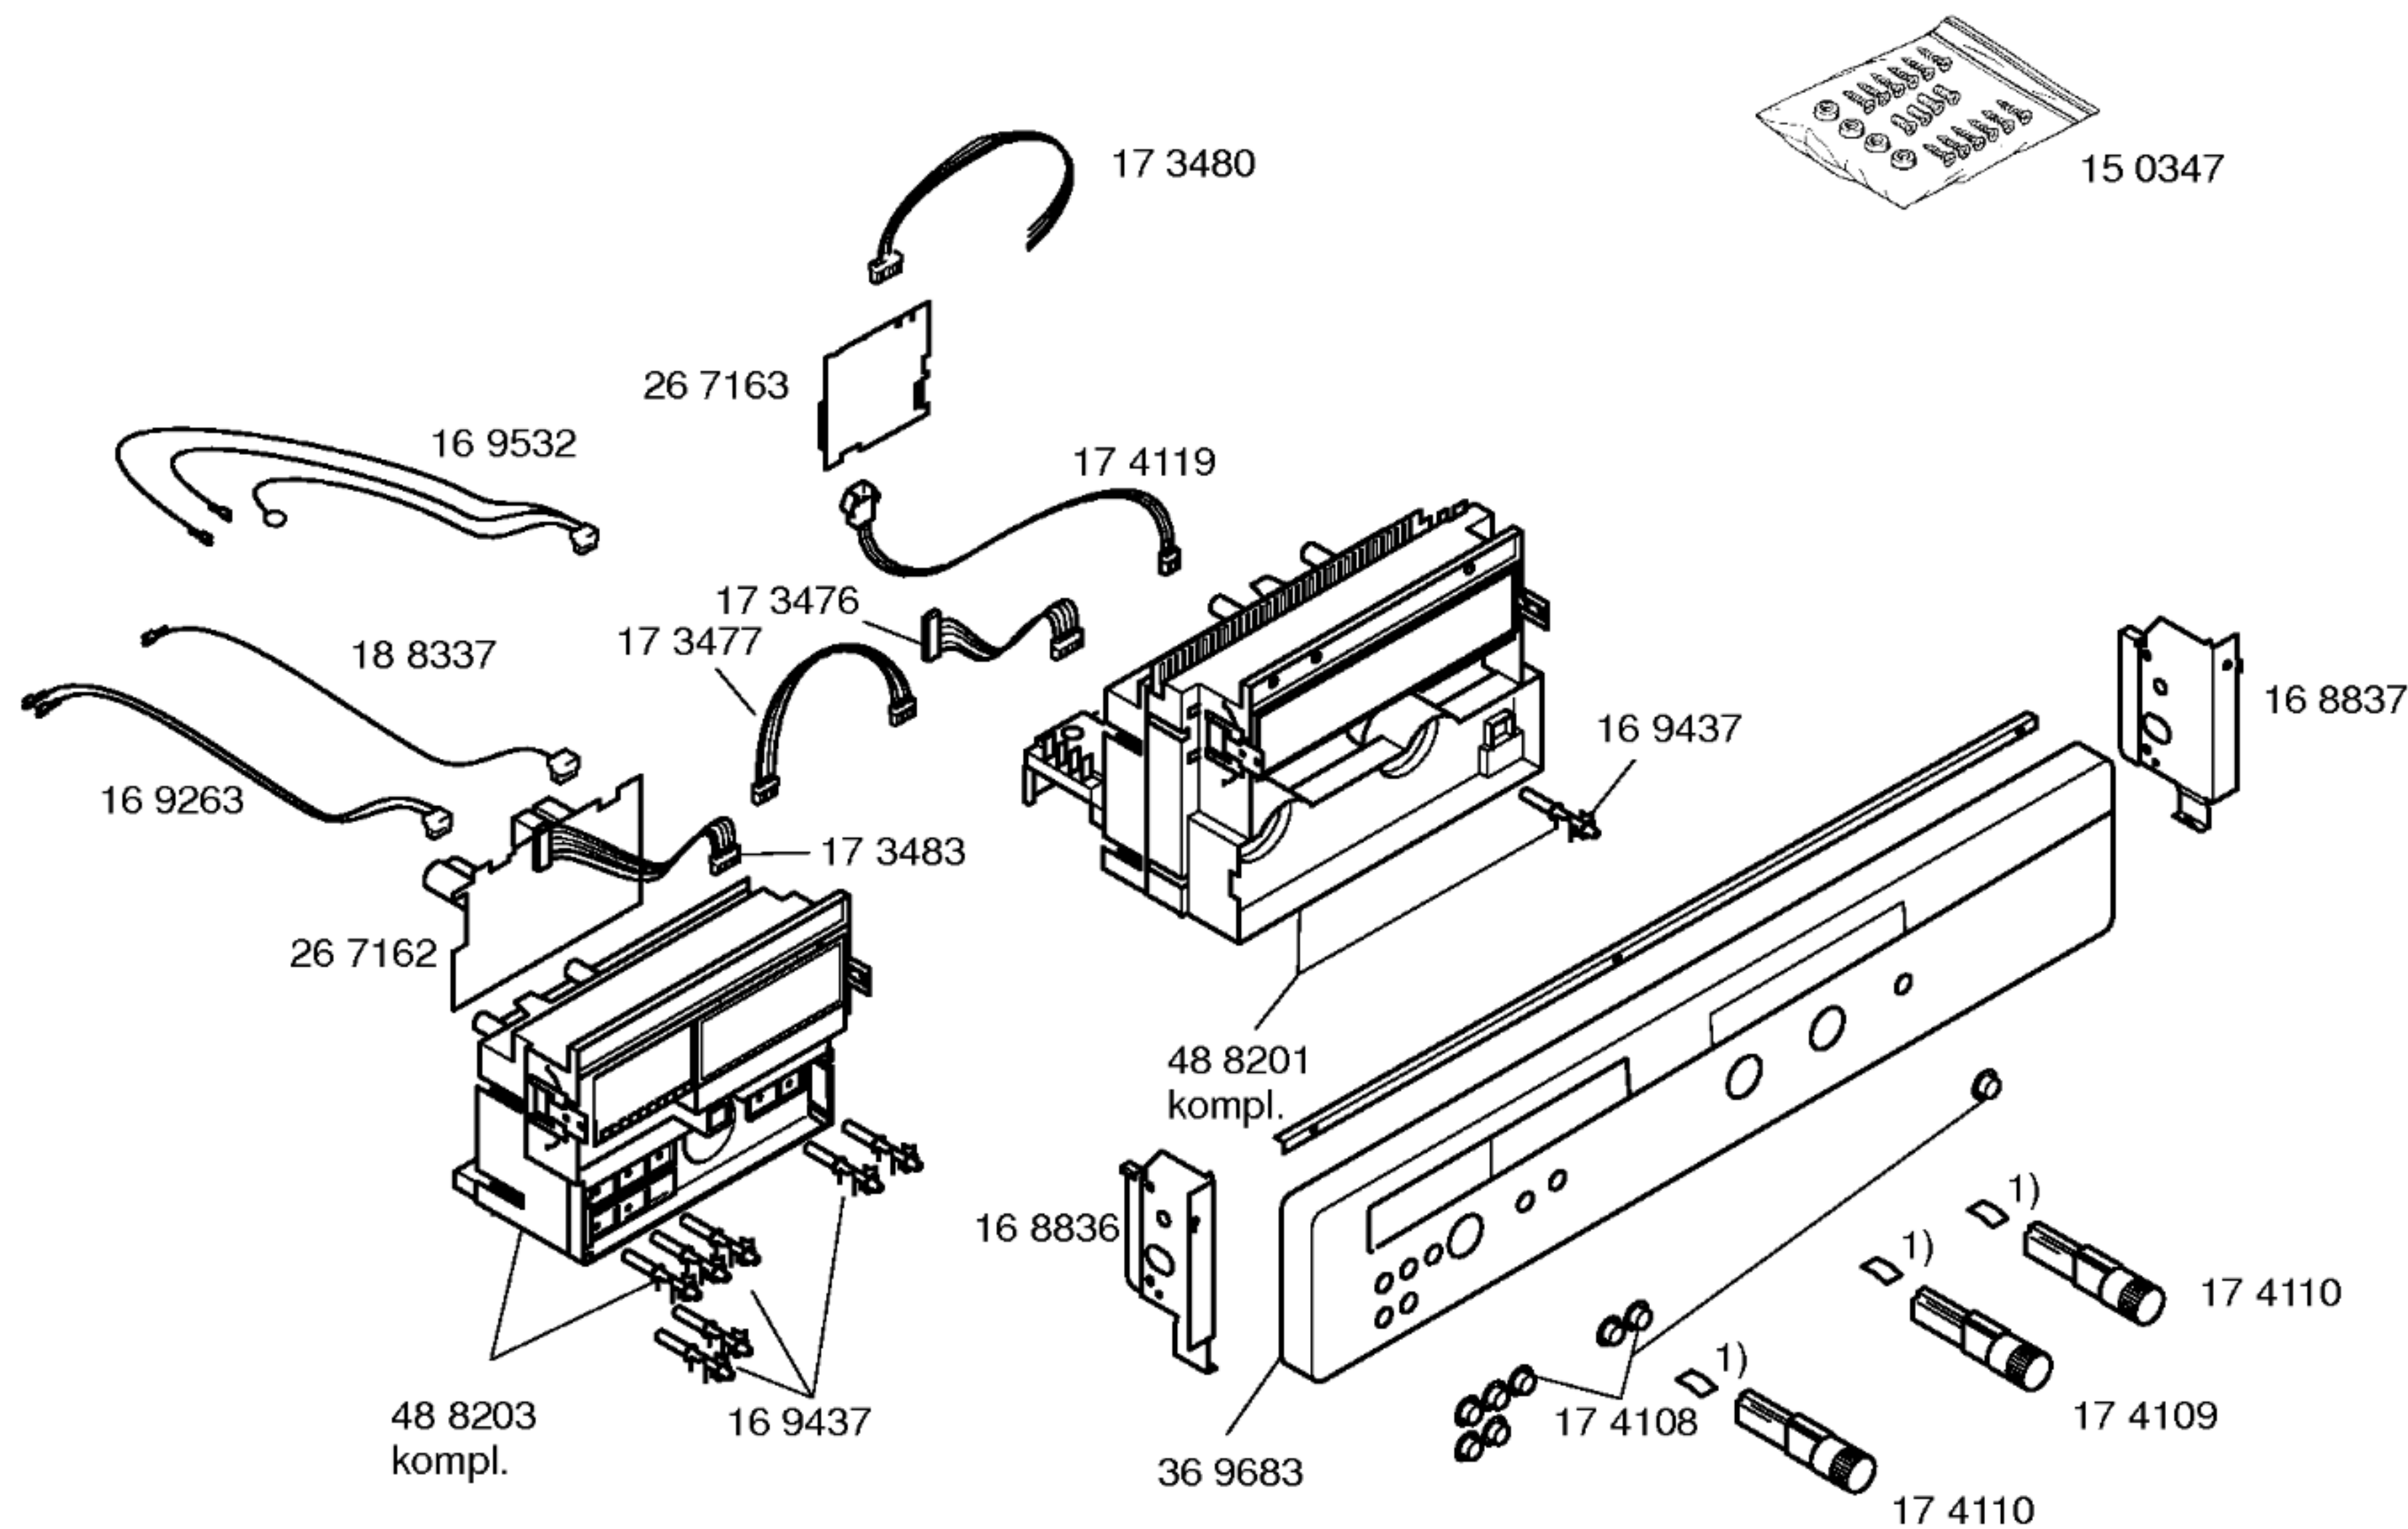

Gebrauchsanweisung

58 2755 (de)
58 2756 (fr)
58 2757 (nl)

 
Montageanweisung:
52 4904
(de,en,fr,it,nl,da,sv,no,
fi,es,pt,el,cs,pl,tr,ru)

Broschüre/Kochbuch

58 2610 (de)
58 3556 (en)
58 3557 (fr)
58 3558 (nl)
58 3559 (es)
58 3560 (pt)
58 3561 (it)
58 3562 (el)
58 3563 (cs)
58 3564 (hu)
58 3565 (pl)
58 3566 (ru)
58 3567 (tr)
58 3568 (da)
58 3569 (sv)
58 3570 (no)
58 3571 (fi)

1) 01 4254




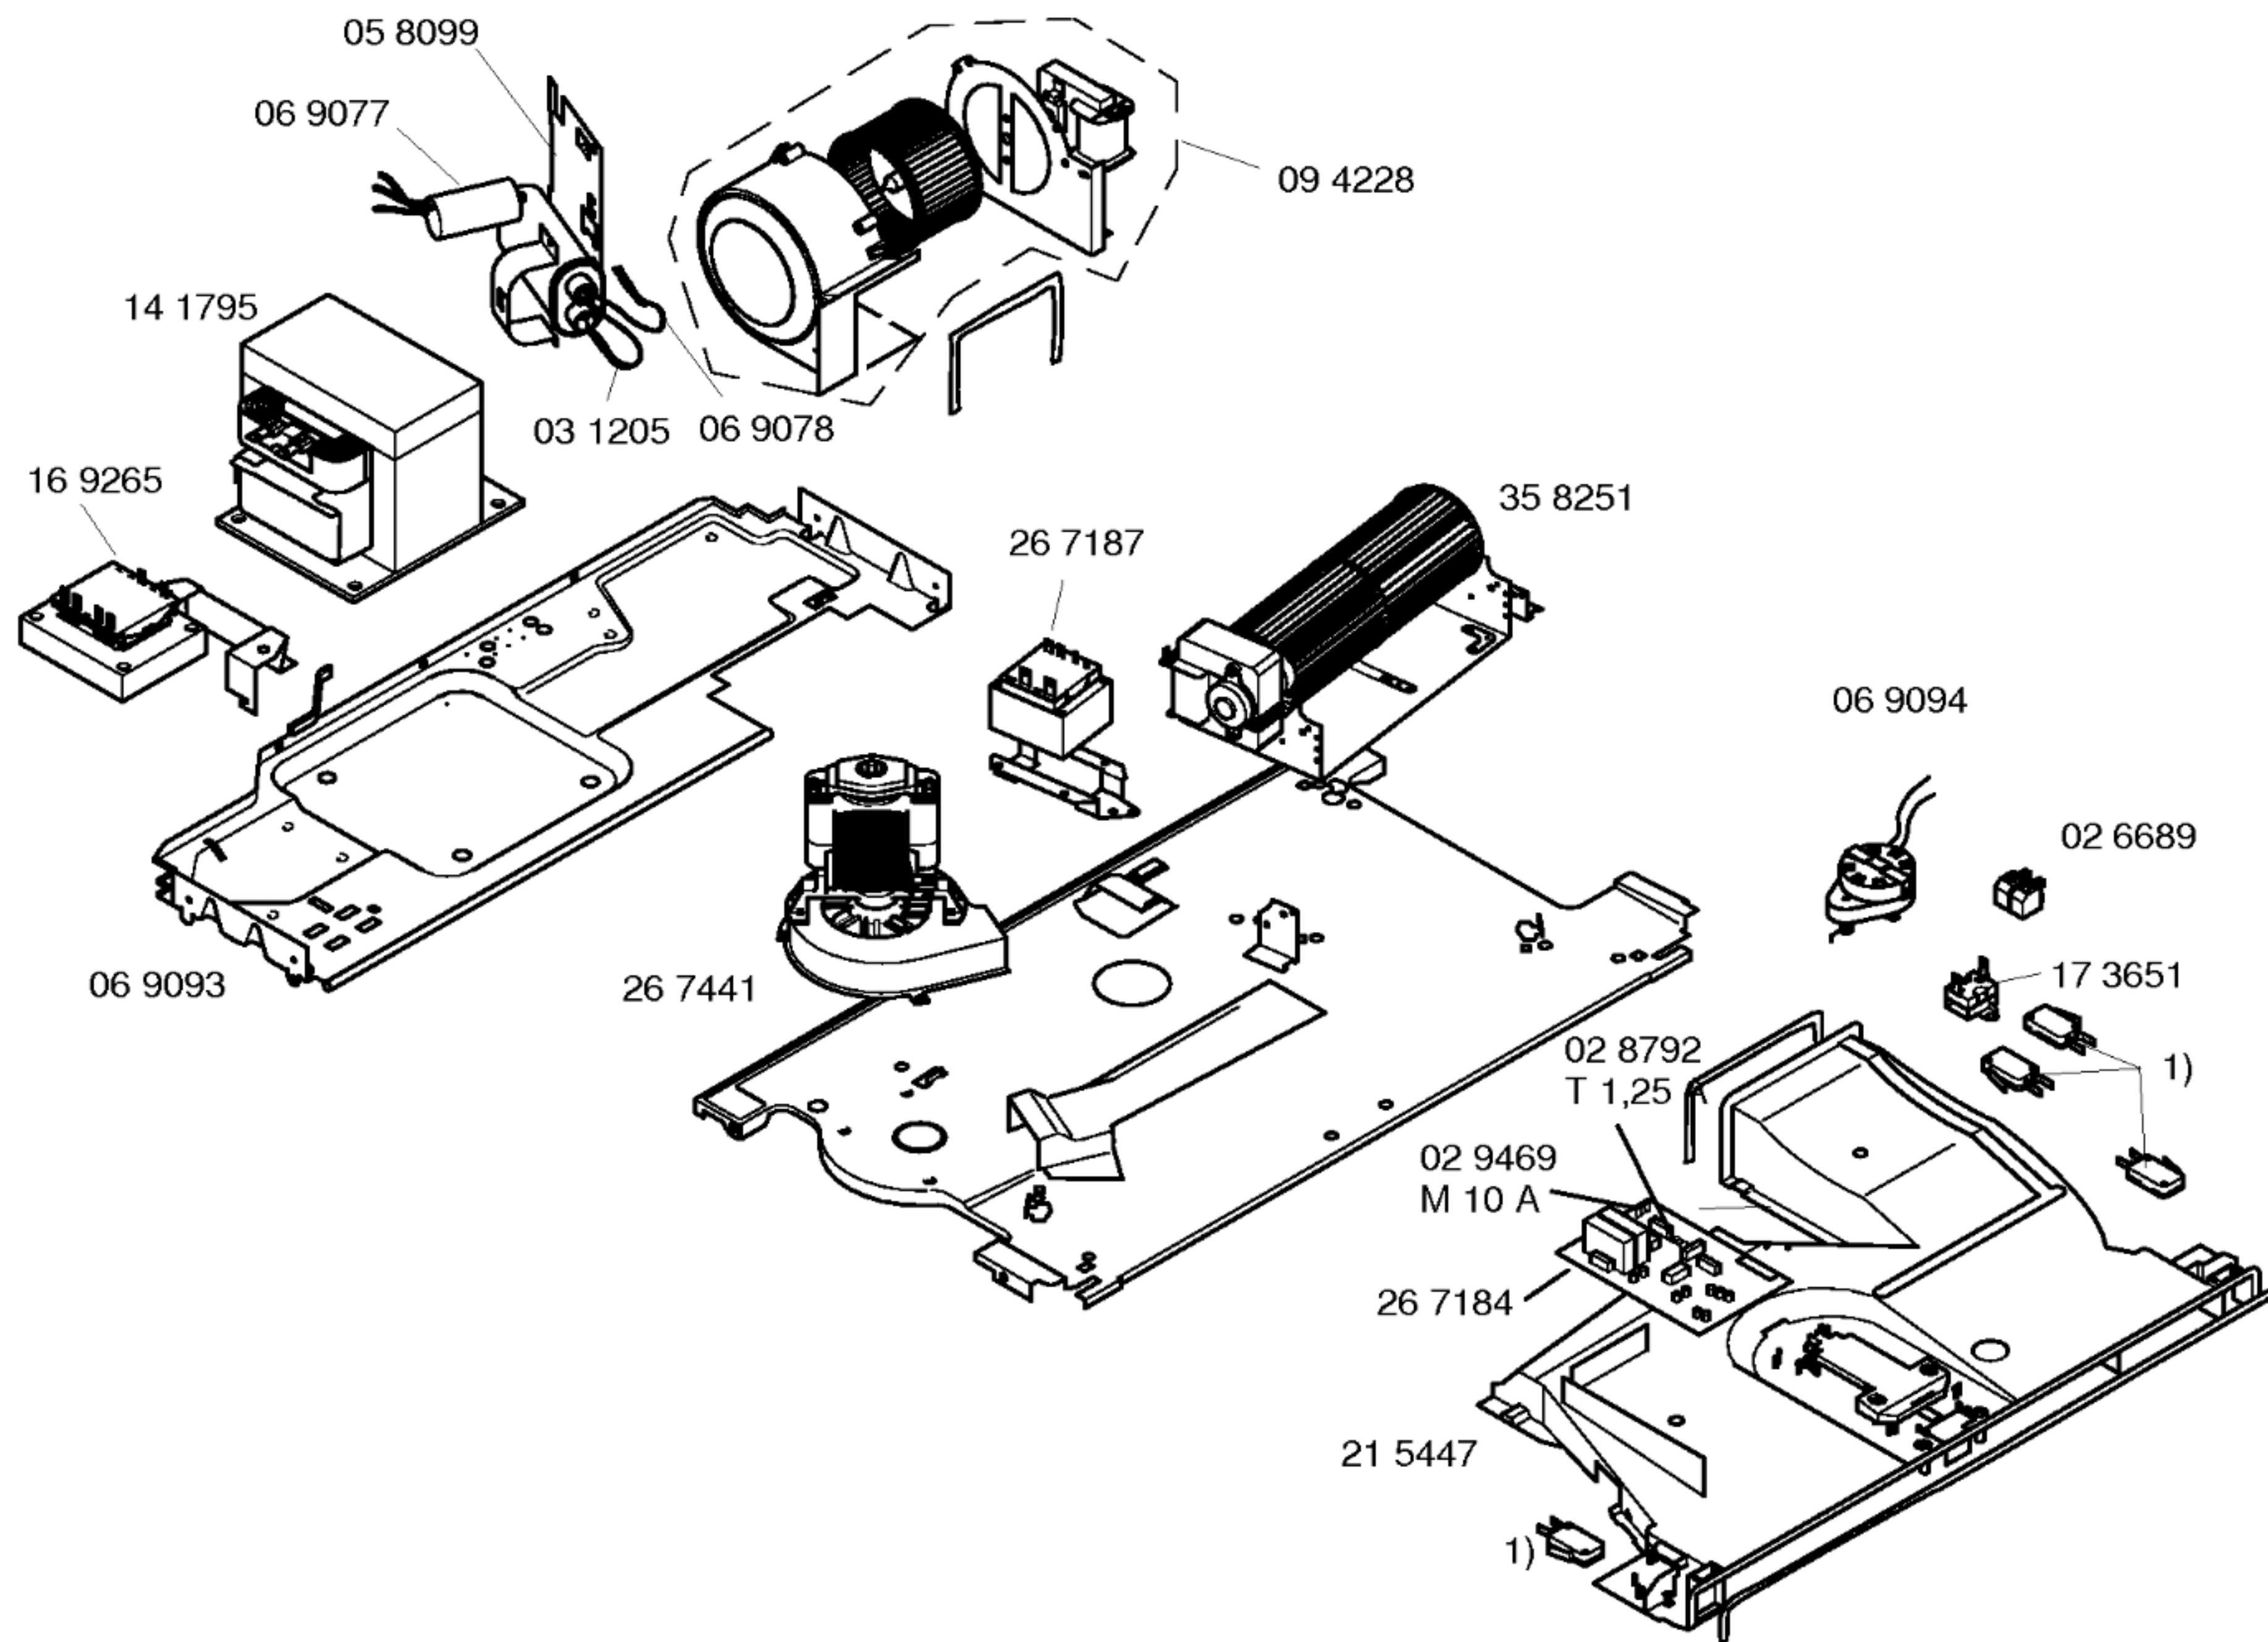



1) 17 3548

Zubehör:

   HZ24150
Bachblech email
HZ24250
Backblech Auszug
HZ24350
Universalpfanne
HZ22550
Grillblech
HZ24400
Kombirost
HZ24750
Profipfanne
HZ9150
Glasbräter
HZ26000
Metallbräter
HZ24701
Deckel für Profipfanne

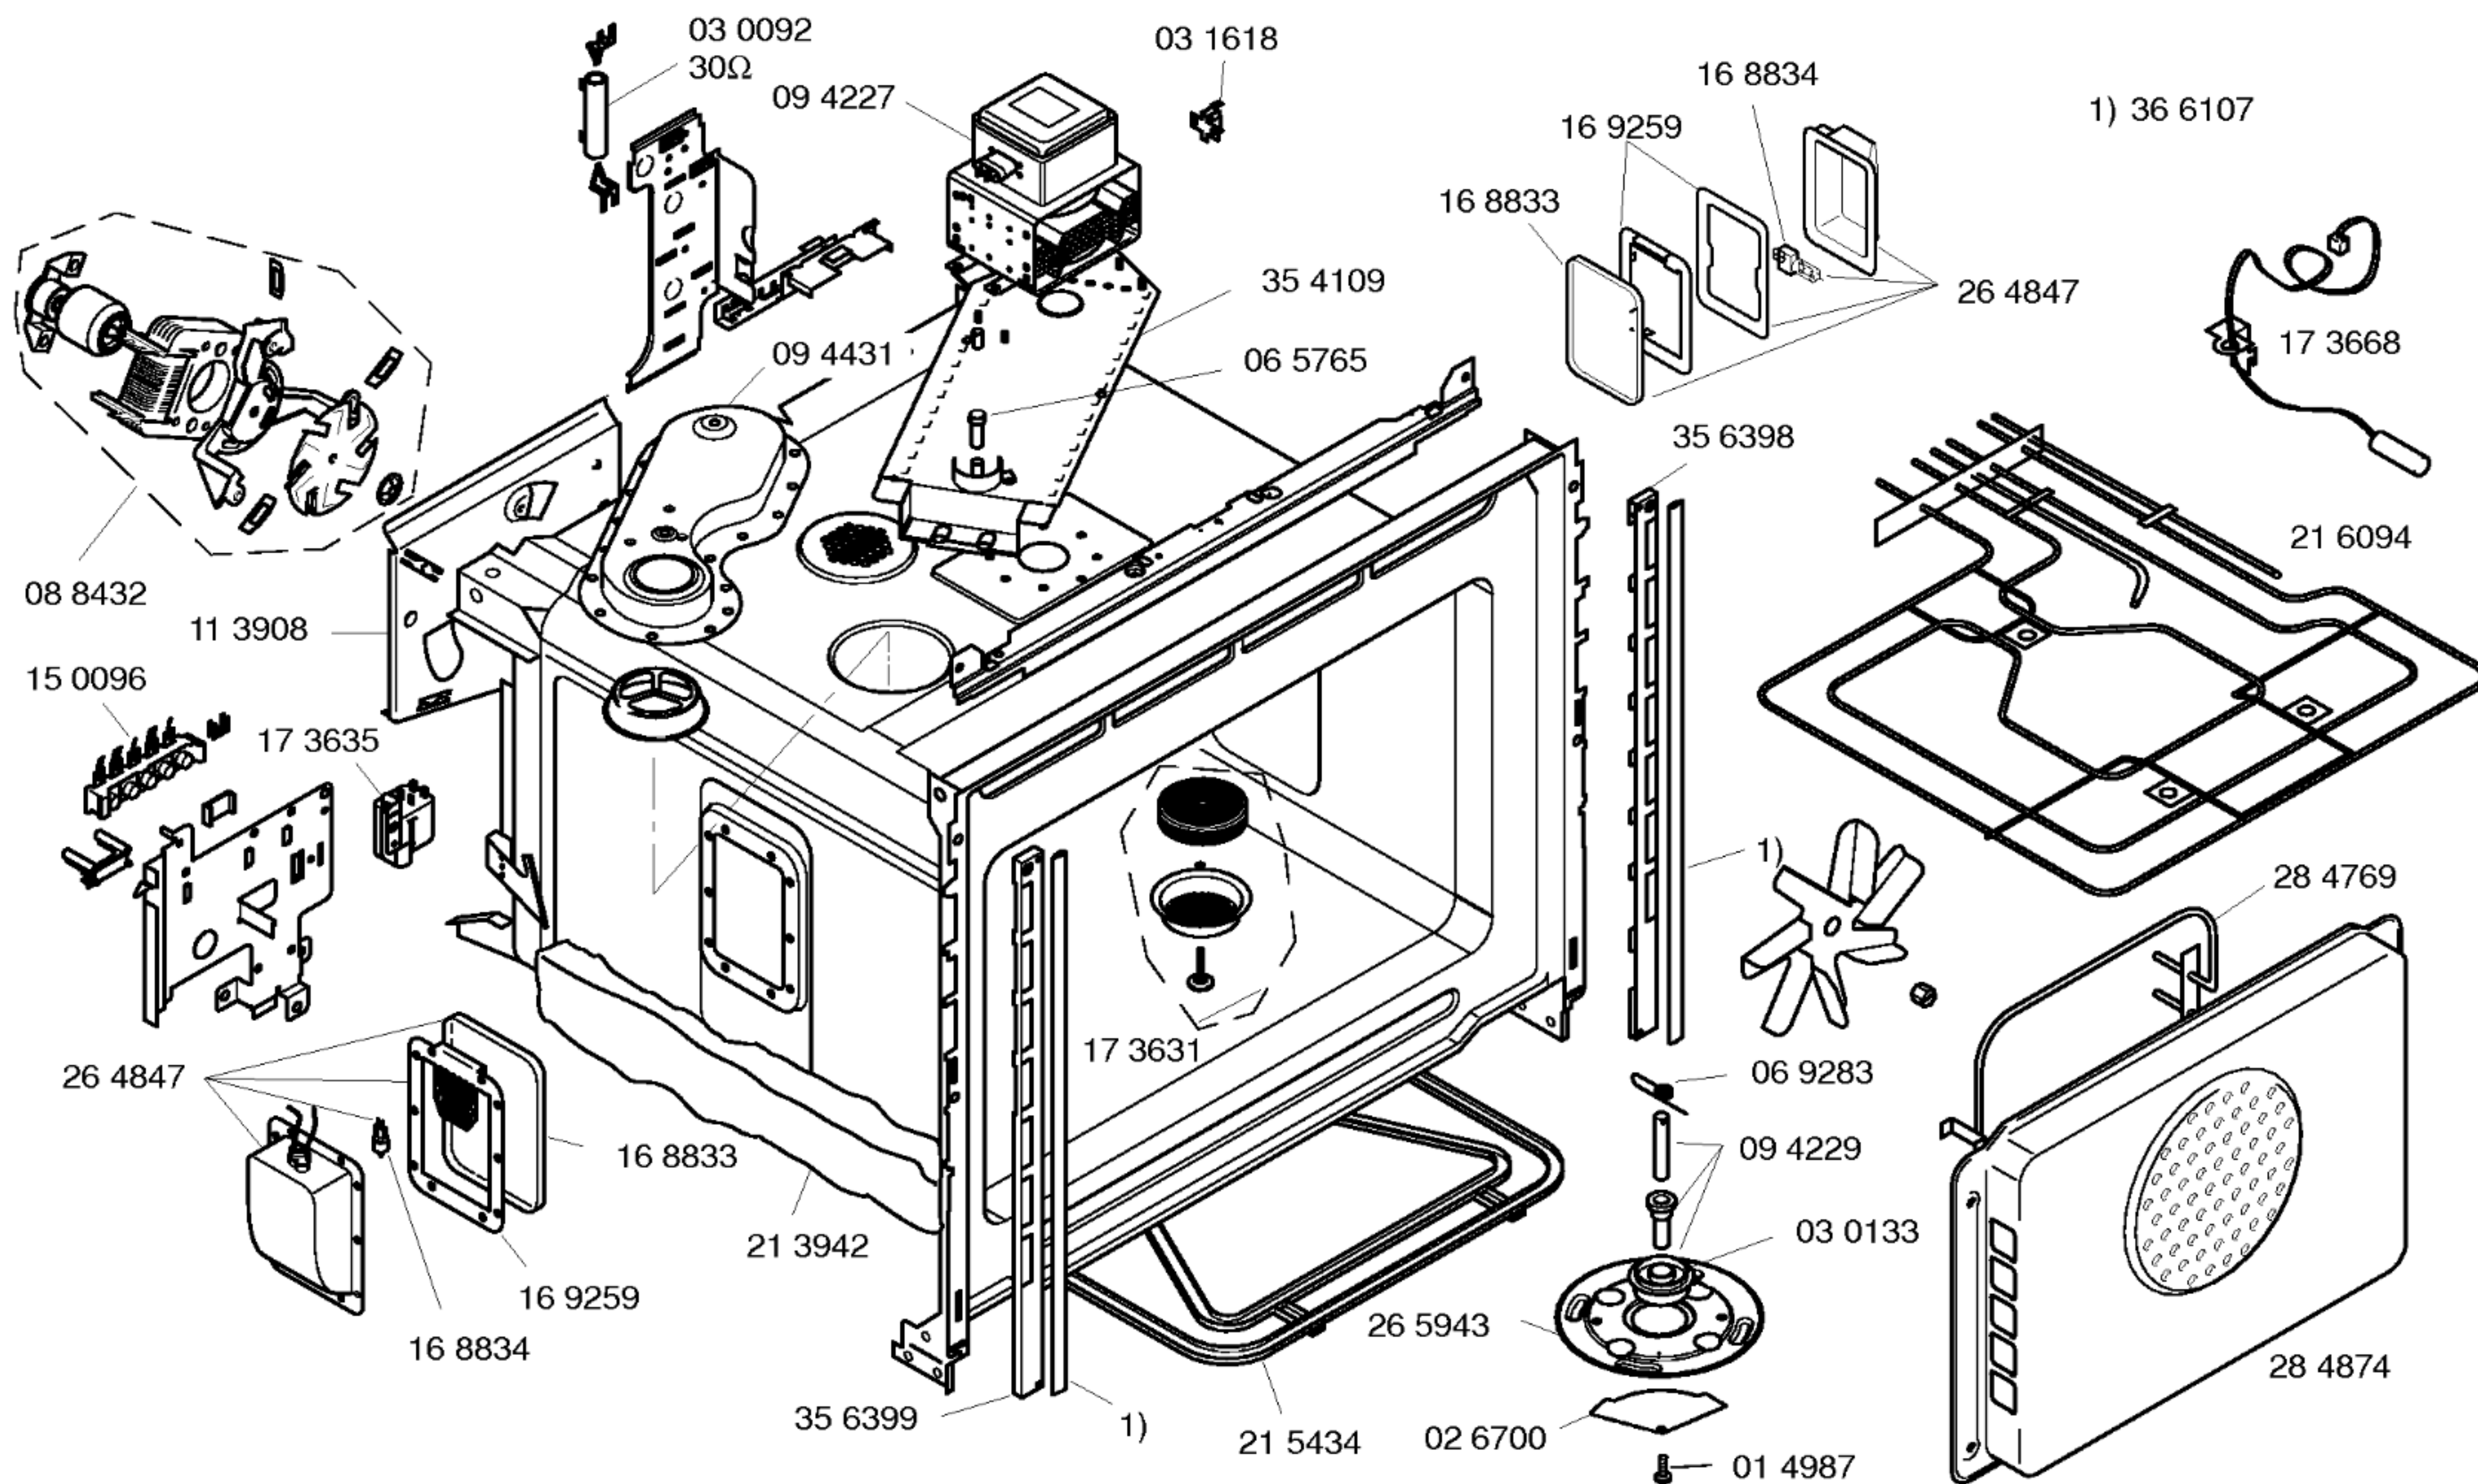

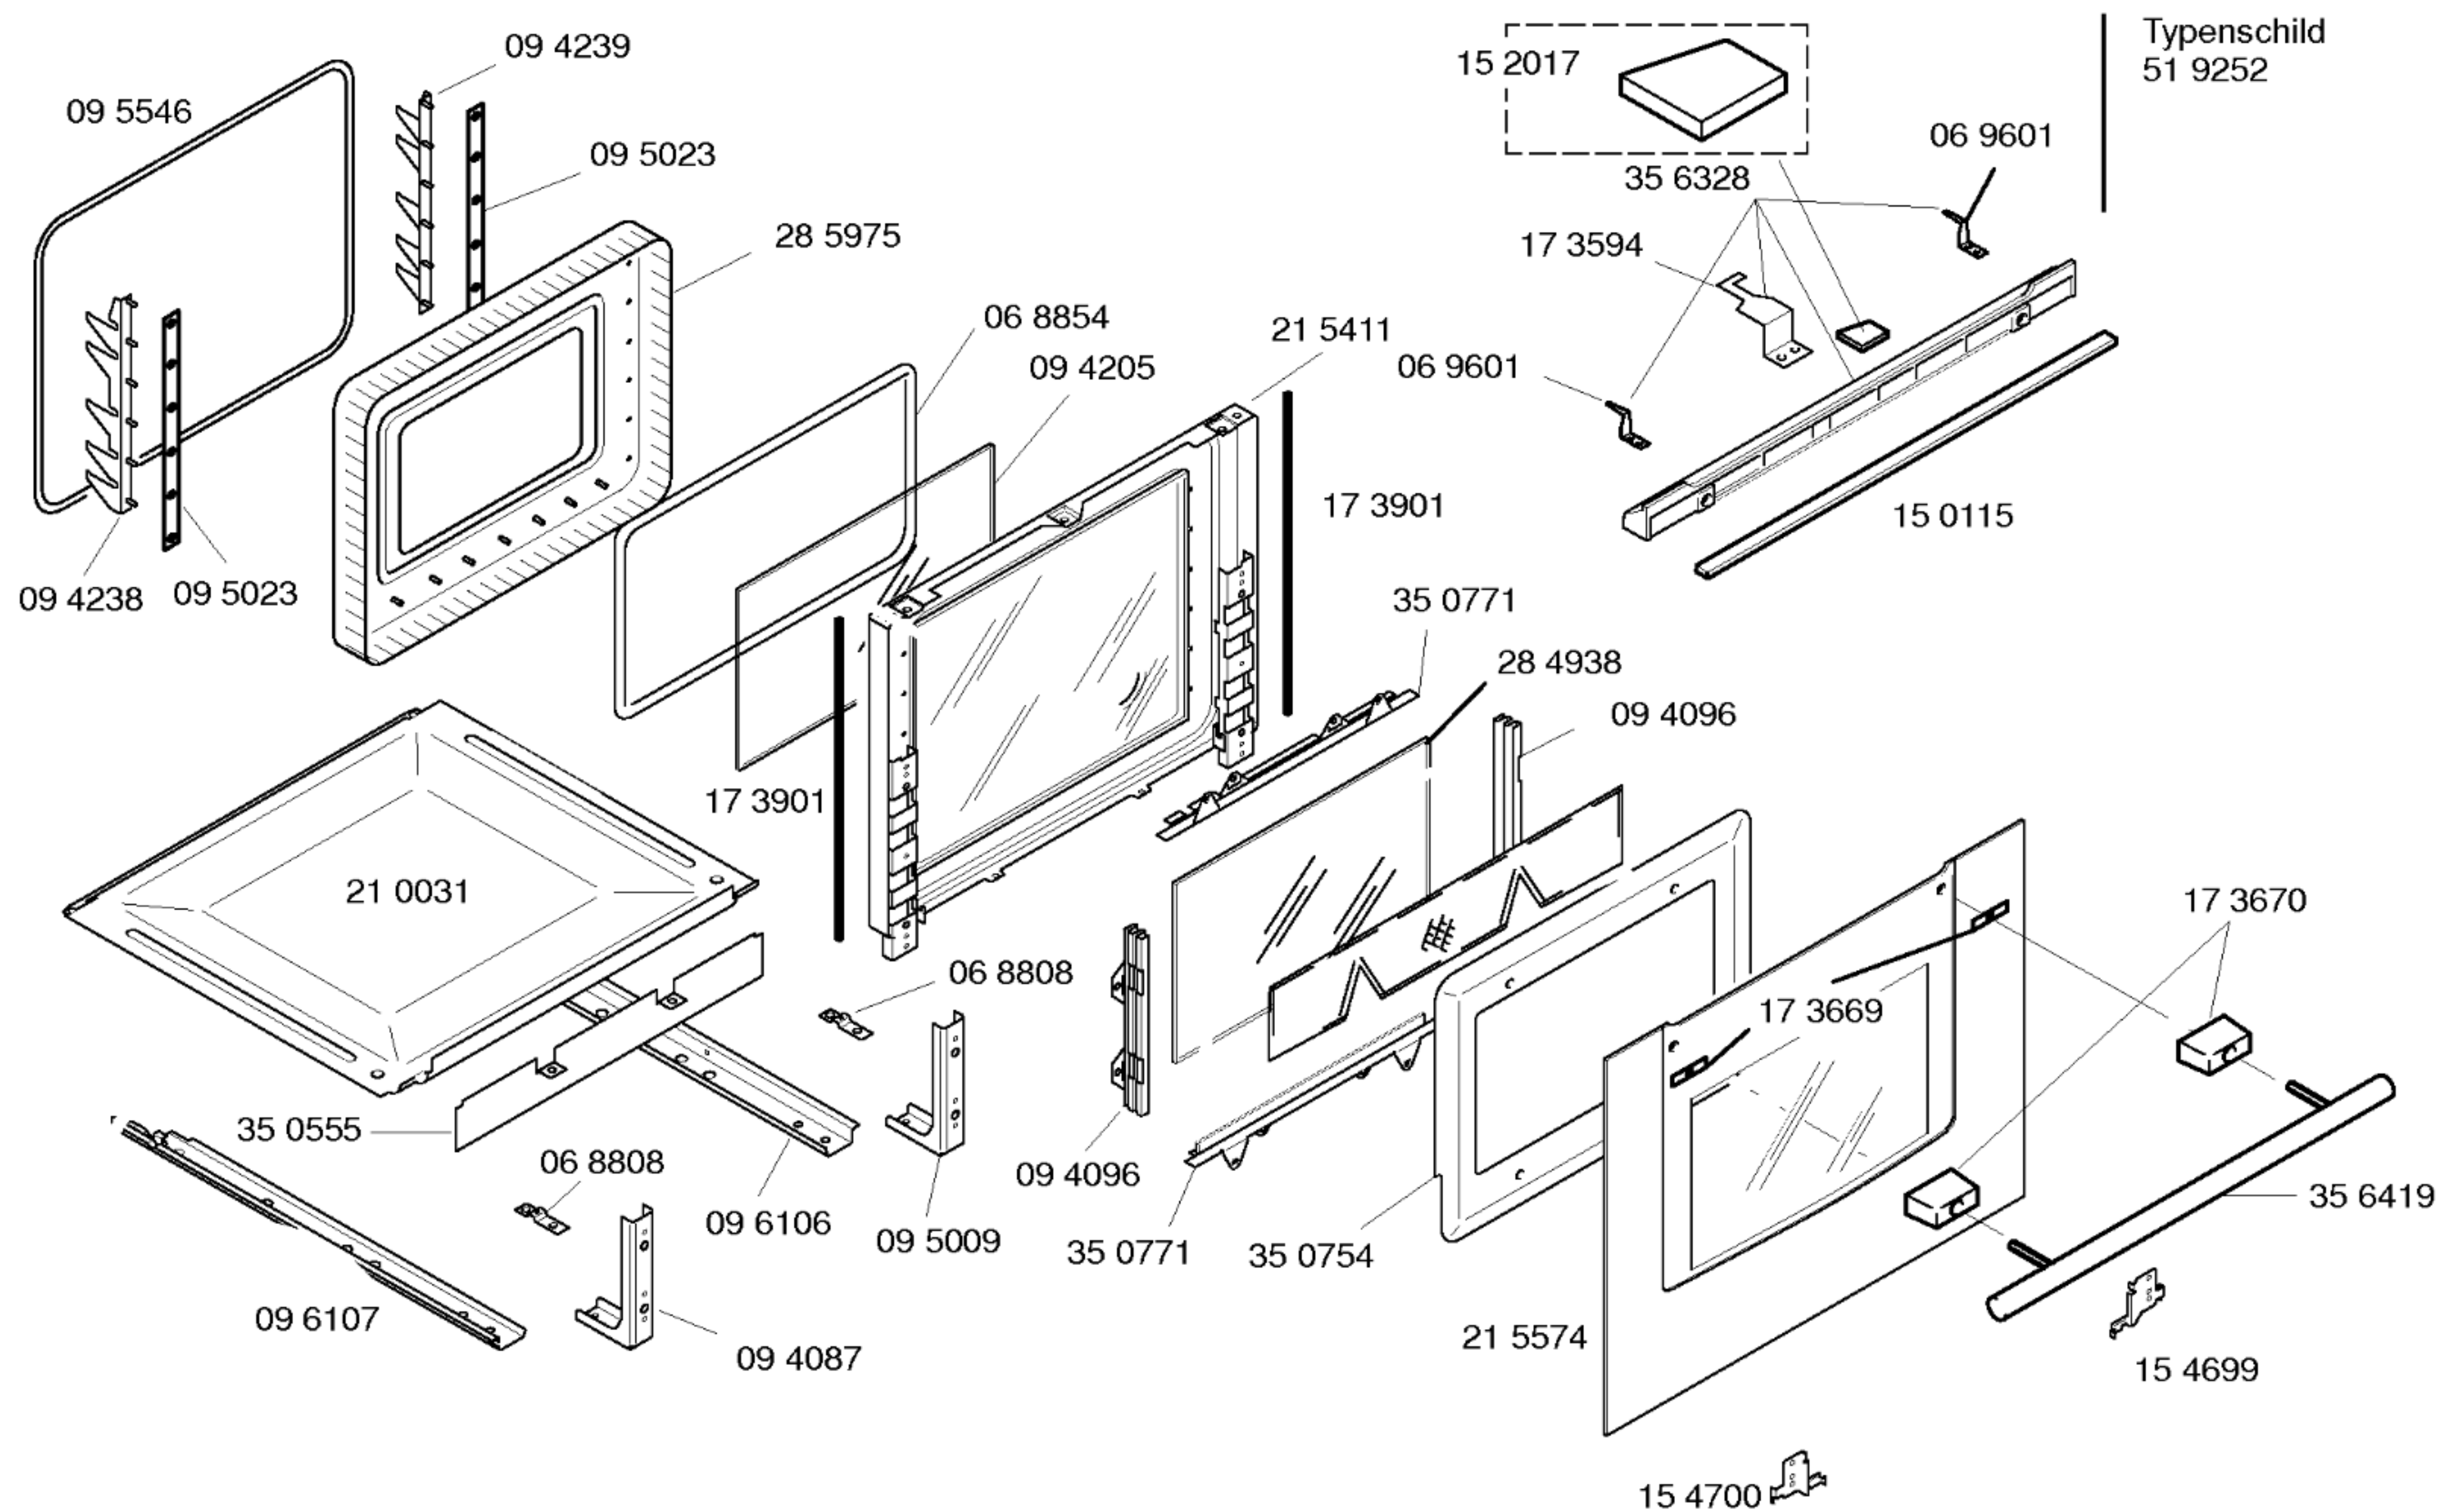

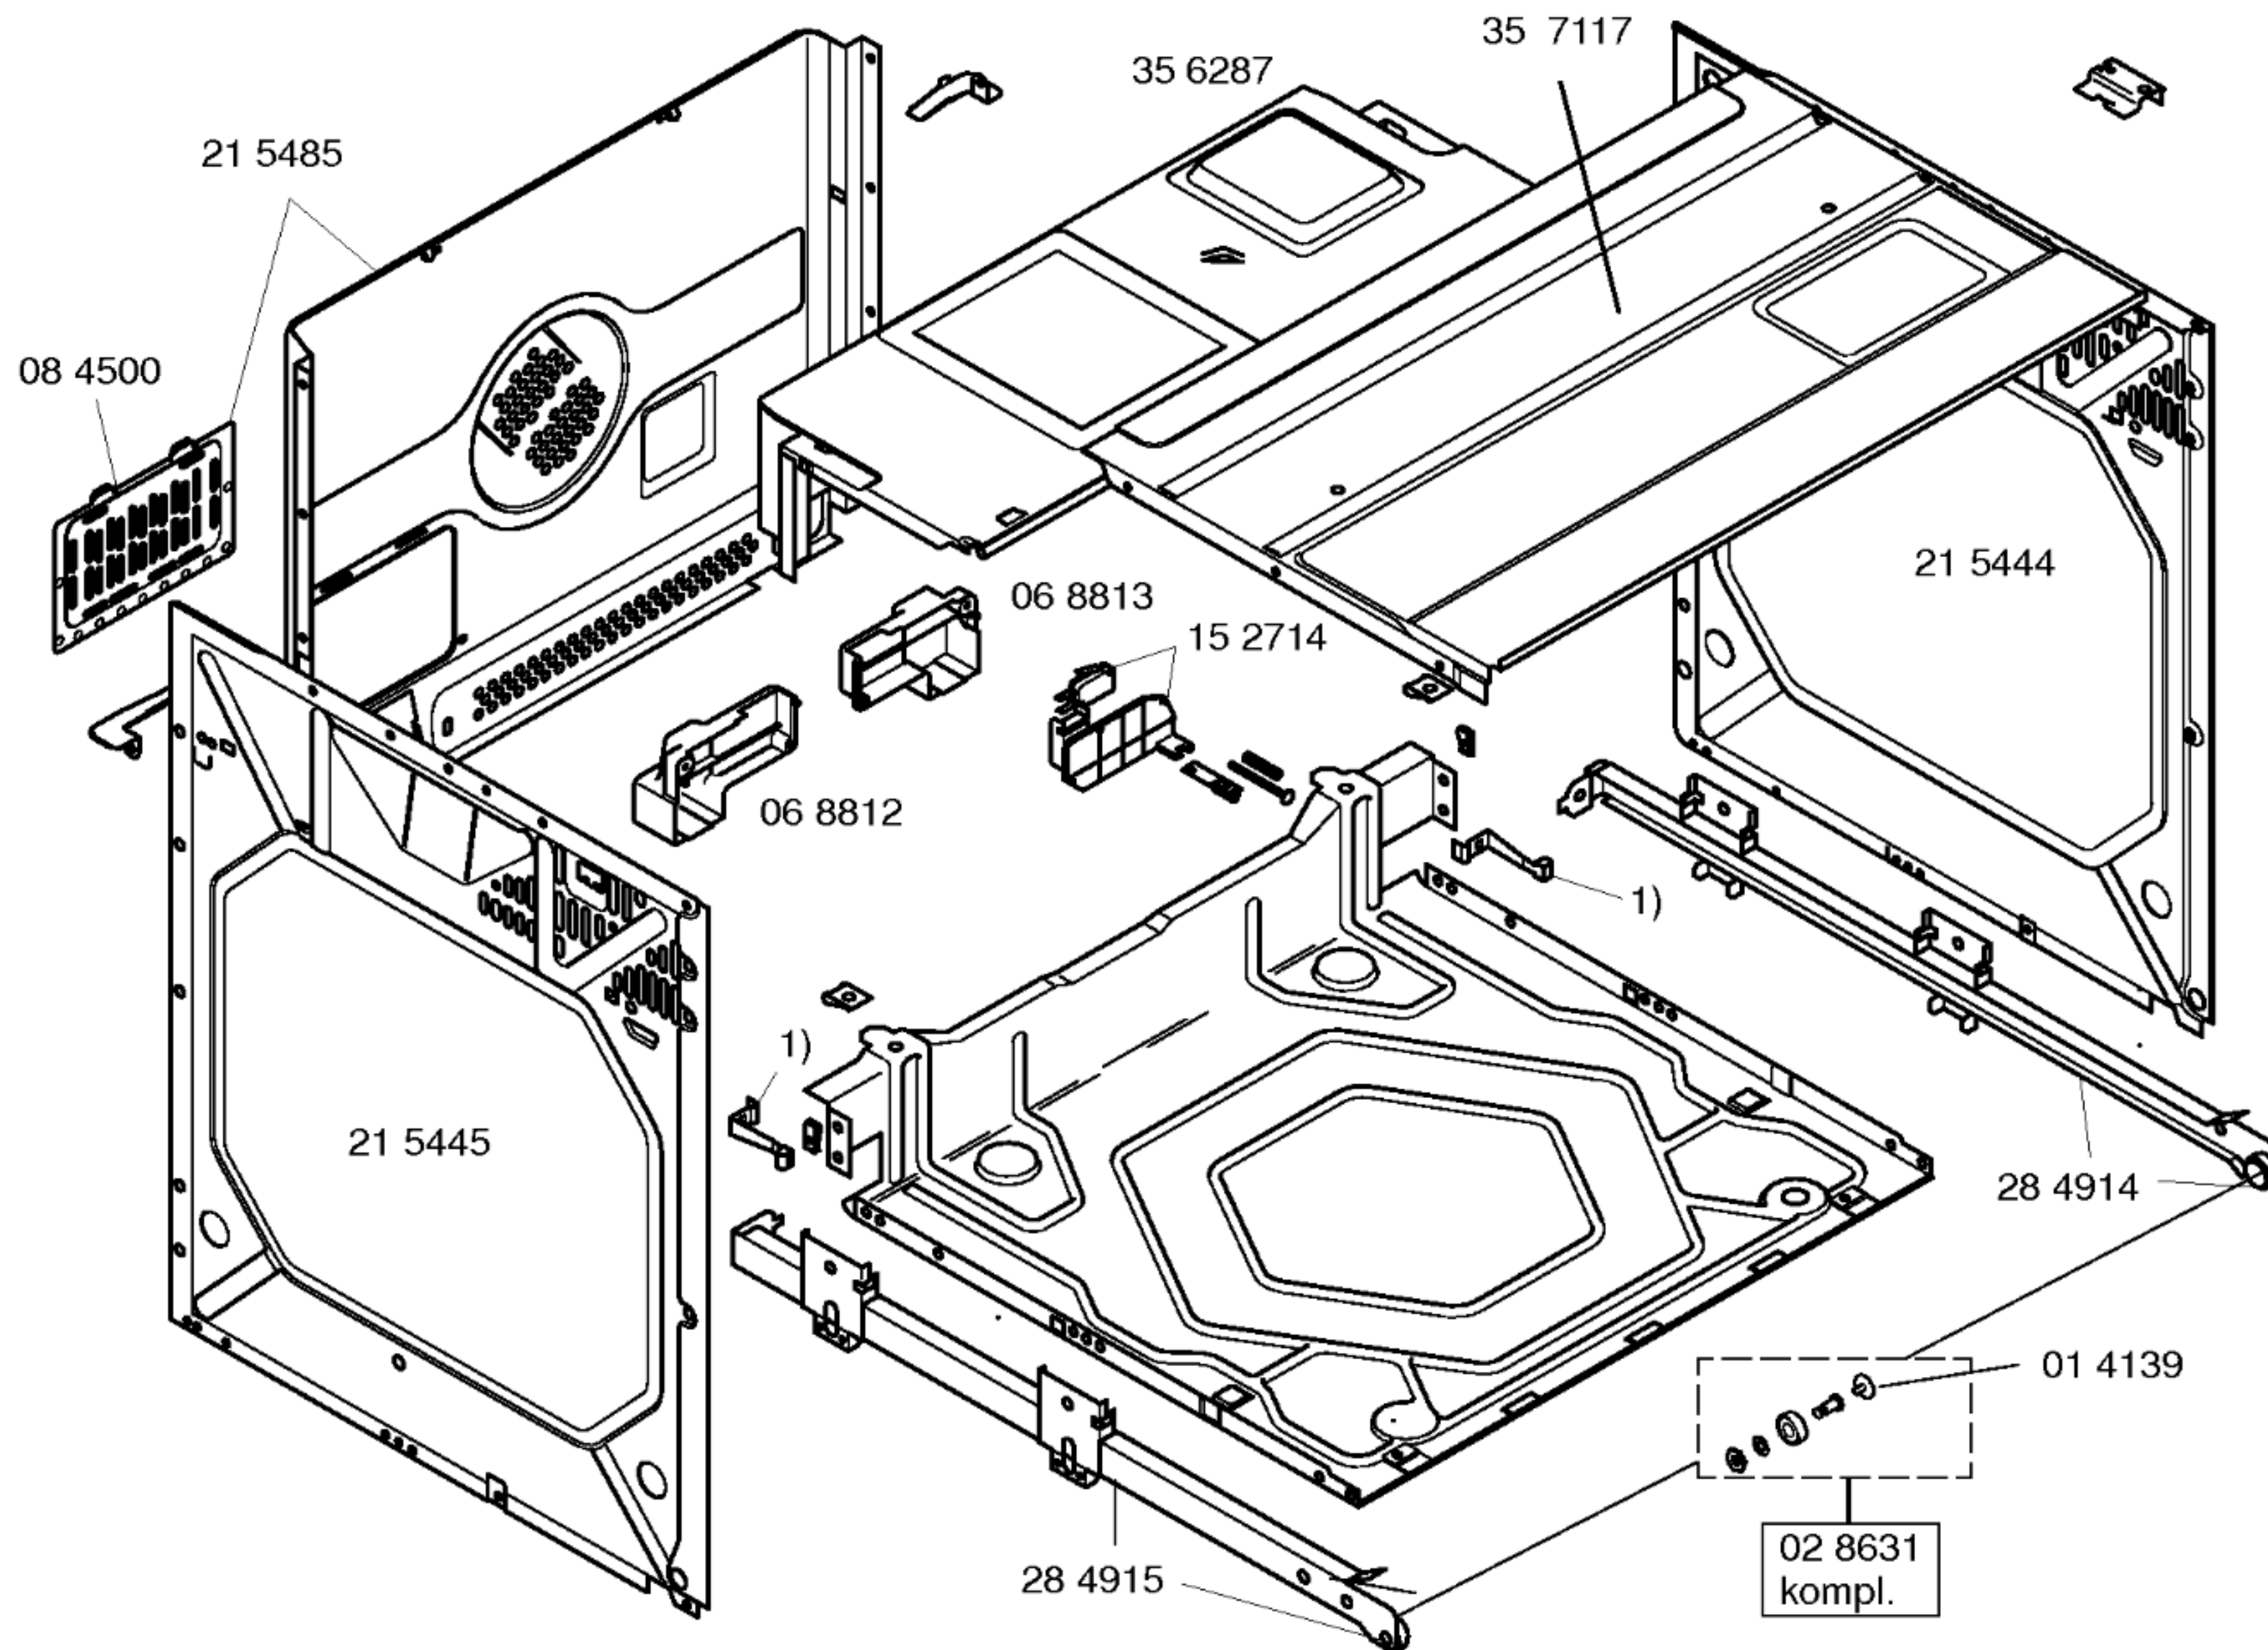

1) 06 8811

