




09 6325

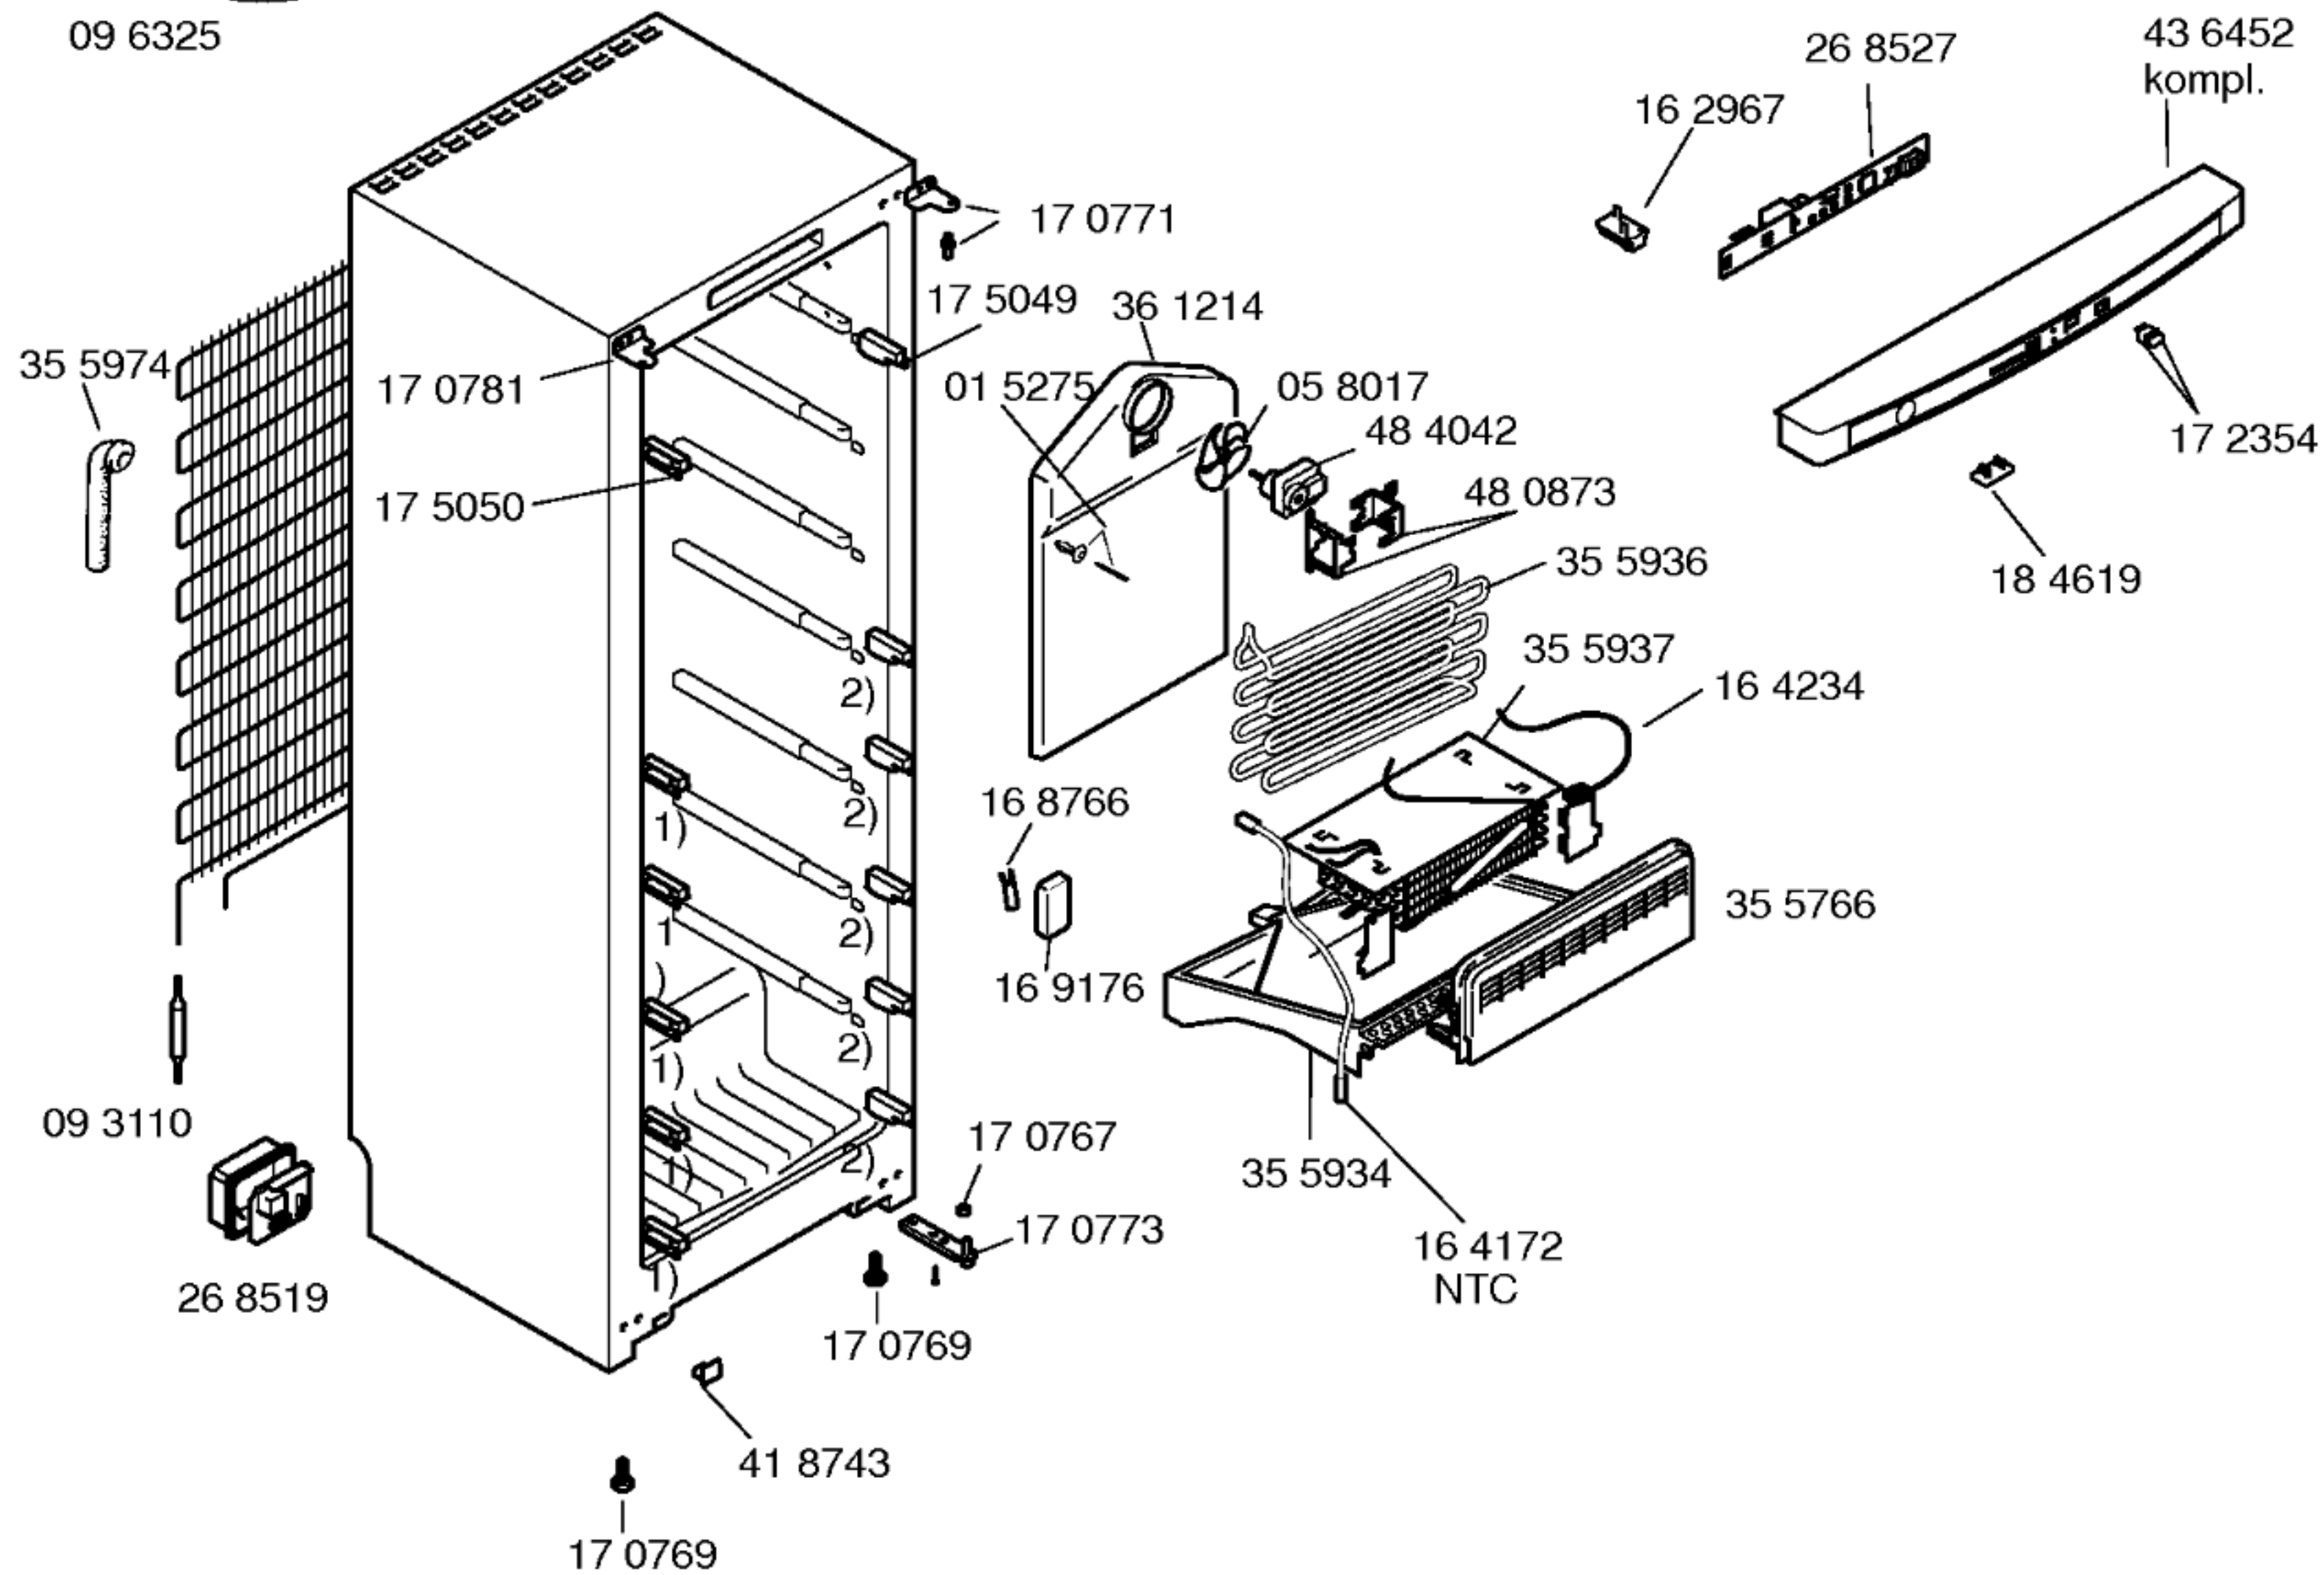

Gebrauchsanweisung
52 7842
(de,en,fr,it,nl)
Montageanleitung
52 2772
Beistellsatz
26 5627

- 1) 17 1455
- 2) 17 1454

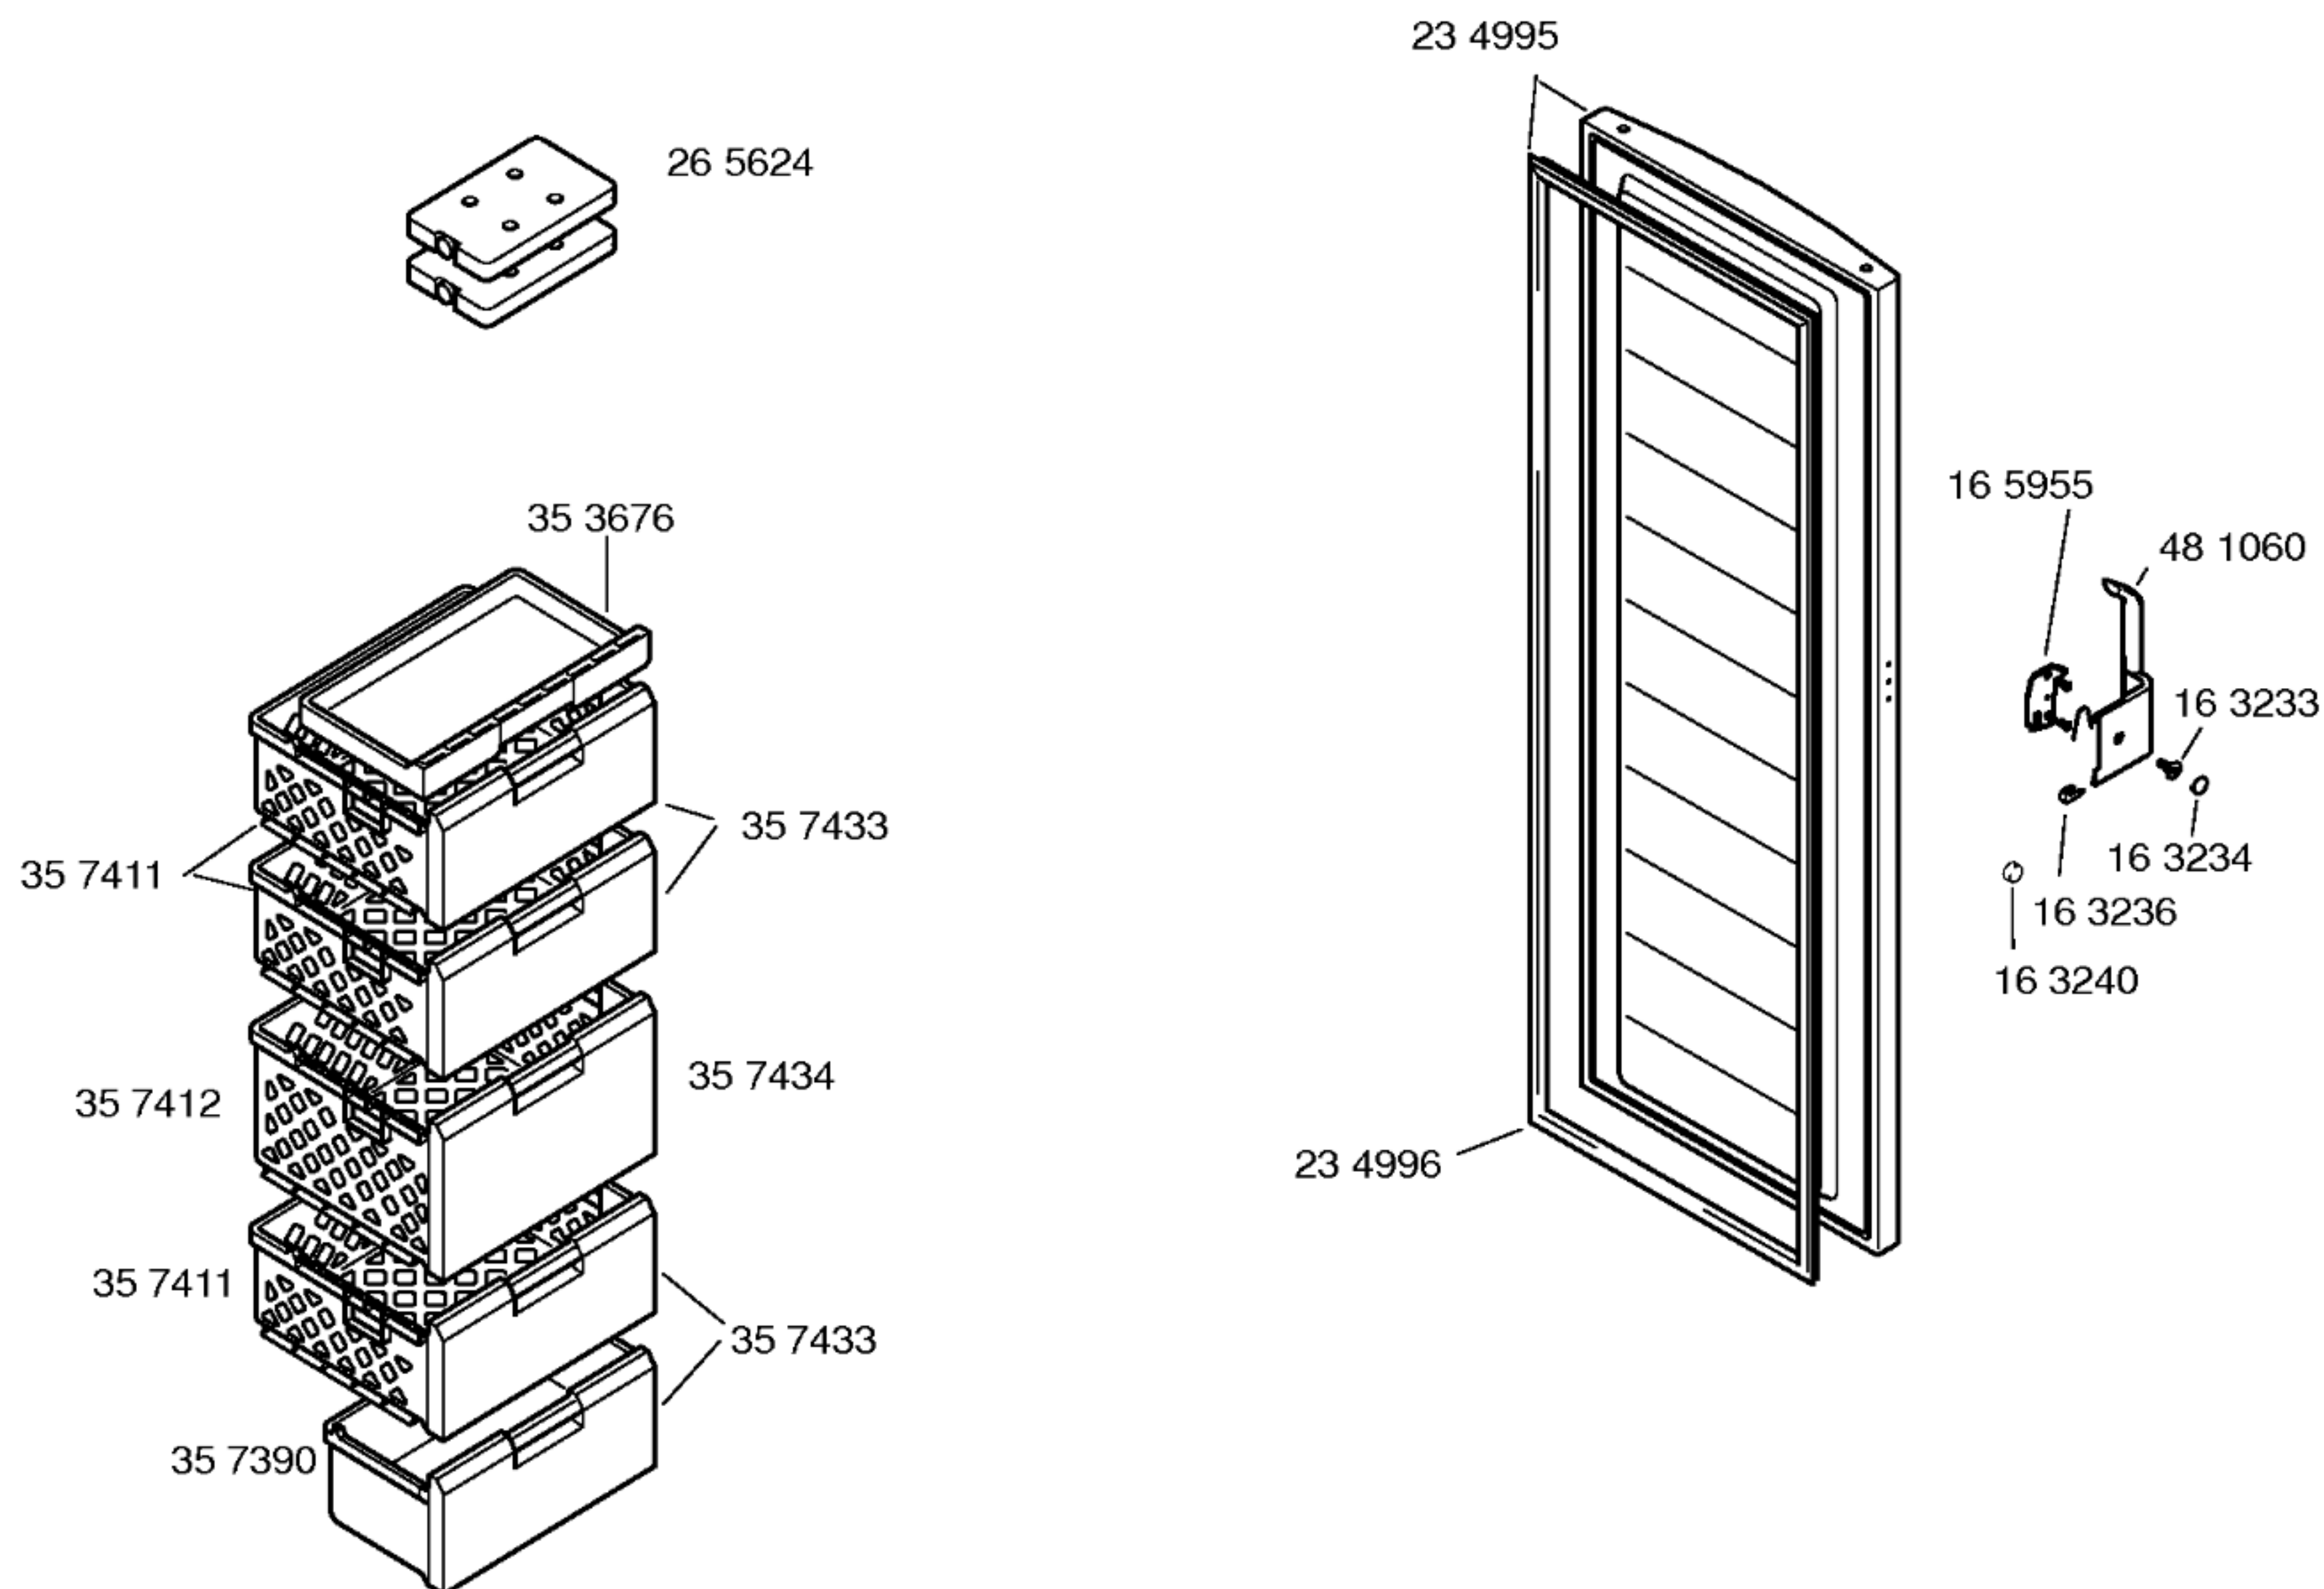

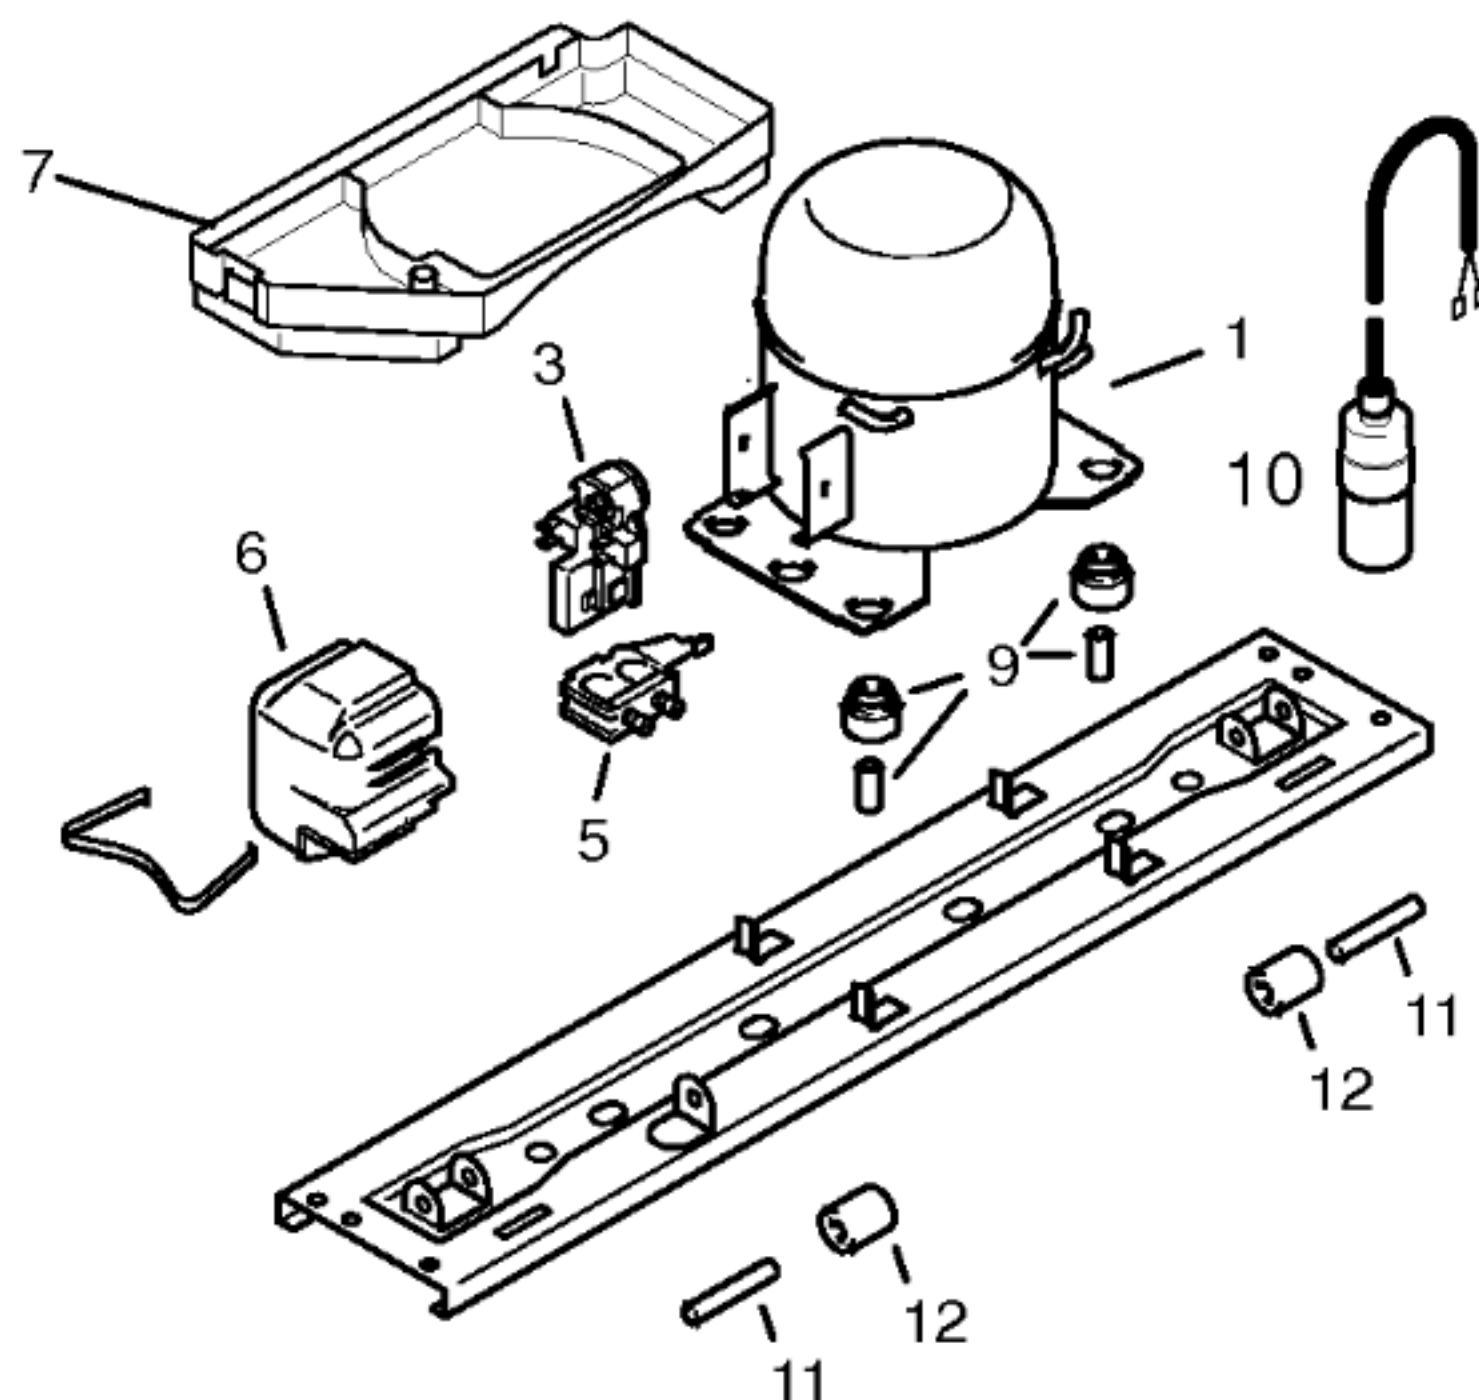

Pos.	Matsushita		
1	DC125E		
2	14 2131		
3	17 2967		
4			
5	16 2549		
6	16 6782		
7	08 8535		
8			
9	05 0166		
10	15 2222		
11	01 9017		
12	01 9016		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Matsushita			
Typ/Type		DC125E			
Förderleistung/Delivery/Débit		l/h		2246	
Anlaufstrom/Starting current/Cour de démarrage		A		9,2	
Widerstand/Resistance/Résistance		Ha/main/prin		Ω	
		Hi/aux		Ω	
Temp.-Regler/Thermostat		Elektronisch			
Typ/Type		EIN AUS			
Regelstellung/Position		-15 -16			
Schaltwerte/Switching values		"warm"		-19 -20	
Valeurs de commutation		"kalt"		-23 -24	
		"alarm"		-9 -14	
Füllmenge/Fill.quantity/Charge		R600a		* *	
Anschlußwert/Conn.load/Puiss. connectée		W		120	
Heizung/Heater/Chauffage		Abtauheizung		Rinnenheizung	
Widerstand/Resistance/Résistance		Ω		288 240	
Leistung/Power/Puissance		W		200 24	
Ventilator/Blower/Ventilateur				560	
Widerstand/Resistance/Résistance		Ω			
Raumtemperaturfühler 2%		C K		C k	
		+10 9,9		-18 43,3	
		+ 5 12,7		-22 54,6	
		+ 0 16,3		-26 69,4	
Widerstand NTC-Fühler 1%		°C kΩ		°C kΩ	
		-1 17,3		-15 36,5	
		-9 26,2		-16 38,8	
		-14 34,5		-19 45,9	
Magnetventil/Magnetic valve/Electrovanne				-24 61,6	
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

* siehe Typenschild