




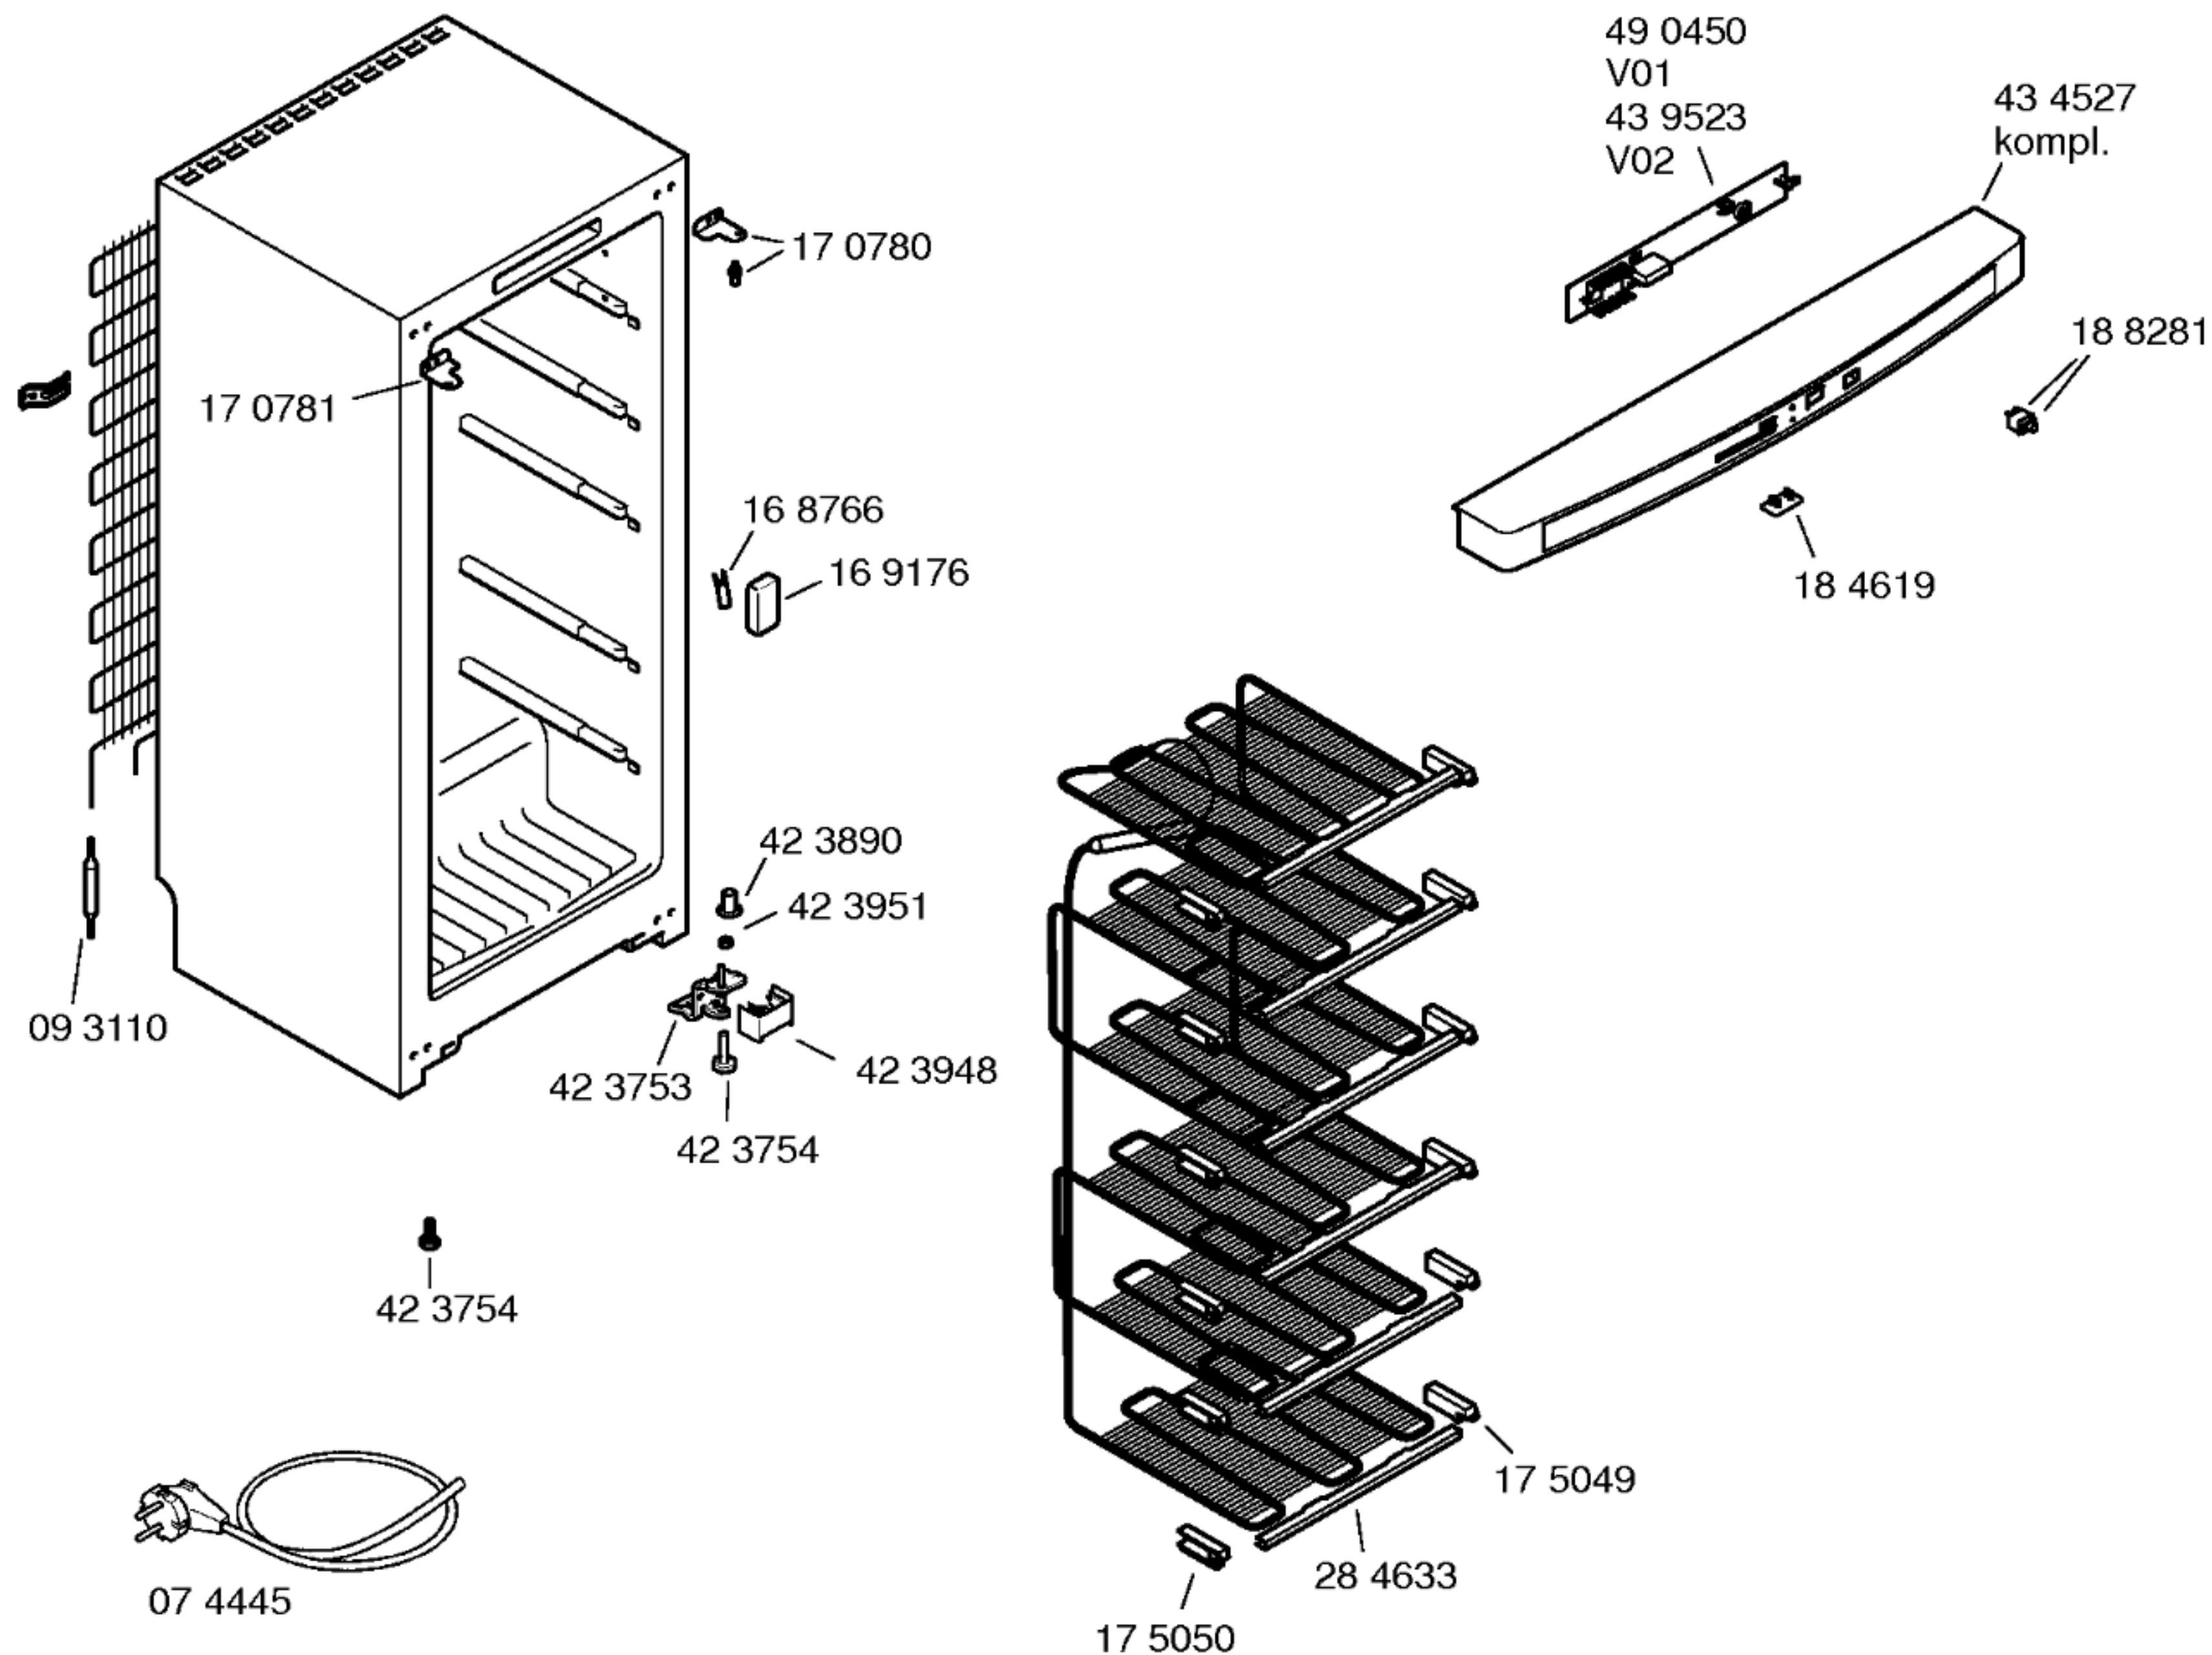


Mat. – Nr. – Konstante
3740


Gebrauchsanweisung
58 6511
(DE,EN,FR,IT,NL)
Montageanleitung
58 0241

Beistellsatz
26 5629

Side by Side
Beistellsatz KSK/KSR
48 1044

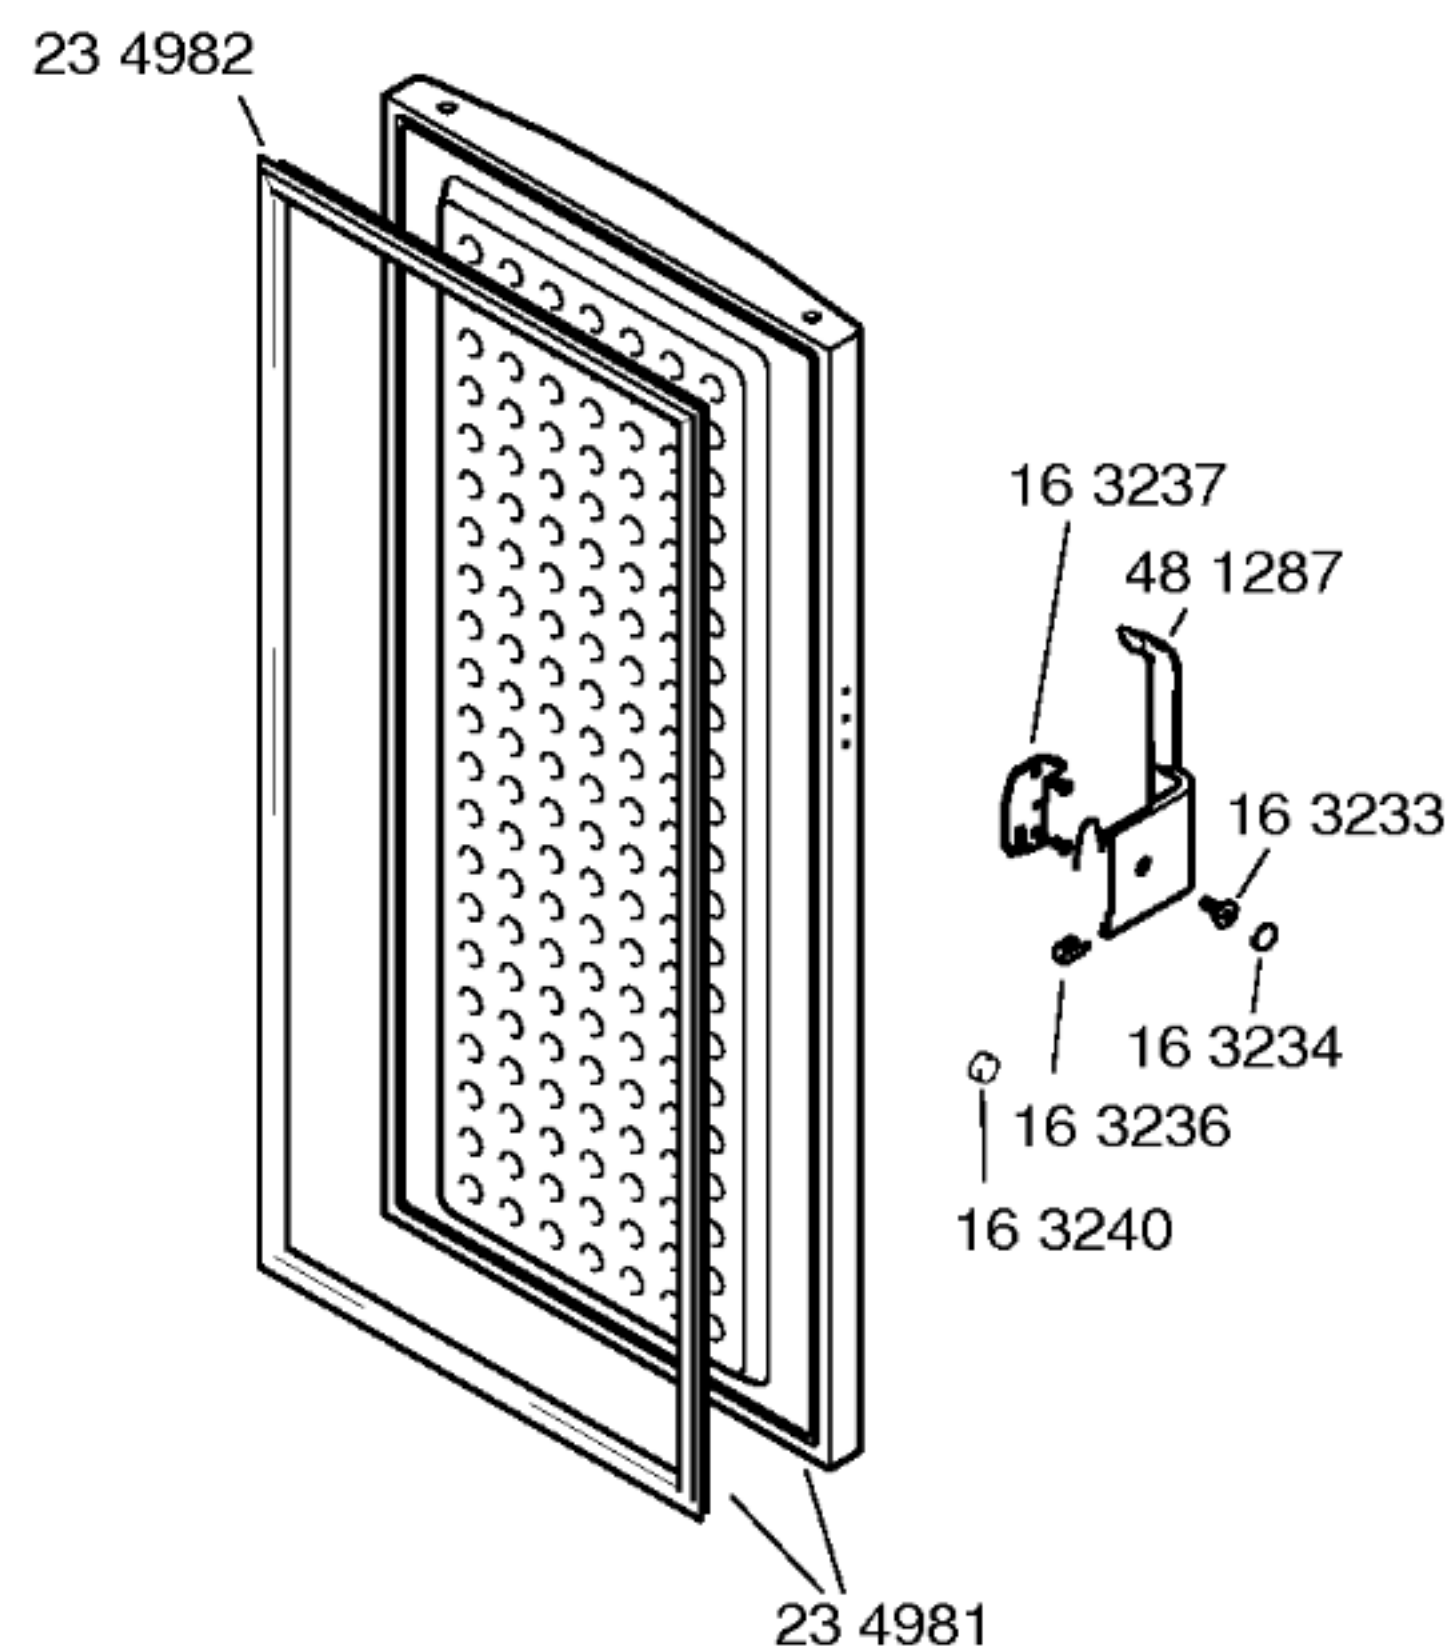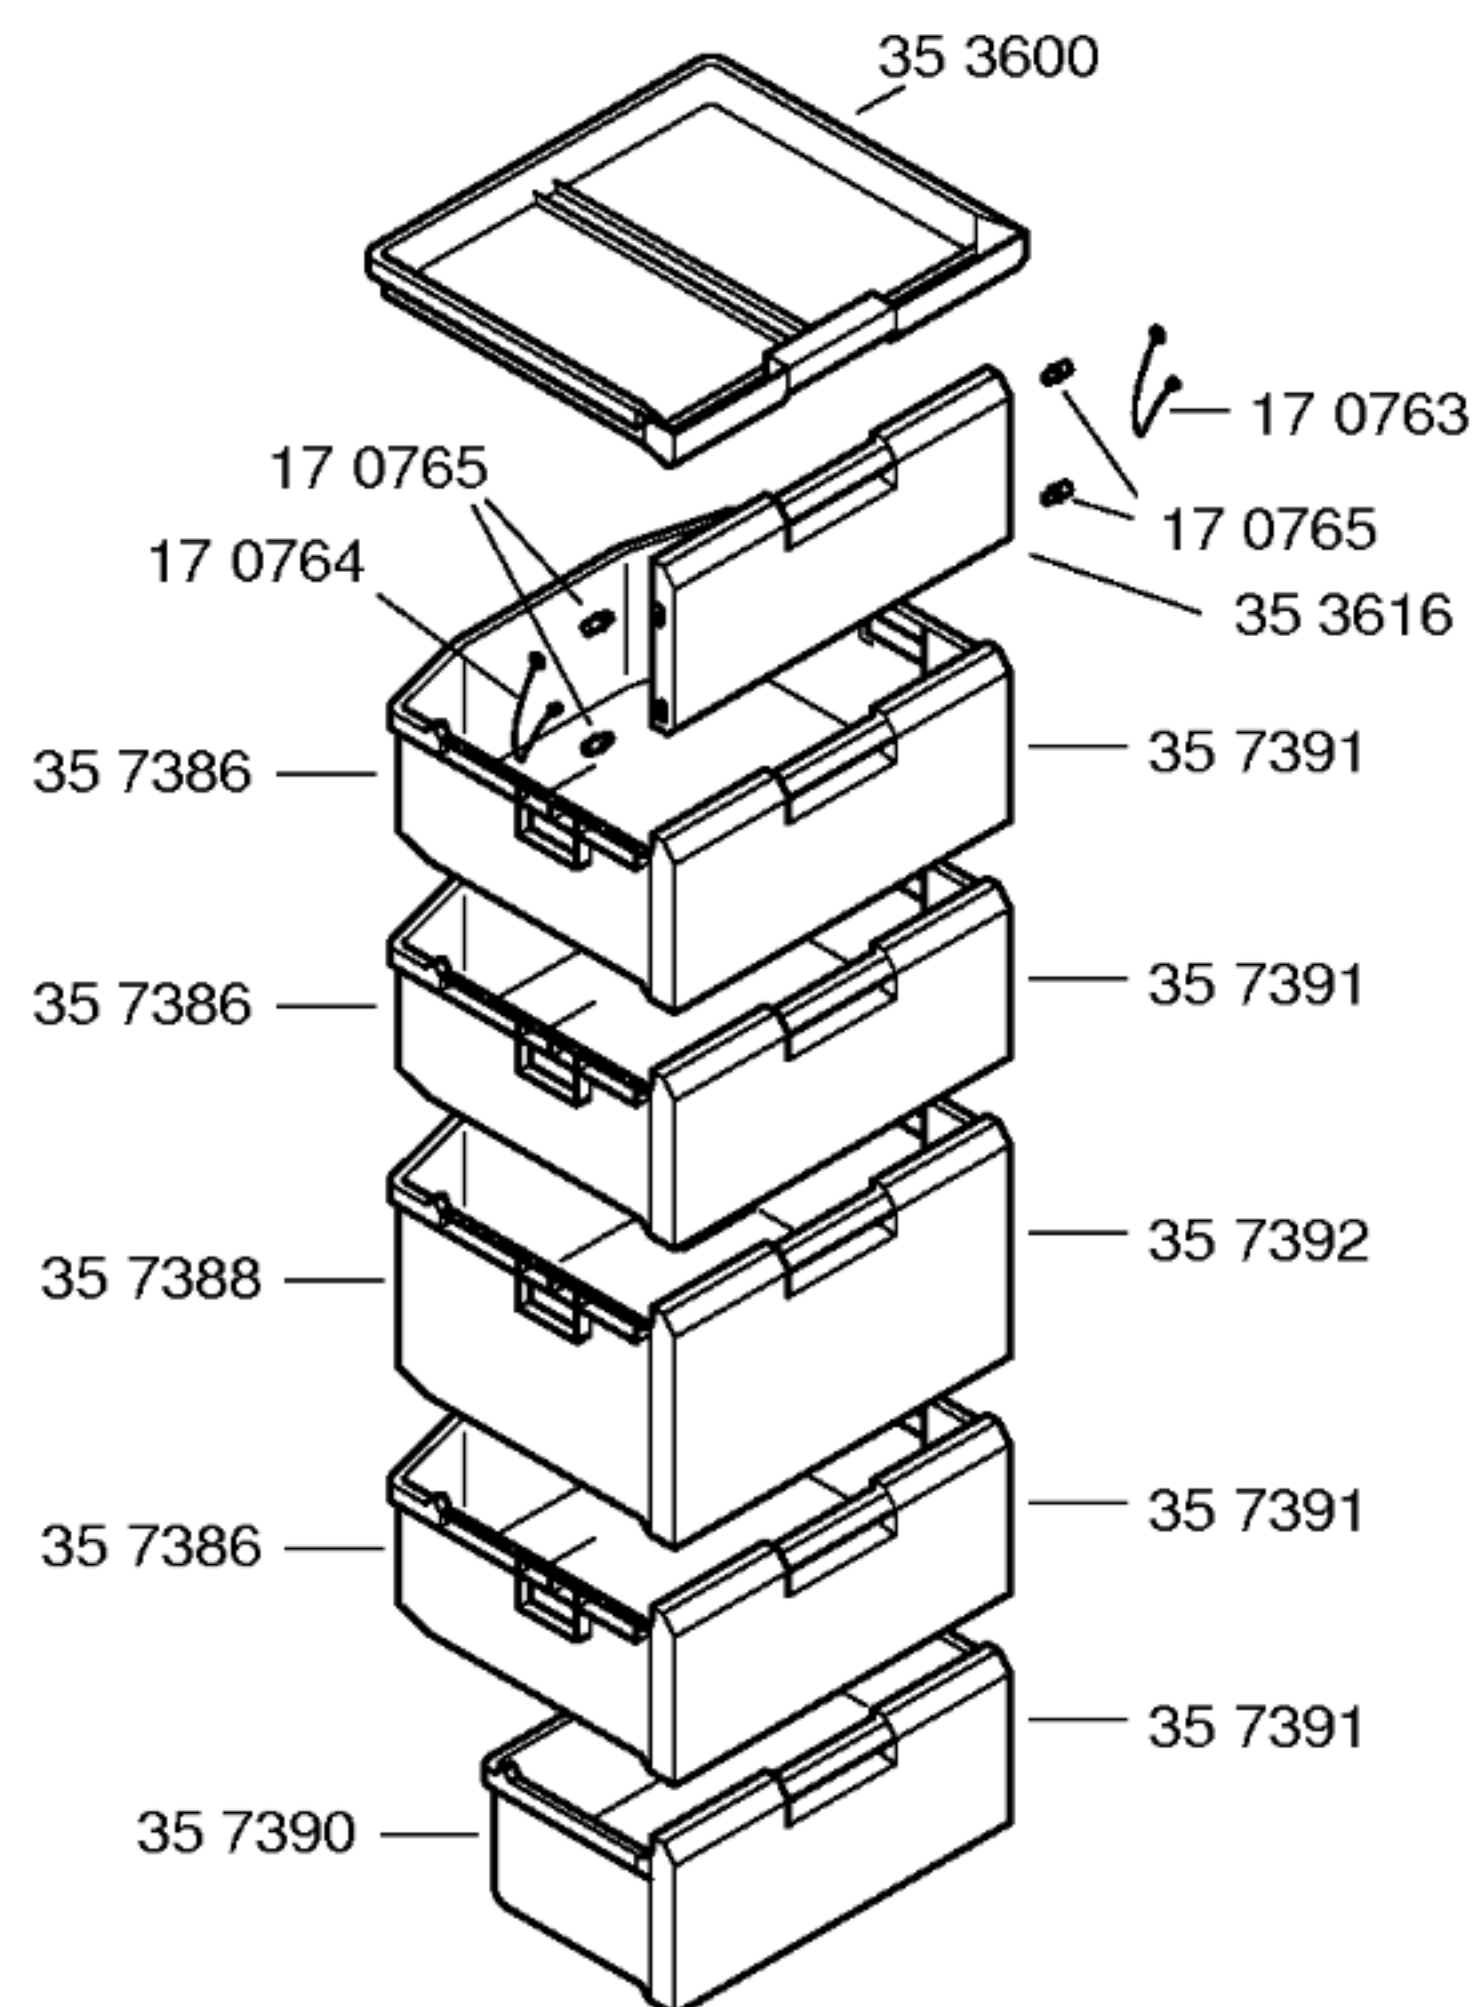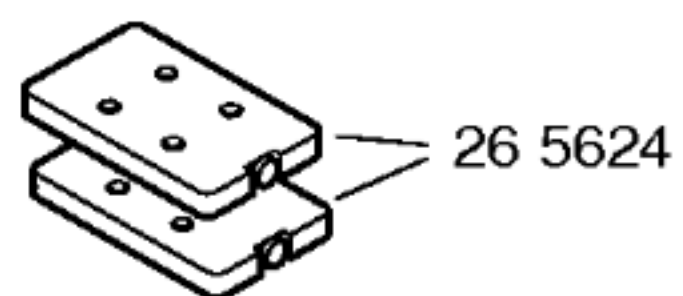

Mat. – Nr. – Konstante
3740

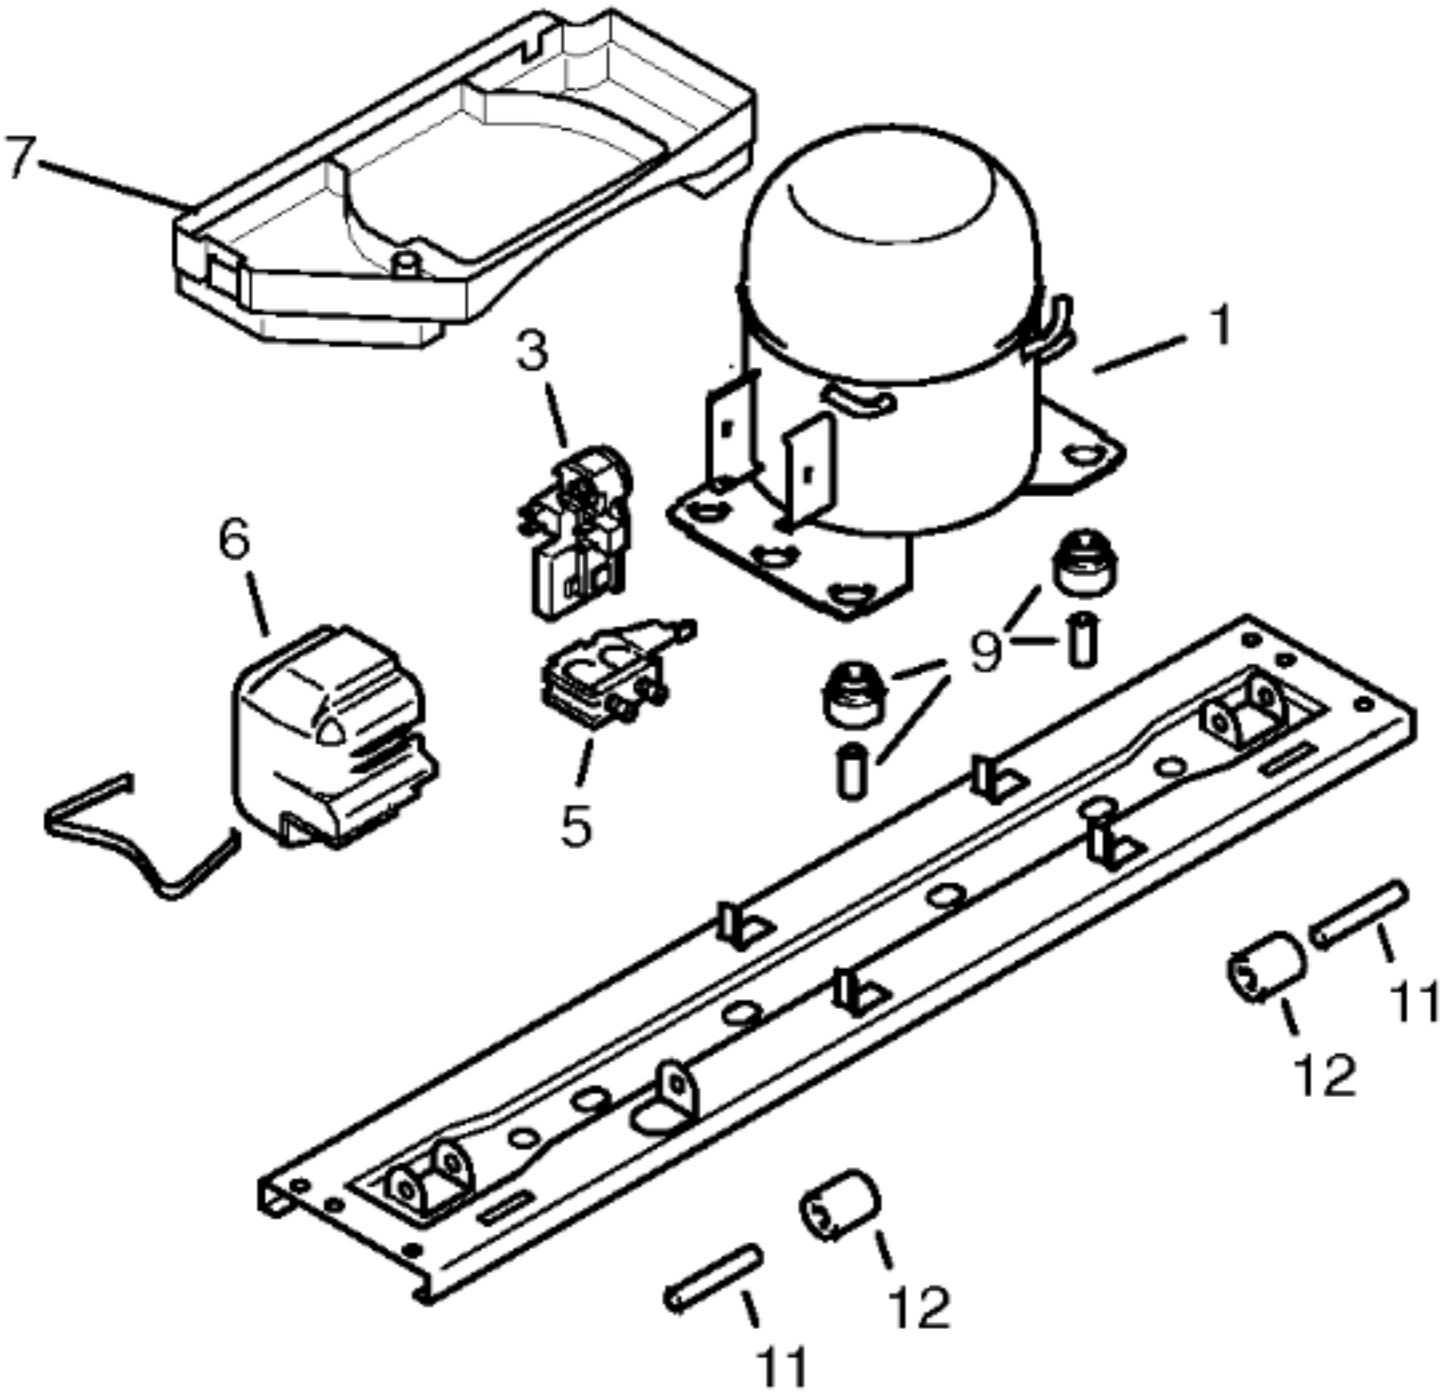

Pos.	V01		
	Matsushita		
	DC125E		
1	14 2131		
2			
3	17 2967		
4			
5	16 2549		
6	16 6782		
7	09 6212		
8			
9	05 0166		
10			
11	01 9017		
12	01 9016		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES						
Verdichter/Compressor/Compresseur		Matsushita				
Typ/Type		DC125E				
Förderleistung/Delivery/Débit		l/h		2246		
Anlaufstrom/Starting current/Cour de démarrage		A		9,2		
Widerstand/Resistance/Résistance		Ha/main/prin		12,1		
		Hi/aux		13,8		
Temp.-Regler/Thermostat		Elektronisch				
Typ/Type		EIN AUS				
Regelstellung/Position		-15 -16				
Schaltwerte/Switching values		"warm"		-19 -20		
Valeurs de commutation		"kalt"		-23 -24		
				-9 -14		
Füllmenge/Fill.quantity/Charge		R600a		* *		
Anschlußwert/Conn.load/Puiss. connectée		W		120		
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance		W				
Leistung/Power/Puissance		W				
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance		W				
Raumtemperaturfühler 2%		C	K	C	k	
		+10	9,9	-18	43,3	
		+5	12,7	-22	54,6	
		+0	16,3	-26	69,4	
Widerstand NTC-Fühler 1%		°C	kW	°C	kW	°C kW
		-1	17,3	-15	36,5	-20 48,6
		-9	26,2	-16	38,8	-23 58,1
		-14	34,5	-19	45,9	-24 61,6
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Resistance		W				
Spannung/Voltage/Tension		V				

* siehe Typenschild